

**BATTERY REQUIREMENTS:** This product requires 1 "AAA" standard alkaline battery (not included). We do NOT recommend the use of heavy duty or rechargeable batteries.

**INSTALL BATTERY:** Locate the slot on the edge of the back cover and gently pry open to remove the back cover. Insert 1 "AAA" alkaline battery. Replace the back cover.

**AUTO OFF:** To conserve battery power, this product will automatically turn off after one hour of no use or button activity.

---

**USE INSTRUCTIONS:**

1. Push the POWER button. Push "°F/°C" button to select degree scale.
2. Flip open the probe completely and insert probe into thickest part of meat or fowl near the end of cooking time. Be sure the probe tip is not touching bone, gristle, the pan or inserted into hollow cavity of fowl.
3. To obtain accurate temperature reading, wait until numbers stop moving, approximately 5-10 seconds.

The thermometer will beep when a STABLE temperature is observed:

- Measured temperature must be rising at a rate of +3.3°C or more in 3 seconds
  - Beep will only sound when temperature is above 48.8°C
  - Temperature reading must be stable within 1.1°C for 2 seconds
  - Beep will automatically reset after the temperature falls 8.3°C from high mark
4. Wash the probe with hot, soapy water after each insertion to prevent cross-contamination.
- 

**CARE INSTRUCTIONS:** Wash the probe with hot, soapy water after each use. The housing and display area are **NOT WATERPROOF. DO NOT SUBMERGE IN WATER OR PLACE IN DISHWASHER.** Wipe the housing and display area with a soft, damp cloth. Use a VERY small amount of dishwashing soap if necessary to degrease the housing.

---



[www.AcuRite.com](http://www.AcuRite.com)



(877) 221-1252