

ACURITE®

Set up your AcuRite Atlas® Display 06104M / 06105M

 


Menu Navigation Buttons

SETUP REQUIRES:

- Display (3 AAA backup batteries recommended – not included)
- Power Adapter
- AcuRite Atlas Sensor*


* May be sold separately and requires 4 AA batteries (not included)

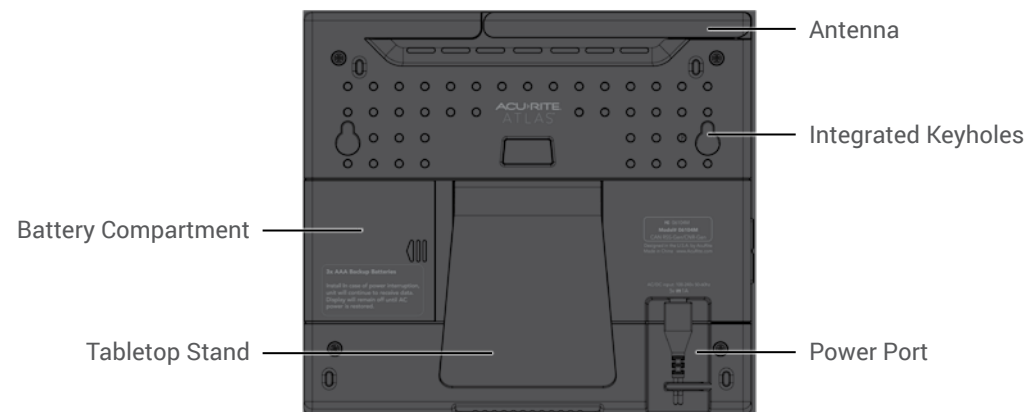

1 INSTALL SENSOR BATTERIES

- In the outdoor sensor battery compartment, locate the A-B-C switch. Be sure to note the channel that the A-B-C switch is set to.*
- Install four AA alkaline or lithium batteries. Lithium batteries are recommended for temperatures below -4°F (-20°C).

 * The display does not feature an A-B-C switch, but you will need to confirm that the sensor the display connects to is on the same channel designation. Once the display is connected to the sensor, confirm the channel designation by navigating to “Connections” in the main menu.

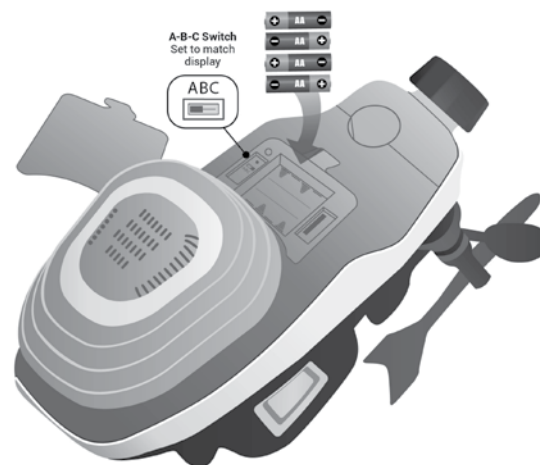



2 PLUG IN DISPLAY AND CONFIGURE SETTINGS

- Plug the power adapter into the back of the display. The port is located in the bottom right corner. Place the cord behind the plastic tab. Plug the power adapter into an electrical outlet. Make sure the antenna is completely upright to ensure communication between the display and sensor.
- (Optional) Locate the battery compartment on the back left side of the display. Slide off the battery compartment cover and install three AAA batteries. This is recommended to maintain display settings and save historical data during a power outage.
- Configuration will begin automatically once the display is powered on. Use the menu navigation buttons to select and confirm your settings. You will be prompted to select:
 - › Clock Hour/Minute/Daylight Saving Time Setting
 - › Month/Day/Year
 - › Units of Measurement (U.S. Standard/Metric)

You can adjust these settings and more anytime by navigating to the menu and selecting General Setup. Use the menu navigation buttons to make any desired adjustments.

3 MOUNT SENSOR

  Please refer to the enclosed AcuRite Atlas Instruction Manual for guidance on outdoor sensor installation.

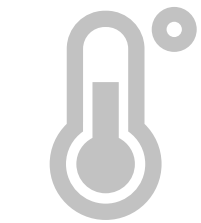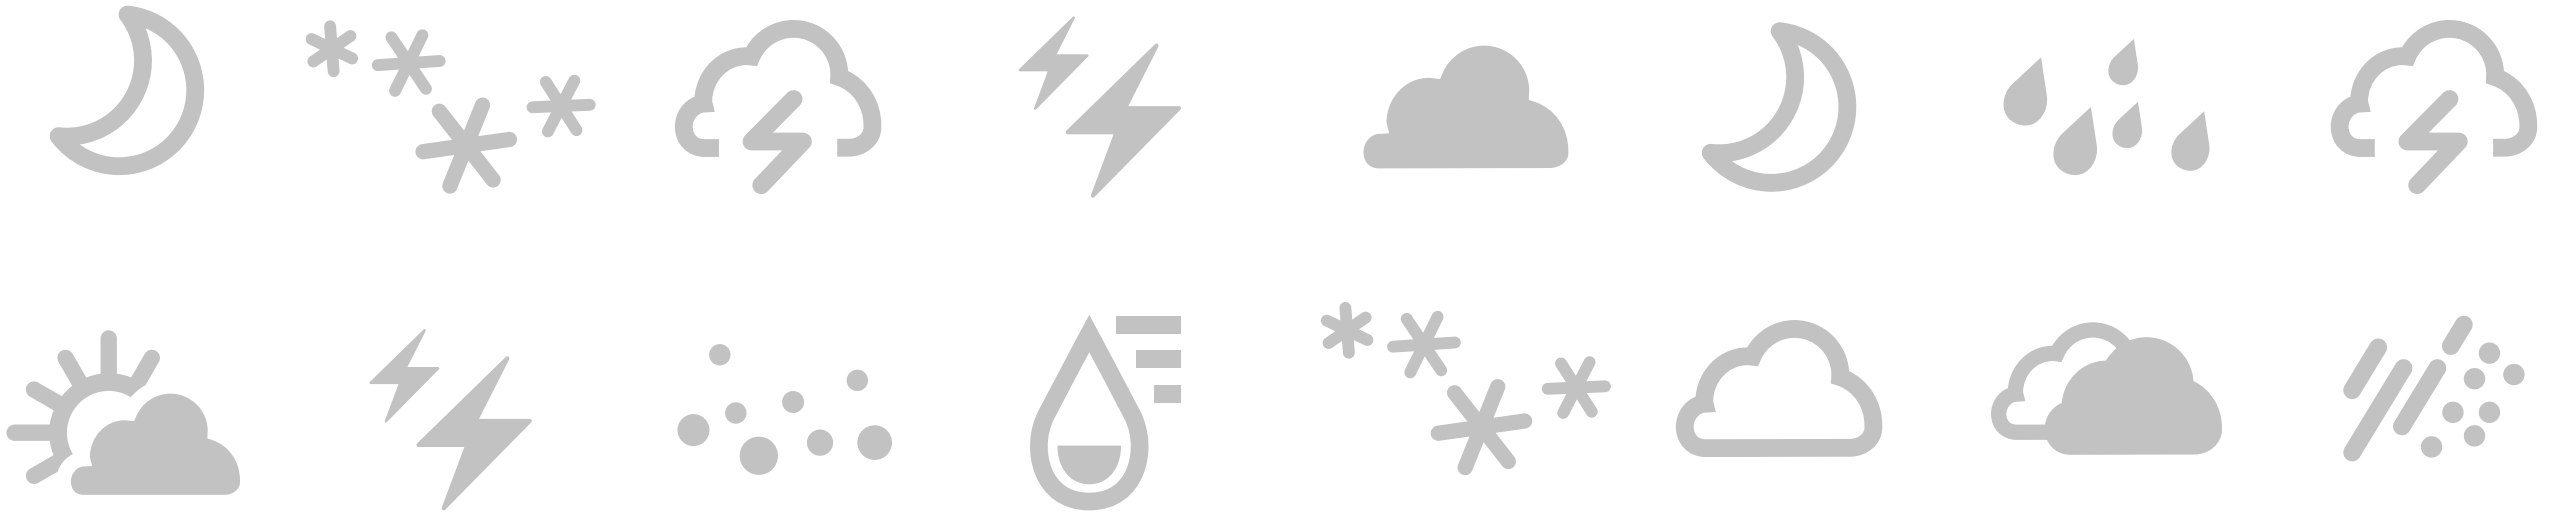

For more information about your new display and related product support articles, scan the QR code using your smartphone or visit: acurite.com/06104-5



Quick Setup Guide 06104M / 06105M

Register your product for a one-year limited warranty at:
acurite.com/product-registration



Support, warranty information, and FCC statement available on acurite.com.

