

anko

User Manual

PORTABLE FOOD WARMER 12V

Keycode: 43158447



Please read all the information carefully before you use the product and retain it for future use.

Caution:

1. Do not use while driving
2. Keep out of reach of children
3. This unit must never be submerged in liquids
4. Do not touch the hot surface of the unit
5. Do not heat food in plastic bags
6. Do not heat food in sealed containers
7. Do not use any type of plastic containers
8. Unplug the unit when not in use
9. Allow unit to cool before storing
10. Do not clean surface with scouring pads
11. Take Caution as the unit gets very hot very quickly and stays hot for some time after use
12. Do not immerse cord or the unit in any liquid
13. The unit may produce steam from seals which can burn
14. Keep a safe distance when in use
15. Open the unit carefully with face and skin away or protected
16. Do not place on any surface that can be damaged by heat

PRODUCT SPEC

Maximum Capacity: 2.8 Liters

Power Source: 12V DC

Max Wattage: 144 watts

Maximum Amperage Draw: 12 Amp

Fuse: 15 Amp

Temperature Up to: 120°C

Material: PPF, Aluminum

Power Cord: 180 cm

Dimensions: 20 x 27 x 18cm

This unit operates with a 12V vehicle system. Always start your vehicle engine before plugging in your portable food warmer. This unit draws up to 12 Amp during operation, so make sure that the circuit you are using is rated for this much current. Average current draw is about 5 Amps.

The power cord may have a fuse installed in the plug. If required, replace the fuse with a new one of the same amp rating (A) only.

OPERATING INSTRUCTIONS

Internal temperature can reach to 120°C. Puncture cans and open the jars before heating.

Place food in aluminum foil or small oven bags to make cleanup easier. You can safely put food in an aluminum pan.

A water bath helps to spread the heat more quickly when cooking food in their original containers.

Water must never be added when the unit is hot.

APPROXIMATE HEATING TIMES

Baby food jars or bottles (by using water bath)	3-5 minutes
Hot dogs	5 minutes
Grilled cheese sandwich	7-10 minutes
Canned soups and foods	20 minutes
Rice	35 minutes
Leftovers (in oven bag or foil)	depends on the type

NOTE: Heating food improves with increased contact with bottom pan; a water bath helps. Small oven bags or aluminum foil can be used as well.

CLEAN UP

ALWAYS UNPLUG THE UNIT BEFORE CLEANING

DO NOT IMMERSE UNIT IN ANY LIQUID.

Use a cloth, soft brush or sponge with water and a mild dish soap.

Do not use metal scouring pads.

TROUBLESHOOTING:

This unit is equipped with a 15A fuse. Check fuse panel before connecting. If it does not operate:

- Make sure that all contacts in the socket are clean
- Ensure that the plug is securely plugged into the power source.
- Check the fuse on the power cable.

If blown, replace with a new 15A fuse.

- Check the fuse panel in the vehicle to make sure that the fuse controlling the socket is intact. It might be necessary to replace it with a new 15A fuse.