

Address Setup:

Press the MODE button a number of times until Add appears on the display, with the UP / DOWN buttons the start address may be set. The start address is defined as a first channel to which the machine will respond to. Check that there are no overlapping channels used!

CLEANING

After 40 operating hours, the haze machine must be cleaned to avoid deposits in the machine, pump and heater.



Haze 1500 Pro

Please read the manual before using the product

Congratulations to the purchase of this product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

Attention:

- When smoke machine has a built-in fluid tank, then should be transport and operated in an upright position.
- Use only water-based fluid recommended by your dealer. Poor liquid caused permanent damage, bad effect, clogging, spitting of unevaporated liquid etc.
- Be sure that the smoke machine is positioned on a stable, non-slip surface.
- Be sure that no ventilation slots on the product's housing are blocked.
- Don't put any objects on the smoke machine.
- Always install the smoke machine in an area with adequate ventilation.
- Never connect the smoke machine to a dimmer or rheostat.
- In the event of a serious operating problem, stop using the product immediately.
- When mounted at height, use the bracket and use add a safety cable.
- The installation of the smoke machine has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.
- The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.
- Never aim the smoke at yourself, people or animals.
- Never aim the output nozzle directly at people or at open flames.
- The smoke machine has to be installed out of the reach of people and animals.
- Drain the tank before transporting or storing the product.
- Never drink smoke fluid or use it on the inside or outside of a human body. If fluid gets in contact with skin or eyes, rinse thoroughly with water and call a doctor immediately!
- Keep out of the reach of children
- For indoor use only.

DISPLAY

Via the Menu key, you can adjust the desired settings. After pressing the menu, the display shows the following settings:

1. Man Vol Out xxx%.

Adjust the manual volume output within the range of 0% to 100% by means of the Up/Down keys.

2. Interval Set xxxS

Adjust the interval between each fog emission within the range of 1 to 100S by means of the Up-/Down keys.

3. Duration Set xxxS

Adjust the duration of each fog emission within the range of 1 to 100S.

4. Volume Out xxx%

Adjust the volume output during the timer function within the range of 0-100%

5. DMX 512 #xxx


Adjust the DMX address for DMX control.

6. Wind For Class xx

Controls the fan speed during output.

7. Remote Out xx

No function for this model.

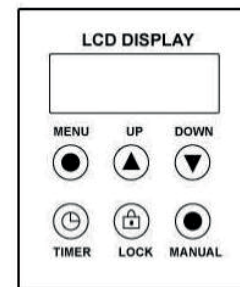

TIMER CONTROL

Press the Timer key to activate the timer function. The display shows the adjusted interval and the device counts the seconds down to "0". After that, the fog emission is triggered at the volume adjusted under "Volume Out". The duration depends on the settings adjusted under "Duration Set". If you wish to deactivate the timer function, press the Timer key once more.

Manual control (locked)

Press the Lock button for immediate triggering of the fog emission at the volume adjusted under "Man Volume". Press the lock button more in order to stop the fog emission.

Manual control (100% output)

Press the Manual key for immediate triggering of the fog emission at 100 % volume. Let the Manual key loose in order to stop the fog emission.

DMX-512 CONNECTION

If you are using a standard DMX controller, you can connect the DMX-output of the controller directly to the DMX input of the first unit in a DMX-chain. Always connect the output of one unit with the input of the next unit until all units are connected. If you use a controller with 5 pin DMX connection you will need to use a 5-pin to 3-pin adapter.

At the last fixture, the DMX cable has to be terminated.