

True Wireless Earphones & Power Case

Ear Shots

Item ref: 100.575UK

User Manual



Ear Shots: a unique pair of earphones, designed to stand out and stay put. Portable, lightweight and featuring true wireless technology, providing impressive audio performance without the hassle of tangling wires. The ergonomic design ensures the earphones securely fit in your ear. Comes with dynamic drivers for a deeper, more immersive sound experience and the latest Bluetooth connectivity for ultimate device compatibility. The handy power case not only stores your earphones when not in use but also charges them, providing up to 12 hours listening time for music on-the-go. An inbuilt microphone and hands-free function allow for more freedom when answering calls.

Features

- Compact, lightweight and ergonomic design
- Dynamic drivers for deep, immersive sound
- Bluetooth 5.0 connectivity provides hassle-free pairing
- Up to 10m wireless range
- Rechargeable with 400mAh Power Case
- Inbuilt mic for hands-free calls
- iOS and Android compatible


In the Box

- 2pcs True wireless earphones
- Chargeable Power Case
- USB charging cable
- User guide

Technical Specifications

Speaker Driver	10mmØ dynamic
Frequency Response	20Hz -20kHz
Sensitivity	Earphones: ≥98dB, Microphone: -42dB
Impedance	32 Ohms
Power: Battery	Earphones: 2x internal 40mAh, Power Case: 400mAh
Battery Life (hours)	Earphones: 3 hours max, Power Case: Up to 9 additional hours playback
Standby Time	120 hours (approx.)
Charge Time	Earphones: 60 mins (approx), Power Case: 2 hours (approx)
Connections	Bluetooth 5.0, Micro USB (for charging the Power Dock)
Bluetooth Range	Up to 10m (clear line of sight)
Dimensions	Earphones: 45mm long x 16mm Ø, Power Case: 55 x 45 x 22mm
Weight:	Earphones: 2x 4g, Power Case: 38g (inc. earphones)

Overview

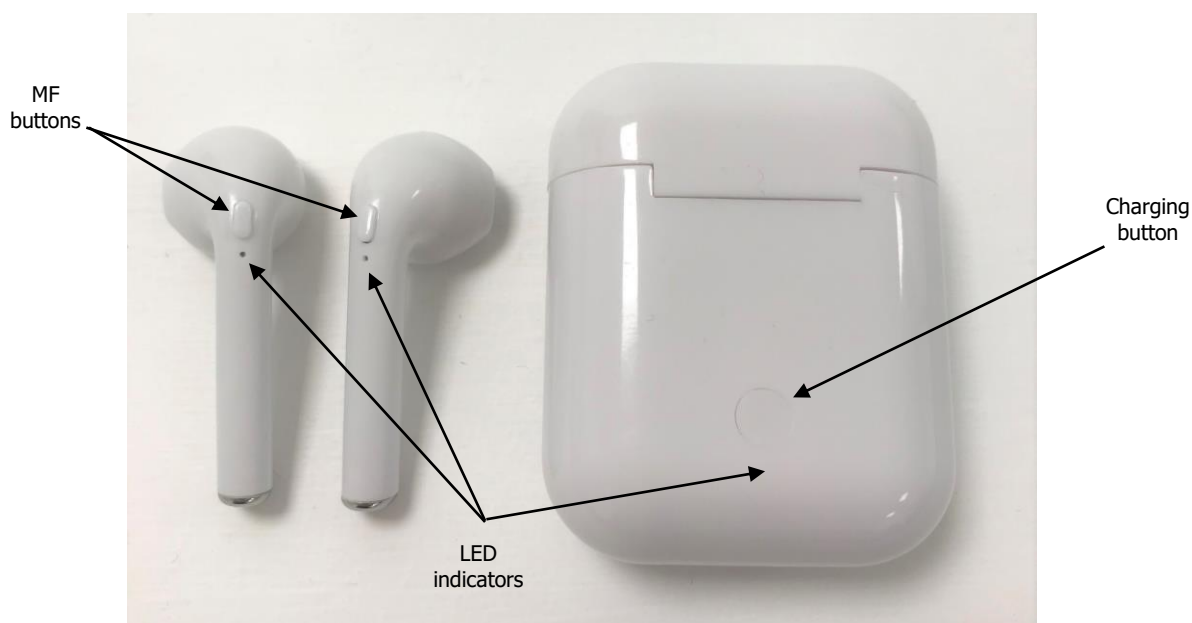

Before first use:

Even though your Ear Shots will come with some battery charge, it's advisable to fully charge them before first use. Connect the Power Case and earbuds to a suitable USB power source and leave for around 2 hours to ensure they are ready for use. When charging, the Power Case LED will flash blue and when fully charged it will stop flashing.

Pairing in True Wireless mode:

On first use, you need to pair the earbuds to each other and then your device. Press and hold the MF button on both earbuds for around 5 seconds until the LED indicators flash red and blue and a voice guide says "pairing". Next, double press the MF button on one earbud and it will then begin searching for the other. Once they are paired with each other you will hear a beep then a voice message saying "connected" followed by flashing blue LED's on both earbuds. The earbuds are now in Bluetooth pairing mode and ready for you to connect to your smart device. Open the Bluetooth device list on your device and search for the pairing name "**AV:LINK EAR SHOTS**" and select. If asked for a pairing code, please enter "0000" and your device should connect with the earphones and you will hear a voice message saying "connected" as confirmation. You are now ready to begin enjoying the true wireless sound experience of AV:Link Ear Shots.

Track control:

Once connected to your smart device you can use the MF buttons on the earbuds to control your music and phone calls. After selecting a track press the MF button once on either earbud to play then pause the current track. Double press the MF button on either earbud to enable your devices voice assistant. You can then speak your command and the microphone in the earbuds will relay it to your smart device. Press the MF button three times on the right earbud to increase the volume and the left earbud to decrease the volume accordingly. Press and hold the MF button on the right earbud to move to the next track and the left earbud to move to the previous track in your playlist.

Hands-free operation

When you receive a phone call during audio playback, a voice telling you the caller's telephone number can be heard. To accept the call, press the MF button on either earbud once. To reject the call, press the MF button on either earbud twice. When you have completed the call, hang up by pressing the MF button on either earbud once.

Disconnecting and reconnecting to your device

To disconnect and switch off the earphones, press and hold the MF button on either earbud for 2-3 seconds, until the LED indicator turns red. Both earphones will switch off at the same time and you will hear a voice message saying "power off". To reconnect to the same device, press and hold the MF button on both earbuds for 2-3 seconds, until the LED indicators turn red and blue. The earphones will pair to your device automatically and a voice message saying "connected" will be heard.

Charging the earbuds

To charge the earbuds, carefully place them in the corresponding magnetic ports of the Power Case and press the charging button on the back of the case once. The LED indicators on the Power Case will light blue and the earbuds red. When charging is complete, the LED indicators will all go out. To fully charge the earbuds from 'flat' usually takes around 60 mins. To Stop charging the earbuds at any time, press the charging button on the Power Case again and the charging lights will go out.

The Power Case

The Power Case is a compact, magnetic carry case and power bank, with capacity to fully recharge the earphones up to 3 times. To charge the Power Case, connect it to a compatible USB power socket using the USB cable provided. When charging, the LED indicator on the front of the Power Case will flash red and when fully charged, it will light constant red.

FAQ

Q) The Bluetooth earphones will not pair with your device. **A)** Check that the earphones are in pairing mode; Bluetooth is enabled on your device; and the device is set as 'discoverable'.

Q) The Bluetooth earphones disconnect with my device within the stated 10m transmission distance. **A)** The maximum transmission distance stated is dependent on a clear line of sight between the earphones and your device. If there are large metallic objects or other devices transmitting radio or wireless signals in the vicinity, they may impact on the reception of the earphones.

Q) The Bluetooth earphones won't reconnect with my device. **A)** On occasion, your Bluetooth device or the earphones may enter a locked state and need resetting. To do this, find the earphones in your device list and select "forget this device". Then, refollow the instructions for "**Disconnecting and reconnecting to your device**", above.

Safety Disclaimer



Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock or equipment damage and will also invalidate the warranty. This product is only designed for indoor use and must be kept away from water and high humidity along with high temperatures and direct sunlight. Prolonged listening at high volumes can cause hearing damage. Keep away from young children as small parts can be a choking hazard.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Errors and omissions excepted.

Copyright© 2021 AVSL Group Ltd, Unit 2 Bridgewater Park,
Taylor Road, Trafford Park, Manchester. M41 7JQ.

www.avsl.com

AVSL (Europe) Ltd, Unit 3D North Point House,
North Point Bus. Park, New Mallow Road, Cork, Ireland.

100.575UK