



BOULT | Mustang

Know your BOULT Mustang Earbuds



Indicator Light



Type - C
Charging Port



Multifunctional
Touch
Indicator
Light

Whats In the Box?

Charging Case
Earbuds
Type C Charging Cable
Manual
Extra pair of ear tips
Warranty Card
Mustang Collectibles



Scan and download
Boulton Amp App

Product specification

Product Name - TWS Bluetooth Headset

Model - Boulton Audio AirBass

Bluetooth Range - ~10m/33ft (without any obstacles)

Earbuds Charging Time - 60 mins

Frequency Range - 20Hz - 20KHz

Technology - HFP/HSP/A2DP/AVRCP

Input - DC5V 1A

How to download & connect to 'Boulton Amp' App

Install the 'Boulton Amp' app from the Play Store or App Store

- Take the earbuds out of the charging case
- In the Boulton Amp App click on "Add Device" and search for your Boulton earbuds
- Select the pairing name "Boulton Audio AirBass" and complete the pairing process
- If a pop-up doesn't appear, select "go to settings" from the App screen & select "Boulton Audio AirBass" to connect your earbuds
- Your earbuds are now connected; get the most out of your earbuds with available features on the App

How to use your BOULT Mustang Earbuds

Touch Controls

The Touch Area (Multi-Functional Touch Panel) is located in the upper part of the earbuds handle.

Wearing Earbuds

The earbud marked with L is worn on the left ear and the earbud marked with R is worn on the right ear

Power ON/OFF

- Power ON:
Auto: Open the charging case and take out the earbuds to Power ON.

Manually: Tap and hold the multifunction button (MFB) for 3 seconds.

- Power OFF
Auto: Place both the earbuds in the charging case, close the lid.

Manually: Hold MFB for 5 seconds.



Play/Pause
Tap the MFB once

Next Track
Double Tap the right MFB

Previous Track
Double Tap the left MFB

Volume +
Triple Tap the right MFB

Volume -
Triple Tap the left MFB

Voice Assistant -
Long Press the MFB for 2s

Answer the Call
Tap the MFB once

End Call/Reject
Double Tap the MFB

Game/Music Mode
Tap the MFB four times

Pairing

Open the charging case, and take out the earbuds, the earbuds LEDs will start flashing automatically until paired with a device. Activate Bluetooth on the device, turn on Bluetooth, search for pairing name "Boult Audio Airbass" and click on it.

Single Earbud Usage (Mono Mode) : Please note that both the earbuds can be used in Mono Mode.

When both the earbuds are connected, put one earbud back into the charging case; the other earbud can be used normally.

Dual Connectivity

- Connect the BOULT Mustang Earbuds with your first device. Once your BOULT Mustang Earbuds is paired with the first device, turn off the Bluetooth of your first device.
- Now turn on the Bluetooth of your second device and follow the same steps to connect to your BOULT Mustang Bluetooth earbuds.
- Once BOULT Mustang Earbuds is connected to your new device, turn on Bluetooth of the first device.
- You will hear a sound again "connected" which means both your devices are now connected to the BOULT Mustang earbuds.
- You can now enjoy music and take calls from both your connected devices on your BOULT Mustang earbuds.

To disconnect from either of the devices, go to the Bluetooth settings of the respective device and press disconnect/forget.

Bluetooth Lost

Bluetooth Lost: Turn off mobile phone's Bluetooth, earbuds will enter pairing mode and can pair with other devices. If the connection range is exceeded, the earbuds will enter back into connection mode. In case of no connection within 5 minutes, the earbuds will turn off.

Reset

If your earbuds fail to pair, or only one works, reset them.

- Delete all "Boult Audio Airbass" Bluetooth records on the phone and turn off Bluetooth.
- Put earbuds in the charging case and then take out to pairing modes, tap L&R buds 5 times simultaneously, hear "DU" prompt tone to clear all pairing.
- Put earbuds back into the charging case.

Maintenance Instructions

Warranty is valid/invalid only basis of the below criteria:

- The product should be purchased through legal and formal channels to be applicable for warranty.
- Damaging the product intentionally/unintentionally, or due to natural disasters, etc. is not covered in the warranty. □