

# INSTALLATION INSTRUCTIONS

## CEILING FIXTURE

120VAC/60Hz Input, Dimmable

### READ AND FOLLOW SAFETY INFORMATION

**CAUTION** - Turn off the main power at the circuit breaker before installing and servicing the fixture to prevent possible injury from electric shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

### INSTALLATION & ASSEMBLY

- 1.Center the mounting plate (5) over the outlet box (1) and mark the location of the holes for the wall anchors (2).
2. Drill a hole at three marked locations, and then insert a wall anchor (2) into each hole.
- 3.Attach the black supply wire to the black fixture wire by using the wire nut (4). Attach the white supply wire to the white fixture wire by using the wire nut (4). Connect the fixture ground wire to the supply ground wire using a wire nut (4).
4. Align the mounting screw (3) with the lock hole of the fixture, twist the fixture body until the fixture body is securely hung, and tighten the mounting screw through the hole in the plate using a screwdriver as needed to secure the fixture body.
- 5.Insert an anchor screw (3) into each wall anchor (2).
6. Align the slot on the glass with the stud on the ceiling and the jig body, and twist the lampshade(7) cover until it is securely hung.
- 7.Restore electrical power when complete.

