


Operating Instructions – Washer dryer Candy CIW 100T

Control Panel

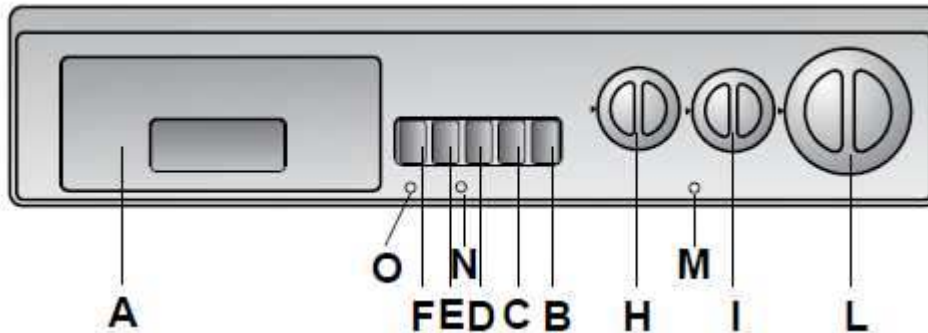

Description of Controls

B. Door Open Button



A special safety device prevents the porthole from being opened immediately after the end of the cycle. Wait for 2 minutes after the wash cycle has finished before opening the door.

C. On/Off Button



Press to start the appliance. At the end of the cycle press again to reset the button and switch off the appliance.

D. EXTRA RINSE Button



By pressing the “EXTRA RINSE” button, even the slightest residue of detergent is removed from fabrics. This is particularly important for people with delicate skins.

E. QUICK WASH Button



Pressing this button reduces the time of the wash programme by a maximum of 50 minutes depending upon the programme selected. The quick wash button can be used for washing loads of 1 to 5kg. (This button can be utilised only on cottons and synthetic programmes).

F. HIGH DRY Button



Recommended: press this button for extra intense drying cycle suitable for hard wearing fabrics e.g. towels, jeans.

H. WASH TEMPERATURE selector

°C

Can be turned in either direction

This washing machine is equipped with this device for setting the wash temperature you want. We recommend that the temperature shown on the label inside garments should never be exceeded.




I. DRYING TIME MINS



CAUTION: Never turn knob anti-clockwise, but always clockwise.

The drying timer (I) sets drying time up to a max. 120 mins. (the symbol represents a 10 minutes cool tumble, number 2 represents 20 minutes, etc.)



WARNING: Drying can be stopped even when machine is running. Just turn the drying timer clockwise to the cooling symbol  and wait for cycle to end before opening the door.



L. PROGRAMME Selector

Note: never turn the dial anti-clockwise. (Turn it clockwise and do not press the on/off button before selecting the programme.)

M. "DRYING" INDICATOR LIGHT

This light will illuminate when the machine is in the drying cycle.

N. ON/OFF INDICATOR LIGHT



The machine on indicator light is illuminated when the on/off button is depressed.



O. PILOT LIGHT FOR EXTRA DRYING

Pilot light will come on when dry high button is pressed.

Drying

- Turn the wash temperature control (H) to "0".

- Press On/Off button(C).
- Warning lights (M-N-O) will come on.
- The drying time (I) will rotate automatically to zero.
- Drying will start with the programme dial (L) stationary on the  symbol, or  symbol, until the drying cycle ends, then it rotates to "Stop".
- Now press "On/Off" button(C).
- Warning lights (M-N-O) will go off.
- Open the door and take out your laundry.

Fabric	Load drum with max. kg	Set programme (L) on:	Ready to hang: set knob (I) on:	Ready to iron set knob (I) on:	Press YES or NO "Dry high" button (F) on:
<i>Cotton: sheets, linens, pillowcases.</i>	2,5		7-8	6-7	YES
<i>Cotton: small items.</i>	2,5		7-8	5-6	YES
<i>Cotton: Terry towelling, bath robes, blue jeans.</i>	2,0			6-7	YES
<i>Cotton: with difficult pleats, blouses, shirts.</i>	1,5		7-8	NO	
<i>Mixed</i>	1,5		6-7	3-4	NO
<i>Mixed</i>	1,0		5-6	2-3	NO
<i>Synthetics</i>	1,0		4-5		NO
<i>Drip/dry shirts</i>	max. 4		4-5		NO