


6-LED NARROW PROFILE LIGHTHEAD Manual

Wiring / Operation

To + VDC (fuse @ 2A):**RED**

To Ground:**BLACK**

For Synchronization**YELLOW**

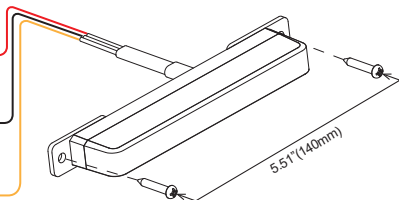

Connect **YELLOW** wires of all heads together for synchronization.

(All heads should be set to the same pattern)

For Simultaneous or Alternating Flash:

1. Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter Grouping mode; lighthouse will display short (single or double) flashes:
 - Single flash = Group1
 - Double flash = Group2
2. Remove **YELLOW** wire from +VDC and momentarily apply to +VDC to change Groups:
 - Heads in the same Group flash together.
 - Group1 heads alternate with Group2 heads.

For Flash Patterns:

Momentarily apply +VDC to

YELLOW wire:

- once for next pattern
- quick three times to reset to FP#1

NOTE:

1. This unit may not be factory-set at FP#1.
2. Please double check lighthouse orientation before mounting for FP# 22.


Flash Patterns			
1	Double	[R65]	13 Single H/L (split)
2	Single	[2Hz]	14 Single [SAE]
3	Triple	[2Hz]	15 Double [SAE]
4	Quad	[2Hz]	16 Quad [SAE]
5	Random		17 Quint [SAE]
6	Single	(split)	18 Mega
7	Double	(split)	19 Ultra [SAE]
8	Quad	(split)	20 Single-Quad
9	Quint	(split)	21 Single H/L
10	Mega	(split)	22 Steady Half
11	Ultra	(split)	23 Steady All
12	Single-Quad	(split)	

*split = Left alternating Right


6-LED NARROW PROFILE LIGHTHEAD Manual

Installation

Universal Bracket (Multi-Angle)

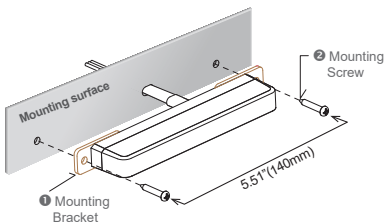

OR

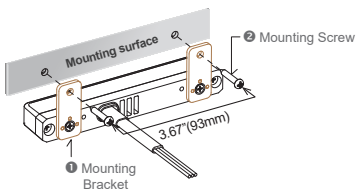

NOTE: Please mount the lighthead according to the mounting style purchased.

* Graphs only show horizontal illustration.


▼ Horizontal Mount



▼ Vertical Mount



L-Bracket (Front / Rear)

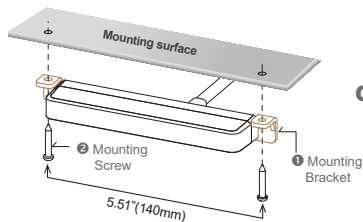

OR

