



Loving music

# Important Safety Instructions



## 1. General Information

- Read these instructions and keep them for future reference. Follow all instructions carefully.
- Not suitable for children under 6 years!  
The product may contain small parts that could be swallowed. Risk of suffocation from plastic films and small parts. Keep plastic films, bags, straps, etc., out of reach of children, as they pose a suffocation hazard.  
Children may strangle themselves with cables. Keep cables out of reach of children.
- Inspect the device for damage before use. If the device is damaged, do not connect it to the power supply! Repairs or maintenance are required if any damage is detected, such as to the power cable or plug, if liquid or objects have entered the device, if it has been exposed to rain or moisture, is not functioning properly, or has been dropped. Contact your retailer for inspection.
- If batteries (including rechargeable or replaceable dry-cell batteries) are used, do not expose them to direct sunlight, fire, or excessive heat.
- Restart: If the device does not respond to operation, you can restore normal function by switching it off and on again using the power switch on the back of the device.

## 2. Intended Use

The smart power 12V / 24V is a power supply for operating a **Clearaudio** 12V / 24V turntable. The intended use of the smart power 12V / 24V is strictly limited to operation in accordance with the information provided in the user manual.

The power supply may only be used with the maximum permissible connection values as specified in the technical data. Any other use or modification of the power supply is considered improper.

## 3. Placement

- Avoid locations with direct sunlight, temperature fluctuations, or high humidity. Electrical devices should not be placed near heaters, heat lamps, or other devices that generate heat. The device is designed for operation in heated indoor spaces and should only be placed on level surfaces.
- Never block the ventilation slots or cover the device with cloths or similar materials. Do not place objects on top of the device.
- Installation in enclosed shelving systems or similar furniture is not allowed.
- Choose a location near a wall socket to ensure that the power plug is always accessible.
- Never operate electrical devices near water.

## 4. Connection

- Do not bypass the safety features of a polarized or grounded plug. Polarized plugs have two prongs, one wider than the other. Grounded plugs have two prongs and a third grounding pin. Both are safety features. If the plug does not fit into your outlet, have an electrician replace the outlet.
- Pay special attention to the area around plugs, sockets, and the cable outlet/connection to ensure the power cable is not stepped on or pinched.



Loving music

# Important Safety Instructions

- Regularly inspect the power cable for potential damage to the insulation for your own safety. Immediately have a damaged power cable replaced by a professional!
- Even when the power or standby/on switch is not in the "on" position, a small amount of standby power is consumed.
- Always unplug the device by holding the plug, not by pulling on the cable!

## 5. Maintenance

- If you do not use the device for an extended period, it is recommended to disconnect the power supply from the mains.
- Use only a soft cloth with a smooth surface or a soft brush for cleaning. Do not use aggressive cleaning agents under any circumstances.
- Electrical devices contain magnetic storage components. External magnets can interfere with the device's magnetic components and cause damage.

## 6. Health Warnings

- Prolonged exposure to high volume can cause hearing damage. Use high volume responsibly!
- Heat generation: Be cautious when touching the device—its housing may become warm during operation.
- Risk of injury during setup due to heavy components, such as pinching fingers.
- Risk of injury from sharp objects.

## 7. Disclaimer of Liability:

Use only accessories approved by the manufacturer.

Warranty claims will be void if damage is caused by failure to follow the instructions in the manual. The manufacturer assumes no liability for consequential damages.

## Liability Disclaimer:

**Clearaudio assumes no liability for damage to records caused by improper handling!**

## 8. Service

- Do not open the housing to access internal electronics. There are no user-serviceable parts inside the device. Opening the device may also void the warranty. Leave all repairs and maintenance to qualified personnel.
- The smart power 12V / 24V must only be repaired by the manufacturer during the warranty period; otherwise, the warranty will be void.  
Service for all **Clearaudio** products should exclusively be handled by authorized dealers. If service is required despite the high manufacturing standards, the **Clearaudio** product must be sent to **Clearaudio** via your dealer.
- If malfunctions occur, contact the dealer where you purchased the device. Only resume use after repairs have been completed.



Loving music

# Important Safety Instructions

## 9. Transport

Always use the original packaging for transporting the **Clearaudio** smart power 12V / 24V. Ensure the device is packed exactly as it was delivered. Secure transport is only guaranteed in the original packaging. Reverse the steps of the setup and operation process when packing the device. Ensure that both tanks (reservoir and waste fluid tank) are emptied before packing the device!

**Clearaudio assumes no liability for transport damage caused by improper packing.**

## 10. CE Compliance

This product complies with the requirements of European directives and other applicable regulations.



## 11. Disposal

For customers in Europe: Disposal of electrical and electronic waste, as well as batteries and accumulators.



a) If a product, packaging, and/or accompanying documentation is marked with the symbol of a crossed-out trash bin, the product is subject to European directives and national laws implementing these directives.

b) These directives and laws require that electrical and electronic waste, as well as batteries and accumulators, must not be disposed of with regular household waste. Proper disposal, recovery, and recycling must be ensured, and you are obligated to dispose of old devices and discharged batteries/accumulators at designated collection points.

c) Proper disposal contributes to conserving valuable resources and prevents potential harmful effects on public health and the environment that may result from improper disposal. Disposal is free of charge.

d) For more information on the recycling and recovery of old devices, batteries, and accumulators, contact your local municipality, the waste disposal company, or the point of sale where you purchased the product.