

Button Functions (Recording Stopped):



Settings Button: Access the dash cam's Settings menu.



Takes a snapshot and stores it in the Photo Folder.



Enters the playback menu to review previous recordings and photos.



Begins loop recording.

Button Functions (While Recording):



When pressed the camera saves the current clip from being overwritten.



Takes a snapshot and stores it in the Photo Folder.



Toggles the microphone on/off. Note that the icon on the button indicates the action that will be taken when the button is pushed, not the current setting. The current setting is shown on the status bar at the top of the screen.



Stops loop recording. While in an Emergency Recording you will be asked to confirm.


Voice Commands

SC200 will respond to certain voice commands so you can stay focused on the road ahead. Try the following voice commands.

Say	Camera Action
"Front Video On"	Front-View camera is displayed on screen
"Rear Video On"	Rear-View camera is displayed on screen (optional accessory camera required)
"Record Video"	Begins loop-recording
"Lock Video"	(If currently recording), Camera locks the video and tags as Favorite
	(If not currently recording), Camera begins emergency recording, locks first video and tags as favorite
"Screen On"	Turn Display On
"Screen Off"	Turn Display Off
"Take Photo"	Takes photo of front and/or rear view and saves to "Photos" folder

For Cabin View*


Connect Cabin Camera to the Video Input Port on the SC 200

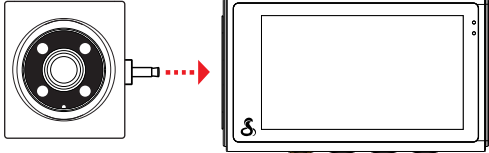

* optional accessory sold separately.

For a View of the Road Behind You

- 1 Connect Extension Cable to the Video Input Port on the Dash Cam
 - 2 Connect Extension Cable to the Rear Camera
 - 3 Attach Rear Camera to the Vehicle's Back Window
- Warning:** Please position the camera on the rear windshield so it faces out of the vehicle in the orientation shown

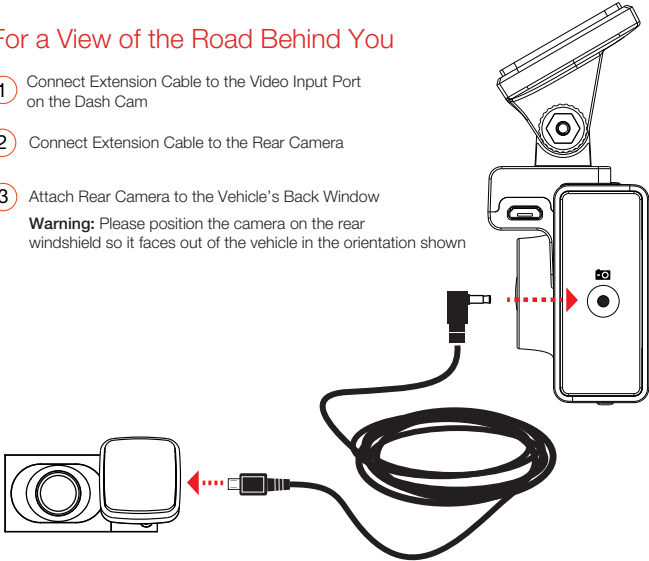

Cobra®

SC 200D

DASH CAM



QUICK START GUIDE

Scan QR Code For Additional Languages:



THANK YOU!

For purchasing the new COBRA® SC 200D

View, edit and share from your
smartphone or desktop.
Share & receive real-time driver alerts.
Download today!

drivesmarter.com/downloads



Full manual available at: www.cobra.com




FCC ID:BBOSC200, IC:906A-SC200. THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC NOTE: Modifications not expressly approved by the manufacturer could void the user's FCC granted authority to operate the equipment.

Cobra® and the snake design are registered trademarks of Cobra Electronics Corporation, USA. Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA. Other trademarks and trade names are those of their respective owners.


©2021 Cobra Electronics Corporation

SC 200D Features

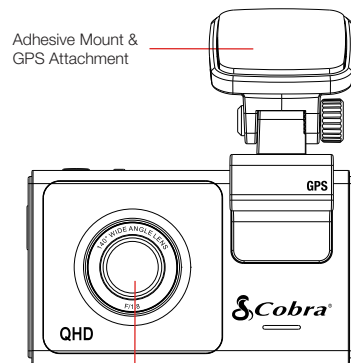


Adhesive Mount & GPS Attachment

Front View Camera Lens

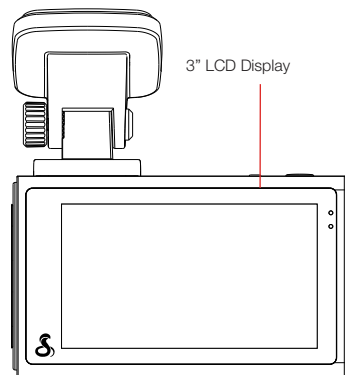


3" LCD Display

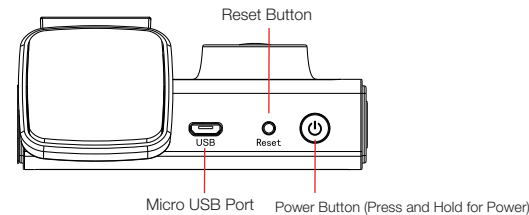

Reset Button


Micro USB Port

Power Button (Press and Hold for Power)

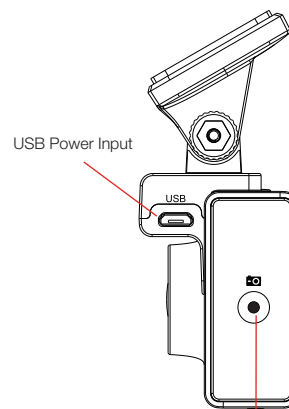

USB Power Input

Video Input Port for Flex Cam

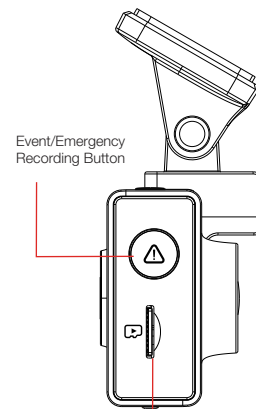

Event/Emergency Recording Button

 
MicroSD Card Slot



Rear View Camera



16GB MicroSD Card



Adhesive Mount & GPS Attachment



Vehicle Charger



Micro USB Data Cable




Rear Cam Extension Cable




Quick Start Guide

1 Attach GPS mount and remove protective film from mount and front lens

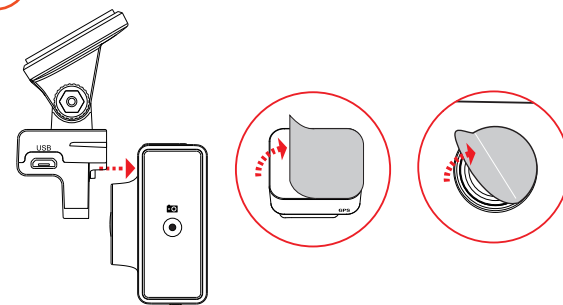

2 Attach Camera Assembly to Windshield

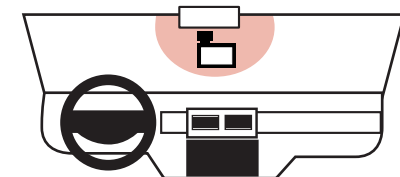

3 Connect and Power

To 12V Power Source

