

User Manual

SMART PROJECTOR



Pls read this manual carefully before using this product,
and properly keep for future reference.

Thanks for your choosing!

Warning

 
Please do not open the case in order to prevent electric shock. Customers cannot repair parts of inside devices. Please contact professional maintenance staff to repair it.

Standard accessories

Some of the accessories may vary by region.



Remote control



Power Cable

 


HDMI cable



User Manual

User Manual

Interface definition

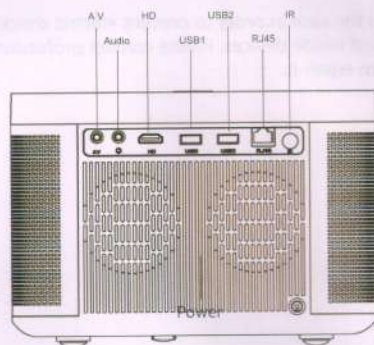

Control Panel

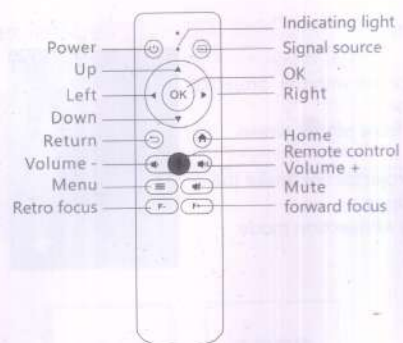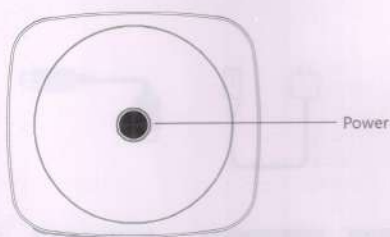  

Installation

Choosing a location

Before choosing an installation location for your projector, take the following factors into consideration:

- Size and position of your screen
- Electrical outlet location
- Location and distance between the projector and the rest of your equipment


You can install your projector in the following ways:

1. Front-Desktop:

Select this location with the projector placed near the floor in front of the screen. This is the most common way to position the projector for quick setup and portability.

Turn on the projector and make the following settings:

 
Image setting > Projection mode > Front-Desktop

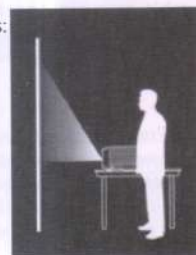



2. Front Ceiling:

Select this location with the projector suspended from the ceiling in front of the screen.

 Turn on the projector and make the following settings:
Image setting > Projection mode
> front ceiling



  3. Adjust the image

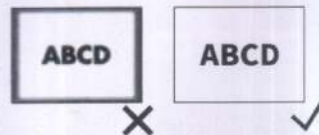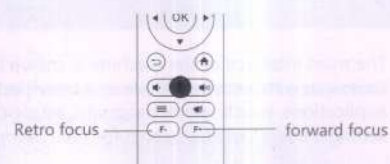


Operation

Starting up the projector

1. Plug the power cable into the projector and a power outlet. Turn on the power outlet switch (where fitted). The POWER indicator light on the projector lights red after power has been applied.

 Please use the supplied power cable to avoid possible dangers such as electric shock and fire.



2. Press the power button on the projector or remote control to start the projector. As soon as the lamp lights up, the POWER indicator remains green when the projector is turned on. The fans start operating, and a start-up image is displayed on the screen while it warms up. The projector does not respond to further commands while it is warming up.

 
Selection signal

Users need to select the correct signal input source before accessing the computer, TV, set-top box, game box, dvd select the home page. There will be a drop-down selection menu as shown below.




Let's Begin

The main interface of the machine is shown in the figure below. Users can watch the latest film and television works, download applications, watch sports programs, music channels and the most basic settings. Users can also search for their favorite programs.

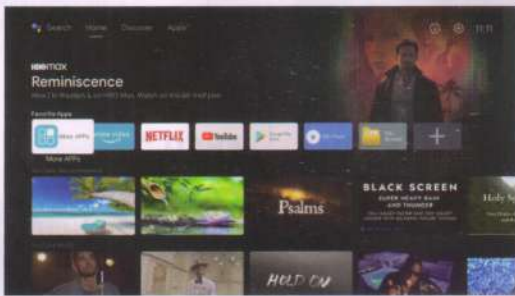

App

 You can download apps/management apps, etc.

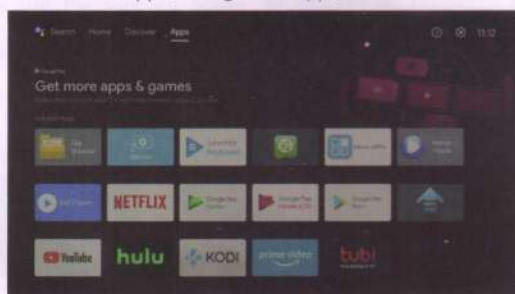

Eshare & AirPlay Mirroring

IOS

*The projector and IOS device must be using the same wi-Fi connection.

Step1:Open the "EShare" app on the projector.

Step2:Using your IOS device open "Screen Mirroring"(Airplay).

Step3:Select "Cast screen TV"



Android

*The projector and Android device must be using the same Wi-Fi connection.

Step1:Download the "EShare"app to your Android device.

Step2:Open the "EShare" app on your device.

Step3:Choose"Cast screen TV" from the connection list.

Step4: press the play button when it appears in the E app in order to start wireless screen casting.

 
File manager

Users can manage local files, move disk files, clean file caches, uninstall software, manage home networks, and manage downloaded files.



set up

User's basic settings and application management as well as software version, network, Bluetooth, display, date and time, language, keyboard, etc.

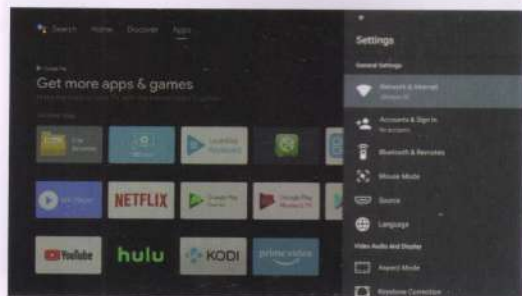

Network settings

Users can watch videos online only after connecting to wifi or setting up a hotspot.



 
Bluetooth and remote control

Connect Bluetooth devices, Bluetooth speakers, Bluetooth headsets, etc.



Language

Users can choose Chinese, Chinese, French, Spanish, Korean, Japanese, etc. The default is English.

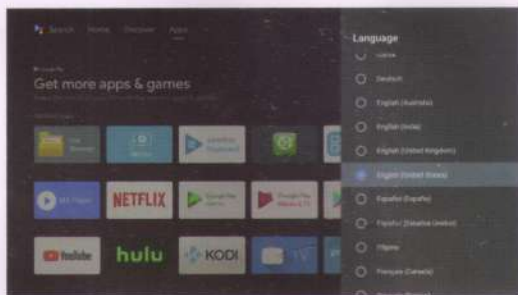


Keystone

Keystone correction can be adjusted up, down, left or right, or four-point keystone, keystone correction can be turned on or off, or manually corrected.



Electronic zoom

 The user can press the "up and down keys" to adjust, and press the "menu key" to restore.

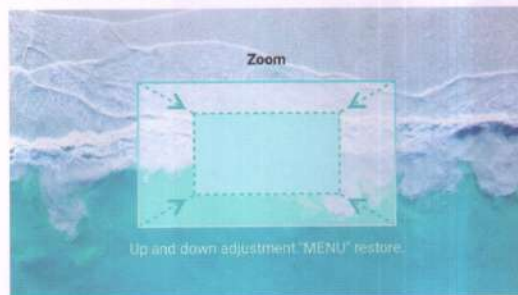

Projection method

Users can choose "Formal front projection", "Formal rear projection", "Hoisting front projection" and "Hoisting rear projection" according to their needs.



Date and time

Enable the automatic retrieval function, which will automatically update the local date and time.



 
About

You can upgrade the USB flash drive, restore factory settings, and the software version and model of the machine.



Update

Users can choose to update online or locally.

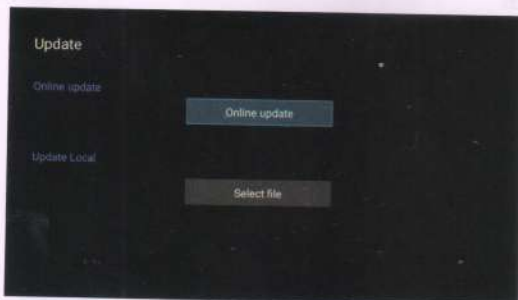

WARNING

1. Use this product only for intended use as described in this manual.
- 2.No peeking into the lens while projectors is working.
- 3.No cloth, or any other material that could stock ventilation holes of the projector.
- 4.No water-proof function for this projector ,no such apparatus as vase or cup should be put around the projector.
- 5.Projector should be stocked and used at dry and clean condition.
- 6.Please turn off the projector and cut off the power supply, if it is not used for along time.
7. Please use factory original foam and other shockproof material while transporting.
- 8.If projector defected, do not attempt to repair it by yourself. Please contact with your distributor or factory directly.
9. To avoid risk of electronic shock, do not disassemble or repair the device. Incorrect repair may cause risk of electronic shock or injury to people during operating.

Thanks for reading!