

Data Sheet

Colibri® Electric expansion valves

Type **ETS 12C, ETS 24C, ETS 25C, ETS 50C, ETS 100C**



ETS Colibri® is an electric stepper motor valve. The valve has been designed for precise liquid injection into evaporators for air conditioning and refrigeration applications.

The valve in-line design includes balanced cage and slider assembly operated by the direct driven motor technology. This ensures solenoid tight shut-off in both flow directions, thus providing smooth operation of the system.

The valve incorporates a powerful bi-polar motor which precisely controls flow regulation. ETS Colibri® valves are compatible with electronic control solutions from Danfoss and other manufacturers.

Features

Precise control of liquid injection

- Optimum utilization of the evaporator
- Increased energy efficiency and COP
- Improved overall system performance

Linear Flow characteristic

- Repetitive operation of the valve at all conditions

Balanced cage design

- Higher MOPD and MWP
- Easily fits in various application and operating conditions

Direct driven valve motor technology

- Powerful motor that guarantees precise flow control and increased energy efficiency of the system

Supports variety of refrigerants, approved for oil free applications

- Wide application scope

Fast opening/closing time of 2.5 seconds

- Quick reaction to the operating condition
- Minimizes the risk of liquid refrigerant flowing into the compressor at shut down and low pressure cut out at start up

Solenoid tight shut-off

- Prevents migration of the refrigerant during stand-still
- Reduced complexity by reducing number of components in the system

Sight glass / moisture indicator

- Fast troubleshooting during system diagnostics

Compact, lightweight and in-line design

- Flexible and easy integration in any system

Bi-metal connectors

- Fast and improved brazing process - no wet wrap needed

Stainless construction

- Internal and external corrosion resistant

Fully hermetic laser welded design

- Hermetic valve in accordance to EU F-gas Regulation EU 517/2014
- No external leakage which saves cost on maintenance and refrigerant loss
- Protecting the environment and climate

Manufactured according to ISO/TS16949

- Second – to – none quality and reliability

Design

The ETS Colibri® in-line electronic expansion valve regulates refrigerant flow by means of an internal cage slider which moves in a linear motion. This occurs by the rotation of a spindle assembly which moves when electrical pulses are applied to the motor.

The direction of the rotation of the spindle depends on the phase relationship of the power pulses.

The valve design is pressure balanced, giving identical bi-flow performance capabilities and nearly identical maximum capacities.


Operating the ETS Colibri® series requires a controller that can provide 800mA peak/ 600mA RMS current per phase in order to achieve the operational temperature and MOPD envelope of the valve.

NOTE:

Cable length

Depending on the type of controller or driver, there will be limitations in cable length between the controller / driver and the valve. Both the actual cable length, the level of EMC emission on the location and the driver circuit have an impact on the actual distortion of the current to the motor. On using 3rd party longer cable, make sure that the valve receives the exact current as defined in the specification.

Figure 1: Valve design

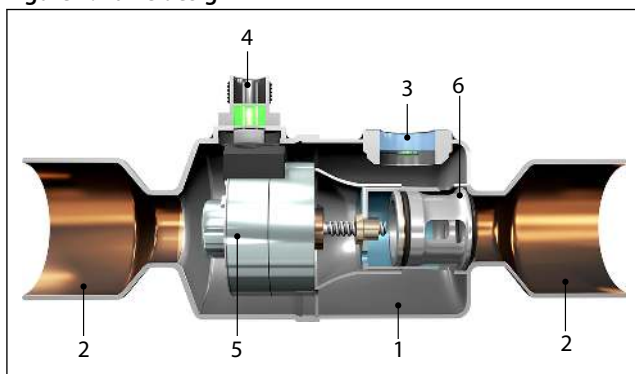

1	Valve body in stainless steel
2	Connections in bi-metal
3	Sight glass with moisture indicator
4	M12 electrical connection
5	Stepper motor
6	Cage and slider

Figure 2: Flow direction




 
Flow direction from A to B refers the normal flow. Sightglass for flash gas detection can only be used in normal flow direction.

Sight glass and indicator

ETS 25C, ETS 50C and ETS 100C have integrated sight glass with moisture indicator. The presence of the sight glass provides the availability to check the physical position of the slider in the valve. It also helps to determine the flow direction of the refrigerant in the system. Insufficient subcooling can produce flash gas which is visible through the sight glass. The moisture indicator in the sight glass indicates dry or wet state of the refrigerant by changing colour.


Figure 3: Moisture indicator



	dry
	wet

Application

Figure 4: Application

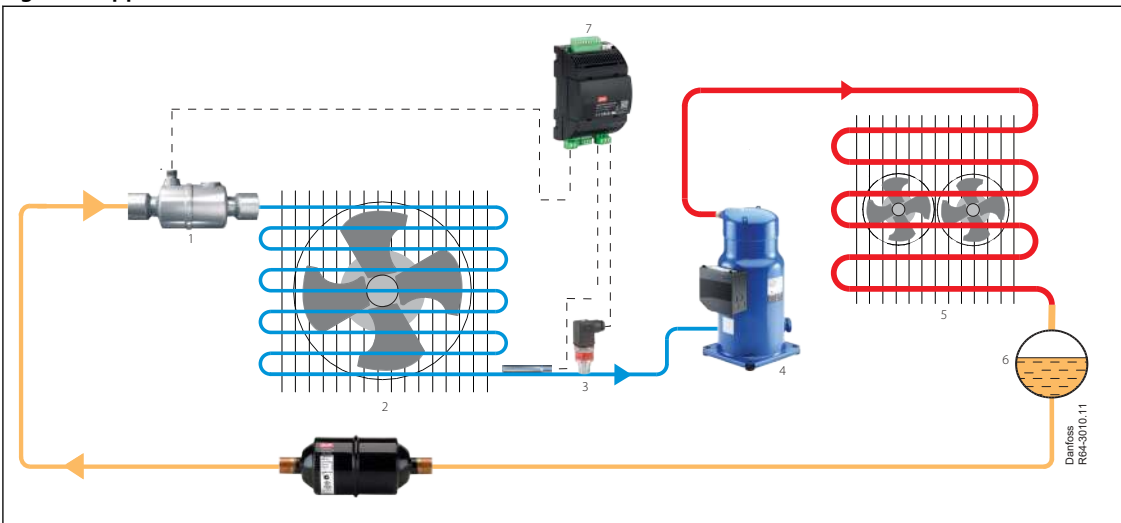

1	ETS Colibri®
2	Evaporator
3	AKS temp. sensors and press. transmitters
4	Compressor
5	Condenser
6	Receiver
7	Electronic controller/ driver

Applications:

Air Conditioning

- Chillers, heat pumps
- Roof top and ducted split systems
- VRF and other split systems
- Close control cooling

Refrigeration

- Cold Rooms, Food retail and Transport

Related products

<p>EKE 1A, EKE 1B, EKE 1C superheat controller</p>	<p>EKS 221, ACCPBT, AKS 11 / AKS 12 temperature sensor</p>	<p>AKS 32R, AKS 32, AKS 33, NSK pressure transmitter</p>	<p>AST-G service driver</p>

Product specification

Technical data

Table 1: Technical data

Compatible refrigerants	R1233zd(E), R1234yf, R1234ze(E), R1270, R134A, R152A, R22, R227, R23, R245fa, R290, R32, R404A, R407A, R407B, R407C, R407F, R407H, R410A, R412A, R413A, R417A, R422A, R422B, R422D, R427A, R438A, R442A, R444B, R447A, R448A, R449A, R449B, R450A, R452A, R452B, R454A, R454B, R454C, R455A, R463A, R502, R507, R512A, R513A, R513B, R515A, R515B, R516A, R600, R600A
Refrigerant oil	POE, PVE, All mineral oils, ester oils and supports oil free
Complies with PED	Yes, Fluid group 1 and 2, article 4 paragraph 3 for all ETS Colibri
MOPD	40 bar / 580 psi
Max. working pressure PS/MWP	50 bar(g) / 725 psi(g)
Ambient temperature	-40 – 70 °C / -40 – 158 °F
Capacity control range	10% - 100% of total opening degree
Initial opening	5% = 30 full steps
Environmental transport/storage temperature and humidity	Max. +75 °C / +167 °F, Humidity: <100% RH
Material of construction	Body: Stainless Steel / Connector: Bimetal (stainless steel and copper)
Sightglass / moisture indicator	Type N moisture indicator

Table 2: Refrigerant temperature range

Refrigerant temperature range (measured at the inlet of the valve)	Maximum allowed duty cycle	Flow direction	UL approved
-40 to 70°C / -40 to 158°F	100% possible, requiring refrigerant flow through valve	Normal or reverse	Yes
	Less than 50% over 120 sec period recommended		
70 to 95°C / 158 to 203°F	20%	Normal or reverse	Yes
95 to 120°C ⁽¹⁾ / 203 to 248°F ⁽¹⁾	20%	Only reverse	No

⁽¹⁾ Only for valves installed in liquid line.

Electrical data

Table 3: Electrical data

Motor enclosure	IP67
Stepper motor type	Bi-polar - permanent magnet
Step mode	Microstepping (recommended), 2 phase full step or half step
Phase current	800 mA peak / 600 mA RMS. For more details on 3rd party controllers and lower phase current see section: Driving Colibri® valve with 3rd party controller
Holding current	No permanent holding current needed. Max. 20% permanent holding current allowed with refrigerant flow through valve. For optimal performance, driver should keep 100% current on coils 10ms after last step
Phase resistance	10 Ω ±10% at +20 °C / +68 °F
Inductance	14 mH ±25%
Duty cycle	Please see information regarding refrigerant temperature range in the table in "Technical data" section above.
Nominal Power consumption	7.44 W RMS at 20 °C (total, both coils)
Total number of full steps	600
Step rate	Current control driver:
	a. Step type: Microstep (1/4 th or higher): 240 full steps/sec. recommended
	b. Step type: Full step or Half steps: 240 full steps/sec. recommended
	Emergency close : 240 full steps/sec.
	OEMs with 3rd party controller, please contact Danfoss
Step translation	0.0167 mm / step
Full travel time	2.5 at 240 steps / sec
Opening stroke	10 mm / 0.4 in.
Reference position	Overdriving against the full close position
Overdriving performance	1% (6 full steps) overdrive is recommended for optimum performance.
	628 steps in closing direction recommended for initialisation.
	Overdriving in open position not recommended

Electrical connection	according to EN 61076-2-101
Compatible controllers / driver	Danfoss EKE 1A, EKE 1B, EKE 1C, MCX061V, MCX152V Certain third party controllers / drivers. Contact Danfoss for details

Driving Colibri® valve with 3rd party controller

ETS Colibri valves use a bipolar, 2-phase, permanent magnet stepper motor. ETS valves can be driven using various electronic control techniques i.e: Full step excitation mode, half step excitation mode, micro stepping mode (recommended). On selecting controller from other manufacturer than Danfoss, it is necessary to set the following correct valve data into the controller setting. The wrong settings may impair the performance of the valve.

1. Total no. of steps - 600 full steps (or equivalent steps based on excitation mode, e.g 1 full step = 2 half steps)
2. Step rate for current control driver: Step type: Microstep (1/4 th or higher): 240 full steps/sec. recommended
Step type: Full step or Half steps: 240 full steps/sec. recommended Emergency close: 240 full steps/sec.
3. Phase current: Always use full current of 600 mA RMS (800mA Peak) for driving ETS Colibri when possible. For application that requires lower MOPD or moderate operating temperatures, it is possible to drive ETS Colibri with low driving current . See below guideline for details.
4. Overdriving against closing position: 1% (i.e 6 full steps) Overdrive is recommended for optimum performance initialization during startup, 628 steps in closing direction recommended for initialization.
Overdriving in open position is not allowed.
5. Holding current: No permanent holding current needed. Max. 20% permanent holding current allowed with refrigerant flow through valve.

For optimal performance, driver should keep 100% current on coils 10ms after last step.

For controllers with limited driving current, it will be good to have some holding current.

Table 4: ETS Colibri guideline for using low current in 3rd party controllers, for low operating conditions

	MOPD		Evaporating temperature		Condensing temperature		Current rating	
	Bar	Psig	(°C)	(°F)	(°C)	(°F)	RMS (mA)	Peak (mA)
AC (Cooling only)	30	435	0	32	60	140	250	353
Reversible Chiller	30	435	-20	-4	50	122	300	423
Heat Pump	40	580	-30	-22	65	149	375	530
Refrigeration	30	435	-30	-22	60	140	300	423

* Operating conditions stated above are evaluated on refrigerants like R32/R410A for Chiller/Heat pump and R448A/R449A for Refrigeration.

IMPORTANT:

1. It is always best to use the highest possible current achievable in the controller while going below standard phase current.
2. Use lower speed rates to achieve higher torque while lowering the Phase current.
3. Customer must evaluate the performance of the system while using ETS Colibri with lower phase current and with 3rd party controllers.
4. All qualification testing of performance, robustness and reliability of Colibri has been conducted on 600mA RMS capable current drivers.

⚠ WARNING:

If the controller driving the ETS Colibri valve is from another manufacturer than Danfoss or a custom design, the following points must be considered in order to overcome potential step loss. To ensure total closing of the valve, and to compensate the lost steps after a defined number of changes in opening degree the controller should have a function to overdrive the valve in the closing direction. It is recommended to overdrive the valve at appropriate intervals as specified in the specification table.

At power failure the ETS valve will remain in the actual opening position it has at the moment of power failure, unless a device in the form of a battery backup to the controller is installed.

Stepper motor switch sequence

Figure 5: M12 connector

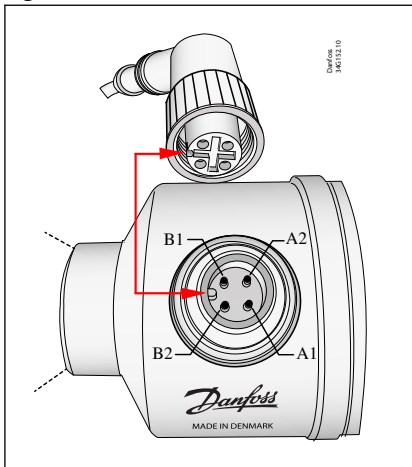


Table 5: Stepper motor switch sequence

	Pin	Coil B		Coil A		
		B 1	B 2	A 1	A 2	
	Wire color	Red	Green	White	Black	
↓ CLOSING ↑ OPENING	STEP					
	1	+	-	+	-	
	2	+	-	-	+	
	3	-	+	-	+	
	4	-	+	+	-	
	1	+	-	+	-	

Color code is only valid for Danfoss M12 cable

⚠ WARNING:

Electrical check of stepper motor and wiring: coil A and coil B = 10 Ω at 20 °C / 68 °F

Operation principle


This section explains the operation of the two phase full step excitation method in a bipolar stepper motor. Fig. 1 shows the simplified diagram of a rotor and a stator. The Full stepping operation is summarized below.

When a current in a form of a pulse flows to a given phase, that phase of the stator is excited as shown in Fig. 2.

1. On exciting Phases B1 and A1 simultaneously, the permanent magnets on the rotor are moved in the intermediate position between phase B1 and phase A1
2. When phases A1 and B2 are excited simultaneously, the rotor is then positioned between phases A1 and B2
3. Next, by exciting the successive adjacent pairs of phases sequentially i.e phases B2 and A2, phases A2 and B1, and phases B1 and A1, the rotor rotates through two phase excitations
4. By completely reversing the cycle in the following sequence phases B1 and A1 to phases A2 and B1 to phases B2 and A2 to phases A1 and B2, the stepper motor then reverses its rotation
5. The stepper motor is stopped by holding the phase excitation for a specified period at the last phase of forward or reverse rotation



Identification (laser engraved data)

Figure 7: Laser engraved data

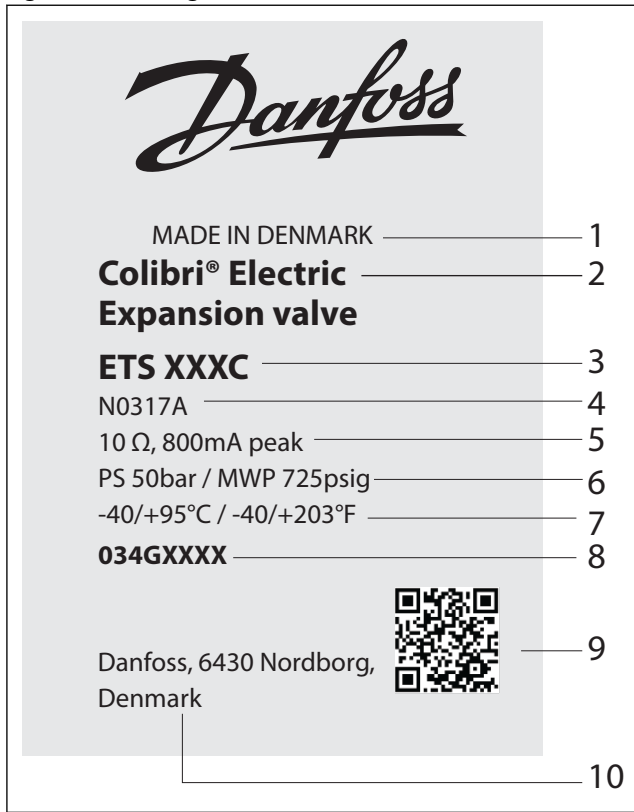


1	Country of origin
2	Valve name
3	Valve type
4	N = Nordborg, Denmark 03 = week 17 = 2017 A = Monday
5	Motor resistance, current
6	Max. working pressure
7	Refrigerant temperature
8	Code number
9	QR code (with traceable serial no.)
10	Manufacturer address

Figure 8: Laser engraved data - flow direction and moisture indication (valid for ETS 25C, 50C, 100C)

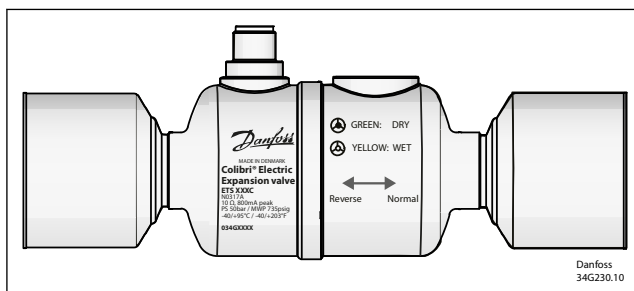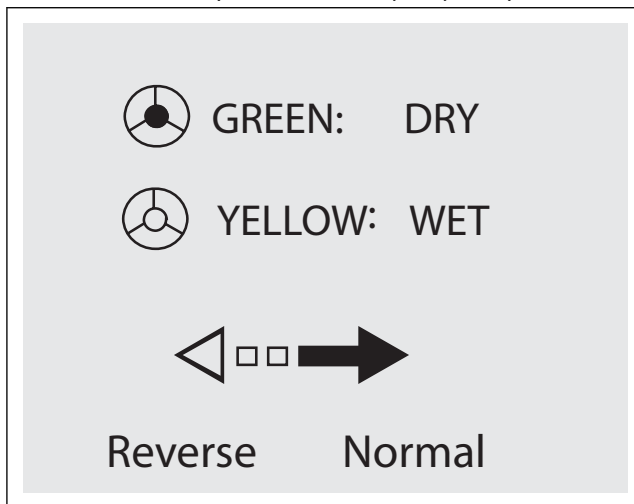


Valve opening position (Valid for ETS 25C - ETS 100C)

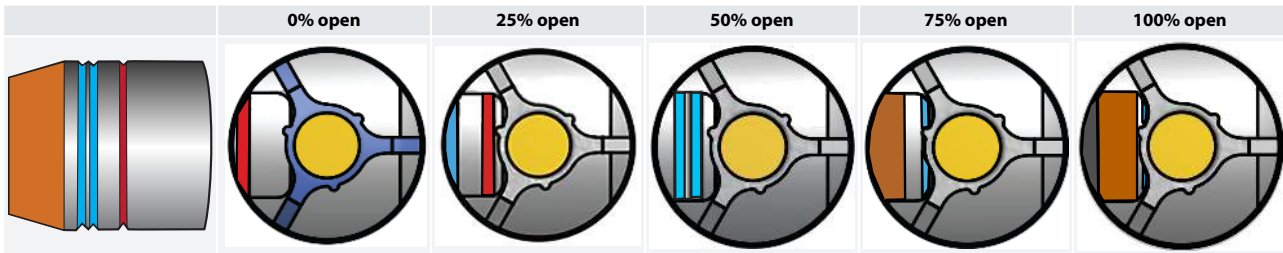

The colors of the grooves are only for illustration purposes

Flow Curve

Figure 9: ETS Colibri Capacity Vs Opening%

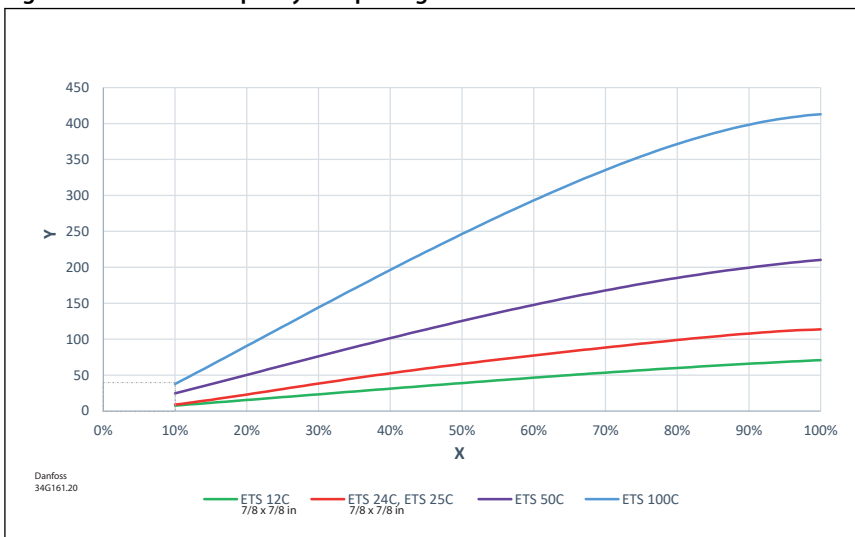


X	Opening degree [%]
Y	Capacity [kW]

The above estimated capacities, are based on the following conditions:

- Refrigerant: R134a
- Evaporating temperature t_e : 5 °C / 40 °F
- Liquid temperature t_l : 28 °C / 82 °F
- Condensing temperature t_c : 32 °C / 90 °F

Full stroke opening in normal flow direction. Capacity is $\pm 10\%$ in full open state in reverse flow direction.

Table 6: Opening degree

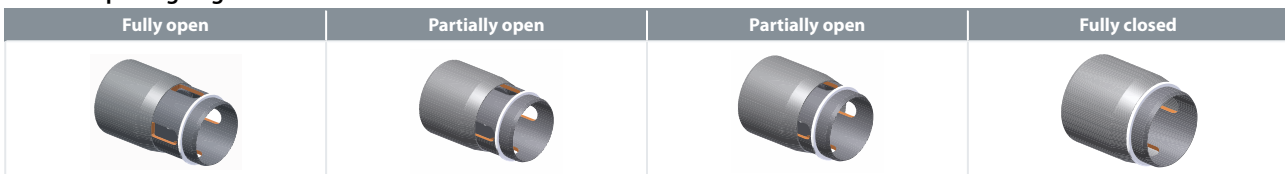

Dimensions and weights

Figure 10: Dimensions ETS 12C / ETS 24C

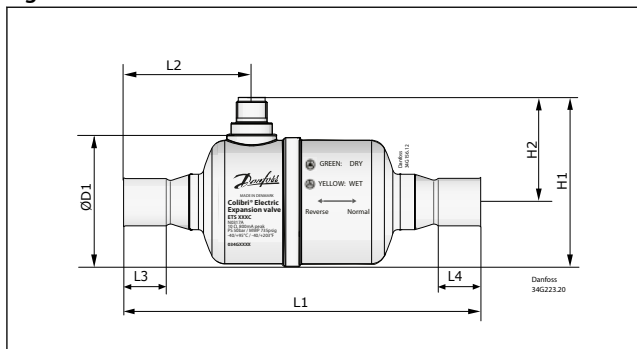


Table 7: ETS 12C / ETS 24C

Type	Connections ODF x ODF (A x B)	ØD1		L1		L2		L3 min		L4 min		H1		H2		Code no. ⁽¹⁾
		[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	
ETS 12C	1/2 x 1/2	49.9	2	122	4.8	41.6	1.6	9.5	0.3	9.5	0.3	65.6	2.6	40.7	1.6	034G7500
	5/8 x 5/8	49.9	2	132	5.2	46.6	1.8	14.7	0.6	14.7	0.6	65.6	2.6	40.7	1.6	034G7501
	7/8 x 7/8	49.9	2	135	5.3	48.4	1.9	20	0.8	20	0.8	65.6	2.6	40.7	1.6	034G7502
ETS 24C	1/2 x 1/2	49.9	2	122	4.8	41.6	1.6	9.5	0.3	9.5	0.3	65.6	2.6	40.7	1.6	034G7900
	5/8 x 5/8	49.9	2	132	5.2	46.6	1.8	14.7	0.6	14.7	0.6	65.6	2.6	40.7	1.6	034G7901
	7/8 x 7/8	49.9	2	135	5.3	48.4	1.9	20	0.8	20	0.8	65.6	2.6	40.7	1.6	034G7902

⁽¹⁾ For the equivalent industrial packed code number see the ordering section

Figure 11: ETS 25C, ETS 50C and ETS 100C

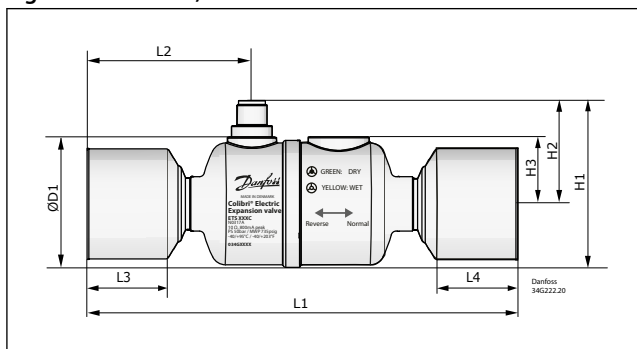


Table 8: ETS 25C, ETS 50C and ETS 100C

Type	Connections ODF x ODF (A x B)	ØD1		L1		L2		L3 min		L4 min		H1		H2		Net weight [kg]	Code no. ⁽²⁾
		[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]		
ETS 25C	7/8 x 7/8	49.9	2	135	5.3	48.4	1.9	20	0.8	20	0.8	65.6	2.6	40.7	1.6	0.31	034G7602
	7/8 x 7/8	49.9	2	135	5.3	48.4	1.9	20	0.8	20	0.8	65.6	2.6	40.7	1.6	0.31	034G7700
ETS 50C	7/8 x 1 1/8	49.9	2	137	5.4	48.4	1.9	20	0.8	20	0.8	65.6	2.6	40.7	1.6	0.32	034G7701
	1 1/8 x 1 1/8	49.9	2	139	5.5	50.4	2	20	0.8	20	0.8	65.6	2.6	40.7	1.6	0.32	034G7702
ETS 100C	1 1/8 x 1 3/8	49.9	2	147	5.8	50.4	2	20	0.8	25	1	65.6	2.6	40.7	1.6	0.33	034G7703
	1 1/8 x 1 1/8	49.9	2	139	5.5	50.4	2	20	0.8	20	0.8	65.6	2.6	40.7	1.6	0.32	034G7800
	1 1/8 x 1 3/8	49.9	2	147	5.8	50.4	2	20	0.8	25	1	65.6	2.6	40.7	1.6	0.33	034G7801
ETS 100C	1 3/8 x 1 3/8	49.9	2	155	6.1	58.4	2.3	25	1	25	1	65.6	2.6	40.7	1.6	0.35	034G7802
	1 5/8 x 1 5/8	49.9	2	169	6.7	65.4	2.3	30	1.2	30	1.2	65.6	2.6	40.7	1.6	0.37	034G7803

⁽²⁾ For the equivalent industrial packed code number see the ordering section

Ordering

Ordering valves

Table 9: ETS Colibri with and without sight glass

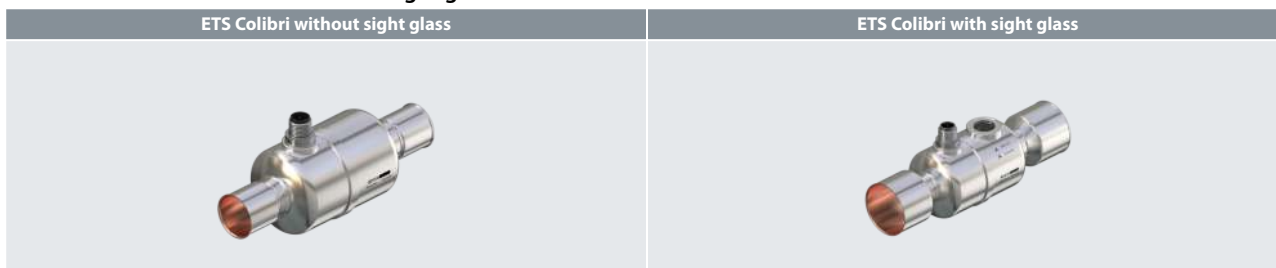


Table 10: Ordering valves

Type	K _v value [m ³ /h]	C _v value [gpm]	Rated capacity ⁽¹⁾										Connection		Code no. single pack	Code no. I-pack 12 pcs.
			R410A		R407C		R1234ze		R134a		R290		ODF × ODF (A × B)			
			[kW]	[TR]	[kW]	[TR]	[kW]	[TR]	[kW]	[TR]	[kW]	[TR]	[in]	[mm]		
without sight glass																
ETS 12C	0.8	0.9	91.4	26.4	83	23.9	46.8	13.5	59.4	17.1	79.7	23	½ × ½	-	034G7500	034G7510
	0.8	0.9	98.1	28.3	89.1	25.6	50.3	14.5	63.7	18.4	85.6	24.7	5/8 × 5/8	16 × 16	034G7501	034G7511
	0.8	0.9	105	30.2	95.1	27.3	53.6	15.4	68	19.6	91.3	26.3	7/8 × 7/8	22 × 22	034G7502	034G7512
ETS 24C	1.3	1.5	129	37.3	117	33.7	66.2	19.1	83.9	24.2	113	32.5	½ × ½	-	034G7900	034G7910
	1.3	1.5	138	39.7	125	35.9	70.4	20.3	89.3	25.7	120	34.6	5/8 × 5/8	16 × 16	034G7901	034G7911
	1.3	1.5	170	49.2	155	44.5	87.3	25.1	111	31.9	149	42.8	7/8 × 7/8	22 × 22	034G7902	034G7912
with sight glass																
ETS 25C	1.3	1.5	170	49.2	155	44.5	87.3	25.1	111	31.9	149	42.8	7/8 × 7/8	22 × 22	034G7602	034G7612
ETS 50C	2.4	2.8	323	93.3	294	84.5	166	47.7	210	60.5	282	81.3	7/8 × 7/8	22 × 22	034G7700	034G7710
	2.4	2.8	323	93.3	294	84.5	166	47.7	210	60.5	282	81.3	7/8 × 1 1/8	22 × 28	034G7701	034G7711
	2.4	2.8	323	93.3	294	84.5	166	47.7	210	60.5	282	81.3	1 1/8 × 1 1/8	28 × 28	034G7702	034G7712
	2.4	2.8	323	93.3	294	84.5	166	47.7	210	60.5	282	81.3	1 1/8 × 1 3/8	28 × 35	034G7703	034G7713
ETS 100C	5	5.8	635	183	577	166	325	93.7	413	119	554	160	1 1/8 × 1 1/8	28 × 28	034G7800	034G7810
	5	5.8	635	183	577	166	325	93.7	413	119	554	160	1 1/8 × 1 3/8	28 × 35	034G7801	034G7811
	5	5.8	635	183	577	166	325	93.7	413	119	554	160	1 3/8 × 1 3/8	35 × 35	034G7802	034G7812
	5	5.8	635	183	577	166	325	93.7	413	119	554	160	1 5/8 × 1 5/8	-	034G7803	034G7813

⁽¹⁾ The above estimated capacities, are based on the following conditions:

- Evaporating temperature t_e : 5 °C / 40 °F
- Liquid temperature t_l : 28 °C / 82 °F
- Condensing temperature t_c : 32 °C / 90 °F
- Full stroke opening in normal flow direction
- Capacity is ± 10% in full open state in reverse flow direction

Accessories

M12 cables

M12 female connector is intended for use with a standard M12 male connector, available on stepper motor valves. These cables are designed to offer high flexibility and small outer diameters with tensile strength. Each of M12 cables listed in the [Table 11: M12 cables - ordering table](#) consist of paired, twisted wires, which decreases mutual influence between signals transmitted along the cable and reduces influence of external sources of interference. These cables thus provides a higher degree of protection against lost steps compared to other cables.


Table 11: M12 cables - ordering table

Cable length (L)	Cable insulation	Connector	Packing format	Code no.
2 m / 6.6 ft	PVC	Angleway	Single pack	034G7073
5 m / 16.4 ft	PVC	Angleway	Single pack	034G7120
8 m / 26.2 ft	PVC	Angleway	Single pack	034G7074
12.2 m / 40.0 ft	PVC	Angleway	Single pack	034G7119
12.2 m / 40.0 ft	PVC	Straightway	Single pack	034G7078
15 m / 49.2 ft	PVC	Angleway	Single pack	034G7129

Table 12: Specification

Jacket	PVC - black
Cable outer sheath	Oil - resistant
Water proof rating	IP 67
Operating temperature range	-40 – 80 °C
Wire type	Twisted pair, cross section 20 AWG / 0.5 mm ²
Cable outer diameter	7.0 mm
Minimum bending radius	10 x cable diameter
Cable combustibility / test	Flame retardant / VW-1 / CSA FT - 1
M12 standard	EN 61076-2-101
Reference standard - wire	UL style 2464 and DIN VDE 0812
LVD directive	2014/35/EU

Figure 12: Identification

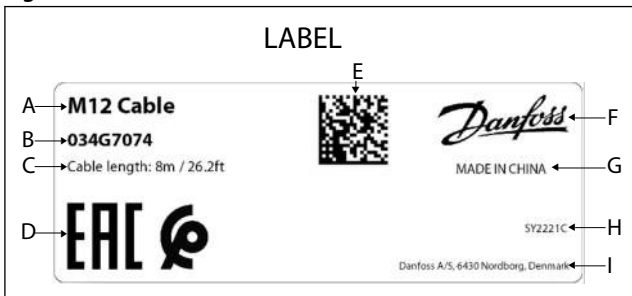

A	Product name
B	Product code no.
C	Cable length
D	Approvals
E	DataMatrix
F	Danfoss logo
G	Country of Origin
H	Place and date of production
I	Danfoss A/S address

Figure 13: Connections

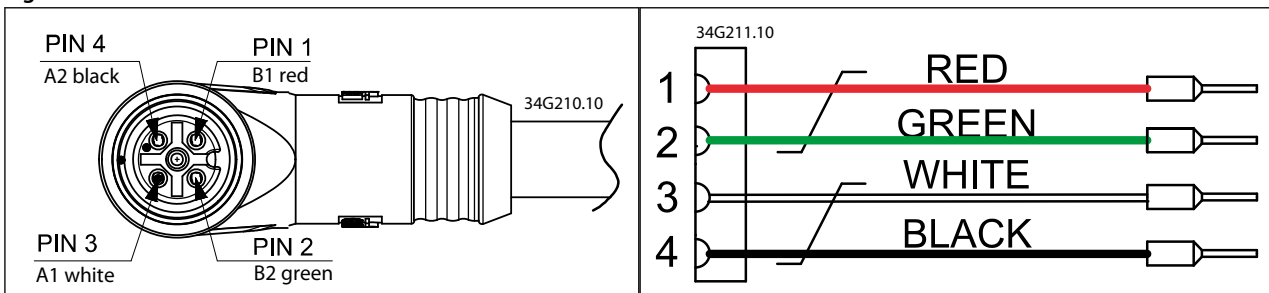


Figure 14: Dimensions (cable with angleway connector)


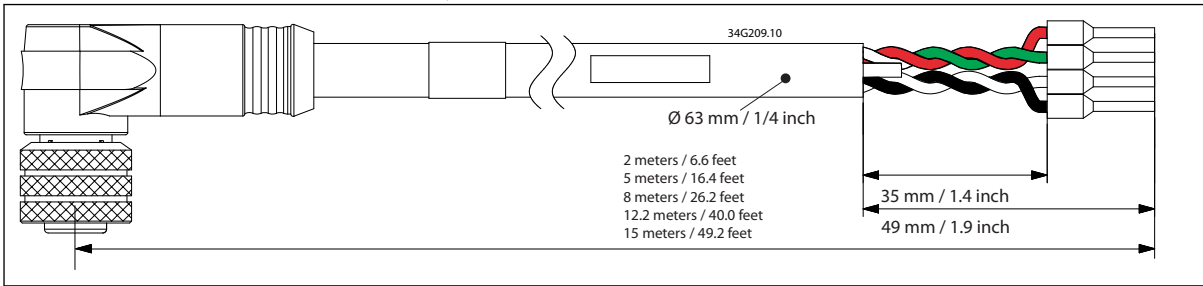


Figure 15: Dimensions (cable with straightway connector)

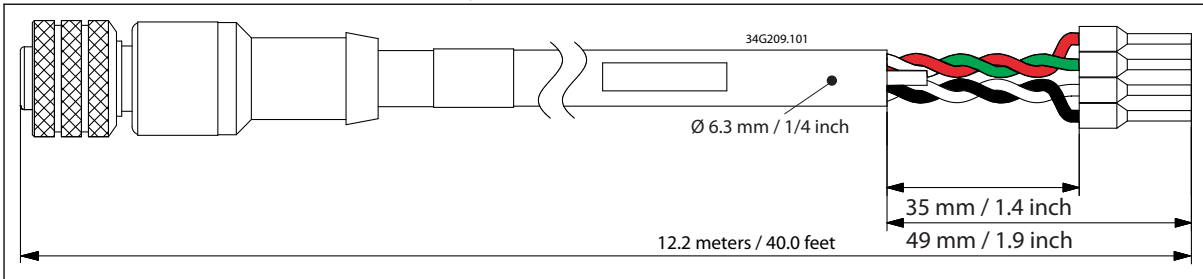

⚠ WARNING:

* M12 cables shown in the datasheet are not ATEX approved. Kindly procure ATEX cable if needed from 3rd party manufacturer.

Troubleshooting

Symptom	Possible Cause	Remedy
No valve movement	Lack of proper electrical connection	<ul style="list-style-type: none"> • Check the connection between valve and a controller
	Wrong parameter setting in controller	<ul style="list-style-type: none"> • Check valve settings in controller i.e pre-selected valves, no. of steps, phase current, direction of valve rotation, steps per second
	Broken motor/ short circuit	<ul style="list-style-type: none"> • Check the resistance between coil A and coil B. Resistance in each coil should be 10 ohms @20°C. Details on Electrical wiring • Replace a complete valve
	Insufficient power supply to valve	<ul style="list-style-type: none"> • Check the current/voltage supply from controller to valve
Internal leakage (due to 'Step Loss')	Control pulse to valve is influenced by high external electrical noise	<ul style="list-style-type: none"> • Separate the cable from high power lines
	Longer cable length between valve and controller	<ul style="list-style-type: none"> • Check the maximum cable length allowed between the controller and the valve • For longer cable distance, use cable with bigger wire diameter • Use cable filter
	Accumulated backlash in valve	<ul style="list-style-type: none"> • Controller should overdrive the valve to compensate the lost steps after a number of changes in opening degree
	Insufficient power supply to the valve	<ul style="list-style-type: none"> • Check the current/voltage supply from controller to valve • Check the supply power to controller
Insufficient capacity	Expansion valve too small	<ul style="list-style-type: none"> • Check refrigeration system capacity and compare with expansion valve capacity. Replace with larger valve if necessary
	Suction pressure too low / Evaporator superheat too high	<ul style="list-style-type: none"> • Check superheat performance, the settings SH min and SH max. in the super heat controller • Check valve capacity • Check 'total number of steps' defined in the controller • Also check section 'High Superheat'
	Expansion valve blocked with foreign material	<ul style="list-style-type: none"> • Remove and examine the valve
	Evaporator wholly or partly iced up	<ul style="list-style-type: none"> • De-ice evaporator
High superheat	Lack of sub-cooling	<ul style="list-style-type: none"> • Check refrigerant • Also refer to section Insufficient capacity
	Controller is not setup/tuned properly	<ul style="list-style-type: none"> • Check the controller superheat settings and sensors connected to it • Tune PID parameters in the controller
Flash gas	Lack of sub-cooling ahead of expansion valve	<ul style="list-style-type: none"> • Check refrigerant for flash gas ahead of expansion valve / external sub-cooler • If the valve is placed much higher than condenser outlet, check pressure difference
	Oversized valve selected	<ul style="list-style-type: none"> • Limit max opening degree of the valve setting in controller • Check refrigeration system capacity and compare with expansion valve capacity. Use proper valve size suitable for the system

Certificates, declarations, and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

Some approvals may change over time. You can check the most current status at danfoss.com or contact your local Danfoss representative if you have any questions.

Certificates, declarations and approvals



Table 13: List of certificates, declarations and approvals

File name	Document type	Approval authority
Danfoss EU-UK 034R7031.AG	EU-UK Declaration	Danfoss
DTI 17ATEX0065X Ver. 01	Explosive Safety Certificate	Danish Technological Institute
ID449038808459-0101	UA Declaration	Danfoss
Danfoss UA 8481	UA Declaration	Danfoss
LLC CDC EURO-TYSK UA.TR.089.1015.02-22	Pressure Safety Certificate	LLC CDC EURO TYSK
Danfoss MD 034R9825.AB	Manufacturer's Declaration	Danfoss
Danfoss MD 032F9268.AD	Manufacturer's Declaration	Danfoss
UL MH7648	Mechanical Safety Certificate	UL

Online support

Danfoss offers a wide range of support along with our products, including digital product information, software, mobile apps, and expert guidance. See the possibilities below.

The Danfoss Product Store



The Danfoss Product Store is your one-stop shop for everything product related—no matter where you are in the world or what area of the cooling industry you work in. Get quick access to essential information like product specs, code numbers, technical documentation, certifications, accessories, and more.

Start browsing at store.danfoss.com.

Find technical documentation



Find the technical documentation you need to get your project up and running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more.

Start searching now at www.danfoss.com/en/service-and-support/documentation.

Danfoss Learning



Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications, industry topics, and trends that will help you do your job better.

Create your Danfoss Learning account for free at www.danfoss.com/en/service-and-support/learning.

Get local information and support



Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert—all in your own language.

Find your local Danfoss website here: www.danfoss.com/en/choose-region.

Coolselector®2 - find the best components for you HVAC/R system



Coolselector®2 makes it easy for engineers, consultants, and designers to find and order the best components for refrigeration and air conditioning systems. Run calculations based on your operating conditions and then choose the best setup for your system design.

Download Coolselector®2 for free at coolselector.danfoss.com.

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.