 


048-H26F

DELLA

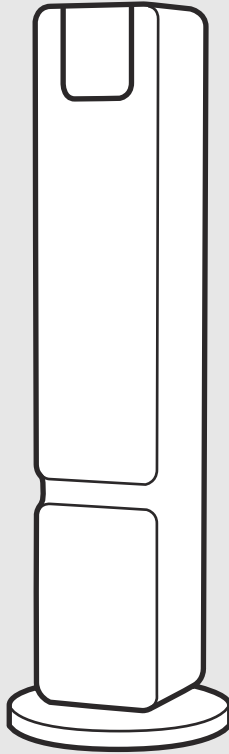

Instruction Package

This package contains information you need to install and use your product. Keep the package for future reference.

Table of Contents

Warning and Safety -----	04-----
Product Specification -----	05-----
Parts Details -----	06-----
Control Panel -----	07-----
Remote Control -----	08-----
Operation Instructions -----	11-----
Care and Maintenance -----	15-----

Warning and Safety

*Read this guide before installation. Failure to follow the safety instructions may result in property damage, serious injury, or death.

DANGER

Indicates an **imminently** hazardous situation that, if not avoided, will result in death, serious injury, or serious property damage.

WARNING

Indicates a **potentially** hazardous situation that, if not avoided, will result in death, serious injury, or serious property damage.

CAUTION

Indicates a **potentially** hazardous situation that, if not avoided, will result in minor to moderate injury. It may also be used to indicate unsafe practice.

DANGER

- In the case of the appliance emitting smoke or burning smell, shut down the appliance and disconnect from the power supply immediately.

WARNING

- This appliance must be plugged directly into a wall power socket. Do not connect this appliance to a power strip, extension cord, surge protector, timers, or direct breaker.
- Ensure the voltage and current rating of the power supply corresponds to that on the product specification.
- Make sure the appliance is connected to a properly grounded power outlet only.
- Keep combustible materials such as furnitures, beddings, papers, clothes, and curtains at least 3ft / 0.9m away from the heater.
- Unplug the heater from the power outlet when not in use.
- Do not use the appliance with a damaged cord or plug, or after the heater malfunction, has been dropped, or damaged in any manner.
- This appliance is designed to be used indoor only. Do not use this appliance outdoor or expose it to outdoor elements such as rain, snow, sunlight, wind, or extreme temperature.
- Do not place or use the appliance in bathroom, laundry area, or places that would contact with water.
- Do not use this appliance near flammable substances such as alcohol, gasoline, paint, etc. Or pressureized containers such as spray can.
- Repairs should be carried out by a professional or qualified technician only. Incorrect repair could expose the user to potential electric shock or other kinds of hazards.
- Please keep the heater in a clean environment, clean surface, avoid hair, paper scraps, foam and other small flammable materials into the heater, to avoid burning risk.

CAUTION

- Do not run the power cord under carpet or cover the cord with throw rugs, runners, or similar covering. Arrange the cord away from traffic area to prevent trip over.
- Only use this appliance as described in this manual.
- Do not obstruct the air inlet or outlet.
- Do not use abrasive solvents to clean this appliance.
- Supervise with the appliance is used by children, persons with reduced physical, sensory, or mental capabilities, or pets.
- Do not left the appliance operating unattended.


Product Specification

Model	048-H26F
Rated Power	1500W
Rated Voltage	120V
Frequency	60Hz
Current	< 15A


Overheat Safety Feature

This heater is equipped with an overheat safety feature. When the internal components of the heater reach a certain temperature that could cause overheating or possible fire, the heater will automatically shut off. If the unit has been overheated, you will need to unplug the unit from the wall and replug it in to use the heater again.

 WARNING: TO PREVENT ELECTRICAL SHOCK, MATCH THE WIDE BLADE OF THE PLUG TO THE WIDE SLOT OF THE RECEPTACLE AND FULLY INSERT.

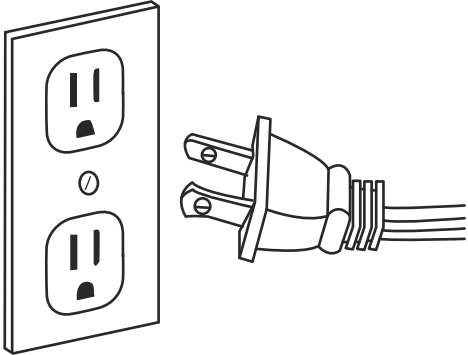


Parts Details

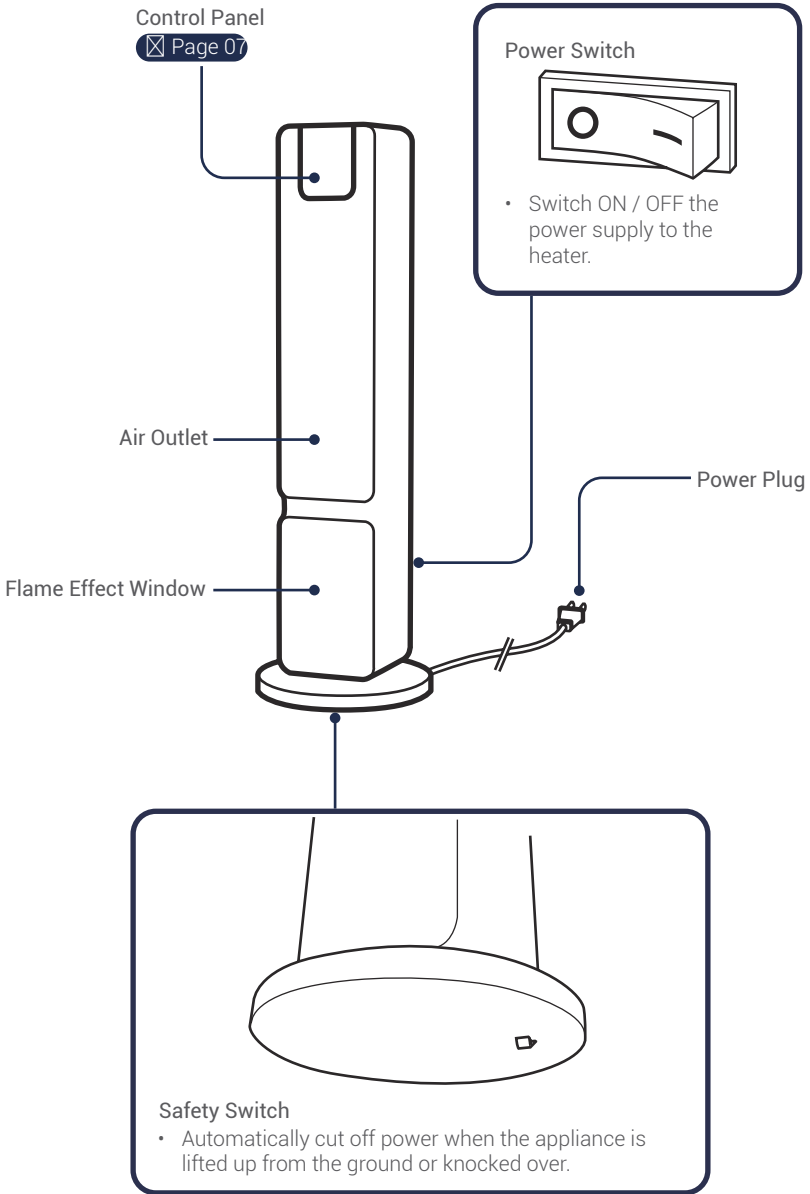 

NOTE:

- The graphical representation might have slight differences than the actual product.

 
Control Panel

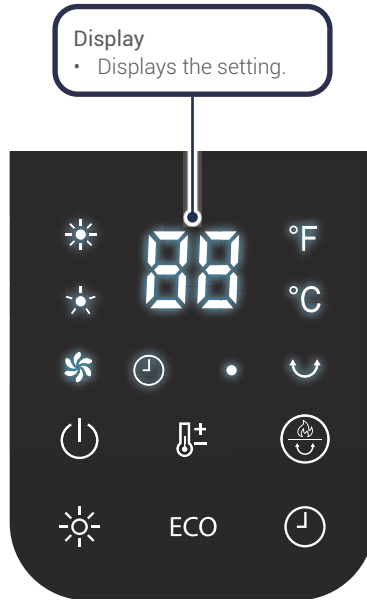

Icon	Button Name	Function
	Power Button	Power ON / OFF the heater
	Temperature Button	Change temperature setting ▶ Page 11, 12
	Flame Effect / Swing Button	Control the heater to swing horizontally / Turn ON / OFF the flame effect ▶ Page 12, 13
	Heat Button	Heater Setting ▶ Page 11
ECO	Eco Button	Toggle ECO mode ON / OFF ▶ Page 14
	Timer Button	Change Timer Setting ▶ Page 14



Remote Control

 Front of Remote Control

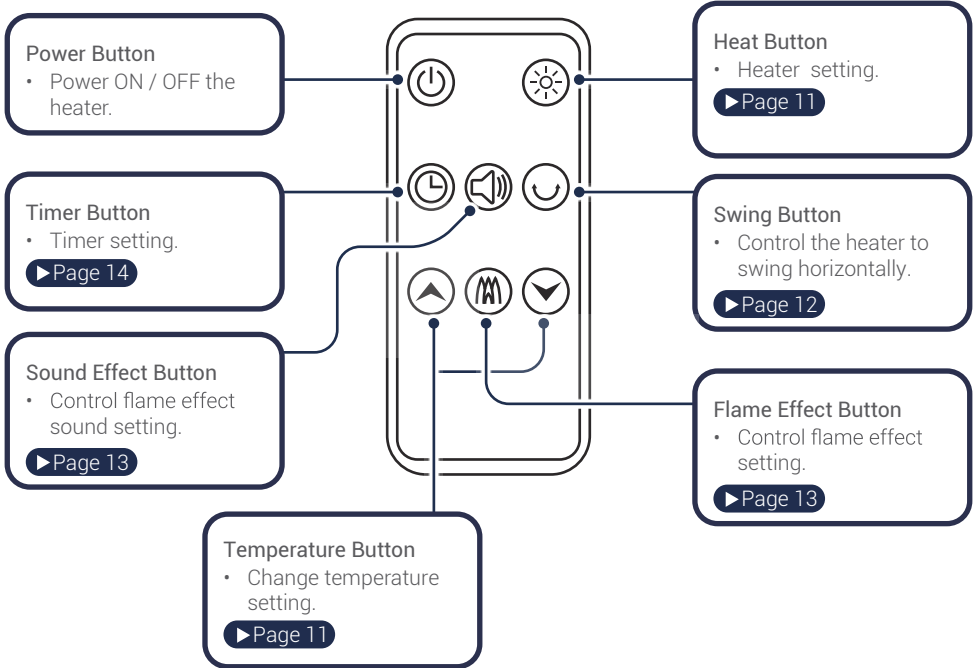


Remote Control

  Back of Remote Control

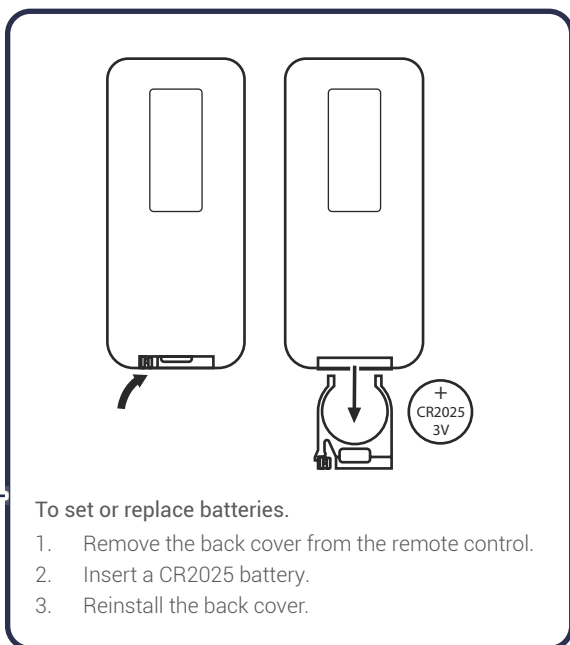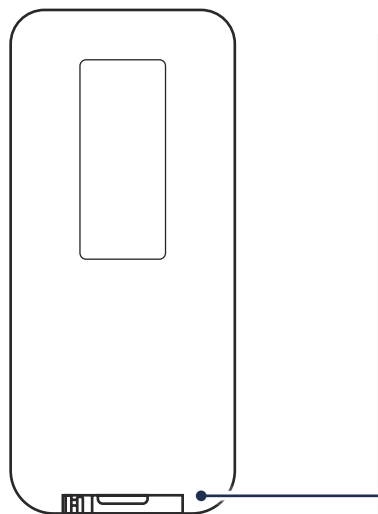

Operation Instructions

 Power Connection

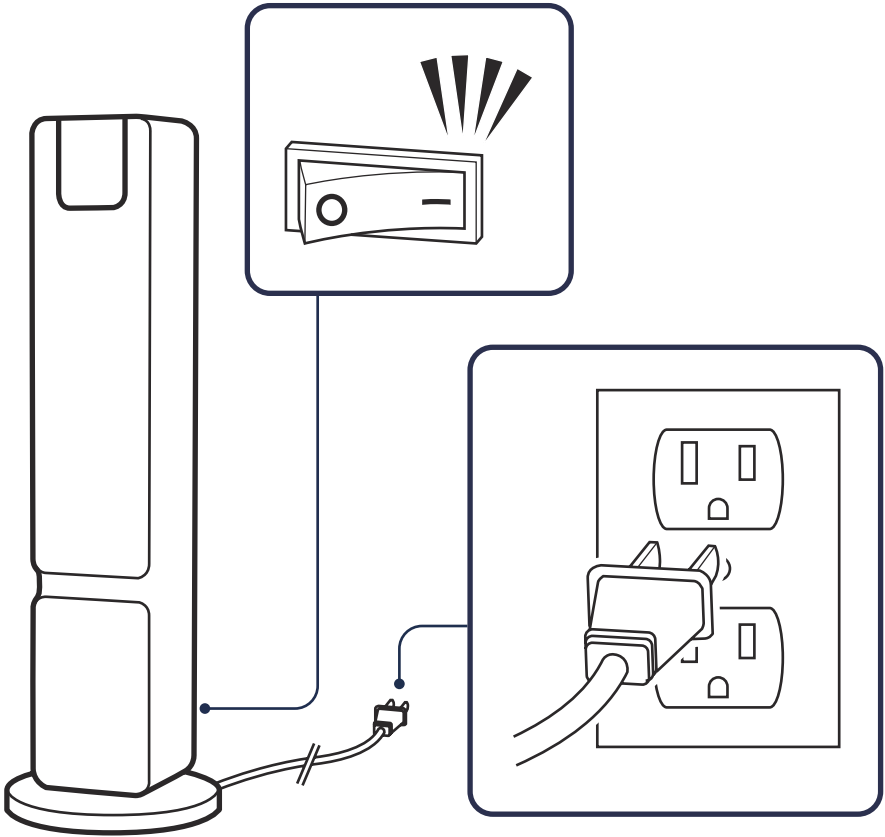

Power Connection

 
1. Plug the power cord to a wall power socket.
2. Toggle the power switch at the back of the heater from "O" to "I".

⚠ Attention






- It is normal for the power cord to feel warm to the touch. However, a loose fit between the plug and the outlet may cause overheating. Make sure to insert the power plug into a power socket that has a secure fit. Contact a qualified electrician if you encounter any problem.

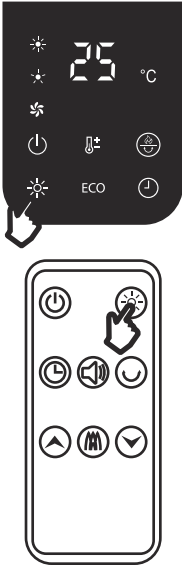Operation Instructions

Heat Mode



The heat function allows the heater to warm up the area.

1. Press  on the control panel or press  on the remote control.
 -  is shown on the display.
2. Press  on the control panel or press  on the remote control to change the heat intensity.



High level heating: The heater is heated at high level



Low heat: The heater is on low heat



Fan: The heater only turns on the fan and does not heat






High level heating → Low heat → Fan

Adjusting Temperature



 
Set the temperature of your heater.

1. Press  on the control panel or press   on the remote control to set your desired temperature.






Temperature can be set between 50 - 95°F / 10 - 35°C. In the case of the set temperature is lower than or equal to the environment temperature, the appliance will stop heating.

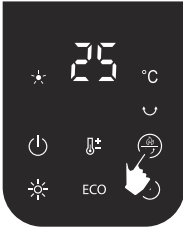Operation Instructions

Swing Function




The heater rotates sideways to send heated air at a wider range.

1. Press  on the control panel or  the remote control.
-  is shown on the display and the heater swings horizontally.
2. Press  on the control panel or  the remote control again to stop the swing function.

Change Temperature Unit



Change temperature unit between degree Fahrenheit and degree Celsius.

 
1. Press and hold  on the control panel for 3 seconds
- Temperature unit is changed on the display.

NOTE:





- Temperature unit can only be changed on the heater control panel.

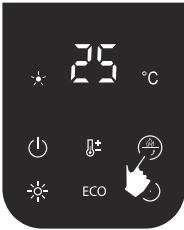Operation Instructions

Flame Effect




Turn ON or OFF the flame effect on the heater.

1. Press and hold  on the control panel for 3s or press  on the remote control.
-Flame effect is ON on the unit.
2. Press and hold  on the control panel for 3s or press  on the remote control again to turn OFF the flame effect.

Sound Effect



Turn ON or OFF the flame effect sound on the heater.

1. Press  on the remote control to turn ON or OFF the sound effect.

NOTE:

- Sound effect can only be changed on the remote control.



Operation Instructions

Timer



Shut OFF Timer

Set a timer to automatically switch OFF the air conditioner.

1. Press  on the control panel or press  on the remote control to set shut off timer.
Timer can be set between 1 - 12 hours with a 1 hour increment.



ECO mode



The heater will operate in a pre-programmed manner.

The mode will automatically adjust the gear according to the ambient temperature, respectively, high heating - low heating - fan blowing.

1. Press **ECO** on the control panel.
2. The heater will automatically set the temperature to 22°C / 72°F.
 - The heater will automatically work in low heat if the environment temperature is between 18 - 22°C / 64 - 72°F.
 - The heater will automatically work in high level heating if the environment temperature is lower than 18°C / 64°F
 - The heater will only work in fan mode if the environment temperature is above 22°C / 72°F

Care and Maintenance

⚠ CAUTION

 
- Before cleaning the unit, you must shut down the machine and cut off the power supply.
- Never flush the heater with water.

Clean the Unit

1. Clean the heater with a soft dry cloth or a dampened cloth with neutral detergent.

NOTE:

- Do not flush the machine with water.
- Do not use volatile liquid such as thinner or alcohol to prevent damaging the unit.

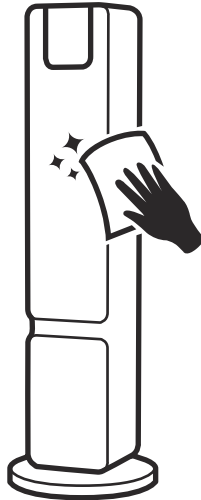

Storing the Unit

1. Clean the unit.
2. Put the unit into a protective cover such as a polybag.
3. Take out the battery from the remote control.
4. Store the heater in a cool and shaded area, away from sunlight or other kinds of harsh environment.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.



www.dellahome.com
manufacturer@dellahome.com
800-863-4143
6:00a.m. – 4:00p.m. PST Monday - Friday

©Della All rights reserved.

Under the copyright law, this document may not be printed, translated, reproduced, or distribute, in whole or in part without written permission from DELLA.

Every effort has been made to ensure that the information in this document is accurate, DELLA is not responsible for printing or clerical errors.

All trademarks, logo, brand names are the property of their respective companies. Mention of third-party products or service names are for identification and informational purposes only. Use of these names, brands, and trademarks does not imply endorsement. DELLA assumes no responsibility with regard to the performance or use of these products.