


Outdoor Waterproof Bluetooth Speaker



Mode No.: DOSS Traveler
User Manual


I. Introduction

Thank you for your purchase of **DOSS Traveler Portable Wireless Bluetooth Speaker** with bluetooth & waterproof function. We encourage you to read this instruction guide thoroughly to get the most out of this innovative wireless portable speaker.

II. Package content

- Outdoor waterproof speaker x 1
- USB charging cable x 1
- Φ3.5mm auxiliary cable x 1
- Handle belt x 2
- User manual x 1

III. Product overview

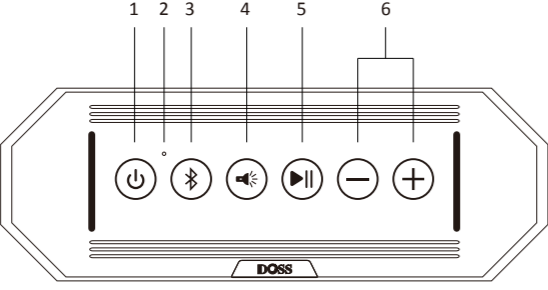


- Power button:** Press 3 seconds to turn the device on or off.
- Mode indicator:** Different lights indicate different modes.
- Mode switch:** Short press to toggle play mode among Bluetooth, Bluetooth, TF Card and Aux-in connection. Press for 3 seconds to disconnect with your device and press again to reconnect your device.
- Light mode:** Short press to switch five different lights. Low brightness, Medium brightness, High brightness, Strobe ,SOS (intermittent flashing).

Play/Pause:

- In Bluetooth mode, press to play/pause your tune.
- In Bluetooth mode, press to answer or end a call. Press for 3 seconds to reject a call.
- In TF mode, press to play/pause your tune.

Volume/Track control:

- : Long press: Skip next Short press:Volume up.
- : Long press: Skip previous Short press:Volume down.

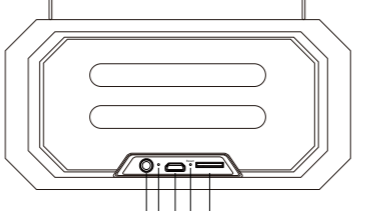

7. **Auxiliary Φ3.5mm jack** : Use it for cabled playback with compatible devices.

8. **LED charging indicator.**

- Charging : Steady Red.
- Fully charged : Light Off


9. **Charging port:** Plug the supplied USB cable into this port to recharge the built-in battery.

10. **Reset mode:** Reset speaker when it can't work.


11. **TF card:** Use it for TF card (with music) playback.

Status indicators

Mode indicator	Flashing blue	Indicates that the speaker has entered into pairing mode and is ready to be paired.
	Steady blue	Indicates that the device is successfully paired
	Steady red	Indicates that the device has switched to the auxiliary input mode
Battery status indicator	Steady Green	Indicates that the device has switched to the TF mode
	Steady red	Battery is charging
	Light Off	Battery is fully charged



Scan this or search 'DOSS fans' on Facebook to join our group, share your experience and find more surprise!



Wonders Technology Co.,Ltd
Email:Support@dossav.com
Website:www.dossaudio.com
Follow us on Facebook:
<https://www.facebook.com/dossav>

IV. Preparation

- Use the supplied USB cable to charge your portable speaker directly from your computer or device with a micro USB port.
- Make sure that the speaker is fully charged before using it for the first time.
- The portable speaker battery has to be initially charged for at least 12 hours. Thereafter, the battery will take from 2 to 3 hours to recharge.
- While charging, the LED glows red. When the battery has reached full capacity, the LED will off.
- To turn on the speaker, press and hold the power button for 3 seconds. Press and hold the power button once more to turn off the device.

V. Pairing the wireless speaker with your smart device

- Place your smart device and wireless speaker no more than 3 feet away from each other.
- Press the power button located on the back of the speaker for several seconds to turn it on.
- Set your smart device to "discover" the wireless speaker. Once powered on, a tone will be heard and a blue LED will start flashing. Following after will be a prompt notification that the speaker has entered into pairing mode.
- Enable Bluetooth on your device and choose **DOSS Traveler** from the list.
- If pairing is successful, the LED will change to a steady blue and your phone will confirm that the connection has been established. If the pairing process fails after 60 seconds, please repeat the above steps 1 through 5.


VI. Answering and ending a call using your speaker or mobile phone

- When there is an incoming call, the speaker will generate a tone and a verbal notification to alert you of this event.
- Briefly press the button to pick up, long press to reject. You may also press the answer button on your phone to take the call using the speaker.

- Speak with a clear voice right into the built-in microphone located on the front section of the speaker.
- To end a call, tap the button once again. You may also end the call directly via your cell phone.
- If a call was received while you were listening to music, playback will resume automatically once the call has ended.

VII. Features

- Waterproof, Shockproof, Dust-proof rated IP66 for 100% protection against water and dust. Rubberized rugged exterior for ultimate impact resistance. Water-resistant HD loudspeaker with splash-proof surface to increase mobility and usability for everyday indoor or outdoor use such as at the beach, pool, boat, car, office, and more!
- Modes: Low, medium, and high brightness; Strobe ,SOS (emergency signal)
- Quick tips on how to use the handle belts:
 - Remove the two nuts counter-clockwise on the strap.
 - Remove the nuts from the straps, then put the strap through the strap buckle.
 - Tighten the screw clockwise on the strap.

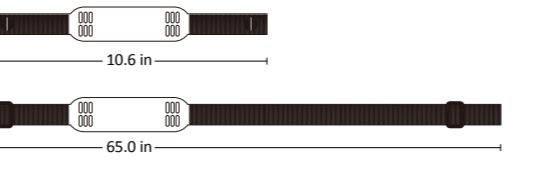

Using it with your Amazon Echo Dot

You can connect the Amazon Echo Dot with the speaker via 3.5 mm Aux-in cable or via Bluetooth. Here are the steps to connect via Bluetooth:

- Download the Amazon Alexa App, follow the standard setup procedure to get the Echo dot connected to your home Wi-Fi.
- Switch the DOSS Traveler speaker to Bluetooth mode, you can press the 'Bluetooth' button for 3 seconds to keep it in pairing status.

- Run the Alexa app, tap 'Continue' and Select Bluetooth .
- The DOSS Traveler speaker should appear in the list of Bluetooth devices. If not, please press the 'Bluetooth' button for 3 seconds and try again. If it did appear, please choose DOSS Traveler to complete the pairing process.

NOTE: Your voice command cannot turn on/off the DOSS Traveler no matter you are connected via Bluetooth or Aux-in cable. It can only transfer sound signals.

VII. Product specifications

Product type: Outdoor Waterproof Bluetooth Speaker
Output power: 10W x 2
Driver unit: 1.7 inch speaker x 2 + 2.6 inch passive radiator
Frequency response: 65Hz-18kHz
Signal to noise ratio: ≥50dB
Unit weight: 600 g
Unit dimension: 6.50x 4.45 x 2.24 inch
Warranty: One-year limited

VIII. Power

- Battery type: Li-ion 7.4V, 2200mAh
- Input: 5V == 2A
- Battery charge up time: 3 hours approximately (when fully depleted).
- Battery playback time: up 12 hours (duration time may vary depending on the volume level used and usage patterns).

IX. Wireless/Networking

- Bluetooth specification: V4.0+EDR, backwards compatible with previous Bluetooth versions
- Profiles supported
 - A2DP (Advanced Audio Distribution Profile)
 - Maximum operation range: 10 meters / 33 ft

X. Warning

Please firmly plug the silicon stopper to protect the speaker from water.

- Do NOT disassemble, repair or modify the Bluetooth speaker by yourself.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT place heavy objects on top of the Bluetooth speaker.
- Do NOT use near a microwave oven or wireless LAN products.

Trouble Shooting:

	Problem	Solution
Bluetooth	Cannot Pair with Bluetooth devices	Press 'Bluetooth' button for 3 seconds, then have a try to pair it again.
	Cannot play music after pairing	Please select 'DOSS Traveler' as the default playback device.
	The song cuts off during playback	Please check if the Bluetooth distance is more than 33 feet or the battery level is low.
Laptop prompts to install driver	There is noise during playback	Could be caused by interference of charging. Try to put device in a different location and do not charge it during playback.
	Not paired with transmitter	This driver is not special for DOSS Traveler, it's for your laptop Bluetooth function, please contact the computer company or windows
TF Card	The speaker do not play when the card is inserted, and jump directly back to Bluetooth mode.	Check whether the card format is FAT or FAT32. Check the song format. The speaker only supports MP3, WAV, WMA.
	The song cuts off during playback.	There may be a problem with the song's file, try deleting all the songs in the same file.
other	Cannot turn off the speaker	Use the needle or wire to poke the reset port
	Customer Service Email	support@dossav.com