
1080P Wireless Camera User Manual



Before operating the system, please read this manual
thoroughly and keep it for future reference.

1. Specification

Image sensor	1/2.9" Color CMOS
Resolution	2.0 Mega
Pixels	1920*1080
View angle	130° (Horizontal)
Wireless frequency	2.412~2.4835 GHz ISM Band
Modulation method	CCK
Standard	802.11b
Output power	20dBm ±1dBm
Wireless data rate	11Mhz BER<1E-3
Spread Spectrum	IEEE 802.11b: DSSS (Direct Sequence
Working voltage	DC12V-24V
Waterproof rate	IP69K

2. Installation:

Caution

Make sure there are no electrical cables, gas lines or important parts behind where the drill holes will be. Make sure to isolate the 12V or 24V power source by disconnecting the negative (-) terminal from the battery.


1 Locate the power source required: Backup lights if used as a

reverse camera or running/marker lights is used as a rear observation system.

2. Once you have located the power source, route the camera cable to that location.

Never route the cable on the outside of the vehicle.

3. Connect wires as diagram below.

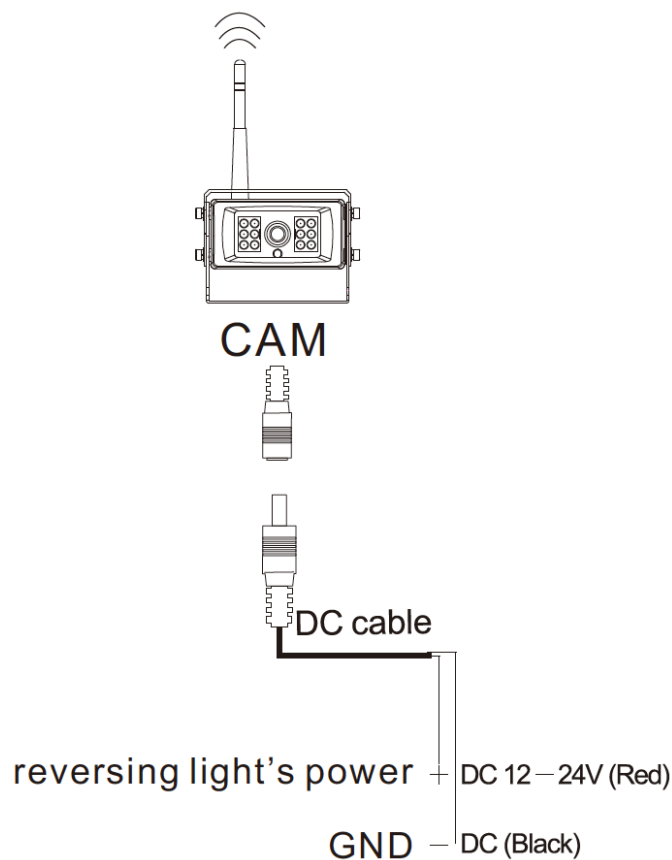

4. Make sure the battery's negative terminal is disconnected. After determining the positive and negative wires, connect the camera's power and ground wires correctly.

5. Reconnect the negative terminal to the battery to finish the installation.