

KDS Menu Routing

About this guide

This guide consists of 2 sections:

- **Overview-** A detailed description of what KDS Menu Routing is and its functionality in an Epson True Order Kitchen Display System (KDS).
- **How to Configure KDS Menu Routing –** A procedure that can be followed to configure this in a Multi-Station KDS system.

Overview

In KDS Menu routing all print jobs are sent directly from the POS to a single KDS device (Master Device). The menu configuration and routing determine which displays the orders are sent to. In Figure 1 the Master Display gets the full order, then shows only grill items while routing the French Fries to the Fry station.

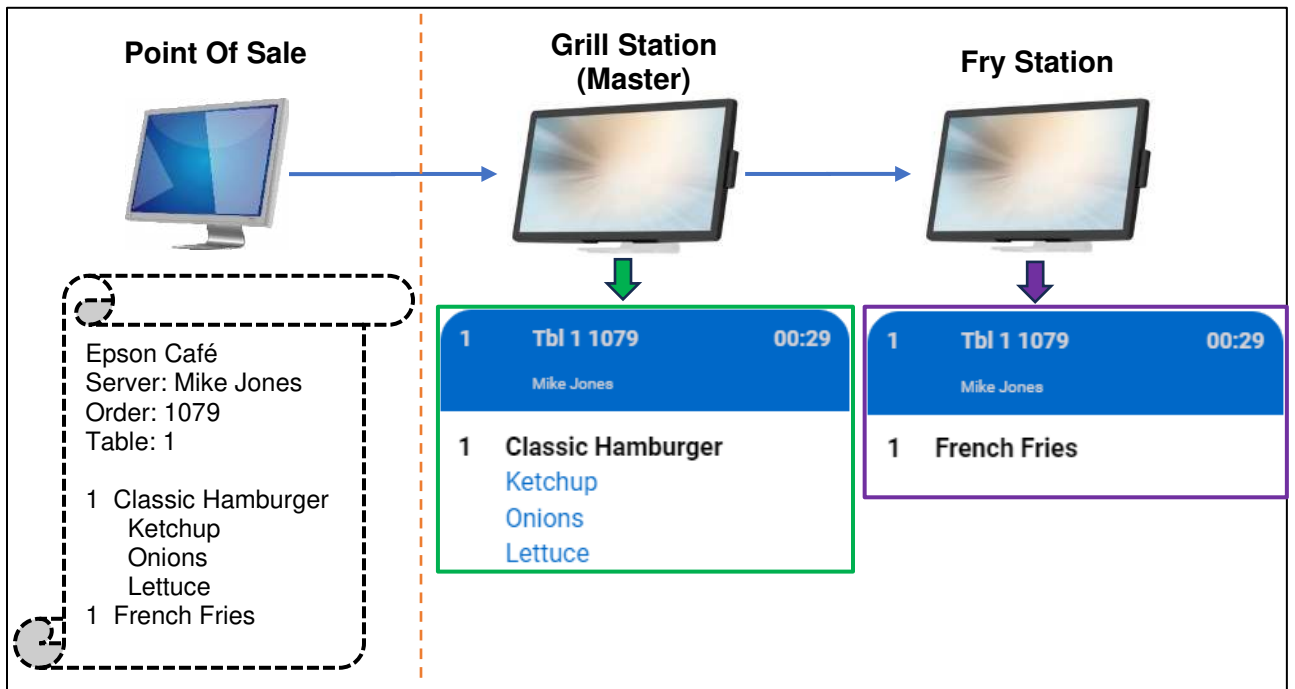



Figure 1: KDS Menu Routing

How to Configure KDS Menu Routing

This guide assumes that you already have a 2 Station KDS system setup as described in the Epson KDS Multi-Station Quick Start Guide.


1. Configure Site Wide Settings

1. Select **Application Settings**.
2. Select **POS Connected Device**.
3. Select **KDS Menu Routing** from the drop-down menu.
4. Click **Save**.

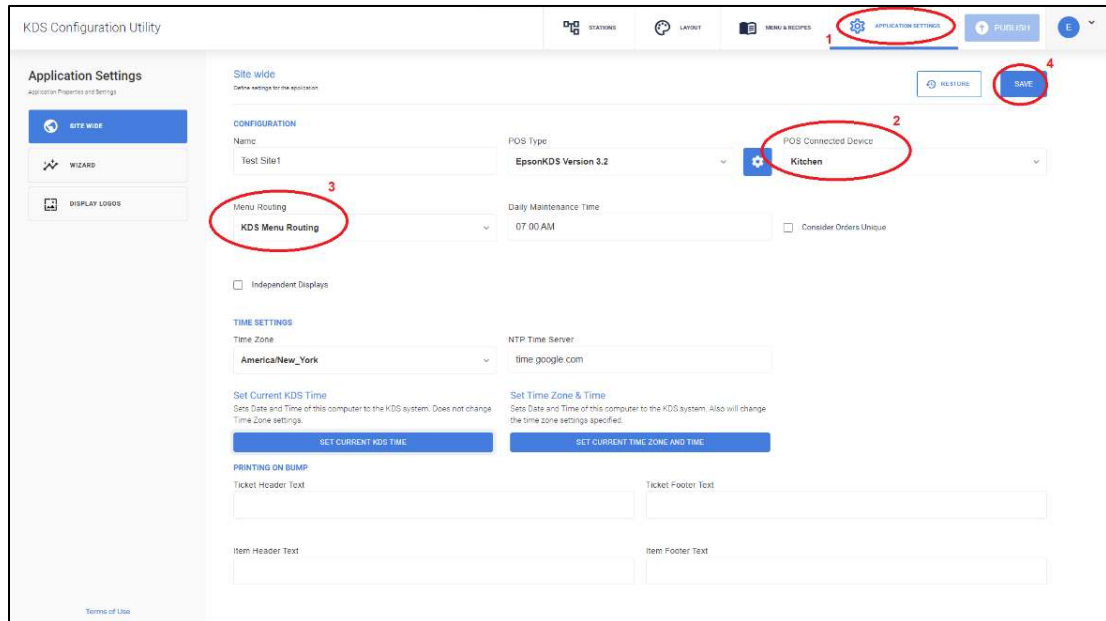


2. Configure Menu Items and Groups.

Please consult the KDS Menu and Recipes Quick User Manual for more details about how to configure a menu.

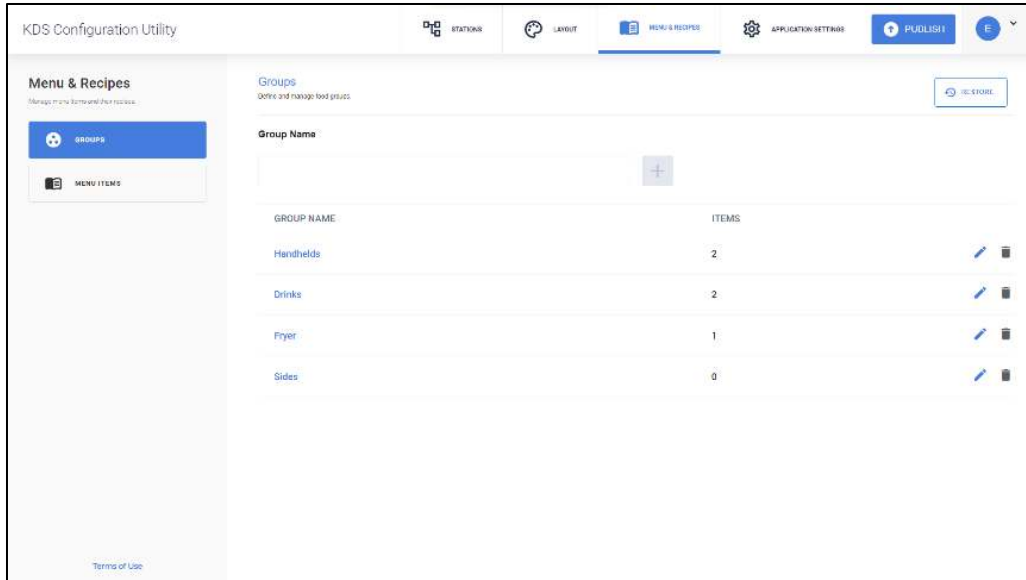


3. Configure the Menu Items for your Displays.

1. Click **Layout**.
2. Select **Grids**.
3. Select the Layout you want to configure (e.g., **Kitchen**).

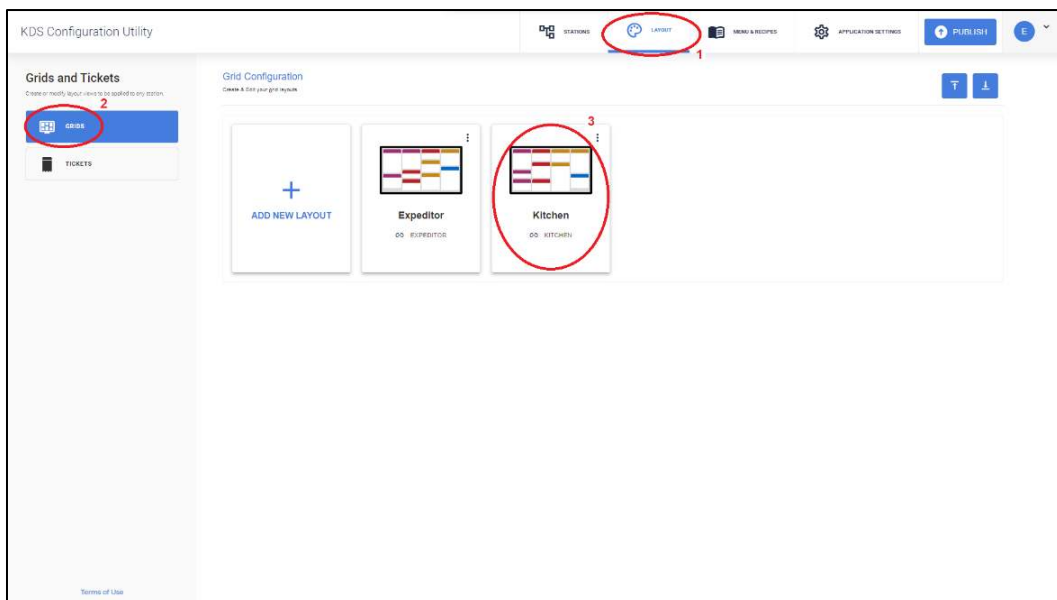

4. Enable the **Menu Items Filter**.
5. Select the **Menu Items** you want shown on that Display.
6. Click **Save**.

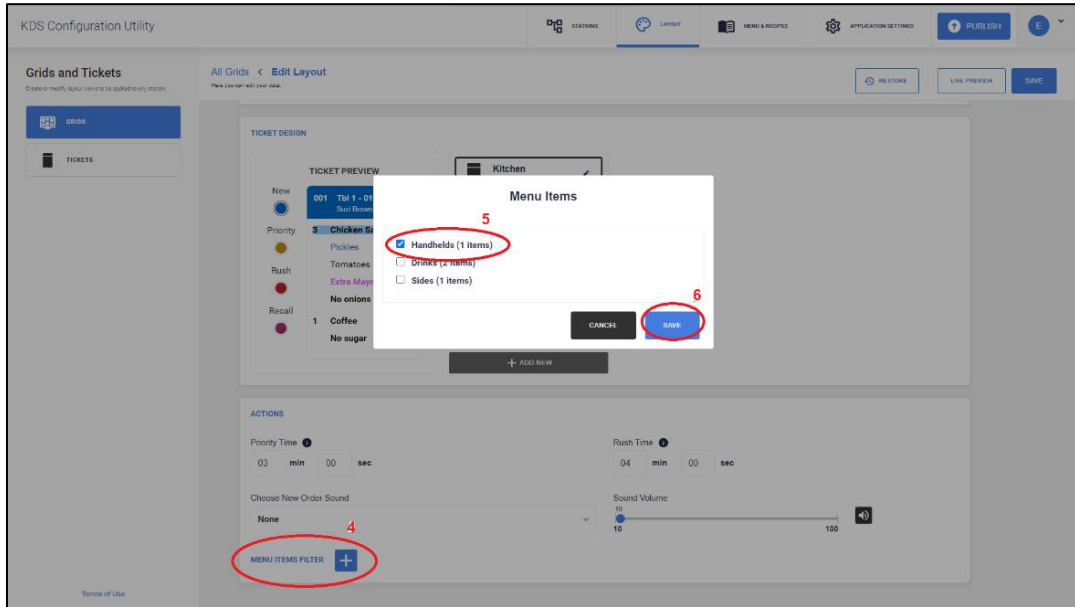

7. Select Menu Item/s to display.
8. Click **Save**.
9. Click **Publish**.

