

SAFETY INFORMATION FOR FELICITY INVERTERS

(In accordance with EU Regulation 2023/988 – GPSR)






Improper reassembly may result in electric shock or fire.


To reduce the risk of electric shock, disconnect all cables before performing any maintenance or cleaning. Turning off the device does not reduce this risk.

Never charge a frozen battery.

Dropping the tool may cause sparks or short circuits in the batteries or other electrical components, or even an explosion.

Be very careful when working with metal tools near batteries.

Symbol	Nazwa	Instrukcja
	Danger	Serious injury or even death may occur if the relevant requirements are not observed
	Warning	Injury or damage to equipment may occur if the relevant requirements are not observed. The following requirements must be observed
	Sensitive to electrostatic discharge Electrostatic discharge	Damage may occur if the relevant requirements are not observed. .
	Hot surface	Failure to comply with the relevant requirements may result in damage.
	Grounding connector	The inverter must be reliably grounded.

	Caution	Ensure that the DC and AC circuit breakers are turned off and wait at least 5 minutes before connecting wires and checking.
NOTE	Note	The inverter complies with the CE
CE	CE mark	The inverter bears the CE mark and meets the requirements of the relevant EU directives.

WARNING: Fire hazard

Despite careful design, electrical equipment can cause fires. Do not install the inverter in locations where highly flammable materials or gases are present. Do not install the inverter in potentially explosive atmospheres. The mounting structure on which the inverter is installed must be fireproof.



CAUTION: Hot Surface

The temperature of the inverter heat sink can reach 75°C.



The device is heavy, so please be careful when moving it.



The battery terminals must not be connected in reverse, otherwise the inverter may be damaged.



Before connecting the battery cables, make sure the battery is turned off. Use a multimeter to check that the battery voltage is 0 V DC before proceeding. Consult the battery manual to find out how to turn it off.



WARNING: Before connecting the battery, carefully read the battery manual and perform the installation exactly as specified by the manufacturer in the manual.

This information and these instructions have been prepared in accordance with the requirements of EU Regulation 2023/988 on general product safety (GPSR) to ensure a high level of health and safety protection for users and other persons who may be exposed to risks associated with the use of the device.

Manufacturer/responsible entity

FELICITYSOLAR
MARTEN MEESWEG 00008 UNIT 2.11 3068AV R
3068 Rotterdam
Netherlands

europe@felicitysolar.com