

FUJIFILM

DIGITAL CAMERA

GFX 100s

New Features Guide

Version 1.10

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

<https://fujifilm-x.com/support/download/firmware/cameras/>










BL00005154-200 **EN**



Contents

GFX100S firmware version 1.10 adds or updates the features listed below. For the latest manuals, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	GFX100S 	See 	Ver.
1	Changes to the functioning of custom modes have altered how custom settings banks are created and edited using  IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING and  MOVIE SETTING >  EDIT/SAVE CUSTOM SETTING in the shooting menu.	74	1	1.10
2	 IMAGE QUALITY SETTING > AUTO UPDATE CUSTOM SETTING and  MOVIE SETTING >  AUTO UPDATE CUSTOM SETTING items have been added to the shooting menu.	124 167	7	
3	The APERTURE (PROGRAM SHIFT) options for  BUTTON/DIAL SETTING > COMMAND DIAL SETTING > FRONT COMMAND DIAL 1 through FRONT COMMAND DIAL 3 and REAR COMMAND DIAL have been changed to APERTURE .	231	8	


Changes and Additions

Changes and additions are as follows.

GFX100S Owner's Manual:  74
Custom Modes

Ver. 1.10



Rotate the mode dial to any of modes **C1 (CUSTOM 1)** through **C6 (CUSTOM 6)** to take pictures using previously-saved shooting menu settings. Settings can be saved or edited using **IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING**.

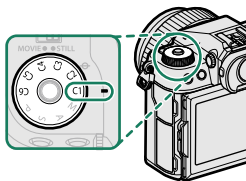


Saving Current Settings

Save current settings in a custom settings bank.

- 1 Select **IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING** in the shooting menu and press **MENU/OK**.
- 2 Highlight a destination bank for current settings (C1 through C6) and press **MENU/OK**.
- 3 Highlight **SAVE CURRENT SETTINGS** and press **MENU/OK**.

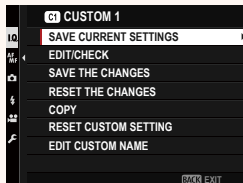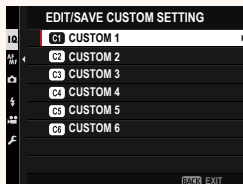

- 4 Highlight **OK** and press **MENU/OK**.
Current settings will be saved to the selected bank.

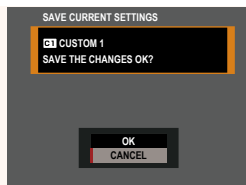


Editing Custom Settings


Edit existing custom settings banks.

- 1 Select **IMAGE QUALITY SETTING** > **EDIT/SAVE CUSTOM SETTING** in the shooting menu and press **MENU/OK**.


- 2 Highlight the desired custom settings bank and press **MENU/OK**.

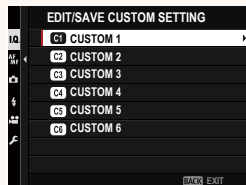

- 3 Highlight **EDIT/CHECK** and press **MENU/OK**.

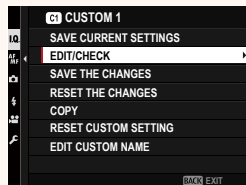

- 4 The camera will display a list of shooting menu items; highlight an item you wish to edit and press **MENU/OK**. Adjust the selected item as desired.

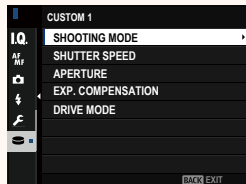

5 Press **MENU/OK** to save the changes and return to the shooting menu list.

Adjust additional items as desired.



If **DISABLE** is selected for **IMAGE QUALITY SETTING > AUTO UPDATE CUSTOM SETTING**, red dots will appear next to the edited items but the changes will not be saved automatically.


- To save the changes for selected items, highlight the items in the list and press **Q**.
- To save changes for all items, return to Step 3 and select **SAVE THE CHANGES**. To cancel all changes and restore the previous settings, select **RESET THE CHANGES**.
- If you copy an item marked by a red dot, the item will be copied with the changes intact.

Copying Custom Settings


Copy custom settings from one bank to another, overwriting the settings in the destination bank. If the source bank has been renamed, the name will also be copied to the destination bank.

- 1 Select **IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING** in the shooting menu and press **MENU/OK**.


- 2 Highlight the source bank and press **MENU/OK**.

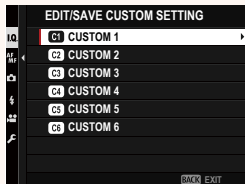


- 3 Highlight **COPY** and press **MENU/OK**.

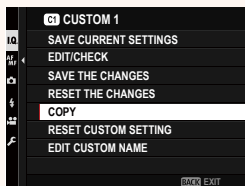


- 4 Highlight the destination bank (C1 through C6) and press **MENU/OK**. A confirmation dialog will be displayed.

 Any changes to custom settings in the destination bank will be overwritten.

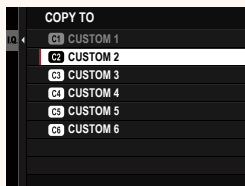

- 5 Highlight **OK** and press **MENU/OK**. The selected settings will be copied to the destination bank, overwriting any existing settings.

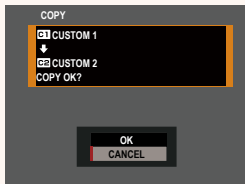


Resetting Custom Settings

Reset selected custom settings banks.


- 1 Select **IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING** in the shooting menu and press **MENU/OK**.

- 2 Highlight the desired custom settings bank and press **MENU/OK**.

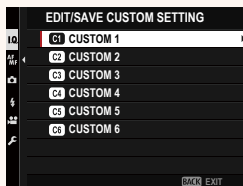


- 3 Highlight **RESET CUSTOM SETTING** and press **MENU/OK**.

A confirmation dialog will be displayed.

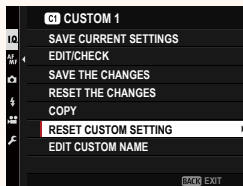

- 4 Highlight **OK** and press **MENU/OK**.
The selected bank will be reset.

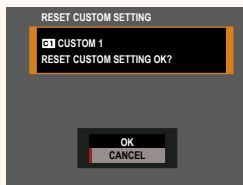


Renaming Custom Settings Banks


Rename selected custom settings banks.

- 1 Select **IQ IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING** in the shooting menu and press **MENU/OK**.

- 2 Highlight the desired custom settings bank and press **MENU/OK**.

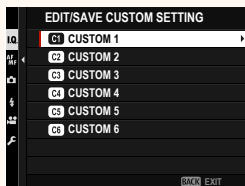


- 3 Highlight **EDIT CUSTOM NAME** and press **MENU/OK**.

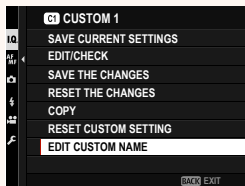

- 4 Enter a new name for the custom settings bank and select **SET**.
The selected bank will be renamed.

AUTO UPDATE CUSTOM SETTING

Choose whether changes to saved custom settings apply automatically.


Option	Description
ENABLE	Changes to custom settings banks CUSTOM 1 through CUSTOM 6 apply automatically.
DISABLE	Changes do not apply automatically. Any changes to custom settings must be applied manually ( 2).

 **AUTO UPDATE CUSTOM SETTING**


Options are the same as those for still photography, but settings must be adjusted separately.

COMMAND DIAL SETTING

Choose the roles played by the command dials.

Option	Description
FRONT COMMAND DIAL 1	Assign shutter speed (S.S. (PROGRAM SHIFT)) or aperture (APERTURE)* to FRONT COMMAND DIAL 1 .
FRONT COMMAND DIAL 2	Assign shutter speed (S.S. (PROGRAM SHIFT)), aperture (APERTURE)*, sensitivity (ISO), or no role (NONE) to FRONT COMMAND DIAL 2 or FRONT COMMAND DIAL 3 .
FRONT COMMAND DIAL 3	
REAR COMMAND DIAL	Assign shutter speed (S.S. (PROGRAM SHIFT)), aperture (APERTURE)*, sensitivity (ISO), or no role (NONE) to the rear command dial.
EXP. COMPENSATION ASSIGNMENT	Exposure compensation can be adjusted using either or both of the front and rear command dials while the  (exposure compensation) button is pressed.

* Aperture ring rotated to **A** or **C** in mode **A** (aperture-priority AE) or **M** (manual).

-  • **COMMAND DIAL SETTING** can also be accessed by pressing and holding the center of the front command dial.
- You can also press the center of the front command dial to cycle through settings in the order **FRONT COMMAND DIAL 1**, **FRONT COMMAND DIAL 2**, and **FRONT COMMAND DIAL 3**.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

