

110V SMART RV TV

FDHS24D3A[2022111214]; FDHS321DA[2022111215]
FDHS39T5A[2022111216]; FDFS43T5A[2022111217]
FDUS50F2A[2022111218]; FDUS55F9A[2022111219]

USER MANUAL



* Product picture for reference only

Thank you and congratulations for purchasing this Furrion® product. Before operating your new product, please read these instructions carefully. This user manual contains information for safe use, installation and maintenance of the product.



Please keep this user manual in a safe place for future reference. This will ensure safe use and reduce the risk of injury. Be sure to pass on this manual to new owners of this product.


The manufacturer does not accept responsibility for any damages due to not observing these instructions.

CONTENTS


SAFETY WARNINGS	4
IMPORTANT SAFETY INSTRUCTIONS.....	4
FUNCTION OVERVIEW.....	10
Control Panel.....	10
Input & Output ports.....	11
REMOTE CONTROL	12
ABOUT YOUR LED HD TV	13
BEFORE OPERATION	14
What's in the Box	14
Prepare your Remote Control.....	14
INSTALL	15
A. Use the supplied TV stands.....	15
B. Wall Mount.....	15
GETTING STARTED	15
CONNECTION	16
HDMI Device.....	16
Wired LAN.....	17
Wireless	18
INPUTS	19
HOME	19
SETTINGS	20
Sound Menu.....	21
Network Menu	21
Channel Menu.....	22
Accessibility Menu.....	22
System Menu.....	23
Support	24
MULTI-SCREEN	25
Sharing (Mirroring).....	25
Content Sharing.....	25
TROUBLESHOOTING	26
SPECIFICATIONS.....	28

SAFETY WARNINGS

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

 This 'bolt of lightning' indicates uninsulated material within your unit which may cause an electrical shock. For the safety of everyone in your household, please do


not remove product covering.

 The 'exclamation mark' calls attention to features within the enclosed literature to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain, moisture placed in the vicinity or objects filled with liquids (such as vases).

CAUTION: To prevent electric shock, fully insert the plug. For regions with polarized plugs: Please match wide blade to wide slot.

IMPORTANT SAFETY INSTRUCTIONS

 
1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus to avoid injury from tip-over. 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power-supply

cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus.
16. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to eliminate touching power lines or circuits as contact might be fatal.
17. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. Never push objects of any kind into this product through openings as they may touch short-out parts or dangerous voltage points that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges, Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of

antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

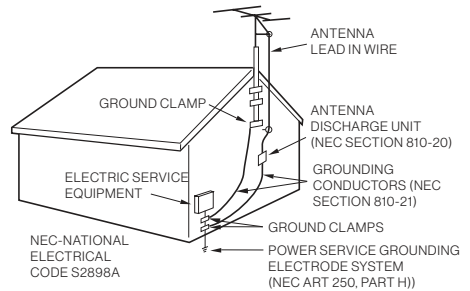

20. When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.
22. When you connect the product to other equipment, turn off the power and unplug from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.
23. Sudden high volume may cause hearing or speaker damage. When you use headphones (if the unit is equipped with a headphone jack), keep the volume at a moderate level. If you use headphones continuously with high volume, you may suffer

- hearing damage.
24. Do not allow the product to output distorted sound for extended periods of time. This may cause speaker overheating and fire.
 25. This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.
 26. The socket-outlet must be installed near the unit and easily accessible.
 27. The main plug is used as the disconnect and shall remain readily operable.

CONDENSATION

Moisture will form in the operating section of the unit if the unit is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens the unit's performance will be impaired. To prevent this, let the unit stand in its new surroundings for about an hour before switching on, or make sure the room temperature rises gradually.

Condensation may also form during the summer if the unit is exposed to the breeze from an air conditioner. In such cases, change the location of the unit.

HOW TO HANDLE THE LCD PANEL

- Do not press hard or jolt the LCD panel. It may cause the LCD panel glass to break and injury may occur.
- If the LCD panel is broken, make absolutely sure you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth,

immediately gargle and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult your doctor after rinsing for at least 15 minutes in clean water.

Possible Adverse Effects on LCD

Panel: If a fixed (non-moving) pattern remains on the LCD panel for long periods of time, the image can become permanently engrained and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY. Never leave your LCD panel on for long periods of time while it is displaying the following formats or images:

- Fixed images, such as stock tickers, video game patterns, TV station logos and websites.
- Special formats that do not use the entire screen. For example, viewing letterbox style (16:9) media on a normal (4:3) display (black bars at top and bottom of screen); or viewing normal style (4:3) media on a wide screen (16:9) display (black bars on left and right sides of screen).

The following symptoms are not signs of malfunction but technical limitation. Therefore we disclaim any responsibility for these symptoms.

- LCD panels are manufactured using an extremely high level of precision technology, however sometimes parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.
- Do not install the LCD panel near electronic equipment that produces electromagnetic waves. Some equipment placed too near this unit may cause interference.
- Effect on infrared devices – there

may be interference while using infrared devices such as infrared cordless headphones.

Power source: This LED TV is designed to operate on 110~240 volt 50/60 Hz, AC current. Insert the power cord into a 110~240 volt 50/60 Hz outlet.

To prevent electric shock, do not use the LED TV's (polarized) plug with an extension cord, receptacle, or other outlet unless the blades and ground terminal can be fully inserted to prevent blade exposure.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Caution: Never remove the back cover of the LED TV as this can expose you to very high voltages and other hazards. If the TV does not operate properly, unplug the LED TV and call your authorized dealer or service center.

Adjust only those controls that are covered in the instructions, as improper changes or modifications not expressly approved by Furrion could void the user's warranty.

Declaration of Conformity

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Safety Precautions

 
WARNING: Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being

retained and relocated, the same considerations as above should be applied.

The unit emits heat when in operation. Do not place any covers or blankets on the unit, this may cause overheating. Do not block ventilation holes, or set up near radiators. Do not place in direct sunlight. When placing on a shelf leave 4 inches (10 cm) free space around the entire unit.

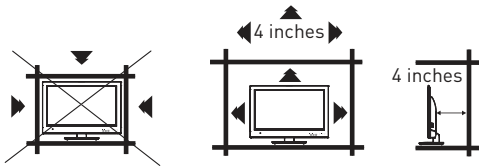

Notes when mounting the LED TV on the wall

If the unit is to be mounted on the wall, contact the retailer where you purchased the LED TV for advice, and have the equipment professionally installed. Incomplete or improper installation may

 
cause injury to you and/or damage to the LED TV.

Please refer to the table below to ensure the correct VESA mounting is used for the TV.

Notice for TV Cabinet

If the unit is to be mounted on a cabinet smaller than the length of the unit, it could result in an unstable location. The unit may tumble over, making a risk of personal, possibly fatal injury. This would also damage the product seriously. Accordingly, Furrion accepts no responsibility or liability for any injuries or property damage resulting from the improper installation.

Control Panel

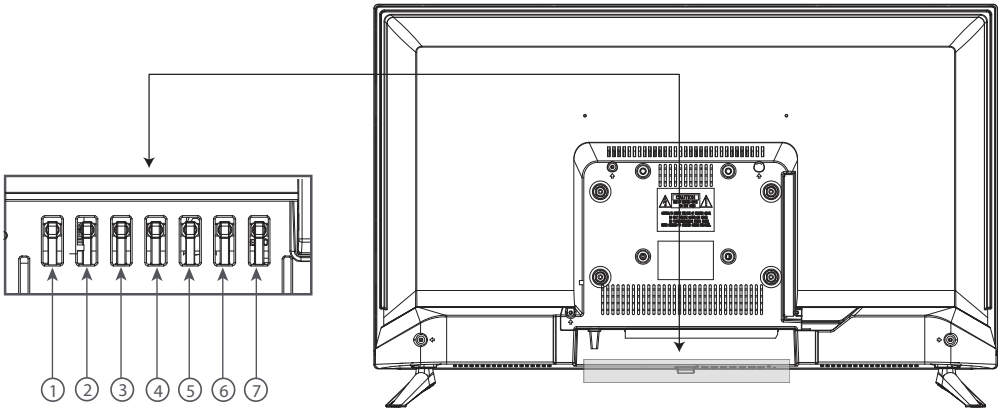


Please note that the button layout of the controls may vary from model to model.

Control Panel		
①	POWER	Power on/off.
②	SOURCE	Press to select the input source
③	MENU	Press to enter the main menu
④	CH-	Press to skip to the previous channel
⑤	CH+	Press to skip to the next channel
⑥	VOL-	Decrease volume
⑦	VOL+	Increase volume


FUNCTION OVERVIEW

 Control Panel

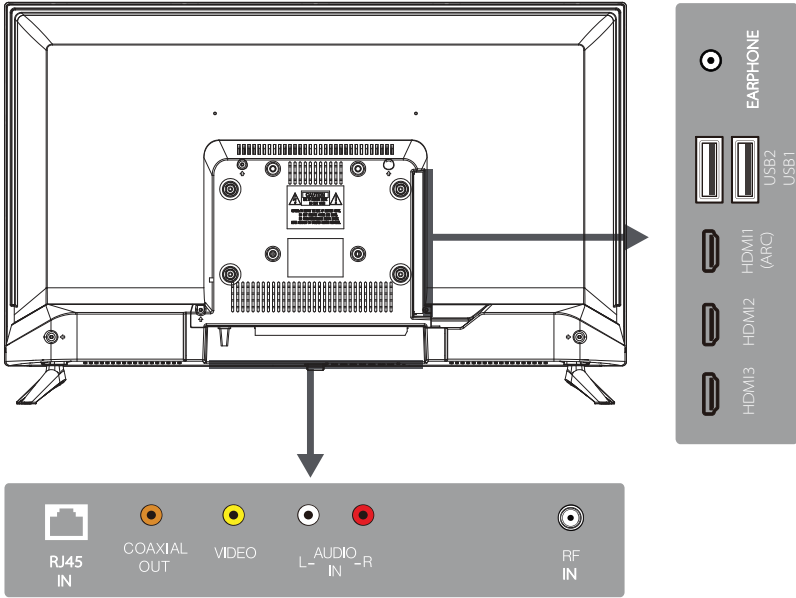


* The configuration of the connection ports may vary from model to model.

 Input & Output ports

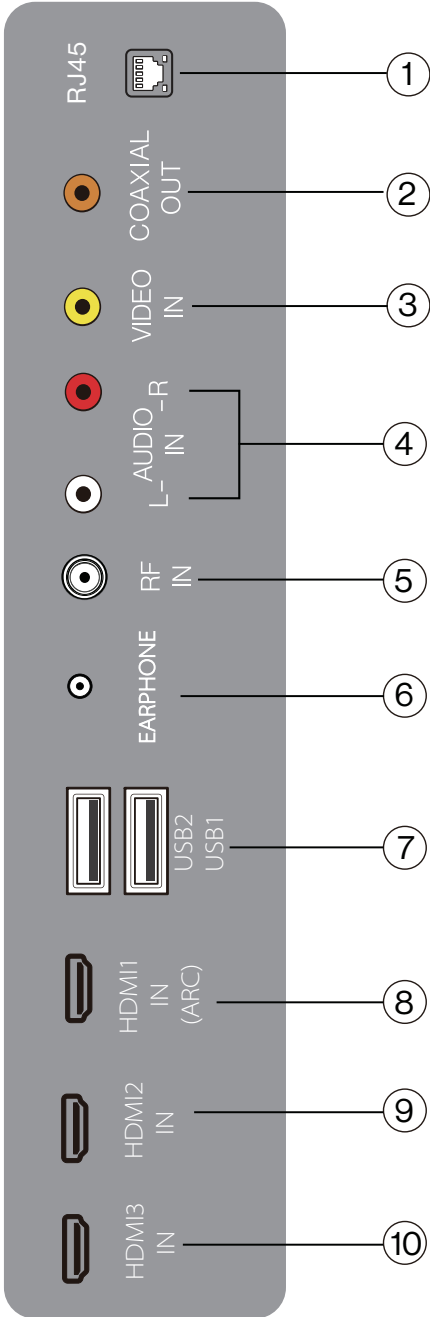

Item	Input/Output	Function
①	RJ45	Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.
②	COAXIAL OUT	Connect an Coaxial cable from an external digital audio system.
③	VIDEO IN	Connects to the COMPOSITE VIDEO OUT ports of a DVD Player, Cable Box or other compatible device
④	L-AUDIO IN-R	Connect a composite video cable and left-right audio cables from an external AV device.
⑤	RF IN	Connect to TV ANTENNA, CABLE, or CABLE BOX.
⑥	EARPHONE	Connect headphones to hear audio from the TV. Headphones with microphones are not supported.
⑦	USB2 USB1	Front USB port: Connect a USB storage device.
⑧	HDMI 1 IN (ARC)	Connect to the HDMI OUT port of a DVD Player, Games Console, Cable Box or other HDMI device.
⑨	HDMI 2 IN	Connect a High Definition Multimedia Interface(HDMI) cable from an external device.
⑩	HDMI 1 IN	Connect a High Definition Multimedia Interface(HDMI) cable from an external device.

 REMOTE CONTROL

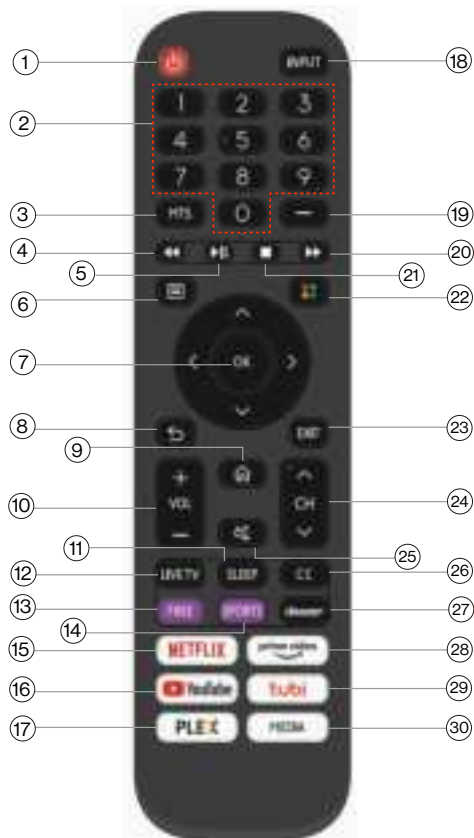

No.	Button	Function
①		Power on/off button, press once to turn the TV on and press again to turn the TV off.
②	0-9	Select and switch to a channel using 0-9.
③	MTS	Press to adjust between available audio channel.
④		Press to play backward. (In USB models)
⑤		Press to start playing/pause playing the MEDIA. (In USB models)
⑥		Displays the main TV menu.
⑦	OK	Enter the selected option or execute the selected operation.

No.	Button	Function
⑧		Switch back and front between the current and previous channels.
⑨		This button takes you to the HOME screen.
⑩	VOL-/VOL+	Adjust the volume.
⑪	SLEEP	Set the Sleep Timer.
⑫	LIVE TV	Press to enter live TV.
⑬	FREE	Press to enter FREE APP.
⑭	SPORTS	Press the button to change to sports mode.
⑮	NETFLIX	Press to enter Netflix APP.
⑯	YouTube	Press to enter YouTube APP.
⑰	PLEX	Press to enter PLEX APP.
⑱	INPUT	Press to change signal source.
⑲	—	Press this button to enter a program number for multiple program channel such 2-1, ect.
⑳		Press to play forward. (In USB models)
㉑		Stop playing the USB. (In USB models)
㉒		COLOR BUTTONS (RED, GREEN, YELLOW, BLUE) Execute corresponding function at that time.
㉓	EXIT	Exit the main TV menu.
㉔	CH^/CH V:	Change the channel up and down.
㉕		Press this button to mute or restore sound.
㉖	CC	Press to set the closed caption.
㉗	deezer	Press to enter deezer APP
㉘	prime video	Press to enter prime video APP.
㉙	tubi	Press to enter tubi APP.
㉚	MEDIA	Press to enter MEDIA

ABOUT YOUR LED HD TV

Features

Integrated Digital Tuner - You can view digital broadcasts without using a Digital TV Set-Top Box.

Closed Caption Decoder With Full Text Mode - Displays text captions or full screen text on the screen for hearing impaired viewers.

Picture Adjustments Using The Remote Control - The On-Screen display allows precise remote control adjustment of BRIGHTNESS, CONTRAST, COLOR and SHARPNESS.

Programmable TV Sleep Timer - Operable from the remote control, the TV can be programmed for up to 180 minutes to turn off automatically.

On-Screen 5 Language Display - You can select one of 5 languages, English, French, Spanish, Chinese, Deutsch for on-screen programming.

HDMI/Component Video Jacks - A VCR, DVD player, satellite receiver or other audio/video component can be connected to this unit.

Smarter Entertainment on the Go

- WIFI-enabled for streaming your favorite apps, movies and shows.
- 110V HD Smart TV works on a 110-240V~ 50/60Hz range, using appropriate plug into your caravan or vehicle.
- Powered by from VIDAA OS.
- Download your favorite content player apps from the app store.
- Vibrationsmart™ to protect your TV from road movement.
- Climatesmart™ to protect against temperature fluctuations.

Power Source

NOTE: Please make sure to insert the cord securely at both the LED TV and the wall outlet.

WARNING:

- DO NOT USE WITH A VOLTAGE OTHER THAN THE POWER VOLTAGE SPECIFIED. THIS COULD CAUSE FIRE, ELECTRICAL SHOCK, OR DAMAGE.

BEFORE OPERATION

What's in the Box

Thanks for purchasing this Furrion HD LED TV. First, check the contents of your box with the parts checklist below:

 
- Smart TV × 1
- Remote Control × 1
- Quick Start Guide × 1
- Warranty Manual × 1
- Warning Card × 1
- Wall Mount Screw × 4
- AAA battery × 2
- TV Stand with Screws × 4
 - 32" (BB4*18mm) × 4
 - 39" (BB4*16mm) × 4
 - 43" (BB4*16mm) × 4
 - 50" (BM4*18mm) × 4
 - 55" (BB4*16mm) × 4

Now you can get started!


Prepare your Remote Control

BATTERY INSTALLATION

1. Open battery compartment cover.

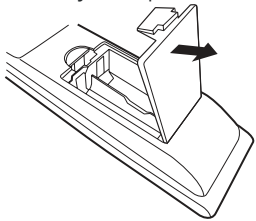

 2. Install two AAA batteries.

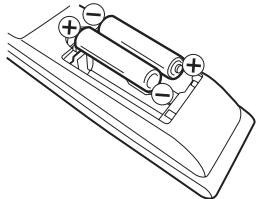

3. Close the cover of the battery compartment.

NOTE: Use two “AAA” size batteries.

The batteries may last approximately one year depending on how much the remote control is used. For best performance, it is recommended that batteries should be replaced on a yearly basis, or when the remote operation becomes erratic. Do not mix old and new batteries or different types.

BATTERY PRECAUTIONS

 
These precautions should be followed when using batteries in this device:

- Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
- Please use caution when inserting batteries to avoid battery damage. If the spring terminal in the remote control remains in contact with a side of a damaged battery it can cause a short circuit. Never use damaged batteries as they can become very hot and are dangerous.


INSTALL

A. Use the supplied TV stands

24"

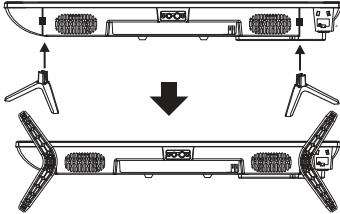

32"-55"

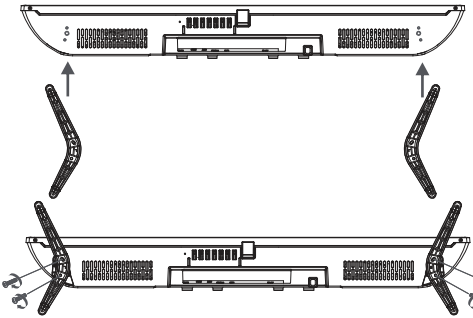 

B. Wall Mount

Follow the installation guide supplied with the Wall-Mount Bracket when installing the TV.

Choose an appropriate location and refer to VESA pattern for mounting.

VESA MOUNTING PATTERN				
Size (Inch)	Width (mm)	Height (mm)	Screw Size	Screw Quantity (pcs)
24"	200	100	TM4x8mm	4
32"	100	100	BM6x10mm	4
39"	200	100	BM6x10mm	4
43"	200	100	BM6x10mm	4
50"	200	200	BM6x12mm	4
55"	400	200	BM6x10mm	4

 
GETTING STARTED

Press **⏻** to power on and follow the on-screen instructions to finish initial setup. Press **▲** or **▼** button to select one Language and choose the TV Mode.



Press **▲** or **▼** button to select one Internet, then press Confirm to the next

step.

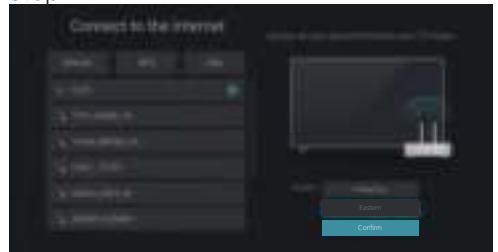

Press **▲** or **▼** button to select **Accept all**, and press **OK** button to the next step.



Sign in your vidaa account.
If no account has been created, create an account and then sign in.



Select the **NETFLIX** or **Enjoy the Smart TV.**



Press **^** or **v** button to select the **Set top box** or **Antenna/Cable.**



CONNECTION

HDMI Device

Connect an HDMI cable from an external A/V equipment.
Some devices such as DVD player require HDMI signal to be set to output in the device's settings. Consult your device user manual for instructions.

NOTE: The HDMI connector provides both video and audio signals, it's not necessary to connect an audio cable.



HDMI-CEC

Use your TV remote to control the external devices that are connected to the TV by HDMI cable. The external devices need to support HDMI & CEC Function (HDMI-CEC).
Connecting an external device through HDMI-CEC Function

Press the **⏏** button on your remote control, use the **^/∨** button to navigate to **Settings->System->HDMI-CEC**.

1. Set HDMI-CEC to on.
2. Connect an HDMI-CEC-compliant device to the TV.
3. Turn on the connected external device. The device is automatically connected to the TV. After connection is finished, you can access the menu of the connected device on your TV screen using your TV remote and control the device.

Note:

- HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.
- The HDMI CEC feature of the connected device must be turned on.
- If you connect an HDMI device that is not HDMI CEC-compatible, all the HDMI-CEC control features do not work.
- Depending on the connected HDMI device, the HDMI-CEC Control feature may not work.
- The HDMI CEC feature are supported One Touch Play, Routing Control, System Standby, Device OSD Name Transfer, Remote Control Pass Through, Give Device Power Status, System Audio Control.

HDMI ARC

HDMI ARC transfers audio from a TV to an ARC enabled device. With HDMI ARC, you can hear TV audio through an external device instead of the TV's speaker without also connecting analog or digital optical audio cables between the TV and external device. To connect your TV with an external device, press the **⏏** button on your remote control, use the **^/∨** button to navigate to **Settings -> Sound -> Audio Output Setting -> Audio Output -> ARC** to enable the ARC function.

 
NOTE: The HDMI ARC works in conjunction with HDMI CEC. The HDMI ARC will not pass audio when the HDMI CEC feature is disabled.

Wired LAN

Connecting to the Internet

Press the **⏏** button on your remote control, use the **^/∨** button to navigate to **Settings->Network-> Network Configuration**.

Press **OK** button to enter then select **Wired LAN**.

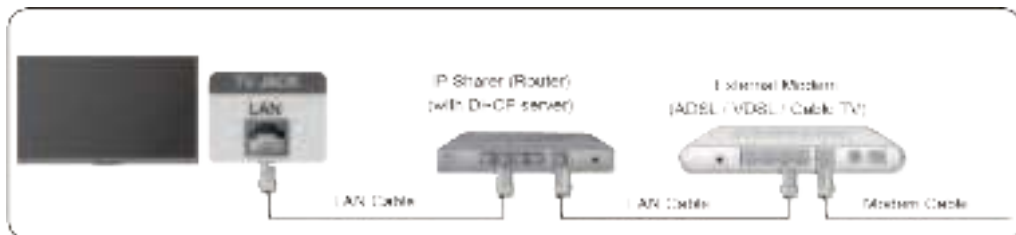

Automatically obtain an IP address

1. If you connect to the wired network, the TV will automatically obtain an IP address and connect to the network.
2. If the connection fails, disconnected message will display for the internet status. Retry or enter the IP settings, and select Manual to input the information again.

Manually enter the IP address

 
1. Enter the IP settings to select Manual.
2. Enter the IP Address, Net mask, Gateway, DNS Server 1 and DNS Server 2 in the menu.

Note:

- This section is only for 4K models.
- You get access to the Internet through your TV.
- The default option of IP Settings Mode is DHCP.

Wireless

Connecting to the Internet

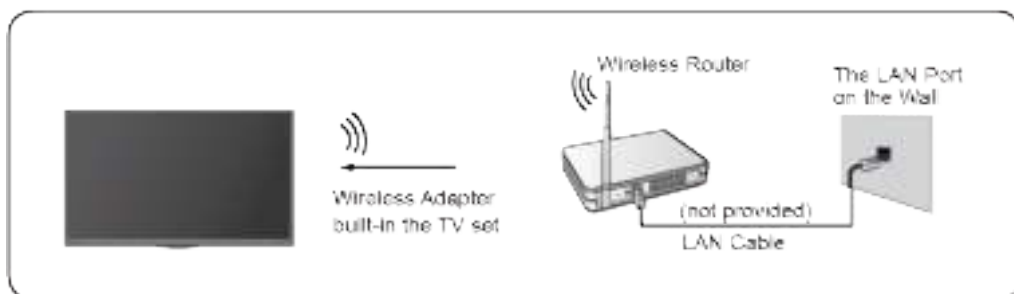


Note:

- You get access to the Internet through your TV.
- Connect to an available wireless network.
- Make sure that you have the wireless router's SSID and password before attempting to connect.

Connecting to a Wireless Network

Press the  button on your remote control, use the / button to navigate to

Settings->Network-> Network Configuration.

Set the TV network by selecting Configuration and press the **OK** or  button to enter the sub-menu.


Network Configuration

Connection Type	Choose a wireless network connection to access the Internet.
Refresh	Refresh wireless network.
Refresh wireless network.	Configure the advanced wireless network settings for the TV.
Add	You can add wireless network.

Note:

If no wireless router is found, select Add and enter the network name in the SSID.
If no wireless router is found, select Refresh

 INPUTS

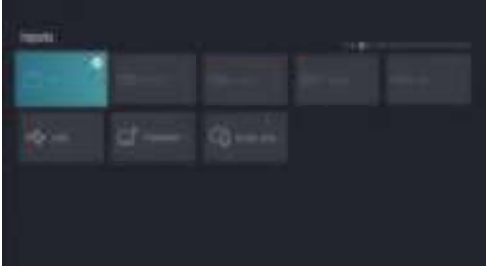

1. Press **INPUT** button to display the

main menu.

2. Choose the appropriate input source.
3. Use **^**/**v**/**<**/**>** button to highlight your desired mode.
4. Press **OK** button to confirm your selection.
5. Press **HOME** button to return to the previous menu or press **EXIT** at any time to exit the setting.

HOME

When finish First Time setup,you can enter HOME screen.




Press **MENU** button to select HOME screen.

Press **^**/**v**/**<**/**>** button to select.


No.	Button	Function
①	SEARCH	Press to search the videos or apps.
②	INPUTS	Icon for Input, select an input source.

No.	Button	Function
③	SETTING	Icon for Setting. Enter to have operations on Setting.
④	Notification Settings	Icon for Notification Settings, allow pop-up notifications to appear for useful information and events that occur with your TV.
⑤	VIDAA account	Icon for VIDAA account, sign in your account

 SETTINGS

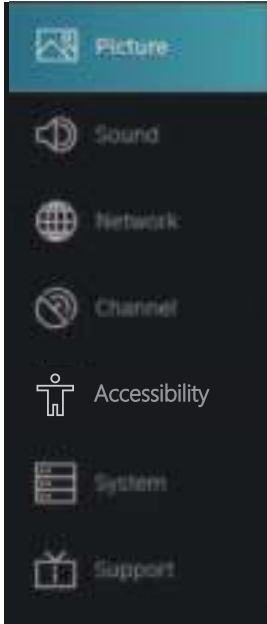

Picture Menu

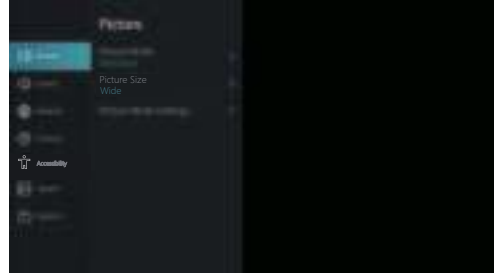 


1. Press **Setting** to enter the main menu.
2. Press **^**/**v** to select **Picture Mode/Picture Size/Picture Mode Settings**.
3. Press **>** or **OK** button to enter the sub-menu.
4. Press **↶** button to return to the previous menu.
5. Press **EXIT** at any time to exit the setting.

MAIN MENU		
	Picture	Enter to have operations on Picture.
	Sound	Enter to have operations on Sound.
	Network	Enter to have operations on Network.
	Channel	Enter to have operations on Channel.
	Accessibility	Enter to have operations on Accessibility.
	System	Enter to have operations on System.
	Support	Enter to have operations on Sound.

Picture	
Picture Mode	Press </> button to select Standard/Vivid/Energy Saving/Natural/Theater/Game/Sport/Calibrated . NOTE: Theater and Calibrated are designed to reduce the level of blue light to protect your eyes.
Picture Size	Press </> button to select Wide/Direct/Dot-By-Dot/Panoramic/Cinema .

Picture	
Picture Mode Settings	Press \wedge/\vee button select Backlight / Brightness/ Contrast /Color/Tint/ Sharpness , then press $\lt;/\gt$ button to adjust it.

 Sound Menu

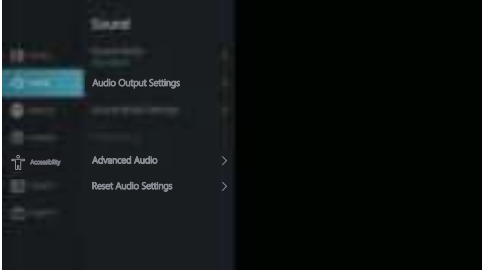


1. Press **Setting** to enter the main menu,
1. Press \wedge/\vee button to **select Sound Mode/Audio Output Settings/ Sound Mode Settings.**
2. Press \gt or **OK** to enter the sub-menu.
3. Press \supset button to return to the previous menu.
4. Press **EXIT** button at any time to exit the setting.

Sound	
Sound Mode	Press \wedge/\vee button to select Standard/ Sports/Theater/Music/ Speech/Late Night mode you desire.
Audio Output Settings	Press \wedge/\vee button to select Audio Output/ Digital Audio Out/ Digital Audio Delay/ Lip Sync/Balance.
Sound Mode Settings	Press \wedge/\vee button to select Auto Volume Control / Mounting position.

Sound	
Headphone	It's only available on headphone is inserted. It can set the sound output mode through headphones.
Advanced Audio	Press \wedge/\vee button to select Equalizer/ Preferred Audio Language.
Reset Audio Setting	Press OK button to reset to factor default.

 Network Menu

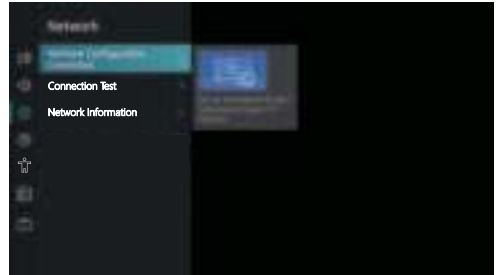


1. Press **Setting** to enter the main menu.
1. Press \wedge/\vee button to select **Network Configuration/ Connection Test/Network Information Settings.**
2. Press \gt or **OK** button to enter the sub-menu.
3. Press \supset button to return to the previous menu.
4. Press **EXIT** button at any time to exit the setting.

Network	
Network Configuration	Press $\lt;/\gt$ button to select Wiress/Off/ Wired LAN connection type, Wiress : Connect to an available network. Wired LAN : IP Settings

Network	
Connection Test	Press OK button to test the status of your network connection.
Network Information	Press OK button view information about your network connection

Channel	
Favorite List	Press \wedge/\vee button to select the channel you like in the list.

 
Channel Menu

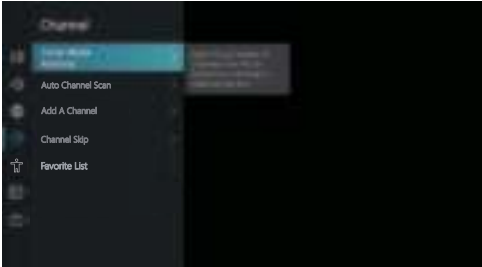

1. Press **Setting** to enter the main menu.
1. Press \wedge/\vee button to select **Tuner Mode /Auto Channel Scan/Add A Channel/ Channel Skip/ Favorite List**.
2. Press \triangleright or **OK** button to enter the sub-menu.
3. Press \triangleright button to return to the previous menu.
4. Press **EXIT** button at any time to exit the setting.

Channel	
Tuner Mode	Press \langle / \rangle button to select Antenna/Cable connection .
Auto Channel Scan	Select Skip to stop scan the channel, select complete that play the channel be scan, select rescan that will rescan all the channel.
Add A Channel	Input the channel number to add it to channel list.
Channel Skip	Press \wedge/\vee button to select a channel to skip.

 Accessibility Menu

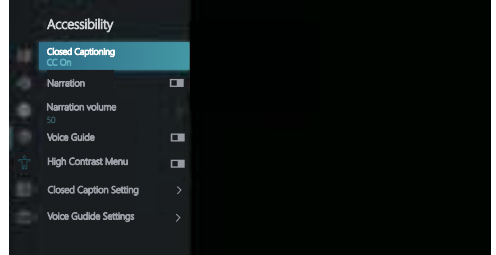


1. Press **Setting** to enter the main menu.
2. Press \wedge/\vee button to select **Close Captioning /Narration/ Narration Volume /Voice Guide/ High Contrast Menu / Closed Caption Settings/ Voice Guide Settings**.
3. Press \triangleright or **OK** button to enter the sub-menu.
4. Press \triangleright button to return to the previous menu.
5. Press **EXIT** button at any time to exit the setting.

Accessibility	
Close Captioning	Press \wedge/\vee button to select CC On/Off/on when Mute .
Narration	Press OK button to select turn on/off the narration.
Narration volume	When Narration is on, press \langle / \rangle button to adjust the volume.
Voice Guide	Press OK button to choose turn on/off the voice guide.
High Contrast Menu	Press OK button to select turn on/off the high contrast menu.

Accessibility	
Closed Caption Settings	Press ^ / v button select Analog caption/Digital Caption/Digital Caption Settings.
Voice Guide Settings	When the Voice Guide is on, press OK or > button to select the volume/ Language / Rate/ Pitch/ Focus Voice Guide.

 System Menu

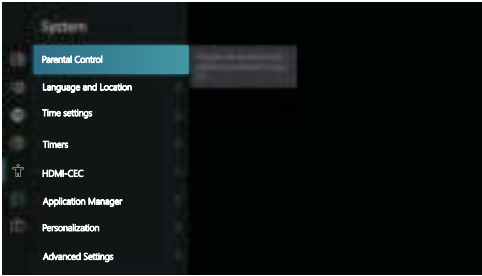


1. Press **Setting** to enter the main menu, Press **^**/**v** button to select **Parental Control/ Time settings / Language and Location/Timers/ HDMI-CEC / Application Manager/ Personalization/Advanced Settings**
2. Press **>** or **OK** button to enter the sub-menu.
3. Press **↶** button to return to the previous menu.
4. Press **EXIT** button at any time to exit the setting.

System	
Parental Control	Create Pin number to turn on parental control to block children from being able to view certain programs.
Language and Location	Press ^ / v button to select the Language/ Keyboard Layout/ Location.

System	
Time settings	Press ^ / v button to select the Time Zone/Time Format/ Date Format/ Daylight Savings/ Date and Time.
Timers	Press ^ / v button to select Sleep Time/ Power On Time / Power Off Timer/ Menu Timeout
HDMI-CEC	Press OK button to turn on HDMI-CEC, then use ^ / v button to select Device Auto Power Off/Device Auto Power On/ TV Auto Power on/ Available Device.
Application Manager	Press ^ / v button to select Content sharing/Clear Cache/Delete Cookies /Do Not Track/ Prime Video/Netflix/ Vudu/Wake on wireless Network/ Wake on Lan.
Personalization	Press ^ / v button to select the Menu Scheme/Menu Transparency.
Advanced Settings	Press ^ / v button to select the TV name/ Audio Only/Input Names/ Live TV Input/Screensaver/ Notifications Pop-ups/Usage Mode/ Setup Assistant.

 Support

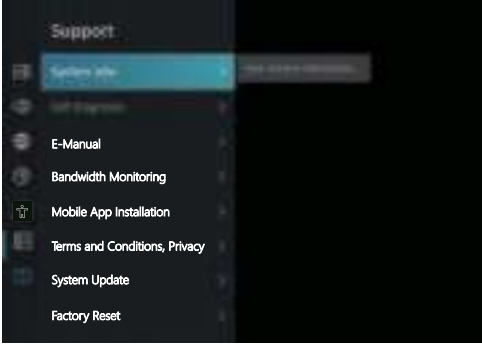


1. Press **Setting** to enter the main menu.
2. Press \wedge/\vee button to select **System Info/ Self Diagnosis/ E-Manual/ Bandwidth Monitoring/Mobile App Installation/Terms and Conditions Privacy Policy/ System Update/ Factory Reset**.
3. Press \triangleright or **OK** button to enter the sub-menu.
4. Press \curvearrowright button to return to the previous menu.
5. Press **EXIT** button at any time to exit the setting.

Support	
System Info	Press \wedge/\vee button to select Signal Info/ Network Connection/ Input Connection/ About View System info .
Self-Diagnosis	Press \wedge/\vee button to select Network Test/ Input Connection Test .
E-Manual	Launch E-manual and get to know more about your TV.
Bandwidth Monitoring	Before start the test the speed with third-party website, make sure the network available.

Support	
Mobile App Installation	Scan the QR code that you can install mobile app on your smartphone to control your TV.
Terms and Conditions Privacy Policy	Press OK button to read TV terms and policy.
System Update	Press \wedge/\vee button to select Auto Firm Upgrade/Check Firmware Upgrade/ System App Auto Upgrade/Upgrade from USB .
Factory Reset	Reset your TV to the factory settings.

Media

 Press **MEDIA** button on the control remote, and press **OK** button to enter the Media Center.

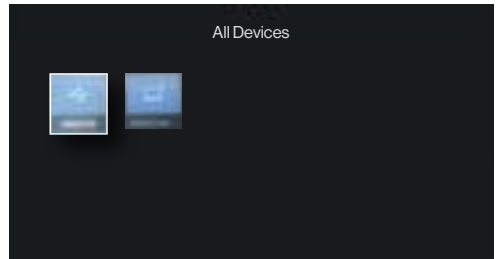

Press **OK** button enter the content sharing, before the share the content, make sure your device and the TV are connected to the same network.



Press **OK** button enter USB, press **^/∨** /**</>** button to select the document or music item.

USB Device

Connect the USB devices such as hard drives, USB sticks and digital cameras for browsing photos, listening to music.



1. Support the USB Storage 4G, 8G, 16G, 32G, 64G, 128G and other common market sizes, 8T hard drive is currently supported.
2. Supported format: NTFS, FAT32.

 
MULTI-SCREEN

Sharing (Mirroring)

Mirror content from your device to the TV.

Press **INPUT** button to display the main menu, then select **Screen Sharing**.

- Turn on the screen mirroring function of your Android/ Windows10 device.
- Find the TV name in the searching list of your device and select it. Wait for the connection progress to complete and the content on your device will be displayed on the TV.

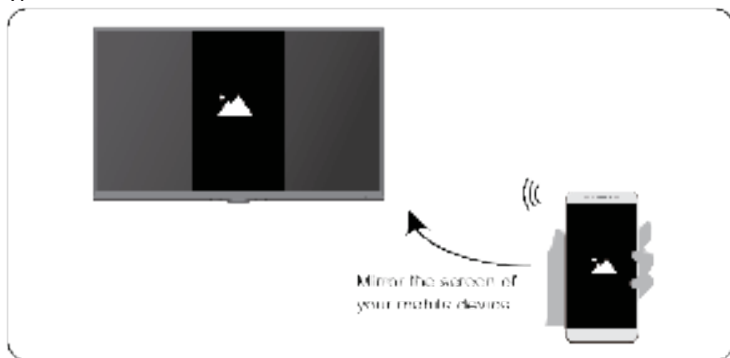

Content Sharing

Share media content, like videos, music or photos, from your Android/ PC device to the TV screen.

Press the **⏠** button on your remote control, use the **^/∨** button to navigate to **System->Application Manager-> Content Sharing**.

 
Establishing Content Sharing connection between the TV and your device

1. Turn on the content sharing function of your Android /PC device.
2. Find the TV name in the searching list of your device and select it.
3. Wait for the connection progress to complete, and select the content you want to

share.

Viewing media content of your device

Press **INPUT** button on your remote, and select a media content on the screen.

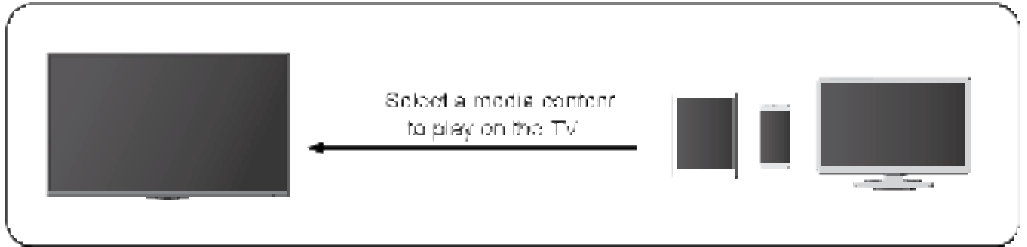

Note:

- Make sure your device and the TV are connected to the same network.
- Some devices may not support content sharing. If your device doesn't support content sharing, you can download an app that supports the function.
- If you want to mirror content from your device, Press **INPUT** button and select Screen Sharing


TROUBLESHOOTING

Problem	Solution/Issue
TV does not operate	<ul style="list-style-type: none">● Make sure the power cord is plugged in.● Try another AC outlet.● Power is off, check fuse or circuit breaker.● Unplug unit for an hour, then plug it back in.● The batteries in the remote control may be exhausted, replace the batteries.
Normal picture, but no sound	<ul style="list-style-type: none">● Check the volume settings.● Check if 'Mute' mode is set to on.● Try another channel.● Check audio cable connections.
The remote control does not work	<ul style="list-style-type: none">● Make the remote control is in range with no obstructions.● Check the batteries.● Correct operating mode set: TV, VCR etc.
Poor sound or no sound	<ul style="list-style-type: none">● Station or Cable TV experiencing problems, tune to another station.● Check sound adjustments (Volume or Mute).● Check for sources of possible interference.
The speakers are making an odd sound	<ul style="list-style-type: none">● Make sure that the audio cable is connected to the correct audio output connector on the external device.● For antenna or cable connections, check the signal information.● A low signal level may cause sound distortions.
Poor picture or no picture	<ul style="list-style-type: none">● Station or Cable TV experiencing problems, tune to another station.● Make sure channels are set into memory.● Check antenna or Cable TV connections, adjust antenna.● Check for sources of possible interference.● Check picture control adjustments.

Problem	Solution/Issue
Poor TV reception	<ul style="list-style-type: none"> ● Ensure the antenna amplifier is turned on for Antenna TV. ● Adjust the antenna position to a stronger signal receiving angle. ● Check the Antenna connection is tight to the TV. ● Check there is power supplied to the Antenna distribution box. ● Confirm your incoming cable is connected to the correct cable / antenna wall connection inside the RV. ● Ensure the internal RV coax jump cable is connected to the correct port.
Poor Cable / Satellite TV Reception	<ul style="list-style-type: none"> ● Ensure antenna amp is turned off for able signal. ● Check incoming Cable is connected correctly to RV. ● Ensure cable splitter box has power. ● Confirm the incoming cable is connected to the correct cable / Satellite wall connection inside your RV. ● Ensure the internal RV coax jump cable is connected to the correct port. ● Check Dish has not obstruction.
TV shuts off	<ul style="list-style-type: none"> ● Sleep Timer is set. ● Power interrupted.
Black and white image from the connected AV device	<ul style="list-style-type: none"> ● Check video connections on both the TV and connected AV device. Ensure the colors match between the connectors and sockets: yellow (VIDEO) for CVBS connection. ● Ensure all video cables are connected firmly.
Audio noise	<ul style="list-style-type: none"> ● Move any infrared equipment away from the TV.
The TV cannot connect to your network or apps.	<ul style="list-style-type: none"> ● Make sure the TV has a network connection. ● Run Network Test ● Contact your Internet service provider.
The wireless network connection failed.	<ul style="list-style-type: none"> ● Make sure your wireless modem/router is on and connected to the Internet.
The wireless network signal is too weak.	<ul style="list-style-type: none"> ● Position your wireless router, modem router, or access point in a central location. Avoid putting it in a corner.
Some files can't be played.	<ul style="list-style-type: none"> ● This problem may occur with high-bitrate files. Most files can be played back, but you might experience problems with high-bitrate files.

The TFT LED panel uses a panel consisting of sub pixels which requires sophisticated technology to produce. However, there may be a small number of bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

 SPECIFICATIONS

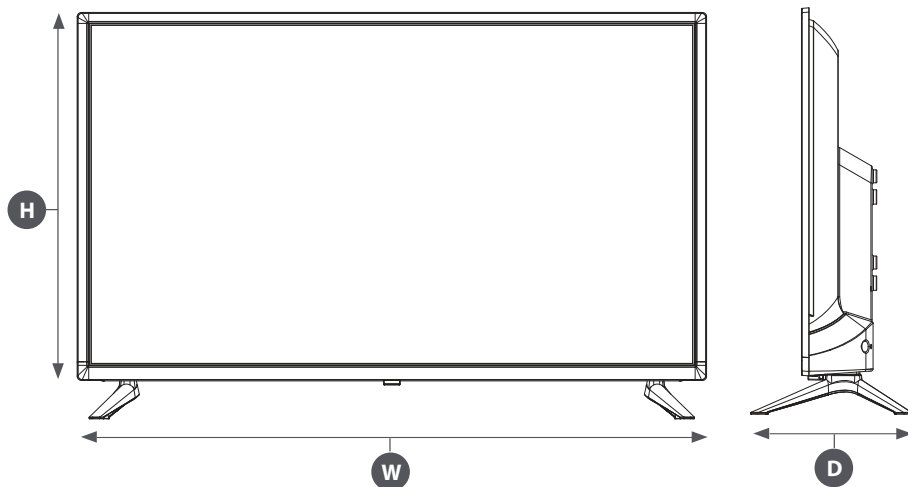

DIMENSION & RESOLUTION

SIZE	Dimension without Stand (L x H x D)	Dimension with Stand (L x H x D)	Max Resolution	Weight lbs. (kg)
24"	21 ¹ / ₁₆ " x 12 ¹ / ₁₆ " x 2 ³ / ₁₆ " 551mm x 329mm x 61 mm	21 ¹ / ₁₆ " x 15" x 6 ³ / ₄ " 551mm x 381mm x 171 mm	1366 x 768 HD	4.63 lbs. (2.1 kg)
32"	28 ³ / ₄ " x 16 ¹ / ₁₆ " x 3 ¹ / ₄ " 730mm x 427mm x 83mm	28 ³ / ₄ " x 18 ⁷ / ₁₆ " x 7 ³ / ₈ " 730mm x 469mm x 188mm	1366x768 HD	7.93 lbs.(3.6 kg)
39"	34 ⁷ / ₈ " x 20 ¹ / ₁₆ " x 2 ¹ / ₁₆ " 886mm x 509mm x 68 mm	34 ⁷ / ₈ " x 22 ³ / ₁₆ " x 8 ⁵ / ₁₆ " 886mm x 563mm x 211 mm	1366 x 768 HD	14.33 lbs. (6.5 kg)
43"	38 ¹ / ₈ " x 22 ³ / ₁₆ " x 2 ⁵ / ₈ " 968mm x 563mm x 67 mm	38 ¹ / ₈ " x 24 ¹ / ₄ " x 8 ⁹ / ₁₆ " 968mm x 616mm x 211 mm	1920 x 1080 HD	15 lbs. (6.8 kg)
50"	44 ³ / ₁₆ " x 25 ¹ / ₂ " x 3 ¹ / ₄ " 1122mm x 647mm x 83 mm	44 ³ / ₁₆ " x 27 ¹ / ₁₆ " x 11 ¹ / ₄ " 1122mm x 706mm x 285 mm	3840 x 2160 HD	22.26 lbs. (10.1 kg)
55"	49 ¹ / ₈ " x 28 ⁹ / ₁₆ " x 2 ¹ / ₁₆ " 1248mm x 726mm x 71 mm	49 ¹ / ₈ " x 30 ¹ / ₁₆ " x 10 ¹ / ₁₆ " 1248mm x 785mm x 255 mm	3840 x 2160 UD	23.72 lbs. (10.76 kg)

INPUT & OUTPUT CONNECTIONS

COAXIAL OUT	VIDEO IN	AUDIO IN	RF IN	RJ45 IN	HDMI IN	USB	EARPHONE
1	1x Video (Yellow)	1x Right (Red) 1x Left (White)	1	1	3	2	1



Furrion, LLC (Furrion) are wholly owned subsidiaries of Lippert Components, Inc. (Lippert)
Furrion, LLC (Furrion) sont des filiales en propriété exclusive de Lippert Components, Inc. (Lippert)
Furrion, LLC: 52567 Independence Ct., Elkhart, IN, 46514

Furrion Innovation Center & Institute of Technology
Centre d'innovation et institut de technologie Furrion
22244 Innovation Drive, Elkhart, IN 46514-5514, USA
Toll free/Numéro gratuit/Línea telefónica gratuita:1-800-789-3341
Email/Courriel/Correo electrónico: support@furrion.com

©2007-2023 Furrion, LLC (Furrion). All rights reserved.

©2007-2023 Furrion, LLC (Furrion). Tous droits réservés.

For Patent Info: www.Lippert.com/patents

Pour des informations sur les brevets: www.Lippert.com/patents

FURRIION.COM



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

Les renseignements contenus dans le présent manuel peuvent seulement être distribués sous forme de document complet, à moins de recevoir l'approbation explicite de Lippert Components pour distribuer des parties individuelles. Tous les renseignements contenus dans le présent manuel peuvent être modifiés sans préavis. Les éditions révisées pourront être téléchargées gratuitement sur le site lci1.com. Ces renseignements sont considérés comme étant factuels jusqu'à ce qu'une version révisée les rende désuets.

Veuillez recycler tout le matériel désuet.

For all concerns or questions, please contact Lippert.
Communiquer avec Lippert Components si vous avez des questions ou des préoccupations.

Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com