

User Manual for Adhesive Stickers (Door Stickers / Trash Can Stickers / Furniture Stickers)

1. Product Overview

These adhesive stickers are designed for multi-scenario use, including door decoration/labeling, trash can classification marking, and furniture surface beautification/protection. Made of high-quality waterproof and wear-resistant material with strong adhesive backing, they offer long-lasting adhesion while being easy to remove without leaving residue. Suitable for smooth surfaces such as wood, plastic, metal, glass, and painted walls (avoid rough or uneven surfaces for optimal performance).

2. Preparation Before Use

2.1 Materials Needed

- Adhesive stickers (door/trash can/furniture type)
- Clean cloth
- Alcohol wipe (optional, for heavy dirt)
- Dry towel
- Scraper or credit card (for smoothing bubbles)

2.2 Surface Requirements

- Ensure the target surface is **clean, dry, and free of dust, oil, or moisture**. Dust or grease will reduce adhesion effectiveness.
- For newly painted surfaces, wait at least 72 hours before applying the sticker to allow the paint to fully cure.
-

Avoid applying in extreme temperatures (below 10°C / 50°F or above 35°C / 95°F) or humid environments (relative humidity > 70%).

3. Installation Steps

3.1 General Installation (Applicable to All Types)

- 1. Clean the Surface:** Wipe the target area with a clean cloth. For stubborn stains, use an alcohol wipe and dry thoroughly with a towel. Ensure no residue remains.
- 2. Position the Sticker:** Peel off 1-2 inches of the backing paper from one corner of the sticker. Align the sticker with the desired position and lightly press the exposed adhesive part to fix it temporarily.
- 3. Smooth and Peel:** Gradually peel off the remaining backing paper while using a scraper or credit card to smooth the sticker from the fixed corner outward. This prevents air bubbles and ensures full adhesion.
- 4. Final Check:** Press the entire sticker firmly with your hand or the scraper to confirm no bubbles or loose edges. For curved surfaces (e.g., cylindrical trash cans), apply gentle pressure and adjust gradually to fit the contour.

3.2 Specific Notes for Different Types

- **Door Stickers:** Avoid applying near door hinges or edges that frequently rub against other surfaces. For glass doors, ensure the surface is free of water spots before installation.
- **Trash Can Stickers:** Choose a flat area away from the trash can opening to prevent contamination or peeling from frequent use. If the trash can is made of porous material (e.g., rough plastic), test a small corner of the sticker first to check adhesion.
- **Furniture Stickers:** Do not apply on furniture surfaces with peeling paint or varnish, as the sticker may peel off along with the surface layer. For wooden furniture, avoid direct sunlight exposure after installation to prevent color fading.

4. Maintenance and Removal

4.1 Maintenance Tips

- Keep the sticker away from sharp objects to avoid scratches.
- For waterproof stickers, gentle wiping with a damp cloth is allowed for cleaning; avoid using harsh chemicals (e.g., bleach, acetone) that may damage the print or adhesive.
- If edges start to lift, press firmly to re-adhere. If adhesion is lost, replace the sticker with a new one.

4.2 Safe Removal

1. **Warm the Sticker:** Use a hair dryer on low heat to warm the sticker for 1-2 minutes. This softens the adhesive and makes removal easier.
2. **Peel Gently:** Start peeling from one corner, pulling slowly and parallel to the surface. Do not pull upward forcefully, as this may damage the surface (especially painted or delicate materials).
3. **Remove Residue:** If any adhesive residue remains, wipe it with a cloth dipped in alcohol or a mild adhesive remover. Test the remover on an inconspicuous area first to ensure it does not damage the surface.

5. Warning and Precautions

- Keep the stickers out of reach of children under 3 years old to prevent choking hazards (small parts may detach if torn).
- Do not apply the sticker on surfaces that require frequent cleaning with abrasive materials.
- The adhesive may lose effectiveness in outdoor environments exposed to prolonged rain or extreme temperatures; for outdoor use, select stickers specifically labeled "outdoor-grade".
- If skin irritation occurs during installation or removal, wash hands thoroughly with soap and water. Avoid contact with eyes; if contact occurs, rinse immediately with plenty of water and seek medical attention if necessary.

6. Product Specifications

- Material: PVC (waterproof) / Paper (non-waterproof, for indoor use only)
- Adhesive Type: Pressure-sensitive acrylic adhesive (residue-free when removed properly)
- Service Life: 1-3 years (indoor use); 6-12 months (outdoor use, depending on weather conditions)
- Applicable Temperature Range: 10°C - 35°C (50°F - 95°F)

For further assistance or product inquiries, please contact our customer service team.

（注：文档部分内容可能由 AI 生成）