

# Hamilton Beach®

## USER MANUAL



**Rise 1.7L Kettle Brushed Stainless Steel  
Model No: HB01402B**

**- FOR DOMESTIC USE ONLY -**

# CONTENTS

SPECIFICATIONS.....	1
IMPORTANT SAFEGUARDS.....	2
HOW TO USE .....	3
CLEANING & CARE .....	5
DISPOSING OF THE APPLIANCE.....	6
GUARANTEE AND SERVICE .....	7
CUSTOMER SERVICE .....	8

# SPECIFICATIONS

Product Dimensions:	25cm(H) x 15.4cm(W) x 22.6cm(L)
Power:	3000W
Net Weight:	Approx. 0.92kg


# IMPORTANT SAFEGUARDS

**When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:**

1. Read all instructions before use.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact our customer service team and stop using the kettle.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate the appliance without anything in it to avoid damaging the heat elements.
6. Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
8. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
10. Be careful of refilling when the kettle is hot.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. Do not touch the hot surface. Use the handle or the button.
14. The attached base can not be used for other than intended use
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play it.
17. The kettle is for household use only. Do not use outdoors.
18. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
19. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
20. To disconnect, turn any control to "off," then remove plug from wall outlet.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
22. Do not use the appliance for other than intended use.
23. The kettle can only use with the stand provided.
24. If the kettle is overfilled, boiling water may spill out.

- 26. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles. Avoid spillage on the connector
- 27. This appliance is intended to be used in household and similar applications such as:
  - A.) Staff kitchen areas in shops, offices and other working environments;
  - B.) Farm houses;
  - C.) By clients in hotels and other residential type environments;
  - D.) Bed and breakfast type environments.
- 28. The heating element surface is subject to residual heat after use.
- 29. Save these instructions for future use.

# HOW TO USE GUIDE

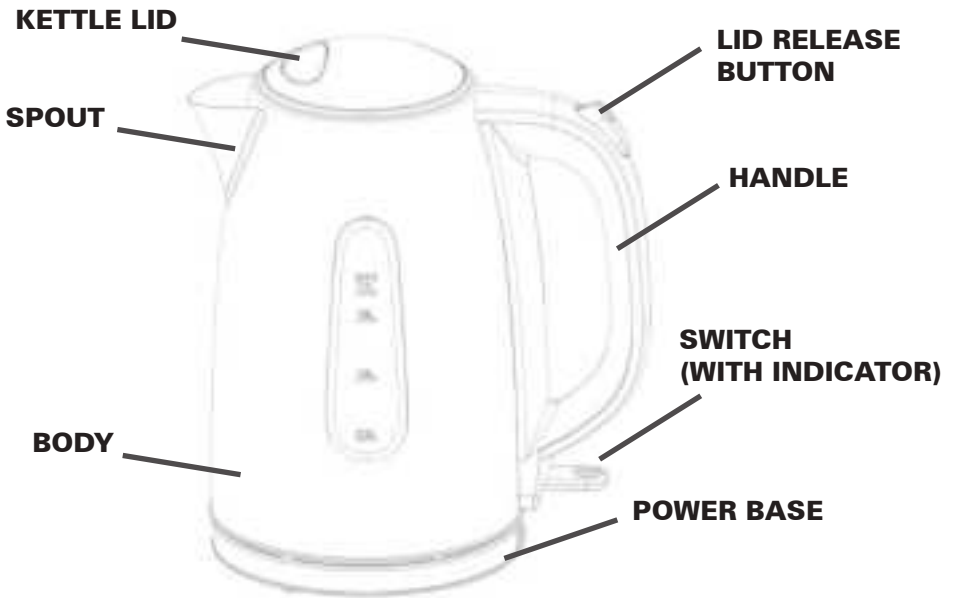

## **BEFORE USING YOUR KETTLE**

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water twice. Wipe the surface with a damp cloth.

**NOTE: The max capacity of kettle is 1.7L.**

## **USING YOUR ELECTRIC KETTLE**

1. Place the kettle on the flat surface.

2. To fill the kettle, remove it from the power base and open the lid by pressing down lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.

4. Connect the plug into a power outlet. Press down the switch and the indicator will light up, and then the kettle starts to boil the water. The kettle will switch off automatically once the water has boiled. If necessary, it will take you 30 seconds to wait before pressing the switch again to re-boil the water. You may shut off the power by lifting switch up or directly lift the kettle from the power base at any moment to stop boiling process.

**NOTE:** Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch if be constrained or if the lid is opening.

5. Lift the kettle from the power base and then pour the water.

**NOTE:** Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.

6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

**NOTE:** Always disconnect the power supply when not use.

## **BOIL-DRY PROTECTION**

Should you accidentally let the kettle operate without water, the function of boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

# CLEANING & CARE

**Always disconnect the appliance from the power outlet and cool it down completely before cleaning.**

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth or cleaner.
3. Remember to clean the filter at intervals. For easier cleaning, detach the filter by pressing down the tab of filter inside the kettle and then replace it after cleaning.

**CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.**

4. When not use or storage, the power cord may be wound under the bottom of kettle.

## REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle which can decrease efficiency. You can use commercially available descaler and follow the instructions on the package. Alternatively, you may follow below instructions using the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water to the maximum position, boiling and then discard the water. Repeat several times until the odour of vinegar has flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

# DISPOSING OF THE APPLIANCE

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items.

Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# GUARANTEE & SERVICE

This product is covered by a 12-month warranty, please read the guarantee and service carefully and keep for future use.

**Please Note: To maintain the validity of the warranty, it is imperative to register it within the initial 30 days of purchase. Any registration made beyond this time frame will result in the warranty being deemed void.**

This warranty applies to products purchased and used in the UK. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period from the date of original purchase; this timeframe can vary based on the product. Please refer to our product pages or contact our customer service team if you are unsure of the duration of the products warranty period. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz). We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

To make a warranty claim, do not return this appliance to the store.

Please call **01274 752624** or email **customerservice@hamiltonbeach.co.uk**. For faster service, locate the model number on the rating label on your appliance. Alternatively, **please scan the QR code below** to be directed to our warranty registration page:



# CUSTOMER SERVICE

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:



**01274 752624**



**customerservice@hamiltonbeach.co.uk**



**www.hamiltonbeach.co.uk**

Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label.

Love your purchase?  
Please leave us a review!



The user manual can also be downloaded from our website:  
**www.hamiltonbeach.co.uk**

# Hamilton Beach®

brew with **confidence**

**Trusted quality for over 100 years.**

Discover the innovative and dependable products that have made Hamilton Beach a trusted name since 1910.

We make your mornings easier.

*#Brewwithconfidence*

**Join our community!**

Follow us for news, recipe ideas, offers and tips...



@hamiltonbeachuk

[www.hamiltonbeach.co.uk](http://www.hamiltonbeach.co.uk)



The user manual can also be downloaded from our website:

[www.hamiltonbeach.co.uk](http://www.hamiltonbeach.co.uk)