

HUAWEI nova 12i

User Guide



Contents

Essentials

| | |
|-----------------------------------|----|
| Live View | 1 |
| Basic Gestures | 2 |
| Phone Clone | 5 |
| Lock and Unlock Your Screen | 6 |
| Get Familiar with the Home Screen | 7 |
| Control Panel | 16 |
| Screenshots & Screen Recording | 21 |
| Multi-Window | 30 |
| Charging | 39 |

Smart Features

| | |
|-----------------|----|
| AI Voice | 40 |
| AI Touch | 42 |
| Super Device | 43 |
| Easy Projection | 45 |
| Huawei Share | 47 |

Camera and Gallery

| | |
|--------------------------|----|
| Take Photos | 48 |
| Portrait Mode | 53 |
| Night Mode | 53 |
| Aperture Mode | 54 |
| AI Camera | 54 |
| Pro Mode | 55 |
| Record Videos | 57 |
| Dual-View Mode | 59 |
| Multi-cam | 59 |
| Adjust Camera Settings | 61 |
| Manage Gallery | 62 |
| Edit Pictures and Videos | 66 |
| Highlights | 68 |

Apps

| | |
|-----------|----|
| MeeTime | 70 |
| Notepad | 74 |
| Optimizer | 80 |

Settings

| | |
|----------------------|----|
| More Connections | 81 |
| Home Screen & style | 82 |
| Display & Brightness | 83 |

 
| | Contents |
|----------------------------|----------|
| Notifications & status bar | 83 |
| Biometrics & Password | 87 |
| Storage | 89 |
| Security | 90 |
| Privacy | 91 |
| Accessibility Features | 94 |
| About Phone | 99 |


Essentials

Live View

Display Real-Time Service Info

Live view shows you the real-time status of ongoing services and tasks. For example, you can view real-time information about tasks such as a timer or recording, during a call.

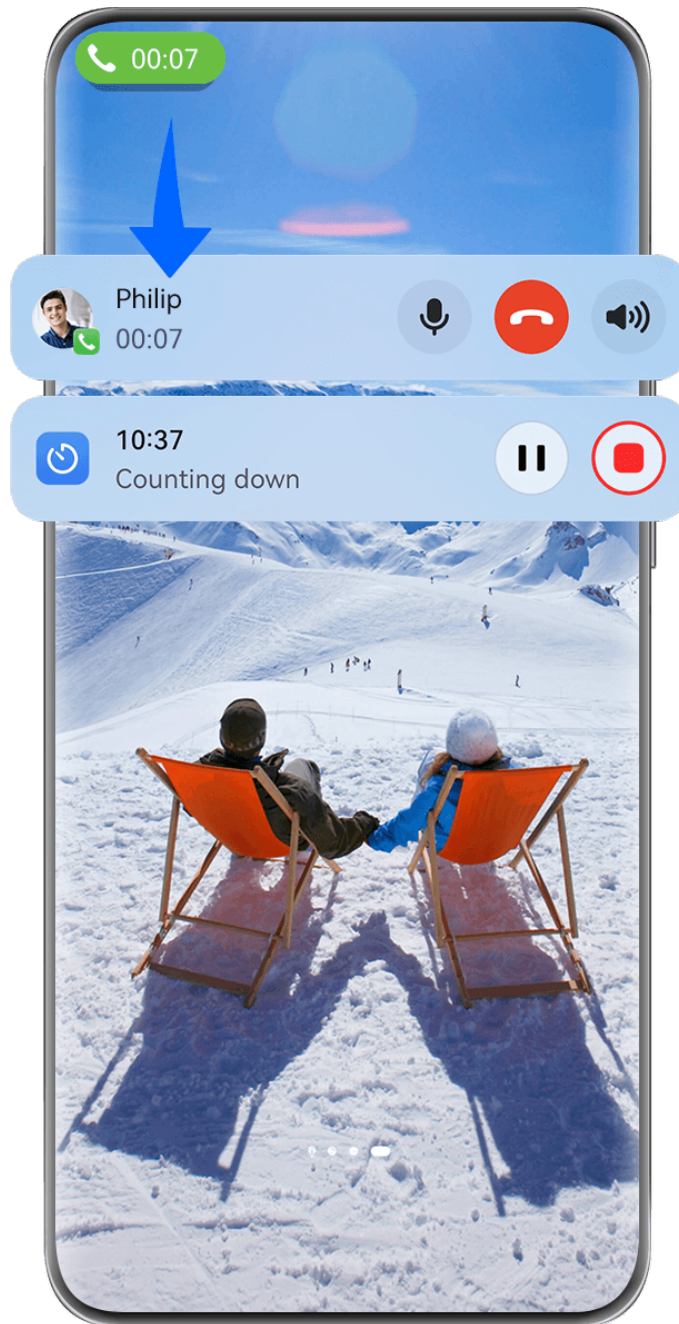

 The figures are for reference only.

Live capsule:

When you switch from an app to the home screen or another app, a Live capsule will display in the status bar, with a brief real-time summary of the current task, for example, call duration and timer countdown duration.

Tasks will be sorted by task priority and creation time in the Live capsule, if there are multiple tasks.

- ❗ If a real-time task from an app is not synced to the Live view, go to **Settings > Notifications & status bar** and check whether the notification permission has been enabled for the app.

Live card:

Touch a Live capsule to expand it into a Live card, where you can view the details or perform other operations. Touch any area in the card except for the buttons, to visit the corresponding app and perform other operations.

Touch any blank area or swipe up on the Live card to collapse it to the capsule.

Swipe down from the upper left corner of the screen to display Notification Center, which shows all current tasks. Once a task has completed, it will be automatically deleted.

- ❗ If you do not wish to enable Live view for an app, go to **Settings > Notifications & status bar > Status bar > Live view** and toggle off the switch next to the corresponding app.

Basic Gestures

Basic Gestures and Shortcuts

System Navigation Gestures

Go to **Settings > System & updates > System navigation** and make sure that **Gestures** is selected.




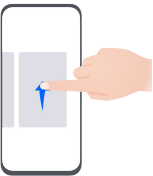 


Return to the previous screen

Swipe in from the left or right edges to return to the previous screen.



Back to home screen



Swipe up from the bottom to go to the home screen.



| | |
|--|--|
|  | <p>Recent tasks Swipe up from the bottom of the screen and hold to view recent tasks.</p> |
|  | <p>Close an app When viewing recent tasks, swipe up on an app preview to close the app.</p> |
|  | <p>Switch between apps</p> <ul style="list-style-type: none"> Slide across the bottom edge of the screen to switch between apps. Before using this gesture, touch Settings on the System navigation screen, and ensure that Slide across bottom to switch apps is enabled. <ul style="list-style-type: none">  If your device does not have the Slide across bottom to switch apps switch, it indicates that the corresponding feature is not supported. Swipe across the bottom of the screen in an arc to switch between apps. |

Knuckle Gestures


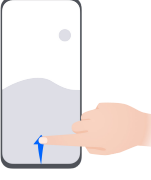 

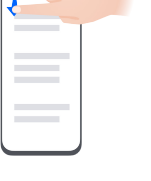 
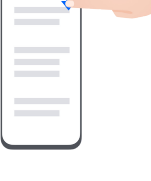 

Before using knuckle gestures, use either of the following methods to make sure that all necessary features are enabled (depending on your device model):

- Go to **Settings > Accessibility features > Shortcuts & gestures**, and enable **Take screenshot** and **Record screen**.
- Go to **Settings > Accessibility features > Motion control > Take screenshot**, and enable **Smart screenshot**.





| | |
|---|--|
|  | <p>Take a screenshot Knock twice on the screen with a knuckle to take a screenshot.</p> |
|  | <p>Take a scrollshot Knock on the screen with a knuckle and draw an "S" to take a scrolling screenshot.</p> |


| | |
|---|--|
|  | <p>Capture part of the screen Knock and draw an enclosed area with a knuckle to capture part of the screen.</p> |
|  | <p>Record screen Knock twice on the screen with two knuckles to start or end a screen recording.</p> |

More Gestures

| | |
|---|--|
|  | <p>Access Home screen editing mode Pinch two fingers together on the home screen.</p> |
|  | <p>Display the shortcut panel on the lock screen Turn on the screen and swipe up from the bottom of the lock screen.</p> |
|  | <p>Display the search bar Swipe down from the middle of the home screen.</p> |
|  | <p>Display the notification panel Swipe down from the upper left edge of the screen.</p> |
|  | <p>Turn on a shortcut switch Swipe down from the upper right edge of the screen to display Control Panel and touch  to expand the shortcut switches panel (depending on your device model).</p> |

Button Shortcuts

| | |
|--|--|
|  | <p>Power off and restart Press and hold the Power button until your phone displays the Power off and Restart menus.</p> |
|  | <p>Turn up the volume Press the Volume up button.</p> |
|  | <p>Turn down the volume Press the Volume down button.</p> |
|  | <p>Take a screenshot Press the Volume down and Power buttons simultaneously.</p> |

 Some products do not have volume buttons.

Phone Clone

Use Phone Clone to Move Data to Your New Device

Phone Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old phone to your new phone.

Migrate Data from a Huawei/Android Device

- 1** On your new phone, open the **Phone Clone** app, or go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, and select **Huawei** or **Other Android**.
- 2** On your old device, follow the onscreen instructions to download and install **Phone Clone**.
 - For Huawei devices: You can download **Phone Clone** from **AppGallery**.
 - For Android devices: You can download **Phone Clone** from the Huawei official website.
- 3** On the old device, open the **Phone Clone** app, touch **This is the old device**, and follow the onscreen instructions to connect the old device with your new phone manually, or by scanning a code.

- 4 On your old device, select the data you wish to clone, and touch **NEXT > TRANSFER** to complete the data cloning.

Migrate Data from an iPhone or iPad

- 1 On your new phone, open the **Phone Clone** app, or go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, and select **iPhone/iPad**.
- 2 On your old device, follow the onscreen instructions to download and install **HUAWEI Phone Clone**.
- 3 On the old device, open the **HUAWEI Phone Clone** app, touch **Transfer data to a Huawei phone**, and follow the onscreen instructions to connect the old device with your new phone by scanning the code.
- 4 On your old device, select the data you wish to clone, and follow the onscreen instructions to complete the data cloning.

Lock and Unlock Your Screen

Lock and Unlock Your Screen

Lock the screen

Auto-lock:

Your phone screen will be automatically locked if you haven't performed any operations on it for a period of time.

You can go to **Settings > Display & brightness > Sleep**, and set the screen timeout duration.

Manually lock the screen:


You can manually lock the screen using either of the following methods:

- Press the Power button.
- Pinch two fingers together on the home screen, touch **Service widgets**, swipe down to the bottom, touch **Widgets**, touch and hold down on the **Screen Lock** icon, and touch **Add to home screen**. Then touch the **Screen Lock** icon to lock the screen.

Turn On the Screen

You can turn on the screen in any of the following ways (depending on your device model):

- Press the Power button.
- Go to **Settings > Accessibility features > Shortcuts & gestures > Wake screen**, and enable and use **Raise to wake** and **Double-tap to wake**.
- Go to **Settings > Accessibility features > Motion control > Raise**, and enable and use **Wake device**.

 If your phone does not have this option, it indicates that this feature is not supported.

Unlock Your Screen

Password unlock: Once the screen is turned on, swipe up from the middle of the screen to display a panel where you can enter your lock screen password. Then, enter your lock screen password.

Face unlock: Once the screen is turned on, bring your face in front of the screen of your phone. Your phone will unlock automatically after it recognizes your face.

Fingerprint unlock: Touch the fingerprint sensor zone with a finger that you have already set up on your device. Wake up your screen first to show the fingerprint sensor zone, if your device has an in-screen fingerprint sensor.

Get Familiar with the Home Screen

Home Screen Overview

The new setup allows you to customize your phone home screen and group important content in easy-to-access locations with service widgets, large folders, and other features.


Get a Grip on the Revamped Home Screen

- **Status bar:** Shows the status of your phone and notifications at the top of the screen.
- **Large folders:** Directly opens an app when you touch the corresponding app icon, without expanding the folder. The folder size can be adjusted as needed.
- **Service widgets:** Previews services and provides direct access to frequently-used app features without requiring you to open each corresponding app. You can stack or combine multiple service widgets as needed.
- **Screen navigation bar:** Swipe left or right to view apps and widgets on different screens. The indicator shows which screen you are currently on.
- **Shortcut bar:** Displays frequently used apps.

Use Service Widgets

Service widgets allow you to:


- Preview or access apps, such as to view the weather forecast, or play music.
- Select from a range of service widget styles and layouts to customize your home screen.
- Stack and combine multiple service widgets to save home screen space, streamline your home screen, and navigate with greater ease.

Apps with a widget bar  at the bottom support service widgets. To remove the widget bar, go to **Settings > Home screen & style > Home screen settings > Show widget bars**.


 This feature is not supported in certain scenarios. Actual usage shall prevail.

Add Service Widgets to Your Home Screen

You can add a service widget to the home screen in any of the following ways:

 
- Swipe up on an app icon to expand its service widget, and touch  to add the service widget to the home screen.
- Swipe up on an app icon to expand its service widget, touch and hold down on the service widget, touch **More service widgets**, select your desired style, and touch **Add to home screen**.
- Touch and hold down on an app icon, touch **Service widgets**, select your desired style, and touch **Add to home screen**.
- Pinch two fingers together on the home screen, touch **Service widgets**, select your desired service widget, and touch **Add to home screen**. You can also touch and hold down on your desired service widget, and drag it to any blank area on the home screen.

If there is no space available on the current screen, the widget will be pinned to the next screen. If neither screen has any space, a new screen will be created for the service widget, to the right of the current screen.

-  Service widgets cannot be pinned to folders.
 - Swiping up on the app icon will not expand the service widget in certain scenarios. Actual usage shall prevail.

Stack Service Widgets

Stack same-sized service widgets/widget combos to save home screen space, and streamline your home screen.

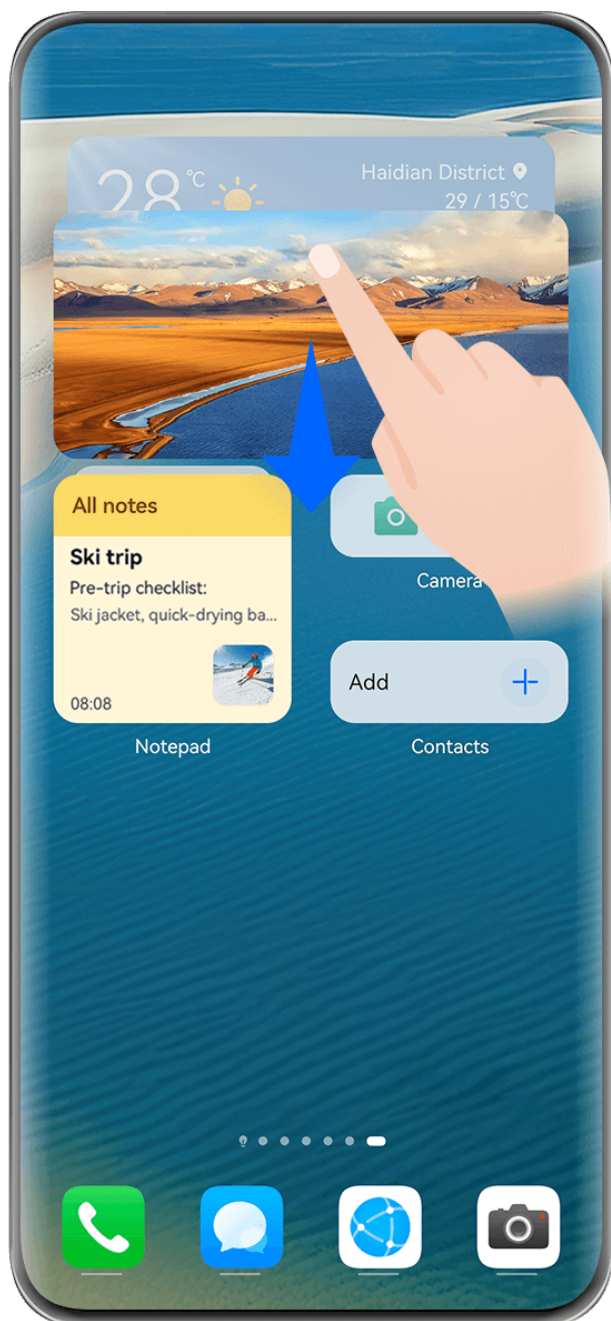

i The figures are for reference only.

Stacking service widgets:

Touch and hold down on a service widget/widget combo, drag it to another service widget/widget combo of the same size, and release to stack the two items, once they have completely overlapped.

Viewing widgets within a stack:

Swipe up or down on a stack to view all of its service widgets.

Managing service widgets:

1 Expand the stack in any of the following ways:

- Swipe down further to expand the stack.
- Touch and hold down on the stack, and touch **Expand stack**.


2 Then manage widgets in the stack as follows:

- **Adjusting the position of a service widget:** Touch and hold down on a service widget, and drag it to change its position.
- **Pinning a service widget to the top:** Touch a service widget to pin it to the top of the stack.
- **Removing a service widget from the stack:** Touch and hold down on a service widget, drag it to the edge of the screen and hold, wait for the service widget to be moved out of the stack, and drag the widget to any blank area on the home screen.
- **Deleting a service widget:** Swipe left on a service widget to delete it.
- **Deleting a widget stack:** Once all of the service widgets in a stack are removed, the stack will be automatically deleted.



Combine Service Widgets

Combine service widgets of all sizes, and add frequently-used shortcuts to widget combos, to create shortcuts for common features.




 The figures are for reference only.

Adding a widget combo:

- Hold and drag a service widget to another service widget of any size, until they partially overlap, and release to complete the combination, once the back panel has been expanded.
- Pinch two fingers together on the home screen, go to **Service widgets > Widget combos**, touch and hold down on the widget combo that you wish to add, and touch **Add to home screen**. You can also touch  , select your favorite service widgets to customize your own combo, and touch  .

Editing a widget combo:

- **Adding a service widget to the widget combo:** Hold and drag a service widget on the home screen to the widget combo.

- **Removing a service widget from the widget combo:** Touch and hold down on the widget combo, and wait for the pop-up menu to display. Then hold and drag a service widget to any blank area on the home screen.
- **Deleting a service widget:** Touch and hold down on the widget combo, and wait for the pop-up menu to display. Then hold and drag a service widget to the  icon at the top of the screen.

After you're done with editing the widget combo, the system will automatically apply an optimal template size based on the items in the combo. Touch any area outside the service combo to exit the editing screen.

You can also touch and hold down on the service combo, and touch **Edit combo** to add or remove **Service widgets** or **Shortcuts**.

Removing a widget combo:

Touch and hold down on the widget combo, and touch **Remove combo** to remove the widget combo.

Renaming a widget combo:

Touch and hold down on the widget combo, and touch **Rename** to rename the widget combo.

You can also touch and hold down on a service widget to edit or remove it.

 Certain service widgets can't be edited.

Edit and Remove Service Widgets


Edit service widgets:

Touch and hold down on a service widget, and select **Edit** to set which information will display for the widget.

For example, you can set the cover of the Gallery service widget to a specified picture. To do this, you can touch and hold down on the Gallery service widget, go to **Edit > Select a photo**, and follow the onscreen instructions to set it.

Remove service widgets:


Touch and hold down on a service widget, and select **Remove** to remove it from the home screen.

-  • If you uninstall certain apps, the corresponding service widgets will also be removed.
- Certain service widgets can't be edited.

Create and Use Large Folders

Large folders make it easy to categorize app icons on the home screen. Directly open an app by touching the app icon, without expanding the folder, and adjust the folder size as needed, to craft your ideal home screen layout.



 The figures are for reference only.

Create a Large Folder


- 1 Touch and hold an app icon and drag it over another icon to create a new folder.
- 2 Touch and hold a folder to switch between display modes. For example, you can touch and hold a new folder and select **Enlarge** from the displayed menu to create a large folder.
- 3 You can touch the lower right corner of the large folder to open it and then touch the folder name to rename it.
You can also rename the folder by touching and holding it and selecting **Rename**.

Operations in a Large Folder


You can perform the following operations in large folders:





















- **Adjust the folder size:** Touch and hold down on a large folder, and release your finger when the pop-up menu displays. Drag the blue edges or corners around the folder to adjust the folder size, and touch any blank area on the home screen to complete the operation.
- **Enter or exit folders:** Touch the lower right corner on a large folder to enter it. Touch a blank area in the folder to exit it.








































When there are too many app icons to display on one page within a large folder, a stacked icon will appear in the folder's lower right corner. You can touch the stack icon to open the folder.

- **Add or remove apps:** Open a large folder, and touch , and add or remove apps as required. If you deselect all apps within the folder, the folder will be deleted.
- **Switch between display modes:** Touch and hold down on a folder to switch between a standard and large display. For example, you can touch and hold down on a standard folder, and select **Enlarge** from the displayed menu to create a large folder.

Notification and Status Icons

-  Network status icons may vary depending on your region or network service provider. Supported features vary depending on the device model. Some of the following icons may not be relevant to your phone.

| | | | |
|---|----------------------|---|--|
|  | 5G network connected |  | 4G network connected |
|  | 3G network connected |  | 2G network connected |
|  | Full signal strength |  | Roaming |
|  | Data saver enabled |  | No SIM card inserted |
|  | Hotspot enabled |  | Hotspot connected |
|  | Hotspot disconnected |  | Switching networks via Wi-Fi+ |
|  | Wi-Fi connected |  | Wi-Fi network is faulty, unable to connect to the Internet |
|  | Wi-Fi 6 connected |  | Wi-Fi 6 network is faulty, unable to connect to the Internet |
|  | Wi-Fi 6+ connected |  | Wi-Fi 6+ is faulty, unable to connect to the Internet |
|  | Dual Wi-Fi connected |  | Dual Wi-Fi connected, with the main Wi-Fi supporting Wi-Fi 6 |

| | | | |
|---|---|---|--|
|  | Dual Wi-Fi connected, with the main Wi-Fi supporting Wi-Fi 6+ |  | NFC enabled |
|  | Battery empty |  | Low battery |
|  | Charging |  | Fast charging |
|  | Super charging |  | Wireless super charging |
|  | Wireless fast charging |  | Regular wireless charging |
|  | Power Saving mode enabled |  | Digital Balance enabled |
|  | Bluetooth enabled |  | Bluetooth device battery |
|  | Bluetooth device connected |  | VPN connected |
|  | Airplane mode enabled |  | Do Not Disturb mode enabled |
|  | Location service enabled |  | Eye Comfort mode enabled |
|  | Driving mode enabled |  | Performance mode enabled |
|  | Headset connected |  | Projection device connected |
|  | Calling |  | VoLTE enabled |
|  | Missed call |  | Calling service not available on the current network |
|  | New message |  | Alarm set |
|  | Silent mode |  | Vibration mode |
|  | Syncing data |  | Data syncing failed |
|  | New email |  | Event reminder |
|  | Apps using the camera |  | Apps using the microphone |
|  | More notifications | | |

 
Control Panel


Introduction to Control Panel


Manage and control audio playback, shortcuts, and **Super Device**, with greater ease, in **Control Panel**.

Overview of Common Features in Control Panel

Swipe down from the upper right edge of the screen to display **Control Panel** to access the following features:

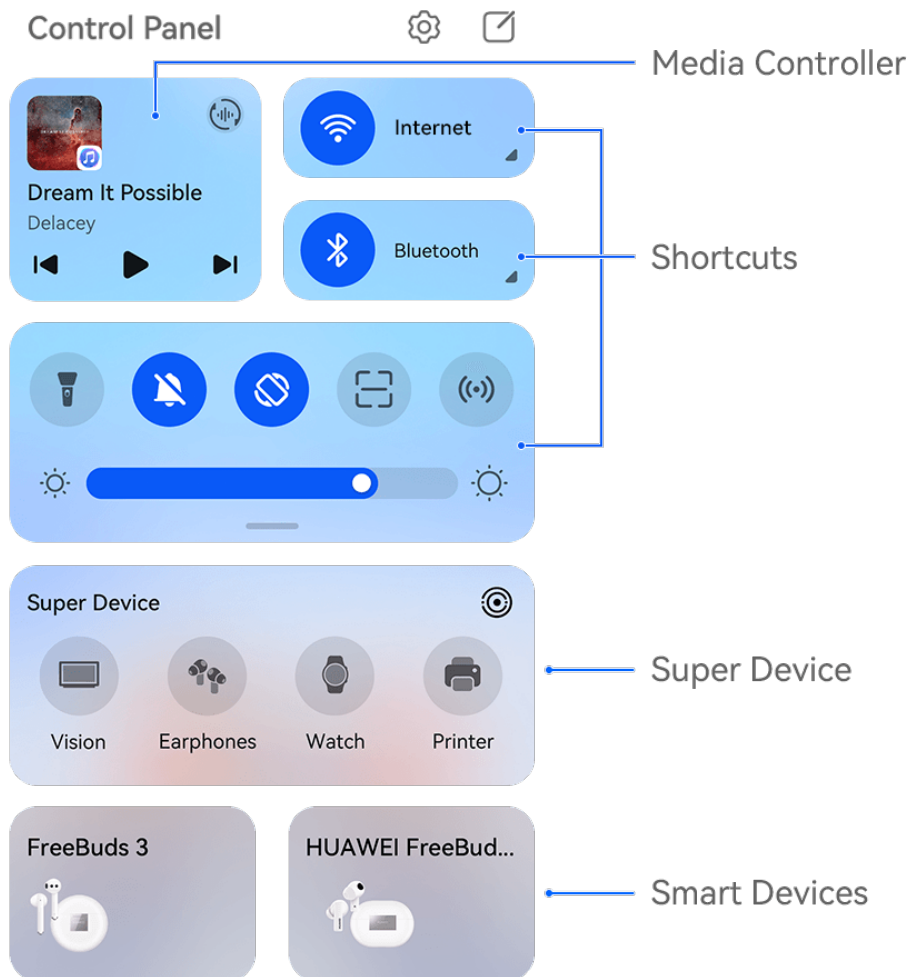

 The figures are for reference only.

- **Media Controller:** Controls audio playback and allows you to adjust the playback progress and switch between recently-used media apps, listening devices (such as Visions and Bluetooth headsets), and calling devices.
- **Shortcuts:** Enables, disables, or sets frequently-used features.
- **Super Device:** Collaborates with Visions and other devices to facilitate seamless wireless projection, video transfers, and other cross-device features.
- **Smart devices:** Allows you to manage and control devices have been added in **AI Life**.
 If your phone is not pre-installed with some relevant apps, download it from **AppGallery**.


Edit Control Panel


Control Panel allows you to edit features, such as relocate shortcut switches, hide **Super Device**, and smart devices, so that you can manage your devices with greater ease.

Swipe down from the upper right edge of the screen to display **Control Panel**, and touch




. From there, feel free to:

 
- **Edit shortcut switches:** Touch **Edit switches**, hold and drag a shortcut switch to relocate it. You can also drag a frequently-used hidden shortcut switch up to the unhidden part of the shortcut switch panel, or drag a less frequently-used shortcut switch down to the hidden part.
- **Hide Super Device:** Touch **Hide Super Device** to hide Super Device. Touch **Show Super Device** to show Super Device.
- **Edit smart devices:** Touch **Edit devices**, and touch  at the top of an added smart device to remove it from the Control Panel. Touch a smart device that you have linked to **AI Life** below to add it to the Control Panel.


 If your phone is not pre-installed with some relevant apps, download it from **AppGallery**.


Use Shortcut Switches

Turn on a Shortcut Switch


Swipe down from the upper right edge of the screen to display **Control Panel** and touch  to expand the shortcut switches panel (depending on your device model).

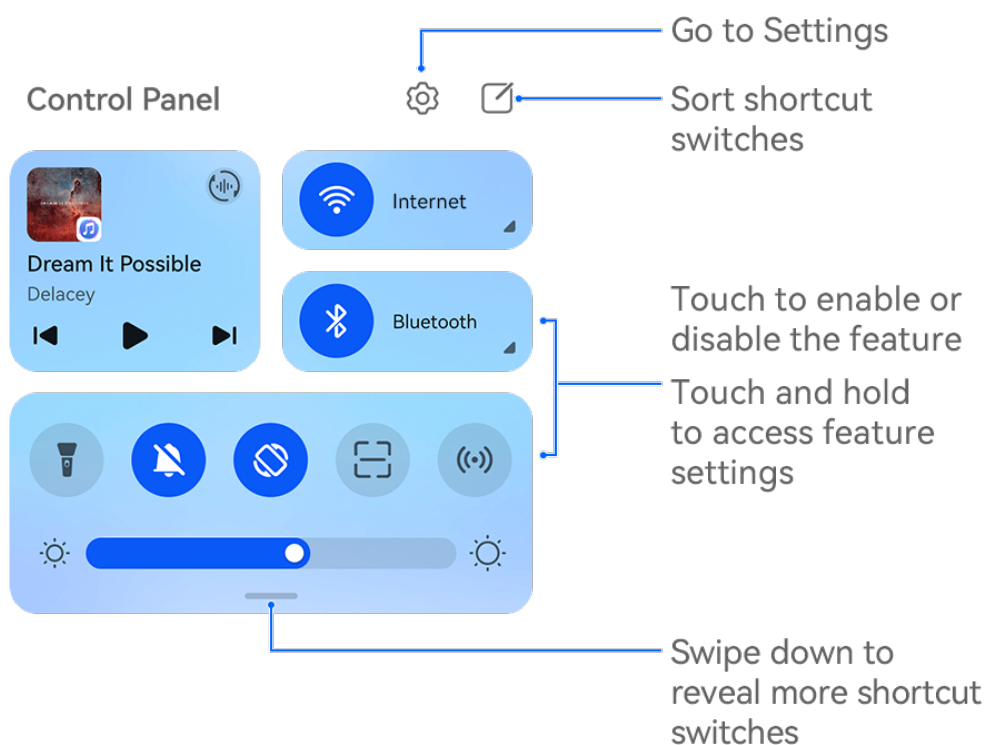

 The figures are for reference only.

- Touch a shortcut switch to enable or disable the corresponding feature.
- Touch and hold a shortcut switch to access the settings screen of the corresponding feature (supported by some features).
- Touch  to access the system settings screen.


Customize Shortcuts

Swipe down from the upper right edge of the screen to display **Control Panel**, go to  > **Edit switches**, then touch and hold a shortcut switch to drag it to your preferred position, and touch **Done**.

Use Media Controller


Manage playback and switch audio and video apps at any time in **Media Controller**, or even transfer streaming audio from your device to other devices, like a headset or speaker.



 The figures are for reference only.

Manage and Switch Between Audio and Video Apps

When multiple audio and video apps (such as **Music**) are opened, you can quickly manage and switch between these apps in **Media Controller** with ease.


 **Media Controller** is only supported for certain apps, and certain apps need to be updated to the latest version .

- 1** Swipe down from the upper right corner on your phone to display **Control Panel** and touch any blank area in **Media Controller** at the top of the screen, to enter the **Media Controller** screen.
- 2** **Media Controller** displays currently running and recently used audio and video apps. From there, feel free to:
 - **Manage running apps:** Touch to pause playback or switch tracks, or swipe to adjust the playback progress or volume.
 - **Switch to other recently used apps:** Touch another app on the screen.


Transfer Audio to Another Device

When your phone is connected to a device, such as a headset, speaker, or Vision product, you can send the audio playing, such as audio and video playback, video calls, and game sound

effects, on your phone to the listening device, and continue to manage playback in **Media Controller**.

-  To connect to your phone, the corresponding apps will need to be installed on certain devices. If your phone is not pre-installed with some relevant apps, download it from **AppGallery**.


Transfer audio to another device

- 1 Connect your phone to a listening device, such as a headset, speaker, or device added to **AI Life**. For details, see the product manual.
- 2 Touch  in the upper right corner of **Media Controller** in **Control Panel** and select a listening device from the list to transfer the audio playing on your phone to the listening device.


If there is no device list in **Media Controller**, touch  to display the list.

Transfer Calls to Another Device

When your phone is connected to a listening device (like a headset or speaker), you can transfer an ongoing call on your phone to the listening device.

- 1 Connect your phone to a wired headset, or connect your phone to a wireless headset or speaker via Bluetooth.
- 2 During a call, swipe down from the upper right edge of your phone to display **Control Panel**, touch  in the upper right corner of **Media Controller**, and select the wired or Bluetooth listening device from the list to transfer the call there.

If there is no device list in **Media Controller**, touch  to display the list.

-  This feature will be supported by more apps in the near future.


Switch Seamlessly Between Screens, with Super Device

Use **Super Device** for multi-device collaboration with just a tap, to turn all of your smart devices into one cohesive unit. For example, when you go home, you can continue MeeTime calls on your HUAWEI Vision, by picking up right from where you had left off on your phone.



Set Super Device Before Getting Started



Before using **Super Device**, enable Bluetooth and Wi-Fi on your phone, and log in to your HUAWEI ID.


Make sure that the screens of your other devices remain on, and apply the following settings on these devices:

-  Device types supported by **Super Device** may vary by product.
- **Vision:** Enable Bluetooth and Wi-Fi.
- **Bluetooth device:** Some Bluetooth devices (such as Bluetooth headsets) can be linked with your phone via **Super Device** after establishing a Bluetooth connection.

Create Your Super Device, by Connecting to Nearby Devices

 If you can't find **Super Device** in Control Panel, touch  in the upper right corner, and touch **Show Super Device**.

- 1 Log in to the same HUAWEI ID on the device to be connected as your phone.
- 2 Swipe down from the upper right corner of your phone to display **Control Panel**, and touch  or  in **Super Device** to search for nearby devices to connect to.
- 3 In **Super Device** of **Control Panel** on your phone, touch the icon of the device to be connected to initiate the default collaboration.

You can also touch  and then the icon of the device to be connected and select your desired collaboration scenario from the menu as needed.

Transfer MeeTime Calls and Streaming Audio to Connected Devices




Use **Super Device** to transfer a song or MeeTime call from your phone to another device, and pick up from exactly where you had left off, without missing a beat.


 **MeeTime**: This feature is only available in some countries and regions.

For instance, you can:

- Transfer **MeeTime calls** to Visions.
- Transfer **music** to Bluetooth earphones and Visions.

 Device types and transfers supported by **Super Device** may vary by product.

- 1 Swipe down from the upper right corner of the phone to display **Control Panel**, and touch  in **Super Device** to search for nearby available devices, or go to  >  to link a new device.
- 2 Open an app running a task you wish to transfer (such as HUAWEI Music) on your phone.
- 3 In **Super Device** of **Control Panel** on your phone, touch the icon of the device to which you wish to transfer the task to, and follow the onscreen instructions to complete the transfer.

You can also touch , drag the target device to your current device, and follow the onscreen instructions to complete the transfer.

Screenshots & Screen Recording

 
Take a Screenshot

Take a Full Screenshot with a Knuckle Tap

- 1 Before using knuckle gestures, use either of the following methods to enable this feature (depending on your device model):

- Go to **Settings > Accessibility features > Shortcuts & gestures > Take screenshot**, and enable **Knuckle screenshots**.
- Go to **Settings > Accessibility features > Motion control > Take screenshot**, and enable **Smart screenshot**.

2 Tap twice in quick succession with one knuckle to take a screenshot of the entire screen.

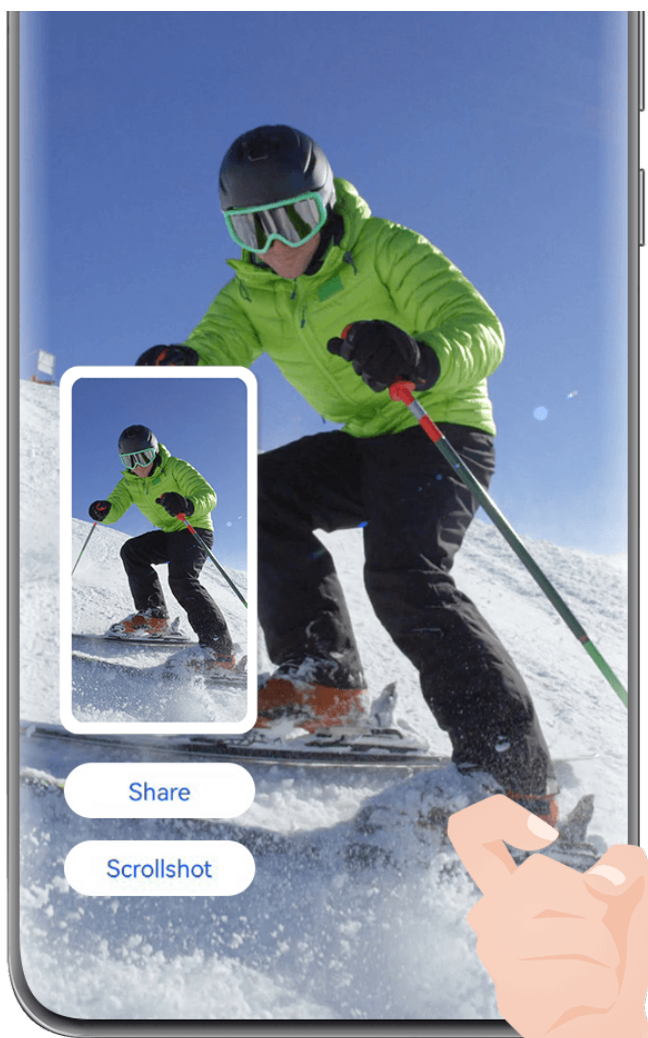


i The figures are for reference only.

Take a Screenshot with a Key Shortcut

Press and hold down on the Power and Volume down buttons at the same time to take a screenshot.

 
Take a Screenshot with a Shortcut Switch

Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switches panel (depending on your device model), and touch **Screenshot** to take a screenshot.



Capture the Screen in Split-Screen or Floating Window Mode

When your phone is in split-screen mode or floating window mode, you can capture individual windows or the entire screen, depending on your need.

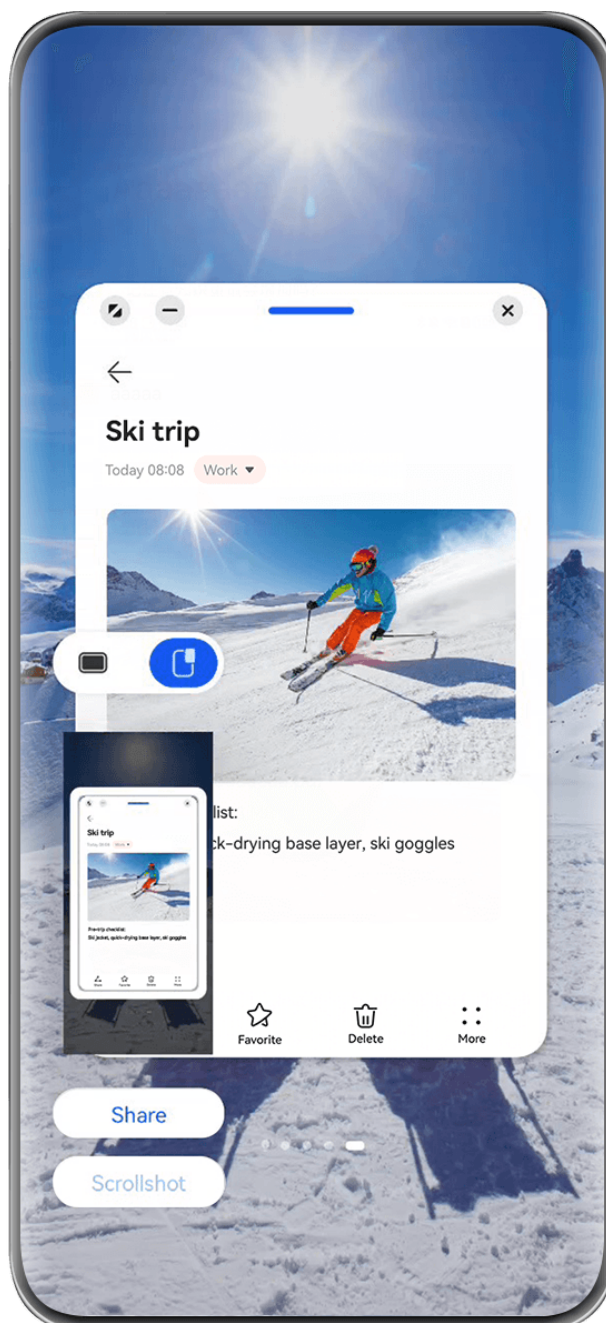Once a screenshot is taken, a thumbnail will display in the lower left corner of the screen. Touch the icon on the top of the thumbnail to select the capture area.



Here we'll use a screenshot in the floating window as an example:

- : Captures the contents of all current windows.
- : Captures only the contents in the floating window.

Share and Edit a Screenshot or Switch to Scrollshot

Once you take a screenshot, a thumbnail will appear in the lower left corner of the screen.

From there, feel free to:

- Touch **Share** at the bottom of the thumbnail to select a method for sharing the screenshot with others.
- Touch **Scrollshot** at the bottom of the thumbnail to continue taking a scrolling screenshot.
- Tap on the thumbnail to edit, delete, or do more with the screenshot.

Screenshots are saved to **Gallery** by default.

Swipe Down with Three Fingers to Take a Screenshot

 
1 Go to **Settings > Accessibility features > Shortcuts & gestures > Take screenshot** or **Settings > Accessibility features > Motion control > Three-finger screenshot** (depending on your device model) and make sure that **Three-finger screenshot** is enabled.

2 Swipe down from the middle of the screen with three fingers to take the screenshot.


Take a Partial Screenshot

Use **Partial screenshot** to take a screenshot of a part of the screen. You can choose your preferred screenshot shape (such as a rectangle, oval, or heart).

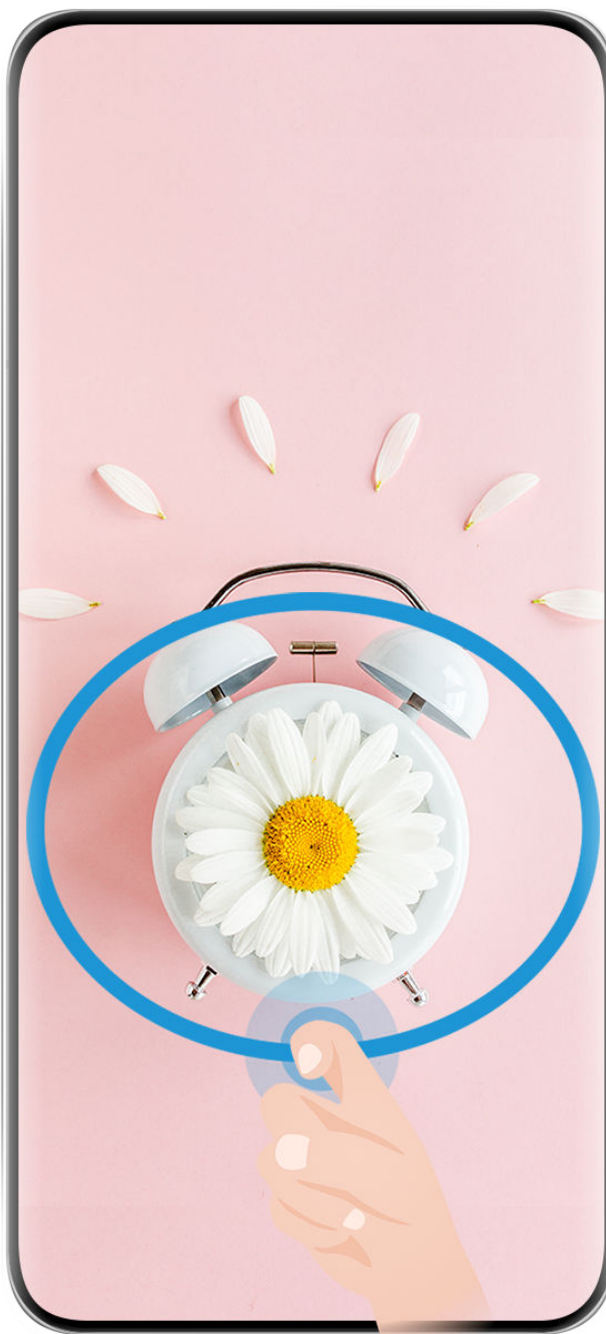

Take a Partial Screenshot with Knuckle Gestures



i The figures are for reference only.

- 1** Knock on the screen with a single knuckle and hold to draw an enclosed shape around the part of the screen that you wish to capture. Make sure that your knuckle does not leave the screen.
- 2** The screen will display the motion of your knuckle. From there, feel free to:
 - Drag the frame to the desired position, or resize it.
 - Touch any of the shape options on the toolbar to change the shape of the captured area.
- 3** Touch  to save the screenshot.

Use a Shortcut to Take a Partial Screenshot

- 1 Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switch panel (depending on your device model), touch the triangle icon next to **Screenshot**, and then touch **Partial screenshot** in the pop-up.
- 2 Follow the onscreen instructions to draw an enclosed shape with your finger around the part of the screen that you wish to capture.
- 3 The screen will display the motion of your finger. From there, feel free to:
 - Drag the frame to the desired position, or resize it.
 - Touch any of the shape options on the toolbar to change the shape of the captured area.
- 4 Touch  to save the screenshot.

Take a Scrolling Screenshot

Use **Scrollshot** to capture a memorable chat, article, or essential work document that can't display in full on the screen, and share with others.


Use a Knuckle to Take a Scrolling Screenshot



i The figures are for reference only.

- 1** Tap a single knuckle against the screen and hold to draw an "S". Your device will automatically scroll to the bottom of the page to capture all of the content in a single screenshot.
- 2** You can touch the screen at any time to stop the scrolling.

Use a Shortcut to Take a Scrolling Screenshot

- 1** Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switch panel (depending on your device model), touch the triangle icon next to **Screenshot**, and then touch **Scrollshot** in the pop-up. Your device will automatically scroll to the bottom of the screen to capture all of the content within a single screenshot.
- 2** You can touch the screen at any time to stop the scrolling.


Take a Scrolling Screenshot

Once you take a screenshot, a thumbnail will appear in the lower left corner of the screen. You can continue to take a scrolling screenshot.

- 1 Touch **Scrollshot** at the bottom of the thumbnail to automatically scroll down on the screen.
- 2 You can touch the screen at any time to stop the scrolling.

Record the Screen

Capture action onscreen to create sharable videos, to show off your gaming skills, compose tutorials, and do so much more.

-  If you wish to enable Live view for screen recording, go to **Settings > Notifications & status bar > Status bar > Live view** and toggle on the switch next to **Screen Recorder**.

Use a Key Combination to Start Screen Recording

Press and hold the Power and Volume up buttons simultaneously to start screen recording. To stop recording, press and hold both buttons again.

Use a Shortcut to Start Screen Recording

- 1 Swipe down from the upper right edge of the screen to display **Control Panel**, touch to expand the shortcut switches panel (depending on your device model), and touch **Screen Recorder** to start screen recording.
- 2 To stop the recording, touch the timer at the top of the screen.
- 3 The recording will be saved in **Gallery**.

Use Two Knuckles to Start Screen Recording



- 1 Before using knuckle gestures, use either of the following methods to enable this feature (depending on your device model):
 - Go to **Settings > Accessibility features > Shortcuts & gestures > Record screen**, and enable **Record screen**.
 - Go to **Settings > Accessibility features > Motion control > Take screenshot**, and enable **Smart screenshot**.
- 2 Knock the screen twice in quick succession with two knuckles to start a screen recording. To stop recording, knock twice as before.



i The figures are for reference only.

Record Your Voice During Screen Recording



Touch the microphone icon to enable or disable the microphone while recording the screen.



- When the microphone is enabled (i.e. it is displayed as ) , you can record your voice while recording the screen.
- When the microphone is disabled (i.e. it is displayed as ) you'll only be able to record system sounds, such as audio and video playback.

Show or Hide Touches During Screen Recordings

While recording your screen, you can choose whether you would like to show touches.

• •
If Live view is not enabled for screen recording: Touch • • next to the red timer at the top of the screen, and enable or disable **Show touches**, during the recording.

 
If Live view is enabled for screen recording: Touch the Live view at the top of the screen, and then touch  or  to show or hide touches, during the recording.

-  indicates that the feature is enabled.
-  indicates that the feature is disabled.

Multi-Window

Multi-Window Dock



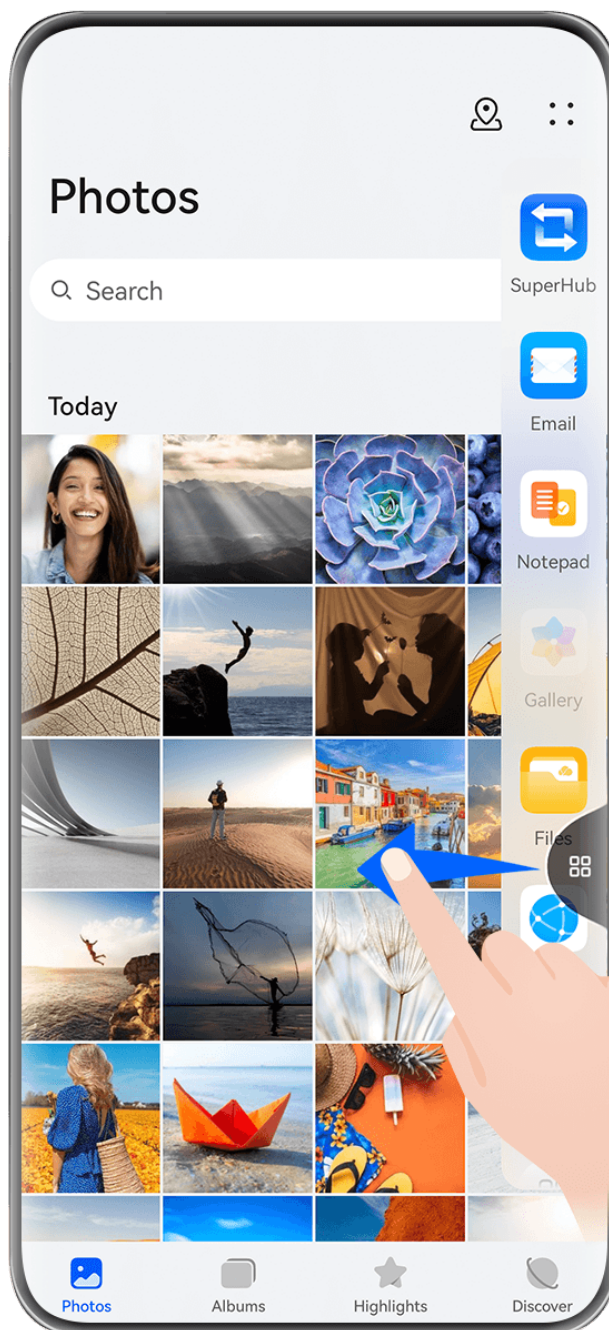




Multi-Window dock makes it quick and easy to open other apps when an app is running, add or remove apps, rearrange the order of apps, or create a custom dock that meets your every need.








i The figures are for reference only.

Before you get started, go to **Settings > Accessibility features > Multi-Window**, and make sure that **Multi-Window dock** is enabled.

 
Swipe inward from the left or right edge of your phone and hold to bring up the Multi-Window dock. From there, feel free to:


- **Check whether an app supports Multi-Window:** Touch  and view **More apps**.
- **Add apps:** Go to  >  to enter the editing screen. Then touch the apps you wish to add to the Multi-Window dock, and touch .
- **Move apps:** Go to  >  to enter the editing screen, touch and hold down on an app icon in the Multi-Window dock, drag it to your desired position in the dock, and touch .

- **Remove apps:** Go to  >  to enter the editing screen, touch  in the upper right corner of an app icon in the Multi-Window dock, and touch .
 The recommended apps in the Multi-Window dock can't be removed.

Use the Floating Window


Open a floating window while gaming, and you can chat with a friend without missing a second of the action.

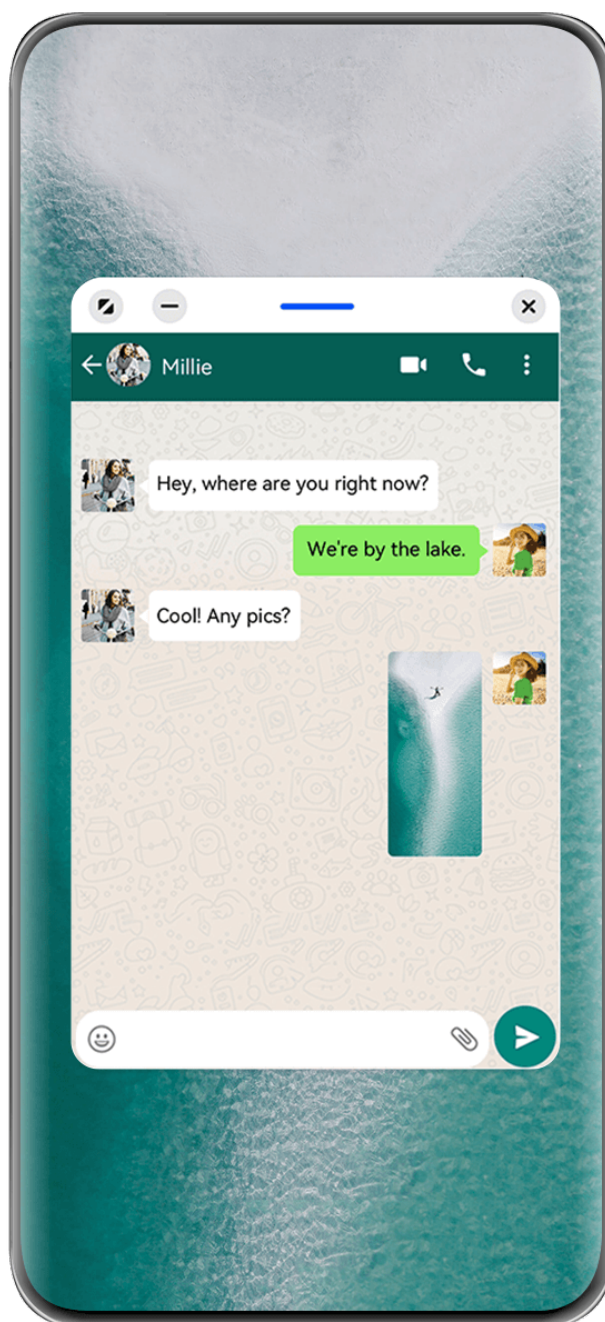

-  The figures are for reference only.

Open a Floating Window

You can open a floating window in any of the following ways (depending on your device model):

- Swipe up from the bottom of the screen to enter the Recent tasks screen, and touch the  icon in the top right corner of an app preview to open the app as a floating window.
 - Swipe inward from the left or right edge of your phone and hold to bring up the Multi-Window dock. Then touch any app in the dock to open it as a floating window.
- Before you get started, go to **Settings** > **Accessibility features** > **Multi-Window**, and make sure that **Multi-Window dock** is enabled.

Common Operations in Floating Window Mode


Once a floating window is opened, feel free to:

Relocate the floating window

Drag the bar at the top of the floating window to move the window to a different location.


Resize the floating window

Drag the bottom edge, two sides, or bottom corners of the floating window to resize it.

-  If you reduce the floating window to the smallest possible size, and then release the window, it will automatically shrink into a small floating window that remains fixed to the upper right corner of the screen.


Minimize the floating window

You can use either of the following methods:

- Touch  at the top of the floating window.
- Touch and hold down on the bar at the top of the floating window, and quickly drag it to the left or right.
- Touch and hold down on the bar at the top of the floating window, and drag it to the left or right screen edge.


Return to full-screen display


You can use either of the following methods:

- Touch  at the top of the floating window.
- Touch and hold down on the bar at the top of the floating window, and quickly drag it upwards.
- Touch and hold down on the bar at the top of the floating window, and drag it up to the status bar.

Close the floating window

You can use either of the following methods:

- Touch  at the top of the floating window.


- Touch and hold down on the bar at the top of the floating window, and quickly drag it downwards.
- Touch and hold down on the bar at the top of the floating window, and drag it down to  at the bottom of the screen.

Switch to split-screen mode

If you are not on the home screen, touch and hold down on the bar at the top of the floating window, and drag it to the left or right edge (in landscape mode) or the top or bottom edge (in portrait mode) of the screen.

 
Find and Switch Between Floating Windows for Apps

You can quickly find and switch between floating windows for apps using the floating window management function.

- 1 Make sure that you have opened floating windows for multiple apps and minimized them into the floating ball.
- 2 Touch the floating ball to display all floating window previews:
 - **Browse through the floating window previews:** Swipe up or down to find the floating window preview of the app you are looking for.
 - **Display the floating window for an app:** Touch the floating window preview of the app to display it in a floating window.
 - **Close the floating window for an app:** Touch  on the floating window preview to close it.

Split the Screen, to Multi-Task Away

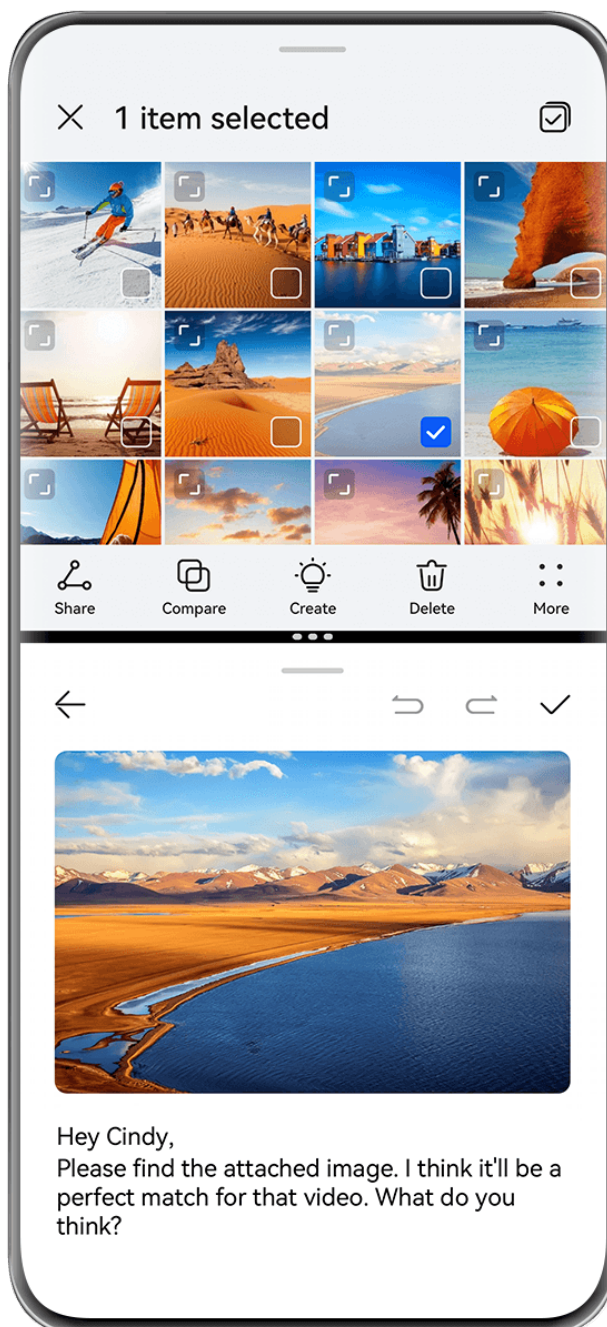

Open apps in split-screen mode, for seamless multi-tasking at all times.



- The figures are for reference only.
- Split-screen mode is only supported in certain apps.

Split the Screen






You can enable split-screen mode in any of the following ways (depending on your device model):

- When an app is open and displayed in full-screen mode, swipe up from the bottom to  or  in the top left corner of the screen. Then open another app that supports split-screen mode.
- When an app is opened and displayed in full-screen mode, swipe inward from the left or right edge of your phone and hold, to bring up the Multi-Window dock. Hold down on an app in the dock, drag it on to the screen, and release.

Before you get started, go to **Settings** > **Accessibility features** > **Multi-Window**, and make sure that **Multi-Window dock** is enabled.



Common Operations in Split-Screen Mode

When in split-screen mode, feel free to:

- **Switch split screens:** Touch and hold down on  at the top of a split screen until this split screen shrinks, then drag this split screen to the other split screen and release, to switch split screens.
- **Adjust the split screen ratio:** Drag  between the two split screens to adjust the relative size of each split screen.
- **Switch a split screen to a floating window:** Touch and hold down on  near the top of a split screen, and drag it to the left or right (in portrait mode) or downwards (in landscape mode).
- **Exit split-screen mode:** Drag  or  between the two split screens, until the other split screen disappears.

Save Split-Screen Combinations

In Split-screen mode, you can save common split-screen combinations to the home screen, and touch to apply them.

Touch  or  between the two split screens, and touch **Save combo** to save the split-screen combination to your home screen.

Touch the split-screen combination icon on the home screen to apply it.

Drag and Drop Between Apps with Multi-Window

Use the Multi-Window feature to easily drag and drop images, text, and documents between apps.

- **Drag and drop an image:** When taking notes with **Notepad**, open **Files**, select the photo you want to add, and drag it into the **Notepad** editor.
- **Drag and drop text:** When sending an SMS message, open **Notepad**, touch and hold the text you want to send, and drag it into the message text input box.
- **Drag and drop a document:** When writing an email, open **Files**, select the document you want to attach, and drag it into the email editor.

 Not all apps fully support drag-and-drop with Multi-Window.

Multi-Window View for a Single App

You can create two task windows for the same app (such as **Email** and **Notepad**), and drag images, text, or documents between the windows.

 This feature is unavailable in some apps.

The following uses **Email** as an example.

To enable multi-window view for a single app:

- 1 On the home screen, open **Email**.
- 2 Swipe inward from the left or right edge of your phone and hold to bring up the Multi-Window dock.
- 3 Touch and hold down on the Email app icon in the dock, and drag it on to the screen and release, to open two windows within the app.

To drag images, text, or documents between a single app's split-screen windows:

- **Drag an image:** Select an image from one of the Email app's split-screen windows, and drag it to the other window.
- **Drag text:** Touch and hold down on the text and select the desired portion, from one of the Email app's split-screen windows, then touch and hold down on the text once again, and drag it to the other window.
- **Drag a document:** Select a document from one of the Email app's split-screen windows, and drag it to the other window.


Shrink an App Window or Split the Screen


In full-screen mode, you can shrink the app screen to turn it into a floating window, or create a split screen with another app as well, at any time.

 This feature is unavailable in some apps.

Before using this feature, go to **Settings > System & updates > System navigation**, and select **Gestures**.

Shrink the app window


When an app is displayed in full-screen mode, swipe up from the bottom to  in the top right corner of the screen, to display the app as a small floating window. The small floating window will automatically display in Landscape mode, when you shrink a video or game app in landscape mode.

 Small floating windows in Landscape mode are only supported in certain apps.





i The figures are for reference only.

You can try the following:

- **To minimize a floating window**, hold down on the window, and drag it to the left or right edge of the screen, or quickly drag it to the left or right.
- **To close a floating window**, hold down on the window, drag it to  at the bottom of the screen, or quickly drag it downwards.
- **To open in full-screen mode**, hold down on the window, drag it to the top of the screen, or quickly drag it upwards.
- **To enlarge the small floating window**, tap on it.

i If you drag the bottom edge, two sides, or bottom corners of the standard-sized floating window to reduce the window to the smallest possible size, and then release the window, it will automatically shrink into a small floating window that remains fixed to the upper right corner of the screen.


Split the screen

- 1 When an app is displayed in full-screen mode, swipe up from the bottom to  or  in the top left corner of the screen.
- 2 Then open another split-screen-capable app to display both apps in split-screen mode.


Charging

Charge in Turbo charging Mode

Enable **Turbo charging** to give your phone a quick boost when you need it most.

- 1 Go to **Optimizer** > , and make sure that **Smart tune-up** is enabled.
- 2 Remember to charge your phone using the standard HUAWEI SuperCharge charger and data cable that came with it.
- 3 You can enable **Turbo charging** in any of the following ways:
 - Before the charging animation effects disappear, when **Touch & hold the center of the screen to Turbo charge** displays, touch and hold down on the center of the screen, until your phone vibrates and **Turbo charging** displays.
 - Unlock the screen, swipe down from the upper left corner of the screen to display Notification Panel, and touch **Turbo charge** in the **Turbo charge** message box.

If you wish to disable **Turbo charging** mode, touch **Stop Turbo charging** in the **Turbo charge** message box on Notification Panel, or remove and re-insert the data cable. If you select **Ignore**, the **Turbo charge** message box will appear after your phone has restarted.

-  When your phone is charging in **Turbo charging** mode, its temperature may increase slightly. This is normal and does not indicate any issue with your device.


Smart Features

AI Voice

AI Voice


AI Voice allows you to communicate verbally with your phone.

To operate hands-free on your phone, wake up **AI Voice** and give a voice command.

-  This feature is only available in some countries and regions.
 - Please make sure your device has been updated to the latest system version.

Countries and Regions that Support AI Voice


AI Voice is only supported in certain countries and regions. You can set your location to one of these countries and regions on your phone to use **AI Voice**.

-  **AI Voice** can be used in countries/regions such as the UK, France, Spain, Chile, Mexico, Colombia, Italy, Germany, Saudi Arabia, UAE, Kuwait, Jordan, Iraq, Egypt, Türkiye, Thailand, the Philippines, Czech Republic, Romania, Serbia, Ukraine, Pakistan, Singapore, Poland, and Malaysia. You need to select a language supported by **AI Voice** during use.

- Go to **Settings > System & updates > Language & input > Language & region** and touch **Current region** to select a country/region from the above list.
- Go to **Settings > HUAWEI Assistant > AI Voice**, touch **Conversation language**, select a language, and follow the onscreen instructions to set it up.

Wake up AI Voice


You can press and hold the Power button for 1 second to wake up **AI Voice**:

- Go to **Settings > HUAWEI Assistant > AI Voice > Wake with Power button**, and enable **Wake with Power button**.
- Press and hold the Power button for 1 second to wake up **AI Voice**.
 -  You cannot wake up **AI Voice** with the wakeup phrase when your phone is in a call.
 - This feature is only available in some countries and regions.

Communicate with AI Voice

AI Voice can be in one of the following three modes: Idle, Listening, and Thinking. You can talk to **AI Voice** when it is in the Listening mode.

- Idle mode: **AI Voice** doesn't pick up any sound in this mode.
- Listening mode: You can talk to **AI Voice** as it can listen to you in this mode.
- Thinking mode: **AI Voice** can start to execute your voice commands.

-  This feature is only available in some countries and regions.

AI Voice Skills


AI Voice allows you to navigate on your phone with simple voice commands. You can use AI Voice to:

- Make phone calls
- Send SMS messages
- Launch apps
- Add calendar events and reminders
- Check the weather and more
- Enable AI Lens, and identify content onscreen

To use the voice assistant, wake up **AI Voice** and say your command, such as "Call Zichen", "Set an alarm for 8 AM", and "Open Camera".

View AI Voice Skills

You can view the skills incorporated into the **AI Voice** feature in either of the following ways: Wake up **AI Voice** and ask: "What can you do?". **AI Voice** will display the Skill center, where its skills are listed.

-  This feature is only available in some countries and regions.
 - Please make sure your device has been updated to the latest system version.


Play Music or Videos with Voice Commands

If you want to listen to music or watch videos, wake up **AI Voice** and give the voice commands directly.

Play Music with Voice Commands


You can request your device to play a song for you with **AI Voice**.

Wake up **AI Voice**, and give voice commands such as "Play a song for me", "Play the song My Dream", or "Skip this song".

-  This feature is only available in some countries and regions.

Play Videos with Voice Commands

Wake up **AI Voice** and give voice commands such as "Play video", "Play Friends in HUAWEI Video", "Show me a funny video", or "Play a Coldplay video".

-  This feature is only available in some countries and regions.

Speech Translation

AI Voice allows you to translate your voice or text input so you can communicate with foreign friends easily.

- This feature is only available in some countries and regions.
 - Please make sure your device has been updated to the latest system version.


Speech Translation

You can use **AI Voice** to translate your voice or text input into the target language you have set.

- 1 Wake up **AI Voice** and give the voice command "Translate".
- 2 Say or type in what you want to be translated.
- 3 **AI Voice** will display the translated result and broadcast it for you.

Communicate Easily with Face-to-Face Translation

Face-to-face translation allows you to overcome language barriers when you are traveling abroad or in an international conference.

- 1 Wake up **AI Voice**, and give the voice command "Face-to-face translation" to enter the translation screen.
- 2 Touch , so the text on each of the two sections can be read from each side of the device.
- 3 Press the button on your side of the section, say what you want to be translated, and release the button for **AI Voice** to display the translated result in real time and broadcast it.

Enable AI Lens with AI Voice

You can use **AI Voice** to wake up **AI Lens**.

- This feature is only available in some countries and regions.
 - Please make sure your device has been updated to the latest system version.

Scan and Shop with AI Voice

- 1 Wake up **AI Voice**, and give voice commands such as "I want to buy this" or "Find similar items".
- 2 Position the object you wish to buy within the viewfinder, and touch the shutter button.
- 3 After the item has been identified by AI Lens, links to purchase it on different shopping platforms will be displayed.

AI Touch

Use AI Touch

When you see any content that you are interested in on your phone, touch and hold the screen with two fingers to bring up **AI Touch** to learn more.

Go to **Settings > HUAWEI Assistant > AI Touch**, and enable **AI Touch**.

Shop with AI Touch

When you see an item you wish to buy on your phone, you can use **AI Touch** to quickly search for the item and compare prices across multiple shopping platforms before making the purchase.

Touch and Hold the Screen with Two Fingers for Visual Shopping

- 1 Go to **Settings > HUAWEI Assistant > AI Touch**, and enable **AI Touch**.
- 2 When you see an item that you wish to buy on your device, touch and hold down on the image of the item with two fingers.
- 3 Adjust the size and position of the identification box to fit around the item you wish to identify.
- 4 After the item has been identified, links to purchase it on different shopping platforms will be displayed.

Super Device


Switch Seamlessly Between Screens, with Super Device

Use **Super Device** for multi-device collaboration with just a tap, to turn all of your smart devices into one cohesive unit. For example, when you go home, you can continue MeeTime calls on your HUAWEI Vision, by picking up right from where you had left off on your phone.



Set Super Device Before Getting Started



Before using **Super Device**, enable Bluetooth and Wi-Fi on your phone, and log in to your HUAWEI ID.

Make sure that the screens of your other devices remain on, and apply the following settings on these devices:


-  Device types supported by **Super Device** may vary by product.
- **Vision:** Enable Bluetooth and Wi-Fi.
- **Bluetooth device:** Some Bluetooth devices (such as Bluetooth headsets) can be linked with your phone via **Super Device** after establishing a Bluetooth connection.

Create Your Super Device, by Connecting to Nearby Devices

-  If you can't find **Super Device** in Control Panel, touch  in the upper right corner, and touch **Show Super Device**.


- 1 Log in to the same HUAWEI ID on the device to be connected as your phone.
- 2 Swipe down from the upper right corner of your phone to display **Control Panel**, and touch  or  in **Super Device** to search for nearby devices to connect to.

3 In **Super Device** of **Control Panel** on your phone, touch the icon of the device to be connected to initiate the default collaboration.

You can also touch  and then the icon of the device to be connected and select your desired collaboration scenario from the menu as needed.

Transfer MeeTime Calls and Streaming Audio to Connected Devices




Use **Super Device** to transfer a song or MeeTime call from your phone to another device, and pick up from exactly where you had left off, without missing a beat.


 **MeeTime:** This feature is only available in some countries and regions.

For instance, you can:

- Transfer **MeeTime calls** to Visions.
- Transfer **music** to Bluetooth earphones and Visions.

 Device types and transfers supported by **Super Device** may vary by product.


- 1** Swipe down from the upper right corner of the phone to display **Control Panel**, and touch  in **Super Device** to search for nearby available devices, or go to  >  to link a new device.
- 2** Open an app running a task you wish to transfer (such as HUAWEI Music) on your phone.
- 3** In **Super Device** of **Control Panel** on your phone, touch the icon of the device to which you wish to transfer the task to, and follow the onscreen instructions to complete the transfer.

You can also touch , drag the target device to your current device, and follow the onscreen instructions to complete the transfer.

Clip Text or Images Across Devices





Copy-and-paste images, text, and other materials between your phone and tablet, using the shared clipboard, to craft stunning posters that put the world on notice!

Enable Cross-device Clipboard


- 1** Log in to the same **HUAWEI ID** on your phone and tablet, and connect both devices to the same Wi-Fi network.
- 2** Go to **Settings > Super Device > Cross-Device Clipboard**, and make sure that **Cross-Device Clipboard** is enabled.
- 3** Copy text or a picture from one device to another.
 -  This feature is supported in HUAWEI Notepad, Email, Gallery, Browser, and select third-party apps.

Copy and Paste Text or Pictures Across Devices

Copy and paste text

- 1 Touch and hold the text to be selected within an app (such as Notepad, Email, or Browser) on a device until  is displayed.
 -  What happens after you touch and hold the text may vary between apps. Perform operations as prompted.
- 2 Drag  and  to select just the words you want, or touch **Select all**.
- 3 Touch **Copy** or **Cut** as required.
- 4 On another device, touch and hold where you want to insert the text within an app (such as Notepad or Email) and touch **Paste**.

Copy and paste pictures

- 1 Touch and hold the picture you want to copy within an app (such as Notepad or Email) on a device and touch **Copy**.
 - You can also select a picture in your Gallery and go to  > **Copy to clipboard** to copy it.
- 2 On another device, touch and hold where you want to insert the picture within an app (such as Notepad or Email) and touch **Paste**.

Easy Projection


Project Your Phone Screen Wirelessly


Project your phone wirelessly to stream movies and work on a large-screen device (such as a Vision).

The projection method may vary depending on the display device. The following uses projecting to a HUAWEI Vision as an example.



i The figures are for reference only.


- 1** On the Vision home screen, go to **Settings > Connections**, and make sure that **Projection** is enabled.
- 2** Swipe down from the upper right corner of the phone screen to display **Control Panel**, touch  to expand the shortcut switches panel (depending on your device model), enable **Wireless Projection**, and follow the onscreen instructions. Your phone will then start searching for available Vision products.
 - i** You can also go to **Settings > More connections > Easy Projection** or **Settings > More connections > Wireless Projection**, and enable **Wireless projection** (depending on your device model).
- 3** Touch the device that you wish to project your phone to from the detected Vision products.


To exit wireless projection, you can swipe down from the upper left edge of the screen to display the notification panel, and touch  > **Disconnect** in the wireless projection notification.


Tap to Project Your Phone to a Vision

With just one tap, you can project videos or games from your phone to a Vision to enjoy them on a larger display.

- 1** On the home page of the Vision, go to **Settings > Connections > Multi-Device Collaboration** and enable **Multi-Device Collaboration**, while keeping the screen on.

- 2 Swipe down from the upper right corner of your phone to display **Control Panel**, touch  to expand the shortcut switch panel (depending on your device model), and enable **NFC, Wi-Fi, and Bluetooth**.
- 3 Tap the NFC area (around the rear camera) on the phone against the non-key area near the bottom of the Vision remote control, hold for 2 to 3 seconds, and follow the instructions on your phone to select the device to which you wish to project.
- 4 When connecting for the first time, confirm the connection on your phone and Vision as prompted.





To disconnect the two devices, swipe down from the upper left corner of your phone to display the notification panel, and touch  > **DISCONNECT** in the wireless projection notification.

-  • Screen projection with a tap won't work if your phone is locked or the screen is off.
- This feature is only available in some countries and regions.

Huawei Share

Pin Frequently-Used Sharing Methods to the Top

 
Pin your frequently-used sharing methods (such as Bluetooth or email) to the top of the system sharing box, to share files and content with friends, colleagues, and loved ones with greater ease.

- 1 Touch and hold down on the file to be shared, and touch .
- 2 In the app sharing area, swipe left to the last screen, and go to  or **All** >  (depending on your device model) to enter the editing screen.
- 3 Tap the sharing mode to pin to the top. Some apps include multiple sharing methods. You can also add a sharing method as needed.
- 4 In the pinning area, hold and drag a pinned sharing mode to sort the sharing modes.
Touch to unpin unwanted sharing modes. Then touch  or **Done** (depending on your device model).

Camera and Gallery

Take Photos

Take Photos

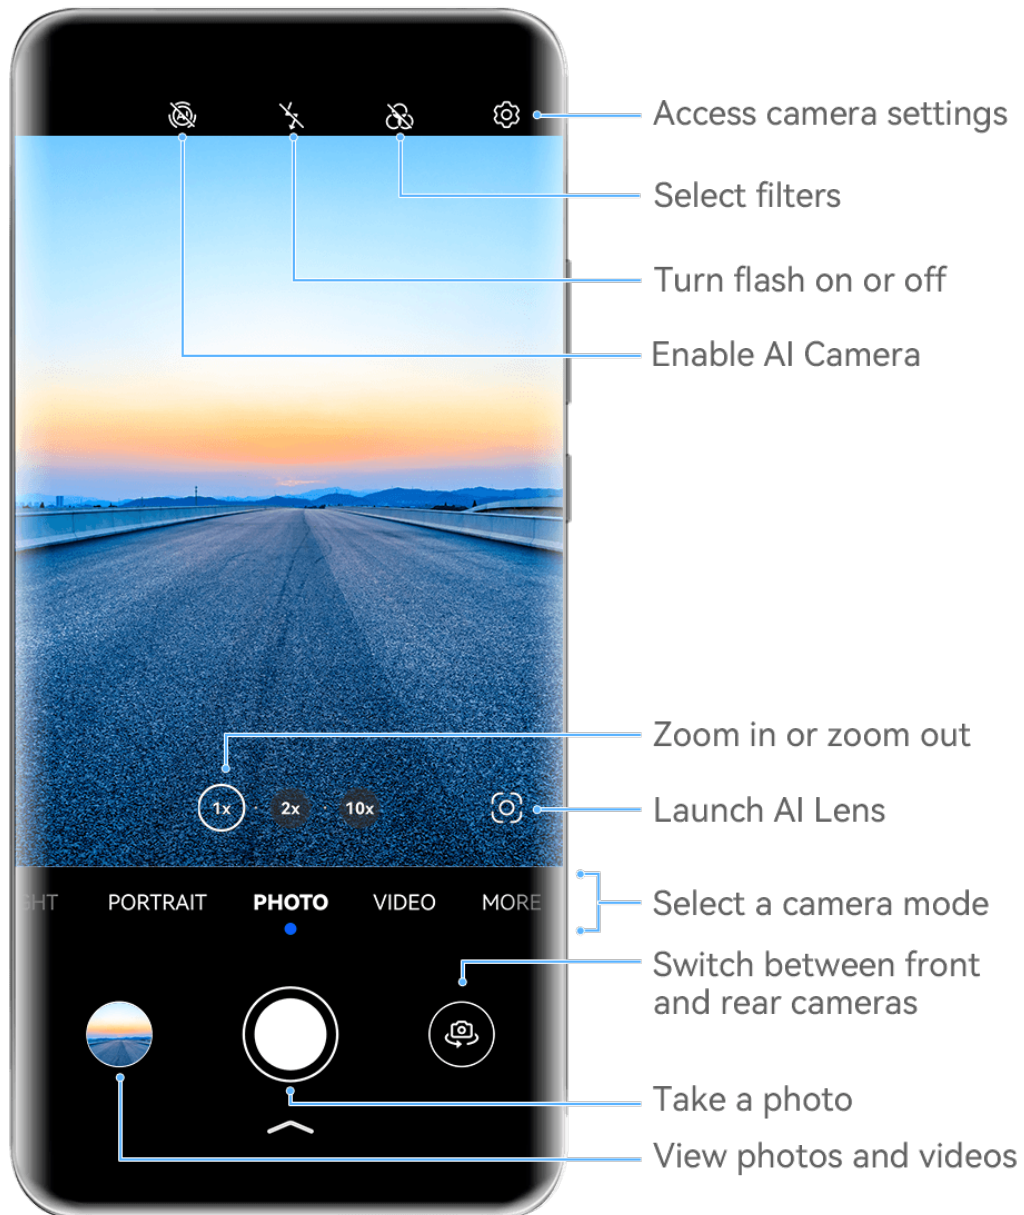







i The figures are for reference only.


1 Open **Camera**.

2 You can then:

- **Focus:** Touch the location you want to focus on.

To adjust focus and metering separately, touch and hold the viewfinder and drag the respective frame or ring to the desired location.

- Adjust brightness: Touch the viewfinder. When the  symbol appears next to the focus frame, drag it up or down.
- Zoom in or out: On the viewfinder, pinch in or out, or drag the zoom slider.
- Select a camera mode: Swipe up, down, left, or right across the camera mode options.
- Turn the flash on or off: Touch  and select  (Auto),  (On),  (Off), or  (Always on).

If you select  (Auto) and the camera detects that you are in a dimly lit environment, a flash icon will appear in the viewfinder and the flash will be automatically turned on when you take a photo.

 These features may not be available in some camera modes.

3 Touch the shutter button to take a photo.

Adjust the Camera Zoom Level

While shooting, adjust the zoom level of the camera to zoom in or out on a scene in front of you.

1 Open **Camera**, and touch your preferred shooting mode.

2 Adjust the zoom level in the viewfinder in any of the following ways:



- Pinch in or out on the viewfinder to adjust the zoom level.
- Touch the zoom level shortcuts above the zoom ring to switch between zoom levels.
- Touch and hold down on the zoom ring to expand it, and swipe left and right (in Portrait mode) or up and down (in Landscape mode) until your desired zoom level on the zoom ring matches the dot in the center. Once you release your finger, the zoom ring and zoom level shortcuts will both display in this area.

For example, if you wish to take photos from a distance and adjust the zoom level from 1x to 5x, touch and hold down on the zoom ring, and swipe left (in Portrait mode) or down (in Landscape mode) until the 5x zoom level on the zoom ring matches the dot in the center. You can also touch to instantly switch to your desired zoom level.




- i . The figures are for reference only.
 - Zoom level adjustment is only supported in certain shooting modes. Available zoom levels may vary depending on the product model.

Use Gestures to Take Photos

- 1** Open **Camera** and touch  to switch to the front camera.
- 2** Touch  and enable **Gesture control**.
- 3** Return to the viewfinder and hold your palm about 20 cm (8 in.) in front of the screen.
- 4** When the front camera detects your palm, your phone will take a photo after a brief countdown.


Use the Floating Shutter to Take Photos

You can enable the floating shutter to display it in the camera viewfinder, and drag it anywhere you like to take photos quickly.




- 1 Go to **Camera** >  and enable **Floating shutter**.
- 2 The floating shutter will then be displayed in the viewfinder. You can drag it anywhere you like.
- 3 Touch the floating shutter to take a photo.


Take Burst Photos

Use Burst mode to take a sequence of photos in quick succession so you can choose the best one.

- 1 Open **Camera**, select **Photo** mode, and make sure the rear camera is in use.
- 2 Press and hold the shutter button or one of the Volume buttons to take burst photos. When shooting, you'll see a number in the viewfinder, which indicates how many photos you've taken so far.
 -  Burst shooting via Volume button pressing is only supported on certain phone models.
- 3 Release your finger to stop shooting.


Select the Burst Photos You Want to Keep

- 1 Open **Gallery**. Touch a burst photo (which is tagged with ) , then touch .
- 2 Swipe through the burst photos, select the ones you want to keep, then touch  and follow the onscreen instructions.

To delete the whole burst photo, touch and hold to select the photo, then touch .


Take Timed Photos

The camera timer allows you to set a countdown so you can get into position after you have touched the shutter button.

- 1 Go to **Camera** >  > **Timer** and select a countdown.
- 2 Return to the viewfinder and touch the shutter button. Your phone will take a photo when the countdown ends.

Use Audio Control to Take Photos

You can use your voice to take photos without having to touch the shutter button.


- 1 Go to **Camera** >  > **Audio control**, and select an option.
- 2 Go back to the viewfinder, then say your command to take a photo.


Shoot One-Handed Photos or Videos

When shooting a photo or video with just one hand, display the Camera Quick Menu from the bottom of the Camera screen, which gives you access to commonly-used features.



i The figures are for reference only.

Open **Camera**, touch  under the Shutter button, or swipe up near the Shutter button, to display the Camera Quick Menu, and touch the desired option.

i Options in the Camera Quick Menu may vary by shooting mode. If  does not display under a certain shooting mode, it indicates that the Camera Quick Menu is not supported under this mode.

Portrait Mode

Shoot Dazzling Portraits

Portrait mode comes with custom beauty and lighting effects to choose from, so that a touch of the shutter brings out your subject at their best.


1 Open **Camera** and select **Portrait** mode.


2 Frame your subject within the viewfinder.

To take a selfie, touch .

3 From there, feel free to:

- Enable beauty effects: Touch  to adjust the beauty effects.

To disable the beauty effects, drag the setting to its lowest value, or touch .

- Set lighting effects: Touch , and select your desired effect.
- Light compensation: When you switch to the front camera in dim lighting conditions, you can touch the flash icon to enable light compensation.

Touch the flash icon and select  (auto) or  (steady on).

 Not all devices support all of these features.

4 Touch the shutter button to take a photo.

Night Mode

Take Night Shots

Night mode gives your photos sharper details and brighter colors even when shooting in low light or at night.


1 Open **Camera** or go to **Camera** > **More** (depending on your device model), and select **Night** mode.

2 When shooting with the rear camera, some phones allow you to adjust the ISO sensitivity and shutter speed by touching **ISO** or **S** in the viewfinder.

3 Steady your phone and touch the shutter button.

4 Your phone will adjust the exposure time based on the ambient brightness. Keep your phone steady until the countdown finishes.







You can also touch the shutter button to take a photo before the countdown finishes.

 Some phones do not support ending a countdown before it is due to finish.

Take Dazzling Night Selfies

To take a selfie at night, or in a low-light environment, simply use the front camera in Night mode.

In dim environments, you can turn on the flash to illuminate your face.


- 1 Open **Camera** or go to **Camera > More** (depending on your device model), and select **Night** mode.
- 2 Touch  to switch to the front camera. From there, feel free to:
 - Touch the flash icon and select  (auto) or  (steady on) to enable the flash. This allows you to capture a well-lit photo of your face when you are in a poor lighting environment.
 - Touch  to adjust the beauty effects.
 -  If you can't find the  icon in the viewfinder of your phone, it means that Beauty mode is not available.
- 3 Steady your phone and touch the shutter button.

Aperture Mode

Take Photos and Videos, with Aperture Mode

Take Wide Aperture Photos

Wide aperture mode allows you to shoot photos with blurry backgrounds, which brings your subjects into sharper focus.

- 1 Open **Camera**, or go to **Camera > More** (depending on your device model), and select **Aperture** mode.
- 2 Touch the area that you wish to focus in on. For best results, your phone should be within 2 meters of your subject.
- 3 Touch  in the viewfinder, and drag the slider to adjust the virtual aperture. A smaller virtual f-number will create a more blurry background.
- 4 Touch the shutter button to take the picture.


AI Camera

Take Professional-Looking Photos

Master AI is a pre-installed camera feature that helps you take better photos by intelligently identifying objects and scenes (such as food, blue skies, and greenery, as well as text) and optimizing the color and brightness settings accordingly.

 Master AI is displayed as AI photography or AI camera on some devices.

1 Open **Camera** and select **Photo** mode.

2 Touch to turn on .

3 Frame the subject within the viewfinder. Once the camera identifies what you are shooting, it will automatically recommend a mode (such as greenery or text).

4 To disable the recommended mode, touch  next to the mode text or turn off .

Pro Mode

Use Pro Mode to Shoot Like a Pro



Pro mode lets you fine-tune photos and videos and gives you full control over ISO sensitivity, focus mode, and more when taking photos or recording videos.


Shoot to Stun, with Pro Mode



i The figures are for reference only.




- 1** Open **Camera** or go to **Camera > More** (depending on your device model), and select **Pro** mode.
- 2** From there, you can:
 - Adjust the metering mode: Touch **M** and select a metering mode.

| Metering mode | Overview |
|---|--|
|  Matrix | Measures light across the entire frame; ideal for shooting natural landscapes. |
|  Center | Focuses on light near the center of the screen; ideal for shooting portraits. |


| Metering mode | Overview |
|--|--|
|  Spot | Focuses on light from a specific region, such as a subject's eyes. |

- Adjust the ISO sensitivity: Touch **ISO** and drag the slider.
In low-light settings, you'll generally want to increase the ISO sensitivity. In well-lit settings, you'll want to reduce it to avoid image noise.
- Adjust the shutter speed: Touch **S** and drag the slider.
The shutter speed determines the amount of light that is able to enter the camera lens. When shooting stationary scenes or portraits, it's recommended that you use a slower shutter speed. Likewise, when shooting fast-moving scenes or objects, you'll want to increase the shutter speed.
- Adjust EV exposure compensation: Touch **EV** and drag the slider.
It's recommended that you increase the EV value in low-light environments, and decrease it in well-lit environments.
- Adjust the focus: Touch **AF** and select a focus mode.

| Focus Mode | Usage scenarios |
|--------------------------|--|
| AF-S (single) | Stationary subjects |
| AF-C (continuous) | Moving subjects |
| MF (manual) | Touch the subject of interest to focus in on them, such as the subject's face. |

- Adjust the color cast: Touch **WB** and select a mode.
When shooting in bright daylight, select . When shooting in overcast conditions or low-light environments, select .
- Touch  to adjust the color temperature.
- Select the storage format: **Pro** mode allows you to save the photo in different formats.
Touch **JPG** in the viewfinder to select your preferred format.

3 Touch the shutter button to take a photo.







-  These features are only supported on certain device models.
- Changing a specific setting will sometimes cause other settings to change as well. Adjust them according to your actual requirements.

Record Videos


Record Videos


1 Open **Camera**, and select **Video** mode.


2 Adjust the following settings:

- Zoom in or out: Pinch in or out on the viewfinder, or drag the zoom slider.
- Focus: Touch the location that you wish to focus on. Touch and hold down on the viewfinder to lock the exposure and focus.
- Turn the flash on or off: Touch , and select  (steady on) or  (off).
When using the front camera to record a video in low-light conditions, you can set the flash to  (steady on). The camera will help compensate for the lack of light in your environment.
- Adjust the beauty effects: Touch  and drag the slider to adjust the beauty settings.
- Adjust the video resolution and frame rate: Go to  > **Video resolution**, and select your desired resolution. A higher resolution will result in a higher quality video with a larger file size.



You can go to  > **Frame rate** to select your desired frame rate.

- Select a space-saving video format: Touch , and enable **High efficiency format**. Once this feature is enabled, your phone will use a video format that takes up less storage space. However, this may result in other devices being unable to play the video. Please exercise caution when enabling this feature.

 Some of these features may not be supported on your device. Changing a specific setting will sometimes cause other settings to change as well.

3 Touch  to begin recording.


Touch  to take a shot of the current frame.


4 Touch  to pause, and touch  to stop recording.

Switch Between the Front and Rear Cameras While Recording Videos

You can switch between the front and rear cameras while shooting videos without having to pause or stop the recording.

1 Open **Camera** and select **Video** mode.

 Certain sets of recording parameters do not support switching between the front and rear cameras without interrupting your recording. The actual situation shall prevail.

2 Touch  to start recording.

During the recording, you can touch  to switch between the front and rear cameras without having to pause or stop.

3 Touch  to pause recording and  to stop recording.

Dual-View Mode




Record Dual-View Videos



Dual-view mode allows you to capture a scene in front of you, as well as your reaction to it, with a viewfinder split into two parts. One section shows the scene captured by the front camera, and the other shows the scene captured by the rear camera.

 Please make sure your device has been updated to the latest system version.

1 Go to **Camera > More**, and touch **Dual-view**.

2 Frame your subject within the viewfinder of your phone. The viewfinder is split into two parts, showing the images captured from both the front and rear cameras.


- You can adjust the zoom level by pinching in or out on the image captured by the rear camera. Touch the screen twice to swap the positions of the images.
- Touch  to enable picture-in-picture mode. Double-tap or touch  in the small window to exchange the foreground and background positions. You can also drag the small window to any position. Touch  to return to split-screen mode.

3 Touch  to start recording, and touch  to stop recording.

Multi-cam

Switch to Multi-cam Mode

Multi-cam mode makes shooting cinematic video fun and surprisingly easy. After connecting multiple HUAWEI phones and tablets, switch device cameras from the host device, to capture everything you need.

-  Multi-cam is only supported on certain devices and apps.
- It is recommended that you keep this device within 10 m away from the devices connected to it.

 
Getting Started


Before you get started, log in to your **HUAWEI ID** on this device, and enable Bluetooth and Wi-Fi on both this device and the connected device.


If the two devices are not logged in to the same **HUAWEI ID** or the connected device is not logged in to any **HUAWEI ID**, go to **Settings > Super Device > This device > Visible to**, and select **All nearby devices** on both devices.

In the Camera App


Enter Multi-cam mode in the Camera app to switch between the cameras on this device and a connected device to capture every angle.

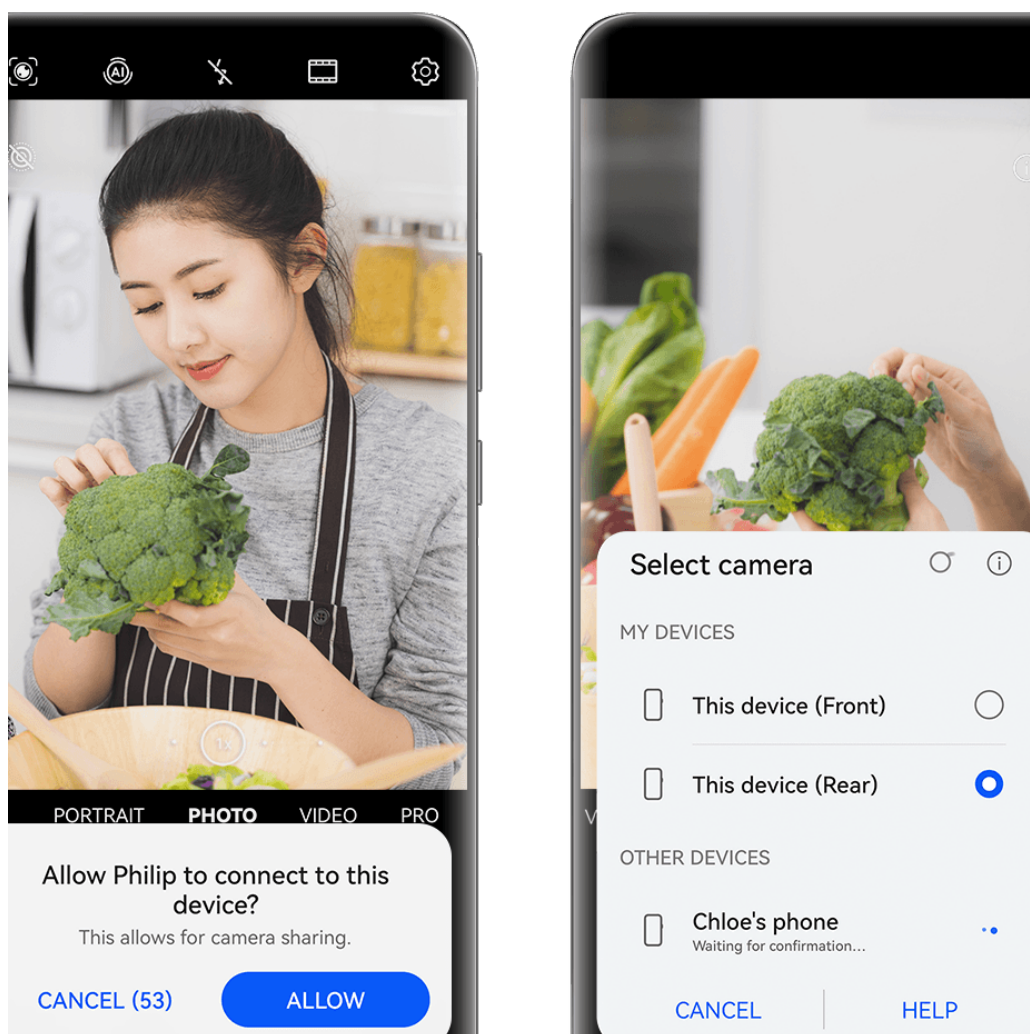

 The figures are for reference only.

- 1 On this device, go to **Camera > More**, and select **Multi-cam**.
- 2 This device will then search for and display all available devices. Touch the device that you wish to connect to, and follow the onscreen instructions to complete the connection.
- 3 Once the connection is successful, the viewfinder of the connected device will be displayed on this device. You can then start shooting or performing the following operations:
 - Touch **Select camera** to switch between the camera on this device and that on the connected device.
 - Touch  to switch to Video mode. This device picks up sound during the recording.


To end the connection, touch  or  on the connected device.

 In **Multi-cam** mode, only certain shooting parameters can be adjusted.

Adjust Camera Settings

Adjust Camera Settings

You can adjust the camera settings to take photos and videos more quickly.

 The following features may not be available in some camera modes.


Adjust the Aspect Ratio

Go to **Camera** >  > **Aspect ratio** and select an aspect ratio.

 This feature is not available in some modes.


Enable Location Tags

To enable **Location tag**, enable Location Services for your phone first, then go to **Camera** >

. Your photos and videos will then be tagged with location information.

You can touch and swipe up on a photo or video in Gallery to view its shooting location.

To enable Location Services on your phone:

- Swipe down from the upper right edge of the phone to display **Control Panel**, touch  to expand the shortcut switches panel (depending on your device model), and enable **Location**.
- Go to **Settings** > **Location** and enable **Access my location**.

Use the Assistive Grid to Compose Your Photos

Use the assistive grid to help you line up the perfect shot.

- 1 Enable **Assistive grid**. Grid lines will then appear in the viewfinder.
- 2 Place the subject of your photo at one of the intersecting points, then touch the shutter button.

Use Mirror Reflection


When using the front camera, touch , then enable or disable **Mirror reflection**.

When **Mirror reflection** is enabled, the image will appear as you see yourself in the viewfinder, instead of flipped.

When **Mirror reflection** is disabled, the image will be flipped, so it's the opposite of what you see in the viewfinder.

Mute the Shutter Sound

Enable **Mute** to mute the camera shutter sound.

 This feature is only available in some countries and regions.

Capture Smiles

Enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.


Use the Horizontal Level for Better Compositions




Enable **Horizontal level** to display a horizontal guiding line on the viewfinder.

When the dotted line overlaps with the solid line, it indicates that the camera is parallel with the horizontal level.

Custom Camera Mode

You can customize the layout of the Camera mode screen as you prefer, by moving the frequently used modes to the camera home screen, or adjust the mode sequence.

 **Photo, Video, or Portrait (or Beauty)** cannot be moved to **More**. Actual usage shall prevail.


- 1 Go to **Camera > More**, touch  to enter the mode editing screen.
- 2 Touch and hold a mode, and drag it to the desired position. You can move a mode on the **More** screen to the camera home screen, or move a mode on the home screen to **More**, or adjust the layout of the mode screen based on the use frequency of the modes.
Mode with a  icon can be deleted simply by touching this icon.
- 3 Touch  to save the layout.


To restore a deleted mode, go to **Camera > More**, touch , and touch **ADD**.

Manage Gallery


Compares Images




Compare similar images, and zoom in or out to compare details, to pick your favorite image of the bunch.

-  Comparison is not supported for certain image formats.
 - Please make sure your device has been updated to the latest system version.

- 1 Open **Gallery**, hold down on an image in the **Photos** or **Albums** tab, and touch .
- 2 On the comparison screen, feel free to:
 - **Change the display range of an image:** Hold down on the image with one finger to adjust the display range. Spread or pinch your fingers on an image to zoom in or out. By default, the syncing feature is enabled on your phone. When you zoom in or out or

move an image, the images on the comparison screen will change accordingly. To

disable the syncing feature, touch .

- **Add the selected image to favorites:** Touch  under the desired image.
- **Delete an image:** Touch  under the unwanted image.
- **Change the images being compared:** Touch the selected images in the list below to cancel the comparison, and select an unselected image to have it compared.
- **Re-select an image:** Touch  in the lower left corner, select or de-select an image, and touch **Done**.

Make Quick Searches in Gallery

Quickly Search for Images in Gallery

Quickly locate an image by searching with keywords, such as a date, food, or category, in Gallery.

- 1 Go to **Gallery**, touch the search bar at the top of the screen, then type in a keyword (such as "food" or "scenery") or touch a suggested word to start searching.
- 2 Thumbnails of images related to that keyword will be displayed, and more keywords will be suggested. Touch a suggested keyword or enter more keywords for more precise results.

Quickly Search for Videos in Gallery


Your phone automatically analyzes and categorizes videos in Gallery when charging and with the screen off. Suggested keywords will be displayed in the search bar for quick results on related topics.


- 1 Go to **Gallery**, touch the search bar at the top of the screen, then type in a keyword (such as "food" or "scenery") or touch a suggested word to start searching.
- 2 Thumbnails of videos related to that keyword will be displayed, and more keywords will be suggested. Touch a suggested keyword or enter more keywords for more precise results.
Key moments of videos in the search results will automatically be played in sequence for you to see a preview.

 **Screenshots** will not be analyzed.



Share Images and Videos

Open **Gallery** and share an image or video in the following ways:

- Share a single image or video: Touch the image or video, then touch .

- Share multiple images or videos: In an album or on the **Photos** tab, touch and hold to select multiple images and videos, then touch .


Share Images Without Divulging Your Life

- 1 Open **Gallery**.
 - 2 Touch an image, or touch and hold down to select multiple images, and touch .
 - 3 Touch **Privacy options** at the top of the sharing screen, follow the onscreen instructions to enable both **Remove location info** and **Remove other info**, and touch **OK** to share the image.
-  If **Location tag** was disabled when an image was taken, **Remove location info** will not display in **Privacy options**.






Organize Albums

Organize images and videos into albums to easily sift through them.

Add Albums

- 1 Go to **Gallery > Albums**.
- 2 Touch , name the album, then touch **OK**.
- 3 Select the images or videos you want to add, and then move or copy them to the album.



Sort Albums

- 1 Go to **Gallery > Albums >  ** and touch **Sort albums**.
- 2 Hold and drag  next to the albums to adjust the order.
Touch **Reset** or go to   **> Reset** to restore the default order.



Adjust the Album Display Style

Go to **Gallery > Albums**, touch  or  at the top, and select an album display style.

Change Album Covers

- 1 Go to **Gallery > Albums** and touch the album you want to set.
- 2 Go to   **> Change album cover** and select the image you want to set as the album cover.

Move Photos and Videos

- 1 Open an album, then hold down to select the photos and videos you wish to move.
- 2 Go to   **> Move to album** and select the album to be moved to.

3 Once the items are moved, they will no longer be in their original album.

i The **All photos** album collects all of the pictures in Gallery. If you move the pictures to another album, the pictures will continue to display in **All photos** (except for hidden, blocked, and deleted pictures).

Delete Photos and Videos

Touch and hold to select the desired photos, videos, or albums and go to **Delete > Delete**.


i Some preset albums cannot be deleted, including **All photos**, **My favorites**, **Videos**, and **Camera**.

Deleted photos and videos will be temporarily moved to the **Recently deleted** album for a period of time, after which they will be permanently deleted.

To permanently delete photos and videos before the retention period expires, touch and hold to select the desired photos or videos in the **Recently deleted** album and follow the onscreen instructions.


Recover Deleted Images and Videos

In the **Recently deleted** album, touch and hold to select the items you want to recover, then

touch  to restore them to their original albums.

If the original album has been deleted, a new one will be created.

Add Images and Videos to Favorites


Open an image or video, then touch .

The item will appear in both its original album and the **My favorites** album.

Block Albums

Block third-party app albums to prevent them from being displayed in Gallery.

1 In the **Others** list, touch the album you want to block.

2 Go to  **> Block this album?**
Blocked albums can only be viewed in **Files**.


3 To unblock an album, open the **Others** list, touch **View blocked albums**, then touch **Unblock** next to the album.






i Only some albums in **Others** can be blocked.

Keep Gallery Images, Videos, and Albums Safe from Prying Eyes

Hide private images, videos, or albums in Gallery, for additional peace of mind.

First go to **Gallery > Albums**. From there, you can:

- **Hide images or videos:** Tap to open an album, touch and hold down to select images or videos you wish to hide, and go to  **> Hide > OK**.




- **Hide a single album:** Tap to open an album you wish to hide, and go to  > **Hide this album** > **OK**.
- **View hidden images, videos, or albums:** On the **Albums** tab, go to  > **Hidden items**.
You can switch the view as needed, to find your desired items. In **Hidden items**, touch , and select **Photo view** or **Album view**.
- **Unhide a single album:** Touch the album that you wish to unhide in **Hidden items**, and go to  > **Unhide**.
- **Unhide images or videos:** In **Hidden items**, go to  > **Photo view**, touch and hold down to select the images or videos that you wish to unhide, and touch **Unhide**. These images and videos will then be restored to their original albums.

Edit Pictures and Videos

Edit Images

Gallery offers a wide range of editing features for images.

Basic Editing


- 1 Open **Gallery**, touch the image you want to edit, and then touch . You can then:
 - To crop and rotate the image, touch **Crop**, select a frame, then drag the grid or its corners to select which part you want to keep. You can drag the image in the frame, or use two fingers to zoom in or out to adjust the displayed part of the image.
To rotate the image, go to **Crop** and drag the angle wheel to the desired orientation.
 - To rotate the image by 90 degrees or mirror the image, touch  or .
 - To adjust image effects, touch **Adjust** to adjust the brightness, contrast, saturation, and other aspects of the image.
 - To add filter effects, touch **Filter** to select a filter.
 - Other image editing: You can also create graffiti images and add annotations.



Once you are done editing, such as **Adjust** and **Filter**, you can touch **Compare** to compare the before and after effects. Comparison is not supported in some editing modes.

- 2 Touch  or  to save the edits.


Add Stickers to Images

- 1 In Gallery, touch the image you wish to edit, and go to  > **Stickers** to add stickers.

2 Select a sticker and drag it wherever you like. Touch and hold the dot on the corner of the sticker and drag it to shrink or enlarge the sticker. Touch  to delete the sticker. You can also edit the text in certain types of stickers. Touch the area that can be edited, which is typically encircled with dash lines, to enter any new text.



3 Touch  to save the changes and touch  to save the edited image.

Pixelate Images

1 In Gallery, touch the image you wish to edit, and go to  > **Mosaic** to pixelate the image.


2 Select a mosaic style and size to cover certain areas of the image.

3 To remove the mosaic, touch  and wipe it off the image.

4 Touch  to save the changes and touch  to save the edited image.

Rename Images

1 In Gallery, touch the image thumbnail you want to rename.


2 Go to  > **Rename** and enter a new name.

3 Touch **OK**.



Collage


You can use the collage feature in Gallery to quickly combine multiple images into one for easier sharing.

1 You can access the collage feature in the following ways (depending on your device model):



- On the **Discover** tab, touch **Create collage**, select some images, then touch **Create**.
- On the **Photos** or **Albums** tab, touch and hold to select some images, then go to  > **Collage**.

2 Select a template. You can then:

- Relocate an image: Touch and hold the image and drag it to a different position.
- Adjust the displayed portion of an image: Slide on the image, or pinch in or out on it so that only the part you want to see is displayed in the grid.
- Rotate an image: Touch the image, then touch  to rotate it or  to flip it.
- Add or remove borders: By default, borders are displayed between images and along the grid edges. To remove them, touch **Frame**.

3 Touch  to save the collage.
To view the saved collage, go to **Albums** > **Collages**.

Add Frames to Your Images


- 1 In Gallery, touch the image you wish to edit, and go to  > **Frame**.
- 2 Select a frame, and touch  to save the edited image as prompted.

Highlights


Introduction to Highlights

Gallery automatically creates **Highlights** albums from your best photos and videos based on time, location, or theme information, and even generates a short video clip so you can walk down memory lane and instantly relive the good times.





The following conditions need to be met to create a **Highlights** album:

- Before taking a photo or video, go to **Camera** > , and enable **Location tag**. Your phone will create a **Highlights** album based on time and location.
- When taking a photo, you'll need to take multiple photos of the same scene at different times. **Highlights** albums will not be automatically generated if there are not enough relevant photos, the shooting times are too close, or the photos are too similar.
- **Highlights** albums are created automatically when your phone is connected to a Wi-Fi network, the screen is turned off, the device is being charged, and the battery has sufficient power. It may take a while for the albums to be created.



View Highlights Videos

- 1 Go to **Gallery** > **Highlights** and touch an album.
- 2 Touch  to play the video.

Edit Highlights Videos

- 1 Touch  to play a **Highlights** video.
- 2 On the playback screen, touch , select your favorite theme template, check the preview, and touch .
- 3 Touch  to export the video.



Change the Highlights Album Cover

- 1 On the **Highlights** tab, touch an album.
- 2 Go to  > **Change cover**, select a photo, then touch .

Add or Remove Images or Videos from a Highlights Album

1 In the **Highlights** tab, select a **Highlights** album.

2 You can then:

- Add images or videos: Touch  and follow the onscreen instructions to select images or videos to be added to the album.
- Remove images or videos: Touch and hold to select the images or videos you want to remove from the album, touch , then touch **Remove**.

Share Highlights


You can share **Highlights** as videos, full-length images, or covers.

Share Highlights as videos

1 If you have edited and exported a **Highlights** video, the exported video can be found in **Gallery > Albums > Video Editor**.

2 You can touch and hold to select the video in **Video Editor** and touch  to share it.

Share Highlights as full-length images or covers

Touch the **Highlights** album you wish to share, touch , and select **Full-length image** or **Cover only**.

- If you select **Full-length image**, your phone will generate a full-length **Highlights** image. You can follow the onscreen instructions to share it.
- If you select **Cover only**, your phone will generate an image (including the cover and text) based on the Highlights cover. You can follow the onscreen instructions to share it.

You can also share the photo under **Gallery > Albums > Collages**, where the full-length images and covers created for **Highlights** albums are saved by default.

Rename Highlights Albums


1 On the **Highlights** tab, touch an album.

2 Go to  > **Rename** and enter a new name.

Delete Highlights Albums

1 On the **Highlights** tab, select a **Highlights** album.

2 Go to  > **Delete** and then touch **Delete**.

-  After you delete a **Highlights** album, it cannot be restored, and the photos and videos in the **Highlights** album will remain in Gallery.


Apps

MeeTime

Use MeeTime to Make Calls

Use MeeTime to make high-quality video or voice calls with contacts who have Huawei devices (such as phones and tablets), and share your screen during calls.

Thanks to the GPU Turbo technology, the video call resolution will be optimized automatically when the network signal is weak. With intelligent algorithms, the other party can see your face clearly even when making a video call at night or in dark environments.



 



-  Please make sure your device has been updated to the latest system version.
- This feature is only available in some countries and regions.
- If your phone is not pre-installed with the **MeeTime** app, download it from **AppGallery**.






MeeTime Usage Tariff Instructions

- MeeTime only uses Wi-Fi or mobile data and will not be charged as calls by your carrier. It is recommended that you use this feature over a Wi-Fi network.
- If you need to make a video call using mobile data, you can perform the following to save on the amount of mobile data you use: On the **MeeTime** screen, touch your profile picture in the upper right corner to access the **Settings** screen, then turn on the **Data saver** switch.

Make a High-quality Video or Voice Call

 
Use MeeTime to make smooth and high-quality calls between Huawei devices such as phones and tablets. Enjoy crystal clear video calls, even in dark environments, and adjust the beauty level during calls to look your best.



- 1 Open **MeeTime** and follow the onscreen instructions to activate MeeTime.
- 2 Open **MeeTime**, touch **Contacts** > **MeeTime**, and touch  or  next to a contact to start an HD voice or video call with a family member or friend who has enabled **MeeTime**.
- 3 During a video call, touch the screen and touch  >  to access the **Soften** feature. Drag the slider left or right to adjust the beauty level.
 -  For better video calls, keep your phone within 1 meter (3.3 feet) from you and make sure there is sufficient lighting.
 - Beauty mode is only supported on certain device models.
- 4 Touch . From there, feel free to:

- To mute MeeTime, touch .
 - To use the speaker, touch .
 - To switch between a voice and video call, touch .
 - To share the screen, touch .
-  To view or manage your call logs, touch **Calls**.

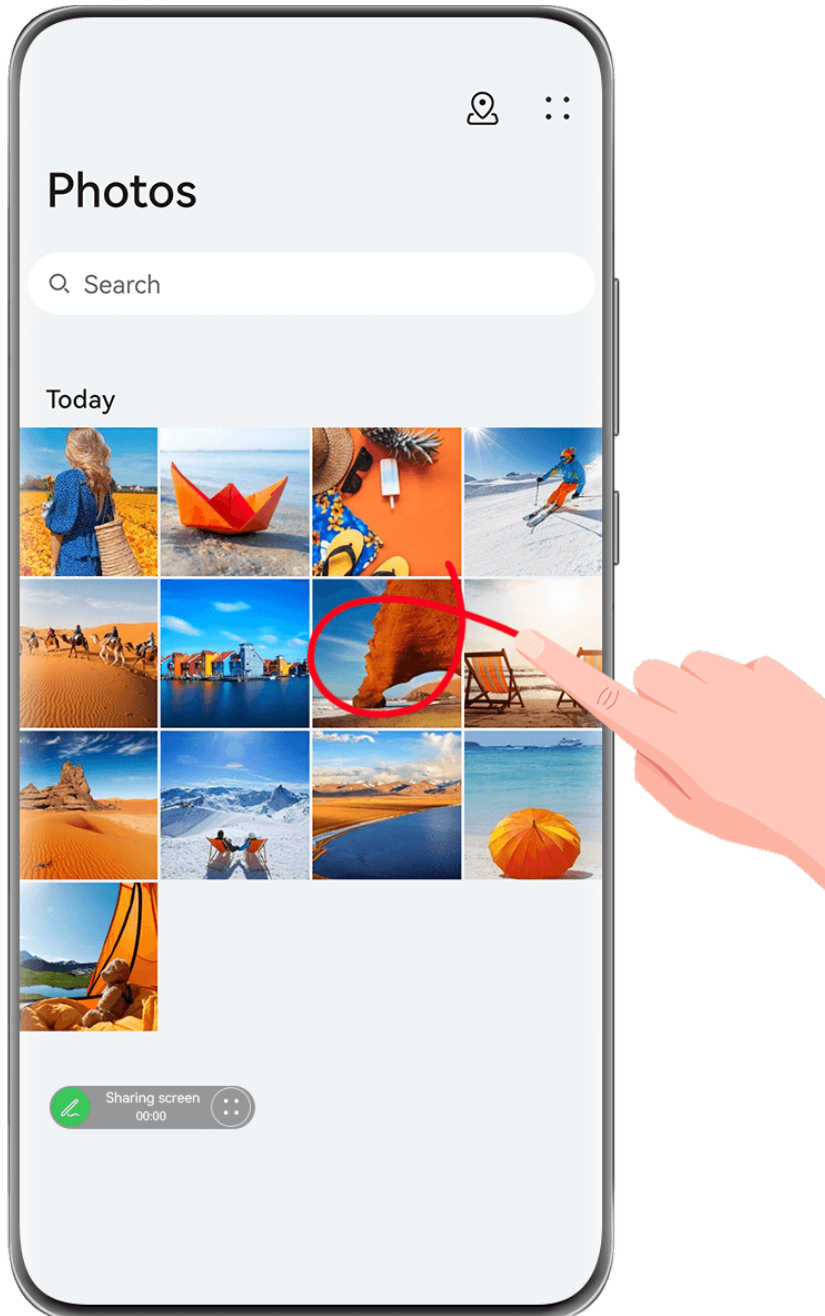

Share Your Phone Screen During a MeeTime Call



During a MeeTime video call with a Huawei phone or tablet, you can share your screen and even doodle on it. The other party will be able to view your screen and doodles in real time.



1 During a video call, touch the screen, go to  > , and follow the onscreen instructions to share your screen.

2 While sharing your screen, touch  to start doodling on your screen.


While sharing, touch  >  to hide banner notifications, such as incoming call notifications, messages, and alarms, from your phone.

3 To exit screen sharing, touch  > .






Make a MeeTime Group Call


With MeeTime group calls, you can have a voice or video call with multiple users at the same time.







 The figures are for reference only.



Go to **MeeTime** and select one of the following methods to initiate a group call:



- Go to  > **Group call**, select contacts that you want to invite, and touch **START CALL**.
- During a one-on-one video call, tap the screen, go to  >  add contacts, and then touch **Add members to call** to initiate a group call.
- During a one-on-one voice call, touch  > , add contacts, and then touch **Add members to call** to initiate a group call.



During a group call, you can tap the screen and touch  to display the shortcut panel. From there, feel free to:

- **Add call members:** Go to  > **Add members**, select contacts that you want to invite, and touch **Add members to call**.
- **Beauty mode:** Touch  to adjust the beauty level during a video call.
- **Share screen:** Touch  to share your screen with other participants.

During screen sharing, touch  on the screen to write or doodle on the screen.

While sharing, touch  >  to hide banner notifications, such as incoming call notifications, messages, and alarms, from your phone.

To exit screen sharing, touch  > .



- **Switch between voice and video calls:** Touch  to switch between voice and video calls.
-  Some of these features are only supported in group video calls.
 - Beauty mode is only supported on certain device models.

Set MeeTime Phone Numbers

You can use MeeTime with more than one of your phone numbers.

1 On the **MeeTime** screen, touch your profile picture icon in the upper right corner to access the **Settings** screen.

 
2 Touch **Number settings**. You can then:


- Touch  to add another phone number if only one phone number has been linked.
- Touch  to delete any numbers or add new ones if multiple phone numbers have been linked.
- In the list of **Outgoing number (this device)**, select one of the added phone numbers to set it as the default number.

Notepad

Create and Edit a Note

Capture an inspired idea before it's too late, with **Notepad**. You can also add checklists, images, and web links to notes to make them more detailed and enriching.

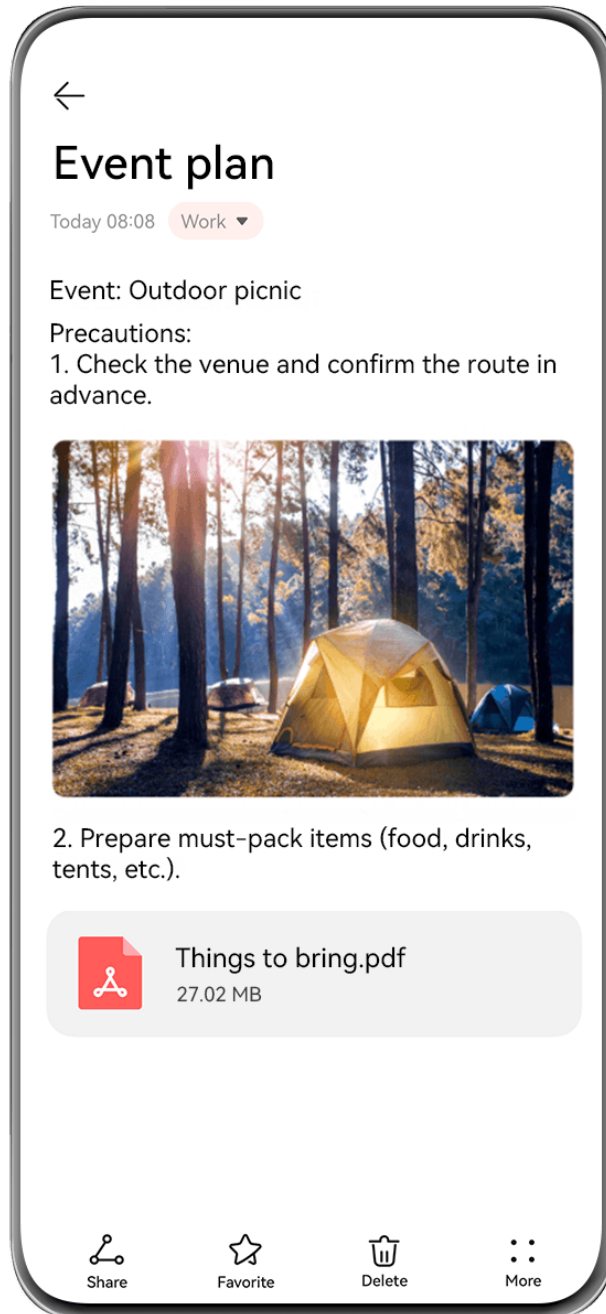


 The figures are for reference only.

Create a Note


1 Go to **Notepad > Notes**, touch , and enter the title and content.

2 To change the text style, color, or background, touch .

3 Once you're done editing, touch  to save the note.

Add a Checklist



Add the work content and items you wish to purchase to the checklist. Once the checklist is created, you can select annotations to organize your work and life with greater ease.


When you create a note in **Notepad**, touch . From there, feel free to:


- **Add an item to the list:** Enter text after the hollow circle, and go to the next line to enter another item.
- **Mark an item as completed:** Touch the hollow circle next to an item to mark the item as completed, and touch again to cancel the operation.

Add Images and Video Files to a Note

1 When creating a note in **Notepad**, feel free to:


- Touch , and select **Take photo** or **Select from Gallery** to insert an image. Hold and drag to adjust the position of the added image within the note.
- Touch , and select **Document**, **Audio**, **Video**, or **More** to insert an attachment. Hold and drag to adjust the position of the added attachment within the note. Touch the attachment to preview it.

2 Once you're done editing, touch  to save the note.

-  Touch and hold down on the attachment inserted in the note, and select **Copy**, **Delete**, **Save**, or **Share**.

Add Web Page Content to a Note


Add web page content or text to Notepad to quickly create a note. Touch the added web page link in the note to open the web page and view the details.



-  Content sharing is not supported in all apps.

- 1** When browsing a web page, select the content you wish to share, such as a web page or text on the web page.
- 2** Touch the share button, and select **Notepad**.
- 3** Add the shared content to an existing note, or create a new note, by following the onscreen instructions.

Create Notes by Dragging Content from Other Apps

Drag text, images, and files to Notepad, from apps like HUAWEI Browser and Files, to create informative notes in little time. You can also select and drag individual items (such as text, images, audio and video files, and documents) all at a time within notes to create a new note.

 Drag-and-drop operations are only supported in certain apps.




- 1 Go to **Notepad > Notes**, and touch .
- 2 Select and drag the content that you wish to add (from the corresponding apps) to Notepad.
 - **Drag from other apps:** Open Files in either split-screen or floating window mode, select the text, images, or files, and hold and drag them to the desired note.
 - **Drag between notes:** Open another note in either split-screen or floating window mode, select the desired items (including text, images, audio and video files, and documents), and hold and drag them all at a time to the desired note.
- 3 When editing a note, you can also select multiple types of items, and hold and drag these items to relocate them within the note.
- 4 Touch  to save the note.

Create To-dos

You can create to-dos to keep a track of day-to-day essentials, such as daily shopping lists, tasks at work, and household chores.

Add To-do Items and Set Reminders

Add to-do items and set time-based reminders for them.

- 1 Go to **Notepad > To-dos**, and touch .
- 2 Enter your to-do item, touch , specify a time for the to-do item, and touch **OK**.
- 3 Touch  to mark the to-do item as important. If you have marked the to-do item as important, you'll be prompted with a full-screen reminder when the screen is locked.
- 4 Touch **Save**.

Set a To-do Item Reminder Ringtone

After adding a to-do item, you can select a to-do reminder ringtone based on the reminder time or location, to be sure that you won't miss out on any to-dos.

Setting a notification tone:

- 1 Go to **Settings > Sounds & vibration**, set **Sound mode** to **Sound**, touch **Notification tone**, and select a **Preset** or **Music on device** as the notification tone.
- 2 Go to **Settings > Notifications & status bar**, touch **Notepad** in the app list below, enable **Allow notifications**, select the notification style, touch **Notification tone**, and select **Ring & vibrate** or **Ring only**.

Once the settings are applied, your device will ring to remind you of the to-do item at the specified time or when you visit the designated location.

Setting a vibration pattern:













- 1 Go to **Settings > Sounds & vibration**, set **Sound mode** to **Vibration**, go to **Notification tone > Vibration**, and select a vibration pattern as the notification vibration.
- 2 Go to **Settings > Notifications & status bar**, touch **Notepad** in the app list below, enable **Allow notifications**, select the notification style, touch **Notification tone**, and select **Ring & vibrate** or **Vibrate only**.

Once the settings are applied, your device will vibrate to remind you of the to-do item at the specified time or when you visit the designated location.

 If **Sound mode** is set to **Silent**, your device won't ring or vibrate for to-do items.

Draw Graffiti and Handwrite Notes

Sketch and write to record sources of inspiration, and make your notes more vivid and informative.

- 1 Go to **Notepad > Notes**, and touch .
 - 2 Touch , and draw or write by following the instructions below:
 - Touch  to select a brush color.
 - Touch  or  (depending on your device model) to select the tip size.
 - Touch  to manually erase specific graffiti or handwriting. Touch  again, and select **Clear** to clear all graffiti or handwriting.
 - Touch  to select the note background.
 - Touch  to display horizontal lines.
 - If your device is connected to a stylus, touch  to block drawing graffiti or handwriting by finger. After you do so, you'll only be able to edit the note with a stylus.
-  Not all devices support all of these features.
- 3 Once you're done editing, touch  to save the note.

Search for and Sort Notes

Quickly Search for Notes

Use keywords, such as note titles, specific text content, or attachment names, to search for notes within Notepad with newfound ease.

- 1 Open **Notepad**, touch the search bar at the top of the screen, and type in a keyword to start searching.

- 2** Notes will display based on the keywords. You can continue to enter keywords for more accurate searches.


Add a Folder or Notebook

Create folders or notebooks to store different types of notes, and even add color-coded labels to create digital notebooks in Notepad.

Go to **Notepad**, and touch **All notes** or **All to-dos**. From there, feel free to:





- **Create a folder:** Go to **Manage** > **New folder**, rename the folder, and touch **Save**.
- **Create a notebook:** Open any folder, touch **New**, select a color label, rename the notebook, and touch **Save**.

To rename or delete a folder or notebook, go to **Manage** > **Edit**, and touch the folder or notebook name to rename or delete it.

 Folders and items in Exchange accounts cannot be edited.




Classify Notes and To-Dos by Category

Classify notes or to-dos into notebooks separated by folder and category, to reference content with greater ease.

 
- **Pin a note to the top:** In the **All notes** list, swipe left on a note, and touch  to pin it to the top.
- **Add a note to favourites:** In the **All notes** list, swipe left on a note, and touch  to add it to favourites.
To view favourite items, touch **All notes**, and go to **My favorites**.
- **Move a note or to-do to another notebook:** In the **All notes** or **All to-dos** list, swipe left on a note or to-do, touch , and select the target notebook.
Touch and hold down on a note or to-do item you wish to classify, select or swipe along the check boxes of multiple items, and touch  to move them by batch to the target category.

Lock Notes

You can apply App Lock to Notepad or set a password for a note to protect your privacy.

- **To lock the Notepad app**, go to **Settings** > **Security** > **App Lock**, follow the onscreen instructions to enter the screen lock password or custom app lock password, and enable the switch next to **Notepad**.
- **To lock a single note**, go to **Notepad** > **Notes**, open the note you wish to lock, go to  > **Add lock**, follow the onscreen instructions to set a password, and touch .
To remove the note lock, open the note, and go to  > **Remove lock**.



If your device supports fingerprint or face unlock, and you've enrolled your fingerprint or facial data, you can use fast authentication by performing the following steps: Go to

Notepad >  > **Settings** > **Note lock**, and enable **Unlock with Fingerprint ID** and **Unlock with Face Recognition**.

Share and Export Notepad Items





Share notes or to-dos in **Notepad** with others, and even export notes in image, TXT, and other formats.

Share Notes or To-dos

- **To share a single note or to-do:** Open the note or to-do you wish to share in the **All notes** or **All to-dos** list, and touch . Then follow the onscreen instructions to complete the process.
You can share a note by touching **Notes** or **Picture**.
- **To share multiple notes:** Touch and hold down on a note, select multiple notes you wish to share in the **All notes** list, and touch . Then follow the onscreen instructions to complete the process.



Export Notes


Go to **Notepad** > **Notes**, and open the note that you wish to export. From there, feel free to:

- **Export it as an image:** Touch , swipe left or right on the thumbnail at the top of the screen, select **Picture**, and touch  to save the image. You can find the exported image in **Gallery**.
 - **Export it as a document:** Touch  > **Export as document**, and follow the instructions to select the document format you need and complete the process.
To view notes that you have saved, open **Files**, search for and touch **Documents**.
-  The **Export as document** feature is not available for handwritten-only notes. Other types of notes can be exported into TXT or HTML files when you select **Export as document**.

Delete Notes or To-dos

You can delete notes or to-dos in any of the following ways:

- In the **All notes** or **All to-dos** list, swipe left on a note or to-do, and touch  to delete it.
- Touch and hold down on the note or to-do you wish to delete, select or swipe along the check boxes of multiple notes or to-dos that you wish to delete, and touch .

Once deleted, you can touch **All notes** or **All to-dos** and go to **Recently deleted** to view the deletion records. To restore a deleted item, touch and hold down on it, or go to its details screen, and touch .

Optimizer

Clean Up Phone Storage

Cleanup in **Optimizer** can help you scan for redundant or large files, such as residual app files, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete individual files as suggested.

Manually Clean the System Trash

- 1 Go to **Optimizer**, and touch **Cleanup**.
- 2 Once the scanning is complete, touch **Clean up** next to **Junk files**. You can also touch **Clean up** next to other items, select the items to be cleaned, and touch **DELETE**.

Clean Up Duplicate Files

Optimizer can identify duplicate files on your phone.

On the **Cleanup** screen, touch **Duplicate files**, then select unwanted files to delete them.

Settings

More Connections


Project Your Phone Screen Wirelessly


Project your phone wirelessly to stream movies and work on a large-screen device (such as a Vision).

The projection method may vary depending on the display device. The following uses projecting to a HUAWEI Vision as an example.



i The figures are for reference only.

- 1** On the Vision home screen, go to **Settings** > **Connections**, and make sure that **Projection** is enabled.
- 2** Swipe down from the upper right corner of the phone screen to display **Control Panel**, touch  to expand the shortcut switches panel (depending on your device model), enable **Wireless Projection**, and follow the onscreen instructions. Your phone will then start searching for available Vision products.
 - i** You can also go to **Settings** > **More connections** > **Easy Projection** or **Settings** > **More connections** > **Wireless Projection**, and enable **Wireless projection** (depending on your device model).
- 3** Touch the device that you wish to project your phone to from the detected Vision products.

To exit wireless projection, you can swipe down from the upper left edge of the screen to display the notification panel, and touch  > **Disconnect** in the wireless projection notification.

Home Screen & style


Set a Stunning Theme

Select your preferred theme and apply it to the Always On Display, lock screen wallpaper, home screen wallpaper, and icons in one go. You can also set a preferred image, display style, and personalized icon colors to create your own unique look.

 The AOD feature is only supported on certain device models. Actual usage shall prevail.

Set Emoji Theme

Add emojis to your lock and home screens for fun 3D effects.

- 1** Go to **Settings > Home screen & style > Themes**, and touch **Emoji** in **Interactive**.
When using the Emoji theme for the first time, please follow the onscreen instructions to download and install the theme.
- 2** Touch **Personalize** to visit the editing screen and select your favorite emojis.
- 3** Touch **Apply**.
 -  To delete a downloaded but unused theme package, open the theme details screen,
 - •
 - touch • • in the upper right corner, and then touch **Delete**.
 - The number of emojis that can be added may vary, and is subject to actual usage.

Set Poster Theme

Choose a favorite photo and add stylish covers and colors to create your own unique theme.

- 1** Go to **Settings > Home screen & style > Themes**, and select **Poster** in **Magazine**.
- 2** Touch **Personalize** to visit the editing screen. From there, you can:
 - Touch **Select** to select your preferred photo.
 - Touch **Edit**, then hold down and drag on the photo and move it to a new location.
 - Feel free to adjust the settings, such as **Style** and **Template color**.
- 3** Touch **Apply**.

Set Headline Theme

Choose a favorite photo and add stylish fonts to create your own unique theme.

- 1** Go to **Settings > Home screen & style > Themes**, and touch **Headline** in **Magazine**.
- 2** Touch **Personalize** to visit the editing screen. From there, you can:

- Touch **Select** to select your preferred photo.
- Touch **Edit**, hold down and move the photo to adjust its position.
- Adjust settings such as **Style** and **Icon colors**.


3 Touch **Apply**.


Display & Brightness

Use Eye Comfort Mode

Eye comfort mode can effectively reduce harmful blue light and adjust the screen to display warmer colors, relieving eye fatigue and protecting your eyesight.

Enable or Disable Eye Comfort Mode

- Swipe down from the upper right edge of the screen to display **Control Panel** and touch  to expand the shortcut switches panel (depending on your device model). Enable or disable **Eye Comfort**. Touch and hold **Eye Comfort** to access the settings screen.
- Go to **Settings > Display & brightness > Eye Comfort** and enable or disable **Enable all day**.

Once Eye Comfort mode is enabled,  will be displayed in the status bar, and the screen will take on a yellow tint since less blue light is being emitted.

Set a Schedule for Eye Comfort Mode


Go to **Settings > Display & brightness > Eye Comfort**, enable **Scheduled**, then set **Start** and **End** according to your preferences.

Adjust the Blue Light Filter in Eye Comfort Mode

Go to **Settings > Display & brightness > Eye Comfort**, enable **Enable all day** or set up **Scheduled**, and adjust the slider under **Filter level** to customize how much blue light you would like to be filtered.

Notifications & status bar

Notification and Status Icons































 









-  Network status icons may vary depending on your region or network service provider. Supported features vary depending on the device model. Some of the following icons may not be relevant to your phone.



















5G network connected



4G network connected


| | | | |
|---|---|---|--|
|  | 3G network connected |  | 2G network connected |
|  | Full signal strength |  | Roaming |
|  | Data saver enabled |  | No SIM card inserted |
|  | Hotspot enabled |  | Hotspot connected |
|  | Hotspot disconnected |  | Switching networks via Wi-Fi+ |
|  | Wi-Fi connected |  | Wi-Fi network is faulty, unable to connect to the Internet |
|  | Wi-Fi 6 connected |  | Wi-Fi 6 network is faulty, unable to connect to the Internet |
|  | Wi-Fi 6+ connected |  | Wi-Fi 6+ is faulty, unable to connect to the Internet |
|  | Dual Wi-Fi connected |  | Dual Wi-Fi connected, with the main Wi-Fi supporting Wi-Fi 6 |
|  | Dual Wi-Fi connected, with the main Wi-Fi supporting Wi-Fi 6+ |  | NFC enabled |
|  | Battery empty |  | Low battery |
|  | Charging |  | Fast charging |
|  | Super charging |  | Wireless super charging |
|  | Wireless fast charging |  | Regular wireless charging |
|  | Power Saving mode enabled |  | Digital Balance enabled |
|  | Bluetooth enabled |  | Bluetooth device battery |
|  | Bluetooth device connected |  | VPN connected |
|  | Airplane mode enabled |  | Do Not Disturb mode enabled |
|  | Location service enabled |  | Eye Comfort mode enabled |
|  | Driving mode enabled |  | Performance mode enabled |

| | | | |
|---|-----------------------|---|--|
|  | Headset connected |  | Projection device connected |
|  | Calling |  | VoLTE enabled |
|  | Missed call |  | Calling service not available on the current network |
|  | New message |  | Alarm set |
|  | Silent mode |  | Vibration mode |
|  | Syncing data |  | Data syncing failed |
|  | New email |  | Event reminder |
|  | Apps using the camera |  | Apps using the microphone |
| ... | More notifications | | |

Manage the Notifications and Status Bar

Pin App Notifications to the Top

You can pin app notifications to the top of the notification panel in either of the following ways:

- Swipe down from the upper left edge of the screen to display the notification panel, swipe left on a notification, and touch  > **Pin to top**.
- Go to **Settings > Notifications & status bar**, locate and touch the app for which you wish to pin notifications, and enable **Pin to top**.

Manage Notifications for Specific Apps


You can adjust the notification mode and ringtone of an app, or set the notification effect for a specific type of notification.

Go to **Settings > Notifications & status bar**, touch an app to go to the notification management details screen, and enable or disable notifications for the app. You can also set the notification mode within the app as follows:

- **Gentle notifications:** When this switch is turned on, notifications will only display in Notification Panel, and will not appear as banners, lock screen notifications, or status bar icons, nor will your device ring or vibrate.
- **Lock screen and Banners:** Allows you to select the notification display method.
- **Notification tone:** Change the ringtone and vibration mode, such as **Ring only** and **Vibrate only**.

- **Allow interruptions:** Once enabled for an app, your phone will still be able to receive notifications from this app in Do Not Disturb mode.
- **Applying specific modes for different types of notifications:** In the NOTIFICATION TYPE section, touch an option (such as **Service notifications**) to enable or disable this type of notification for the app. You can also set specific notification tones and notification display methods for each type of notification.

 The notification types may vary by app.

You can also swipe down from the upper left edge of the screen to display Notification Panel, swipe left on a notification, and go to  > **More settings** to manage the app's notifications.

Hide Content of Notifications on the Lock Screen

After this feature is enabled, notifications will be displayed on the screen when the screen is locked, but specific content will not be displayed. To protect your privacy, you can view the content only after the screen is unlocked.

Use either of the following methods to enable this feature (depending on your device model):


- Go to **Settings > Notifications & status bar**, and enable **Hide notification content**.
- Go to **Settings > Notifications & status bar > Lock screen notifications**, and select **Hide notification content**.

Notifications Turn on Screen

Go to **Settings > Notifications & status bar**, and enable **Wake screen**. Your phone will then automatically turn on the lock screen when it receives a notification.

Disable App Notifications

If you do not want to be disturbed by notifications from an app, perform either of the following:

- After you receive a notification from the app, swipe left on it in the notification panel, and go to  > **Disable notifications**.
- Go to **Settings > Notifications & status bar**, locate and touch the app for which you want to disable notifications, then disable **Allow notifications**.
- Go to **Settings > Notifications & status bar > Manage all**, and turn off the switch next to the app.

Set the Status Bar to Simple Display

Go to **Settings > Notifications & status bar > Status bar**, and enable **Simple display**. After doing so, only the following frequently-used icons will display on the phone status bar by default: time, Wi-Fi network, mobile signal, and battery level.

Show the Carrier Name and Network Speed

Go to **Settings > Notifications & status bar > Status bar**, and enable **Show carrier name** and **Show network speed** as needed, to reveal the network carrier information and Internet access speed.

Biometrics & Password

Set Fingerprints

You can enroll a fingerprint and then use it to unlock the screen and access your Safe, App Lock, and more.

Add a Fingerprint

- 1** Go to **Settings > Biometrics & password > Fingerprint ID**, and follow the onscreen instructions to set or enter the lock screen password.
- 2** Touch **New fingerprint** to begin enrolling your fingerprint.
- 3** Place your fingertip on the fingerprint sensor. Adjust the position of your finger slightly each time that you feel a vibration.
- 4** Once enrollment is complete, touch **OK**.

You'll then be able to unlock the screen whenever you place that finger on the fingerprint sensor.

Rename or Delete a Fingerprint

- 1** Go to **Settings > Biometrics & password > Fingerprint ID** or **Settings > Biometrics & password > Fingerprint ID > Fingerprint management**(depending on your device model) and enter your lock screen password.
- 2** In the **Fingerprint list** section, touch an enrolled fingerprint to rename or delete it.

Fingerprint Identification

Fingerprint identification allows you to match your fingers with the enrolled fingerprints.

- 1** Go to **Settings > Biometrics & password > Fingerprint ID** or **Settings > Biometrics & password > Fingerprint ID > Fingerprint management**(depending on your device model) and enter the lock screen password.
- 2** In the **Fingerprint list** section, touch **Identify fingerprint**.
- 3** Touch the fingerprint sensor with your finger. The recognized fingerprint will be highlighted.

Use Your Fingerprint to Access a Locked App

- 1** Go to **Settings > Biometrics & password > Fingerprint ID** or **Settings > Biometrics & password > Fingerprint ID > Fingerprint management**(depending on your device model) and enter the lock screen password.

- 2 Turn on the **Access App Lock** switch and follow the onscreen instructions to link your fingerprint with App Lock.

You can then touch a locked app on your home screen and use your fingerprint to access it.

Enable and Use Fingerprint Payment


You can use your fingerprint to verify your payments in a payment app.

Go to the payment app and follow the onscreen instructions to enable this feature.

Face Recognition

Face Recognition allows you to unlock your phone or access locked apps with your facial data.

Set up Face Recognition


- 1 Go to **Settings > Biometrics & password > Face Recognition**, and enter your lock screen password. If you haven't set the lock screen password, follow the onscreen instructions to do so.
- 2 Some phones support screen wakeup when you raise the device. If you can find the **Raise to wake** switch on your device, you can enable it as needed.
 -  The settings items vary by device. If your phone does not provide a specific item, it indicates that the corresponding feature is not supported.
- 3 Position your face in front of your phone, and follow the onscreen instructions to enroll your facial data.

Set Face Unlock

On the **Face Recognition** screen, touch **Unlock device** and select an unlock method.

- **Direct unlock:** The screen will unlock once facial recognition is successful.
- **Swipe to unlock:** Swipe on the screen to unlock the screen after facial recognition is successful.

Certain phones also support the **Require eye contact** feature, which can be enabled on the **Face Recognition** screen. Once enabled, you'll need to keep your eyes open while unlocking the device with your face.

-  • If you wish to disable face unlock, touch **Unlock device > Off**.
 - If you have enabled PrivateSpace, you'll only be able to use face unlock in MainSpace. If you have added multiple users, you'll only be able to use face unlock with the Owner account.

Access App Lock with Face Recognition

On the **Face Recognition** screen, enable **Access App Lock**, and follow the onscreen instructions to add your facial data to App Lock.

You can then touch a locked app on your home screen and use face recognition to access the app.

Link Your Face with Password Vault


Access the **Face Recognition** screen and enable **Autofill usernames and passwords**.

When logging in to an app, you can use Face Recognition to automatically fill in the account name and password saved in Password Vault.

Bolster Your Device Security, with Face Recognition

Enable **Require trusted device** when using Face unlock to ensure that your phone will only unlock when it detects your face and is connected to a trusted device.

This feature is disabled by default. To enable it, go to the **Face Recognition** settings screen, touch **Require trusted device**, turn on the **Require trusted device** switch, and follow the onscreen instructions to complete the settings.

-  A trusted device can be any Bluetooth device that can be used for unlocking purposes, such as earphones, a watch, or a band.

Disable or Delete Facial Data

Go to the **Face Recognition** screen to:

- Prevent certain features from accessing your facial data:** Disable **Unlock device**, **Access App Lock**, or other features, to prevent them from using your facial data. Doing so won't delete your facial data.
- Delete facial data:** Touch **Delete facial data** to permanently delete your facial data. You'll have to enroll your face once again if you wish to use the facial recognition feature later on.

Storage

Clean Up Phone Storage

Cleanup in **Optimizer** can help you scan for redundant or large files, such as residual app files, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete individual files as suggested.

Manually Clean the System Trash

- 1 Go to **Optimizer**, and touch **Cleanup**.
- 2 Once the scanning is complete, touch **Clean up** next to **Junk files**. You can also touch **Clean up** next to other items, select the items to be cleaned, and touch **DELETE**.

Clean Up Duplicate Files

 
Optimizer can identify duplicate files on your phone.


On the **Cleanup** screen, touch **Duplicate files**, then select unwanted files to delete them.

Security

Keep Your Phone Under Lock-and-Key with Security Center


Security Center provides you with your phone's real time security status, and handy tips, making it easy to set a wide range of high-level security safeguards.

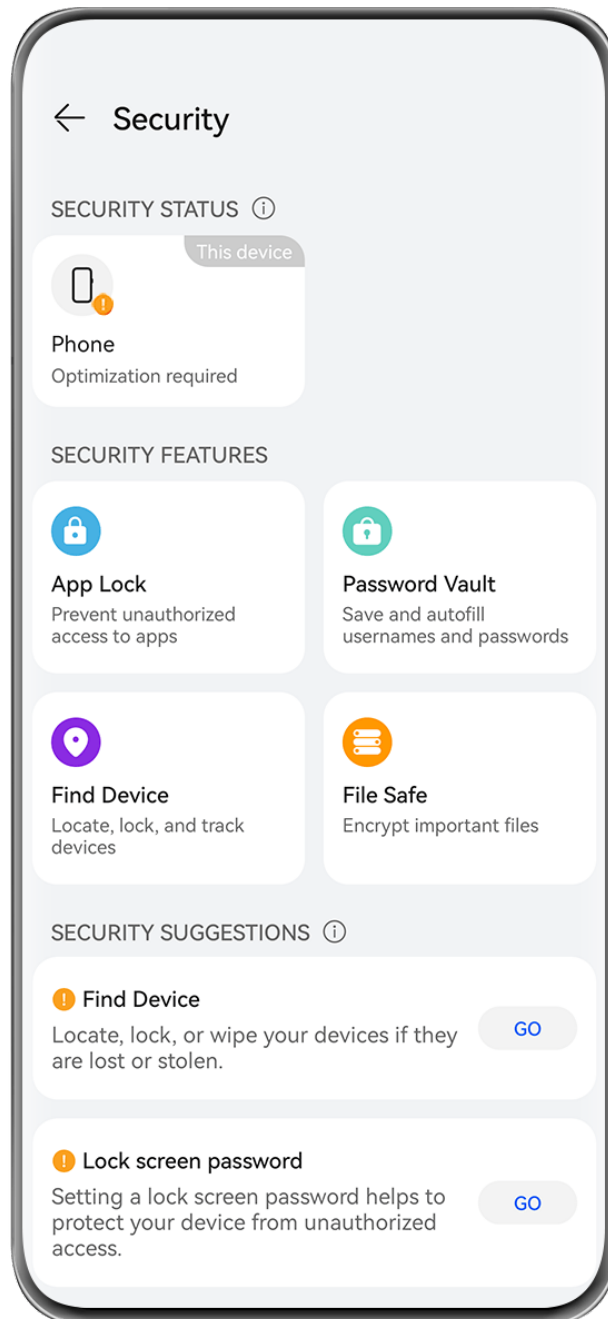

 The figures are for reference only.

Check the Security Status of Your Device

Your phone will display its own security status, and the security status of other devices found in **Super Device** and logged in to the same **HUAWEI ID**. You can also view security tips and records for all of these devices.

-  This feature is currently supported on phones and tablets running EMUI 13 or later. More devices will be supported in the future.

Go to **Settings > Security**. Your phone will display the security status of this device and devices found in **Super Device** and logged in to the same **HUAWEI ID**.

A green sign indicates that your device is in good condition. A yellow sign indicates that your device has security risks. A red sign indicates that your device is at high risk, and should be optimized as soon as possible.

Touch this device in **Security status** and feel free to do the following:

- **View and set security features:** This device will display its current security status. You can touch specific features to set or apply them. For example, you can touch **Lock screen password**, and follow the onscreen instructions to set it.
- **View security suggestions:** This device will provide you with security suggestions based on the device settings. Feel free to touch the button next to each suggestion, and follow the onscreen instructions to optimize your safeguards.
- **View recent security records:** You can find your recent security records in a list, for a better sense of how to protect your device.

You can also touch another displayed device to view its security status. If you would like to modify the settings, follow the onscreen instructions on the corresponding device.


Set Security Features for Your Phone

Go to **Settings > Security**, touch the features you wish to set, such as **App Lock** and **Password Vault**, and follow the onscreen instructions to complete the process.

View Security Suggestions on Your Phone

Feel free to view the recommended safeguards on your phone, and apply them on a case-by-case basis.

 
To do so, go to **Settings > Security**, and touch the switch next to the suggestion you wish to optimize, or follow the onscreen instructions to go to the corresponding screen and optimize the settings.

If you wish to ignore a suggestion, swipe left on the suggestion, and touch . The system will not continue to remind you, if you ignore the same suggestion twice.

Privacy

View and Manage the Privacy Settings on Your Phone

Find privacy tips, privacy permissions, and app privacy behavior logs on your phone, by visiting the privacy center. When an app uses a sensitive permission, your phone will inform you in real time, so that you can make timely adjustments, when necessary.

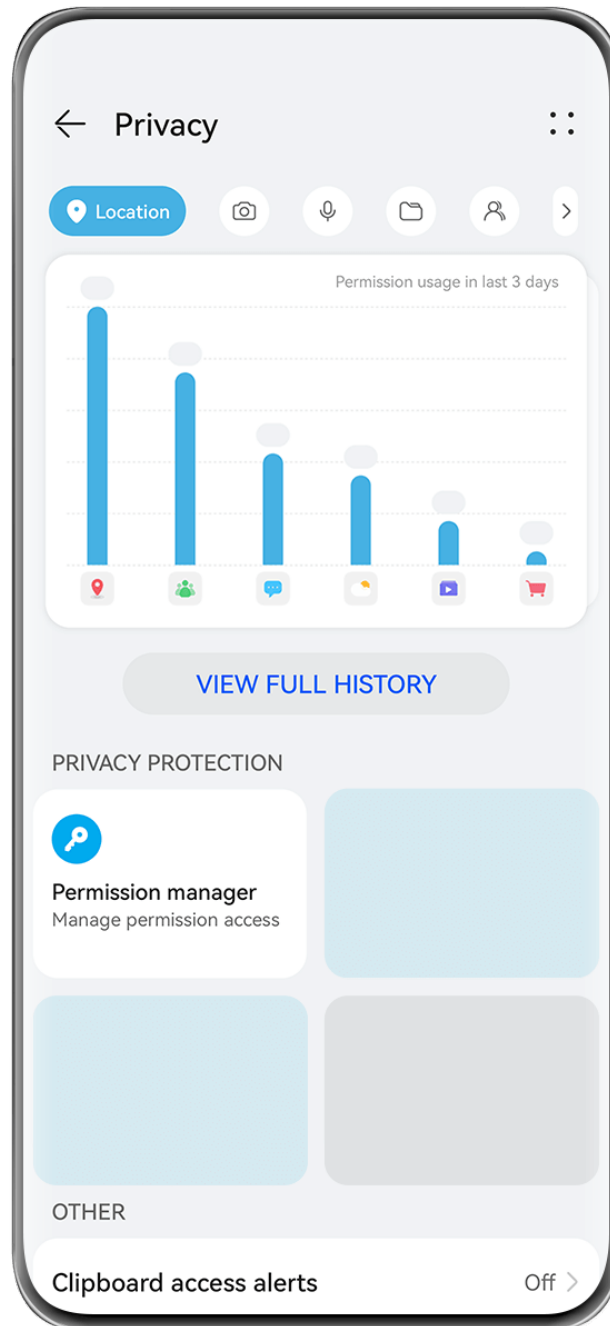


- The figures are for reference only.
- Privacy behavior logs are analyzed and displayed solely on your phone, and will not be uploaded to the cloud.
- Some system apps will not display permission reminders or privacy suggestions when using permissions.

View Permission Access Notifications

Your phone will inform you of any sensitive permissions that are being used on the status bar, and display the app information on Control Panel in real time. From there, you can choose to manage these permissions on a case-by-case basis.


For example, when an app uses the microphone permission, the microphone icon will display on the status bar. You can swipe down from the upper right edge of your phone to display **Control Panel**, and check which app is using this permission at the top.

Touch the app name to view the recent sensitive permission logs for the app, or to disable specific permissions for the app.


 Real-time access notification is only supported for certain sensitive permissions.

View Sensitive Permission Records

You can find the records related to sensitive permission usage and recent app privacy behavior in the privacy dashboard.

To do so, go to **Settings** > **Privacy**, and touch the permission icon, app icon, or  next to the permission icon on the privacy dashboard.

Touch **View full history** to view records of lock screen data access, frequent data access, and app privacy behavior.

If you wish to disable the display of such records, go to  > **Disable privacy report** in the upper right corner of the **Privacy** screen.

Bolster Image Privacy Protections

Concerned that certain third-party apps might obtain sensitive information from images in the background, or the image information may be leaked when you share images on social media, just enable **Image privacy** for ultimate peace of mind.


Go to **Settings** > **Privacy**, touch **Image privacy**, and enable **Remove location info** and **Remove other info**.

Once this feature has been enabled, third-party apps, rather than system apps, for example **Gallery**, will not be able to obtain sensitive image information, such as the locations, device models, and times when the images were taken.

Get Tips on How to Protect Your Privacy

When your phone detects that your privacy settings are risky or can be optimized, it will provide handy tips for levelling up the protection.

Go to **Settings** > **Privacy**, and follow the onscreen instructions to touch the button next to each suggestion.

If you wish to ignore a suggestion, swipe left on the suggestion, and touch . The system will not continue to remind you, if you ignore the same suggestion twice.

Clipboard Access Alerts

When clipboard access alerts is enabled, a pop-up window will display after your phone detects that an app is accessing the clipboard.

Go to **Settings** > **Privacy** > **Clipboard access alerts**, and enable **Clipboard access alerts**.

Accessibility Features

Use the Accessibility Features on Your Phone

Accessibility features, like screen-reading apps, magnification gestures, and screen color corrections, make the phone easier to navigate and more friendly to visually-impaired users.

Enable Color Correction to Customize the Screen Color

Color correction helps people with poor eyesight see the screen content more easily.

- 1 Go to **Settings** > **Accessibility features** > **Accessibility** > **Color correction** and enable **Color correction**.
- 2 Touch **Correction mode** to select a color correction mode.

Magnification

Use magnification gestures to zoom in on the screen.

To do so, go to **Accessibility** > **Magnification** and enable **Magnification** on the settings screen.

Zoom in by touching the screen three times in a row. Then, feel free to:

- Spread two or more fingers to further zoom in, then pinch two or more fingers together to zoom back out.
- Drag the screen with two or more fingers to view other parts of the screen.

While zoomed in, tap the screen with one finger three times in a row to restore the screen to the previous state.

Enable Color Inversion

Color inversion allows you to invert the color of the text and the background. When Color inversion is enabled, your phone will display text in white and the background in black.

On the **Accessibility** screen, enable **Color inversion**.

Enable or Disable an Accessibility Feature, by Using a Shortcut

Enable or disable an accessibility feature just by pressing the Volume buttons.

- 1 To do so, on the **Accessibility** screen, touch **Accessibility shortcut**, and enable **Accessibility shortcut**.
- 2 Touch **Select feature** to select the feature that you wish to enable with the shortcut, like **Color correction**.
- 3 Then press and hold the Volume up and down buttons simultaneously for 3 seconds to enable the feature. Do the same to disable the feature.

Adjust the Screen Touch Duration

You can adjust the touch duration and long touch duration, and set the time within which repeated touches will be ignored.

On the **Accessibility** settings screen, touch **Touchscreen settings**, then you can perform the following:

- Touch **Touch duration**, and set the touch duration as required.
- Touch **Touch & hold duration**, and set the long touch duration as required.
- Enable **Ignore repeated touches**, and drag the slider to set the time interval for repeated screen touches as required.

 Some products do not support the **Ignore repeated touches** feature. The actual product prevails.


Pool Text and Images with SuperHub

 
Drag text, images, and files on different screens to **SuperHub**, where they are temporarily stored, and then drag individual items, or multiple items, to other apps as needed.


Pool Content from Different Screens

Select text, images, or files within an app, touch and hold down on the content until it starts floating, and drag the content to the **SuperHub** floating window.

If you select multiple images or files at the same time, the selected content will stack up in **SuperHub**. You can touch the stacked content to view its details.


-  • If the **SuperHub** floating window does not pop up after you touch and hold down on the content, go to **Settings > Accessibility features > SuperHub** and enable **Show on drag**.
- Drag-and-drop operations are only supported in certain apps.

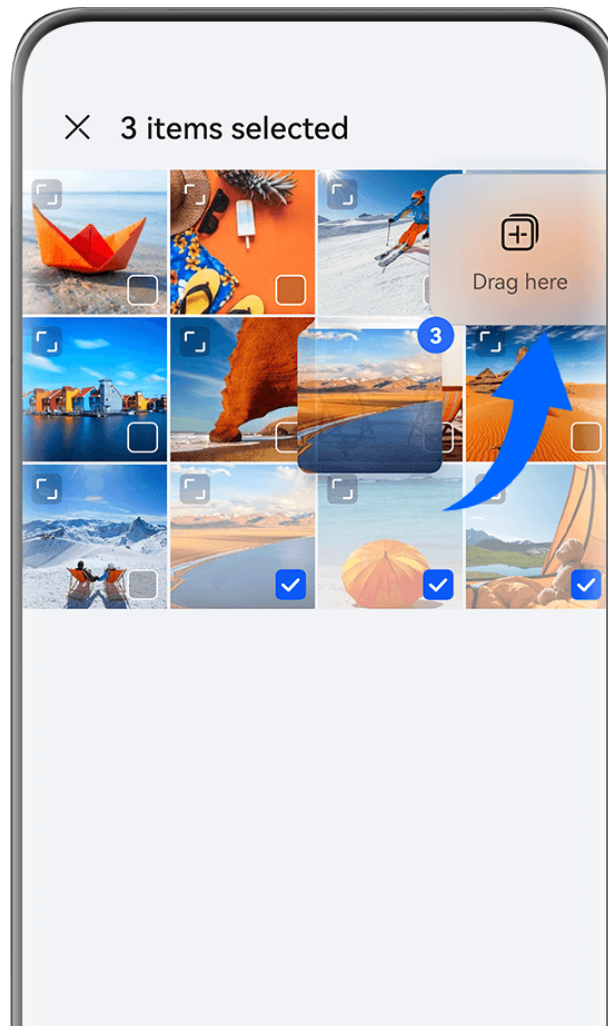

 The figures are for reference only.

Drag Content to Other Apps

 Drag content in **SuperHub** to apps like **Notepad** or **Email** for editing, or to apps like **Files** or **Gallery** for storage.

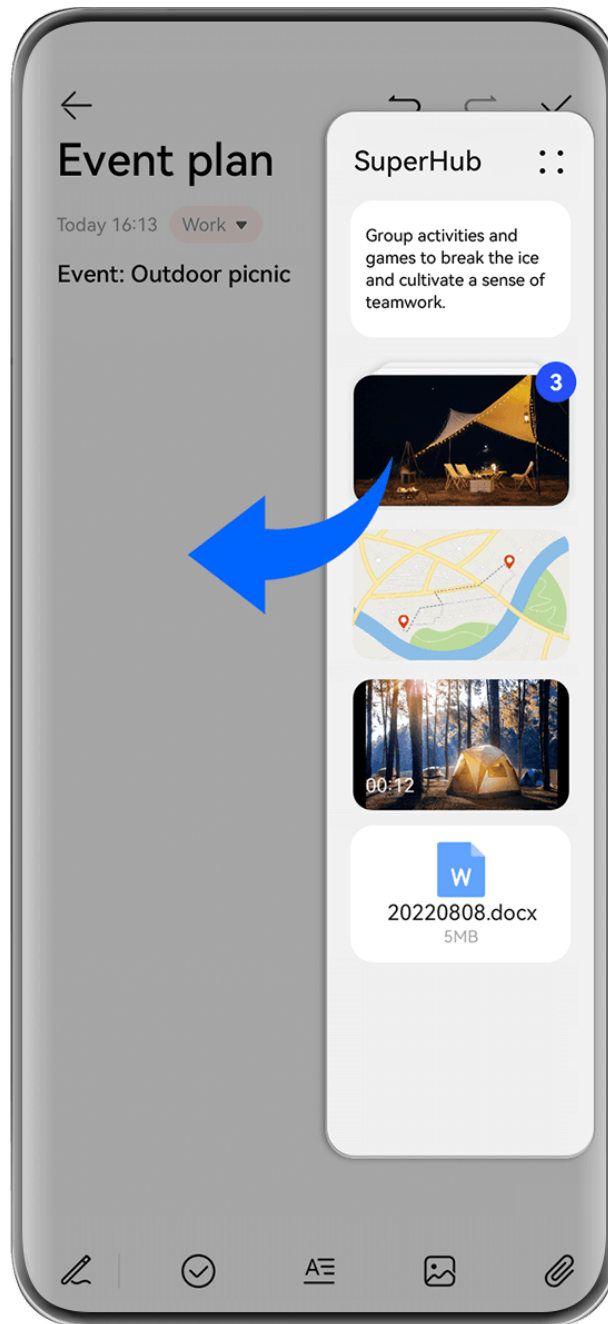


i The figures are for reference only.

For example, when editing a note in Notepad, feel free to:

- **Drag out all items:** Touch and hold down on the **SuperHub** floating window, wait for the content to start floating, and drag all items to the note at once.
- **Drag out individual items:** Touch the **SuperHub** floating window to expand **SuperHub**, touch and hold down on the item that you wish to transfer, wait for the item to start floating, and drag it to the note.




You can also touch the stacked content in **SuperHub** to view details, and drag individual items out as needed.

- **Drag out multiple items:** Touch the **SuperHub** floating window to expand **SuperHub**, touch and hold down on the content or go to **Select**, select the items that you wish to transfer, touch and hold down on these items, wait for them to start floating, and drag them to the note.

 Drag-and-drop operations are only supported in certain apps.


Manage SuperHub

Touch the **SuperHub** floating window to expand **SuperHub**. (If the floating window is hidden at the edge of the screen, swipe inward on the screen to bring up the floating window.) Then manage **SuperHub** as follows:

- **Deleting content from SuperHub:** Touch and hold down on the content, or go to  > **Select**, select the items that you wish to delete, and touch **Delete**.
- **Closing the SuperHub floating window:** Go to  > **Close**. Once closed, content in **SuperHub** will be transferred to **History**, which will overwrite the previously used content.
- **History:** Swipe up from the bottom of **SuperHub** to view and use **History**.
- **Clipboard:** Go to  > **Clipboard**, enable **Clipboard** as prompted. Once enabled, cut or copied text will display in **Clipboard**.
You can also enable or disable **Clipboard** by going to **Settings** > **Accessibility features** > **SuperHub**.

Drag Content to Other Devices

If you wish to complete an unfinished task on another device, you can transfer the content from **SuperHub** to another device capable of **SuperHub** with just a touch.


- 1 Make sure that **Wi-Fi** and **Bluetooth** are enabled on both this device and the target device, and that both devices are logged in to the same **HUAWEI ID**.
- 2 On this device, touch the **SuperHub** floating window to expand **SuperHub**, touch and hold down on the content or go to  > **Select**, select the items that you wish to transfer, touch **Hop**, and touch the name of the target device to transfer the items to **SuperHub** on the target device.

Requirements for File Hop Connections


To transfer content between devices, both of the following conditions must be met:


- 1 Make sure that both this device and the target device support **SuperHub**. (This feature will be made available on more models.)

Transferring to a phone/tablet: Make sure that both this device and the target device run EMUI 13.0 or later.

 If the **SuperHub** option is not available on the tablet/phone, it indicates that this feature is not supported by the tablet/phone.

Transferring to a PC: Make sure that **SuperHub** on this device has been updated to version 3.0.0.440 or later, and that PC Manager has been updated to the most recent

available version, by going to  > **Check for updates**.

 If the **SuperHub** icon is not available in the Control Panel on the PC, it indicates that this feature is not supported on the PC.

- 2 Make sure that **Wi-Fi** and **Bluetooth** are enabled on both this device and the target device, and that both devices are logged in to the same **HUAWEI ID**.

About Phone

Legal Notice

Copyright © 2024 Huawei Device Co., Ltd. All rights reserved.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Please visit <https://consumer.huawei.com/en/support/hotline> for recently updated hotline and email address in your country or region.

Model: CTR-L81

EMUI14.0_01