



10LA2

USER MANUAL



HYUNDAI
TECHNOLOGY



USER MANUAL

HYTAB PRO 10LA2

WARRANTY NOTICE

Limited Warranty does NOT cover:

Any costs associated with the repair or replacement of the Product including labor, installation or other costs incurred by you, and in particular, any costs relating to the removal or replacement of any Product that is soldered or otherwise permanently affixed to any printed circuit board; OR

Damage to the Product due to external causes, including accident, problems with electrical power, abnormal electrical, mechanical or environmental conditions, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing; OR

Any Product which has been modified or operated outside of specifications or where the original identification markings (trademark or serial number) has been removed, altered or obliterated from the Product, or where the label or screw on the exterior of the Product is removed or broken.

Specifications:

CPU	Powerful Octa-Core ARM Cortex™ A55 1.6GHz +1.2GHz
------------	--

Memory	4GB
---------------	-----

Storage	64GB
----------------	------

Operating System	Android™ 10
-------------------------	-------------

Connectivity	Wi-Fi 802.11 b/g/n (2.4 GHz , Bluetooth 4.2)
---------------------	--

Network	4G LTE Bands B2, 4, 5, 7, 28A, 28B, 39, 66
----------------	--

Sensor	G-Sensor Gyroscope
---------------	----------------------

Camera	13MP AF Rear Camera with LED Flash and 8MP AF Front Camera.
---------------	---

Display	10.1" 1200 x 1920 IPS FHD Capacitive Multi-Touch
----------------	--

Support Video 3G2, 3GP, AVI, MP4, MKV, WEBM, MOV

Support Image BMP, GIF, JPG, PNG, WBMP


Support Audio AAC, AMR, FLAC, MIDI, MP2, MP3, OGG, WAV

Battery 5000mAh Li-polymer, 3.7V

Charger Rating Input: 100-240V~50/60Hz 0.5A Output: 5.0V ---- 2A

**Dimensions &
Weight** 245 x 152 x 8.99mm & 499 grams.

SIM SD Micro
Slot Slot USB

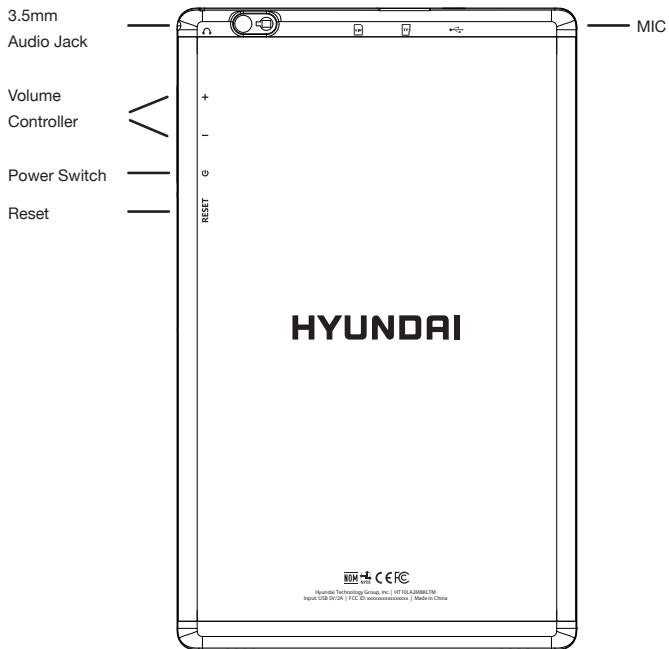

READ YOUR NOTIFICATIONS:

	SIM Network		Wi-Fi OFF		Warning
	3G Network		GPS		Event Reminder
	4G / LTE Network		Hot Spot & Tethering		Call on Hold
	VoLTE Network		Headset Mode		Missed Call
	No SIM		USB Connected		Speaker ON
	Brightness		Alarm set		New Message
	Bluetooth		Battery Full Indication		Do Not Disturb
	Uploading Data		Battery Charging Indication		New Gmail Message
	Downloading Data		Google Play Music		Google Chrome
	Airplane Mode		FM Radio Playpack		Playstore Update available
	Wi-Fi ON		Data Sync		Google DUO

Installing the SIM card and Memory card

You need to open the SIM door provided at the top side of the device before you can install the SIM card and storage card. We recommend you to always turn off the power before installing or replacing the SIM card and storage card.

To install the SIM card: The SIM card contains your phone number, service details, and phone book/message memory. Your device supports 2G, 3G & 4G SIM cards.

1. Pull the SIM / SD door.
2. Locate the SIM card slot, and then insert the SIM card with gold contacts facing back side and its cut-off corner facing out the card slot.
3. Push the SIM card completely into the slot.

To install the memory card: For additional storage of your images, videos, music, and files, you can purchase a memory card and install it into your device.

1. Pull the SIM/SD door.
2. Locate the SD card slot, and then insert the SD card with gold contacts facing Front side.
3. Push the SD card completely into the slot.

USING TABLET FEATURES:

- a. Power ON/OFF: Using the Tablet's Power Key (ON/OFF), you can get the tablet on Standby, to Restart or Shutdown.
- b. Making a call: On Home screen, touch Phone to enter the dial screen.
 - Call log tab: Select an entry listed in the log to call the number.
 - Contacts tab: Contacts with phone numbers are listed. Select a contact and then select the phone number to dial.
- c. Internet: You device's networking capabilities allow you to access Internet using your browser through Wi-Fi, GPRS, EDGE, 3G & 4G.
- d. Messages: Send short messages using the Short Message Service. After selecting the Create New function, enter the text message you wish to send. Press the option key to get Sending options, Input method and more.
- e. Photos: In the gallery, you can see captured/saved pictures and videos.
- f. Play Music: Using this Player, you can play your favorite music. The songs saved in your Memory Card can be played using the Music Player of the device.
- g. Camera: Use the Rear and Front camera to capture pictures and record videos.
- h. FM Radio: Using this you can play FM channels.

Network & Internet

Wi-Fi: Select Wi-Fi from settings if you wish to use Wi-Fi for your data connection. Open the Wi-Fi settings screen; select it from the network list. Provide your username or password if required.

Mobile Network: Select Mobile data, Roaming, Data usage, Mobile data always online, preferred network type, automatically select network Access Point Name.

Data Usage: It provides a graphical representation of data usage for a specified Data Usage cycle through Mobile Internet and Wi-Fi.

Hotspot & Tethering: Tablet can be used as a wireless modem for PCs, Tablets and Mobile Phones.

Airplane Mode: Using this, you can turn the Airplane mode ON/OFF.

VPN: VPN stands for Virtual Private Network. Using this feature, you can connect to your private network through a public network.

Connected Devices

Bluetooth ON/OFF: Tick on the Bluetooth checkbox at Settings to turn Bluetooth services ON/OFF. With Bluetooth services on, you can refresh, rename and see the received files.

Printing: To print your photos, document, and more from your tablet, check to see if your printer's manufacturer has an app on Play Store. Then touch Apps>Setting>Printing to get started.

Apps & Notifications

Notifications: Notifications appear at the top of the screen. You can change the notification alerts settings for applications.

Apps: Using this you can manage your applications in Tablet.

Smart controls: Smart wake up, lift to check time, notification icon, and other info, Smart motion pick up when ringing ring will weaken and device will vibrate. Flip the device to mute the incoming calls and mute alarms.

Battery: It gives you the current battery level, along with the distribution of battery consumption by different apps.

Display: Using the options in Display settings, a wallpaper of your choice can be set. There are options like auto-rotate screen and much more.

Audio Profiles: There are types of user profiles available; they are General, Silent, Vibration and Outdoor. Select one user profile and enter the following options:

Settings for profile: Select to control volume for Ringtone, Notification, Music, Video, Games, Other Media & Alarm and you can select Voice call ringtone/Default notification sound.

Dial pad tones: Select to have a tone sound when you use the onscreen dialer.

Screen locking sounds: Select to have a tone sound when you lock/unlock screen

Tap Sounds: Select to have a tone sound when you use the on screen menu.

Storage: View and manage the data storage in your Tablet.

Security & Location

Security: Change the settings of screen lock, SIM card lock, passwords, device administration and Credential storage.

Location: You can turn location mode ON/OFF completely, or just change your device's location accuracy mode. Each mode uses different sources to estimate your device's location.

Accounts: You can add new accounts like Gmail™, WhatsApp, etc. here.

Accessibility: These are the settings to help visually impaired users.

Google™: Includes other Google settings here.

System

Languages & Input: Include language settings, keyboard and input methods and soon.

Date & Time: Enables you to set your device's date and time.

Reset options: If you reset iTAB to the settings that were configured at the factory, all of your personal data from internal storage, including information about your Gmail Account, any other accounts, your system and application settings, and any downloaded applications, will be erased.

Developer Options: This provides you with the option to customize the device settings.

About HyTab: This provides the device information like model number, kernel version, build number, Android version, etc.

Certification logos: It will show device SAR Value, BIS number with logo. Also It will show by dialing *07# for BIS number with logo.

Multiple Users: This gives the information of the owner logged in the device. Here you can set the owner name & create multiple users.

APPLICATIONS:

Gmail: Configure your Gmail account in phone and access your mails.

Maps: Use this application to pinpoint the location of the device, search for places, or get directions.

Play Store: Use this application to purchase and download applications and games that are able to run on your HyTab.

PRODUCT AND SAFETY INFORMATION:

Warning

Use only the charger and accessories approved for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. For availability of approved accessories, please check with your dealer.

Battery and Charger Information

Your device is powered by a rechargeable Lithium-Polymer battery. Hyundai may make additional battery models available for this device. The battery can be charged and discharged many times, but it will eventually wear out. When the talk

and standby times are noticeably shorter than normal, replace the battery. Use only Hyundai approved batteries, and recharge your battery only with Hyundai approved chargers designated for this device. If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Safety Information

- Please do not use HyTab during charging. Always disconnect the HyTab from charger before use.
- Keep the HyTab at least an inch away from your body while dialing/answering calls.
- Do not use the HyTab if the screen is cracked or broken. Cracked or broken screen could cause injury to hands and/or face.
- Avoid using HyTab and batteries to extreme temperature. Like excessively cold, excessively hot, too humid or too dusty.
- Your device contains electronics parts and circuits. Keep them out of the reach of small children.
- Switch off your device in any area with a potentially explosive atmosphere.

Save Energy

You do not need to charge your HyTab battery so often if you do the following:

- Close applications and data connections, for example, your Bluetooth connection, when not in use.
- Deactivate unnecessary sounds, such as touchscreen and key tones.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with SAR limits set forth for an uncontrolled environment. The highest reported SAR values are 0.992W /kg
3. This equipment should be installed and operated with minimum distance 0mm between the radiator & your body.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

HYUNDAI

Google, Android, Google Play and other marks are trademarks of Google LLC.

The information contained herein is subject to change without notice. The only warranties for Connect and services are set forth in the express warranty statements accompanying such products and services.

Nothing herein should be construed as constituting an additional warranty. Connect shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: May 2016

Advertencia Nota para uso en México

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Contact Us

Visit us at <http://www.hyundaitechnology.com/>

For sales inquiry (U.S. Worldwide)

Email sales@hyundaitechnology.com

For technical support please contact HYUNDAI®

U.S. and Worldwide

Toll Free Number : (800) 560-0626

Monday-Friday 8:00am-5:00pm PST

Email: support@hyundaitechnology.com

México (Spanish)

Toll Free Number : 81 5030-7375

Lunes-Viernes 8:00am-5:00pm CST

Email: soporte@hyundaitechnology.com