

210.00 mm

280.00 mm

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
The appliance must not be immersed in water.

IBELL®
Complete Home Solution

IBELL®
Complete Home Solution
Before using this kettle, Please read this instruction manual completely



IBL MPK 12M
Electric Kettle User Manual

Thank you for choosing our products. It is just one of a complete range of cleverly designed, safe and practical products which will help to make your life easier. Please read these instructions carefully to get the best results from this product.

DESIGNATION OF COMPONENTS



(Water level scale inside the kettle body)

SAFETY INSTRUCTIONS

1. No responsibility is accepted for damage resulting from improper use or non-compliance with the instructions.
2. The kettle is designed for heating water only. Never put any other liquid into the kettle, nor should it use another cooking appliance.
3. Before inserting the main plug into the socket check whether the supply line voltage and current rating are in compliance with the rated electric parameter shown on the kettle label.
4. Do not operate the kettle with wet hands.
5. Keep children away from the kettle which is either in heating or filled with hot water.
6. Prevent from scalding water or steam.
7. Pour away the very first water boiled with this kettle. Then it is ready for use.
8. Do not touch any part of the kettle except the handle when the kettle is fully filled with boiling water.
9. Pour out the boiling water in one time, in order to enable the temperature of the kettle to decline.
10. Remove the plug from the wall socket in following case.
 - a) after use
 - b) malfunction comes up
 - c) before cleaning
11. When removing the plug from the wall socket never pull on the power cord.
12. Regularly clean and scour out the kettle, but can't allow the kettle, especially the heating base, be immersed in water.
13. The appliance must not be immersed in water.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.

OPERATION GUIDELINES

1. Filling water
 - The capacity of filled water is limited by the ultimate line graduated on the kettle body. It should not be higher than the max line, nor lower than the minimum line.
 - On filling water, care should be taken to avoid water column flowing on the kettle is outside surface.
2. Locating
 - Place the kettle on a stable flat surface, do not allow water to penetrate the electrical parts inside the kettle.
 - Never heat the kettle on any wet surface, do not allow water to penetrate the electrical parts inside the kettle.
 - Do not position the kettle on or near hot surface or near open flames.
3. Switching on
 - Insert the main plug on the power cord into the wall socket.
 - Please take care that the power cord must be well located and can't be caught on by a passerby
 - push the restoring switch
 - The red indicator lamp brights, it indicates that the kettle is in heating.
4. Boiling
 - The kettle is automatically switch off several seconds after the water is boiling.
 - The red indicator lamp goes out as switch off.
5. Restoring
 - After the kettle has switch off, it will need sometime to cool down. Almost after 15 seconds, the kettle can be switched on again by manual restoring.
 - If the red indicator lamp still goes out after pushing the restoring switch, it may be the case that the temperature sensing controller is still in hot condition and time must be taken for re-operating the kettle.

FEATURE

- 1) Concealed heating element with stainless steel kettle bottom, resulting in convenience to clean.
- 2) Temperature sensing controller-automatic switch-off when water is boiling.
- 3) Dry-boiling protector-boil-dry safety cutoff.
- 4) Easy-fill hinged lid.
- 5) Rotary (360) cordless base lead to the convenience for use.
- 6) Shining body.

WARRANTY TERMS AND CONDITIONS

- The appliance is warranted for 1 year against all manufacturing defects. This warranty will not cover damage due to accident, mishandling or non-compliance with the instructions given in the instruction Manual.
1. This warranty is valid only if this card is duly signed and stamped by our dealer and is produced along with the original customer's copy of the purchase bill.
 2. Warranty period starts from the date of purchase from our authorized dealer only.
 3. The Appliance has to be used with all normal care and maintenance and in accordance with instructions for use, recommended by the company, as enumerated in the instruction manual.
 4. The Appliance should not be repaired, tampered or altered by any agency or person other than an authorised company personnel or their service centers.