

get started

INSTANT™ **COLD BREWER**
USER MANUAL

Instant

Welcome

to your new Instant™ Cold Brewer!

Skip the line at your local coffee shop. The Instant™ Cold Brewer with FlashExtract™ technology lets you make delicious, never-heated, true cold brew in under 20 minutes!

Get started with your new Cold Brewer!



⚠️ WARNING

Before using your Instant™ Cold Brewer, read all instructions, including the Safety and Warranty document. Failure to follow the safeguards and instructions may result in personal injury and/or property damage.

CONTENTS

Important safeguards	2
What's in the box	5
Before you brew	6
Your Instant™ Cold Brewer	7
Cold brewing	8
Troubleshooting	10
Care, cleaning, storage	11
Learn more	12
Warranty	14
Notes	16

IMPORTANT SAFEGUARDS



⚠️ WARNING

Safety Instructions

At Instant™, we want you to feel comfortable using our products. This Instant™ Cold Brewer was designed with you and your safety in mind.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, personal injury/or property damage.

Read all instructions before using and only use this appliance as described in the in-box materials. Failure to follow these safeguards and instructions may result in personal injury and/or property damage, and can void your warranty.

Placement

- **DO** operate the appliance on a stable, non-combustible, level surface.
- **DO NOT** place the appliance on or near a hot gas or electric burner, or in a heated oven.

General Use

- **DO NOT** use this coffee maker outdoors.
- **DO NOT** operate cold brewer without water.
- **DO NOT** use the appliance for anything other than its intended use. Not for commercial use. For household use only.
- **DO** regularly inspect the appliance and power cord.
- **DO NOT** leave the appliance exposed to sun, wind, and/or snow.
- **DO** operate and store the appliance above **32°F / 0°C**
- **DO NOT** allow children to operate or play with appliance; this appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities. Close supervision is necessary when any appliance is used near children.

Glass Jug Use

- **DO NOT** use the jug if it is cracked or chipped.
- **DO NOT** use the jug if the handle is loose or weakened.

⚠ WARNING

- **DO NOT** expose the jug to extreme temperature changes, such as adding hot water to the jug when it is cold. Doing so may cause the glass to crack.
- **DO** make sure the lid is secure on the jug before pouring cold brew.
- **DO NOT** clean the jug with harsh cleansers, steel wool pads or other abrasive materials; doing so can scratch the surface.

Care and Storage

- **DO** turn the appliance **OFF**, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning.
- **DO NOT** store any materials in the brewing chamber or glass jug when not in use.

Power Cord

A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.

- **DO NOT** let the power cord touch hot surfaces or open flame, including the stovetop.
- **DO NOT** use with power converters or adapters, timer switches or separate remote-control systems.
- **DO NOT** let the power cord hang over the edge of tables or counters.
- **DO** unplug your cold brewer by grasping the plug and pull from the outlet. Never pull from the power cord.
- **DO NOT** attempt to modify the plug. If the plug does not fit full into the outlet, reverse the plug.
- **DO** contact a qualified electrician if the plug does not fit in the outlet.

Electrical Warning

The cold brewer power base contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock.

To protect against electrical shock:

- To reduce the risk of personal injury, property damage, fire, and/or electric shock, do not remove the bottom cover. No user-serviceable parts inside. Repair should be done by authorised service personnel only.
- To disconnect, remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or

⚠ WARNING


accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

- **DO** regularly inspect the appliance and power cord. **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at support.au@instantbrands.com.
- **DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock, personal injury, fire or property damage, and will void the warranty.
- **DO NOT** tamper with any of the safety mechanisms, as this may result in personal injury or property damage.
- **DO NOT** immerse power cord, plug, or the power base in water or other liquid to protect against risk of electric shock or other related personal injuries.
- **DO NOT** use the appliance in electrical systems other than 220-240V~, 50-60Hz for Australia and New Zealand.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact our Customer Care at support.au@instantbrands.com.
- **DO** only use Instant™ approved parts/components. Failure to follow these safety instructions may result in fire, electric shock, other related personal injuries and/or property damage and may void your warranty.

SAVE THESE INSTRUCTIONS

WHAT'S IN THE BOX

Instant® Cold Brewer

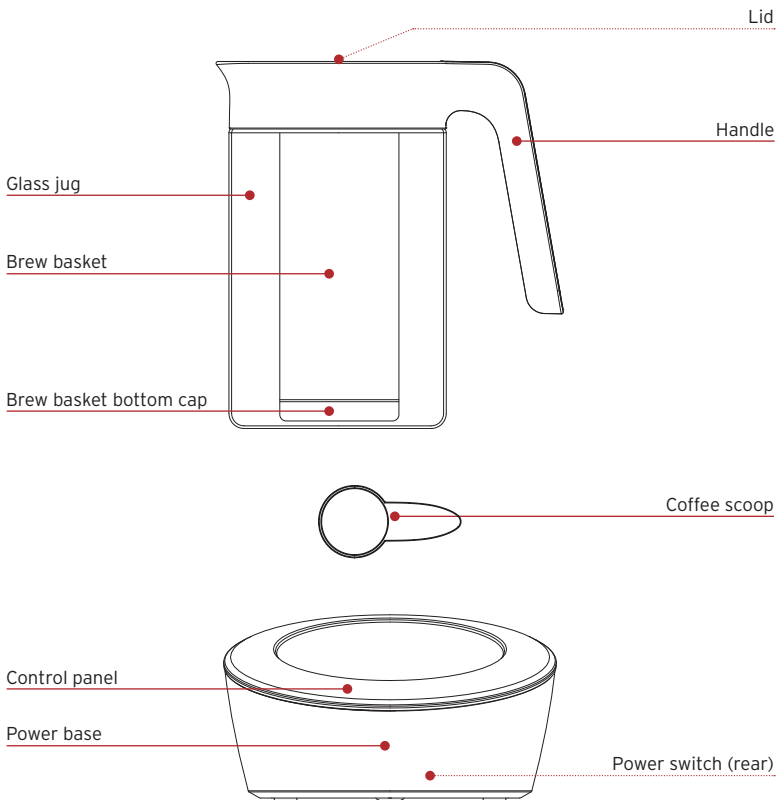

Illustrations are for reference only and may differ from the actual product.

Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live. Be sure to keep this User Manual for reference.

BEFORE YOU BREW

Initial setup

1. Remove the Instant™ Cold Brewer from the box.
2. Discard excess packaging materials around and within the unit.
3. Ensure the brew basket's bottom cap is securely fastened to the basket.

You can unscrew the bottom cap to dispose of grounds and prior to cleaning.

4. Remove the jug lid.
5. Place brew basket through the handle housing, into the glass jug.
6. Place the Instant™ Cold Brewer power base on a dry, stable surface.
7. Place glass jug with brew basket onto power base.

Clean before use

The glass jug and handle, lid and brew basket are all dishwasher safe. You can also handwash these pieces using soap and rinsing with warm water.


1. Remove lid from glass jug.
2. Use the brew basket handle to lift the brew basket from glass jug.
3. Unscrew the bottom cap of the brew basket.
4. Wash the pieces by hand or placing them onto the top rack of a dishwasher.
5. Ensure all pieces are sufficiently dried prior to reassembly and brewing.
6. While unplugged, use a damp cloth to wipe down the power base and control panel.

⚠ DO NOT place power base into dishwasher or submerge power base in water.

YOUR INSTANT™ COLD BREWER

Control panel

The control panel uses flat-touch buttons. To operate, touch lightly without pressing too hard.

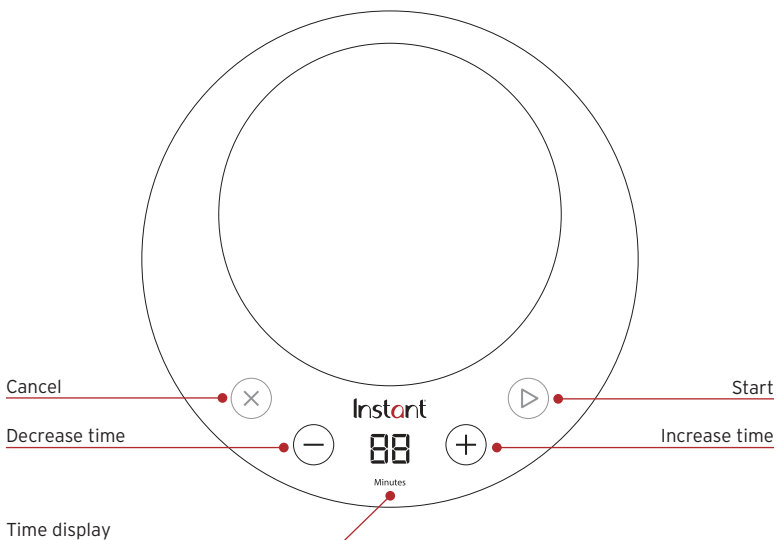

Plugging in your Instant™ Cold Brewer

Once you've followed the Initial Setup instructions on page 6, plug the power base into an outlet. The Cold Brewer should power up. If the display does not power on, flip the switch at the back of the power base.

After 2 minutes of inactivity, the display will dim.

COLD BREWING

True cold brew

Traditional cold brewing takes up to 24 hours. The Instant™ Cold Brewer's FlashExtract™ technology delivers delicious, never-heated, café-quality cold brew or iced tea in under 30 minutes.

Recommended brewing for coffee

We recommend using medium-ground coffee and a 14:1 water-to-coffee ratio. Depending on the size of the grind, the brew basket can hold up to 70 grams of coffee. Adjust coffee to water ratio as well grind consistency to taste. Scoop measurements are for the included scoop.

DO NOT use fine grind coffee grounds.

Servings	Coffee	Water	Time
2	3.5 scoops/18 tsp/34 grams	16 oz	15 minutes
4	7 scoops/36 tsp/67 grams	32 oz	20 minutes

For delicious coffee

By brewing combining FlashExtract™ technology with overnight brewing delivers delicious cold brew. After the initial brew on the power base, store the jug with brew basket inserted into the fridge.

Servings	Coffee	Water	Time
4	7 scoops/36 tsp/67 grams	32 oz	5 minutes on power base 12-16 hours in fridge

For bolder cold brew

The Instant™ Cold Brewer allows for a maximum brew time of 30 minutes. Increase the amount of ground coffee and brew time to create a bolder cup of coffee.

Brewing iced tea

The Instant™ Cold Brewer can brew iced tea using loose tea leaves (not tea in bags). The brew basket can hold up to 6 teaspoons (2 tablespoons) of loose tea leaves.

DO NOT use tea bags or loose teas containing large leaves, stems or dried fruits.

Servings	Loose tea	Water	Time
2	1/2 scoop/2-3 tsp	16 oz	20 minutes
4	1 scoop/5-6 tsp	32 oz	20 minutes

For stronger iced tea

The Instant™ Cold Brewer allows for a maximum brew time of 30 minutes. Increase the amount of brew time to create stronger iced tea. Some tea varietals take more time to brew than others; green tea and chamomile are likely to take longer to brew.

How to cold brew

Prep

1. Plug in and turn on the Instant™ Cold Brewer.
2. Fill glass jug with water. Place glass jug onto power base.
3. Fill brew basket with coffee grounds or tea leaves.

DO NOT overfill the brew basket. Ensure bottom cap is fastened to brew basket before filling and brewing.

Brew

1. Place the loaded brew basket into the glass jug, through the handle housing.
2. Place lid onto the glass jug.
Turn the lid to the closed position, ensuring pour spout is closed.
3. Use the + and - button on the Flat-Touch panel to set brewing time.
You can press and hold the '+' button to add time in 5 minute increments. For stronger coffee, you can increase brew time at any time.
4. Press the **Start** button to begin brewing.
Cancel brewing anytime by pressing the X on the Flat-Touch control panel.
5. When the timer reaches **00**, brewing is complete.
6. Remove lid and the brewing basket.
7. Unscrew brew basket bottom to discard coffee grounds or tea leaves.
8. Place lid back onto glass jug. Turn lid to open pour spout to serve.

TROUBLESHOOTING

Problem	Cause	Solution
Display shows E1	Agitator at bottom of brew basket is jammed; this can be caused by overfilling with coffee grounds or loose tea, tea leaves that are too large, or tea ingredients such as stems or dried fruit.	<ul style="list-style-type: none">Remove brew basket from jug, then remove coffee grounds or loose tea leaves, refill and do not overfill brew basket
Loud noise when brewing	Brew basket is not properly in place	<ul style="list-style-type: none">Cancel brewing program, remove lid and lift the brew basket. Reseat basket through lid, centering the brew basket over the power base
Less water than initially used	Water trapped in brew basket	<ul style="list-style-type: none">Remove and slightly tilt the brew basket to drain trapped water
Brewer stops after a few seconds	Jug not placed on power base or brew basket not fully assembled	<ul style="list-style-type: none">Ensure bottom cap of brew basket is fully assembled, brew basket is fully seated through the lid, and the jug is properly placed on power base

CARE, CLEANING, STORAGE

Clean your Instant™ Cold Brewer regularly to ensure the best possible flavour and to prevent mineral deposits from building up in the unit.

Always unplug the power base before cleaning. Never use metal scouring pads, abrasive powders, or harsh chemical detergents on any of the cold brewer's parts.

Let all parts dry thoroughly before use, and before storage.

Part/Accessory	Cleaning methods and instructions
Glass jug	• Handwash or place on top rack of dishwasher.
Lid	• Handwash or place on top rack of dishwasher.
Brew basket	• Handwash or place on top rack of dishwasher.
Coffee Scoop	• Handwash or place on top rack of dishwasher.
Flat-Touch control panel and power base	• While unplugged, use a damp cloth to wipe down control panel.
Power cord	• DO NOT fold power cord when storing.

⚠ Be careful: The power base contains electrical components.

To avoid fire, electric shock, personal injury, and/or property damage:

- **DO NOT** rinse or immerse the power base, power cord, or the plug into water or other liquids.
- Any other servicing should be performed by a qualified service technician.

LEARN MORE

There's a whole world of Instant™ Cold Brewer information and help just waiting for you. Here are some of the most helpful resources.

Register your product

instantbrands.com.au/pages/product-registration

Contact Consumer Care

instantbrands.com.au

support.au@instantbrands.com



1800 251 643 or +61 2 9317 1000



Download the Instant Brands Connect App

- Recipes
- New User Tips
- Getting Started Videos



Join the community

  @Instant.anz

  @Instantanz

Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
CBCM-1000	32oz / 946 mL glass jug	15 W	220-240V~, 50/60Hz	2.5 lb 1.13 kg	in: 6.7 L x 7.9 W x 9.8 H cm: 17 L x 20 W x 24.9 H

Warranty

Limited Warranty

This Limited Warranty is issued by Instant Brands (Australia) Pty Ltd (Instant Brands Australia) and is effective for one year from the date of original consumer purchase. Proof of original purchase date and return of your appliance is required to obtain service under this Limited. Return of your appliance to us will be done in accordance with our instructions only. Provided that this appliance is operated and maintained in accordance with written operating instructions attached to or furnished with the appliance or published operating instructions on www.instantbrands.com.au, Instant Brands Australia will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

We remind you the appliance you purchased is for personal use only (not commercial use).

Any modification/alteration or attempted modification/alteration to your appliance will void this Limited Warranty, unless such modification/alteration or attempted modification/alteration was expressly authorised by an Instant Brands Australia Representative in writing.

This Limited Warranty only covers Instant Brands Australia's appliances/products and is not extended to any other appliances, products, equipment, components, or devices that you use or may use in conjunction with the Instant Brands Australia's appliances.

To claim under this Limited Warranty:

1. Contact Instant Brands Australia at:
Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria, NSW 2015
Email: support.au@instantbrands.com
2. Provide a description of the appliance you believe has malfunctioned due to defective parts or workmanship.
3. If it is necessary for the appliance to be sent to Instant Brands Australia for repair or replacement, Instant Brands Australia will send you a pre-paid shipping label and you must send the appliance and your dated sales receipt to Instant Brands Australia along with the appliance. If you do not have your dated sales receipt, please advise Instant Brands Australia in advance, and Instant Brands Australia will attempt to verify your purchase.
4. If Instant Brands Australia determines that the appliance has malfunctioned due to defective parts or workmanship, and is covered under this Limited Warranty, Instant Brands Australia will repair and return the appliance, or send you a replacement appliance, at Instant Brands Australia's cost.
5. Any repaired or replaced appliance will be covered by this Limited Warranty for the remainder of the original warranty period or ninety (90) days following your receipt of the replacement or repaired appliance, whichever is greater.
6. If Instant Brands Australia confirms the appliance has not malfunctioned due to defective parts or workmanship, and/or is in working order, or if proof of purchase is not verified, Instant Brands Australia reserves the right to return the appliance to you at your pre-paid cost. If this cost is not met, Instant Brands Australia reserves the right to dispose of the appliance after 45 days' notice to you.

WARRANTY

Limitation and Exclusions

To the maximum extent permitted by law, the maximum liability of Instant Brands Australia, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance or part of the same age.

This Limited Warranty does not cover:

1. Damage resulting from accident, modification/alteration (unless expressly authorised by an Instant Brands Australia Representative in writing), misuse, abuse, neglect, unreasonable use, use contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on instantbrands.com.au, normal wear and tear, commercial use, improper assembly by you or anyone, disassembly by you or anyone, repair by you or anyone, failure to provide reasonable and necessary maintenance, force majeure event including but not limited to fire, flood, acts of God;
2. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on instantbrands.com.au; or
3. Use of unauthorised parts and accessories, or repairs to parts and systems resulting from unauthorised repairs or modifications/alterations made to your appliance.

The cost of repair or replacement under these excluded circumstances shall be borne by you. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by Instant Brands (Australia) Pty Ltd.
Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria, NSW 2015.
1800 251 643 or +61 2 9317 1000.
Email: support.au@instantbrands.com

©2024 Instant Brands (Australia) Pty Ltd.

Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria
NSW 2015, Australia.

instantbrands.com.au

© 2024 Instant Brands LLC.

INSTANT and INSTANT BRANDS are registered
trademarks of Instant Brands Holdings Inc.