


QUICK START GUIDE

BAR1000MIK2


JBL



ONLINE SUPPORT

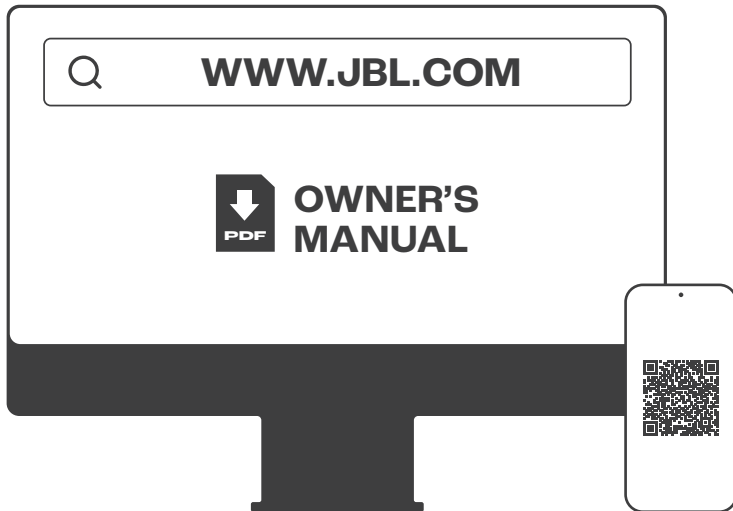

WHAT'S IN THE BOX

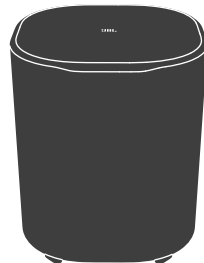


x 2




* Power cord quantity and plug type vary by regions.

WALL MOUNTING

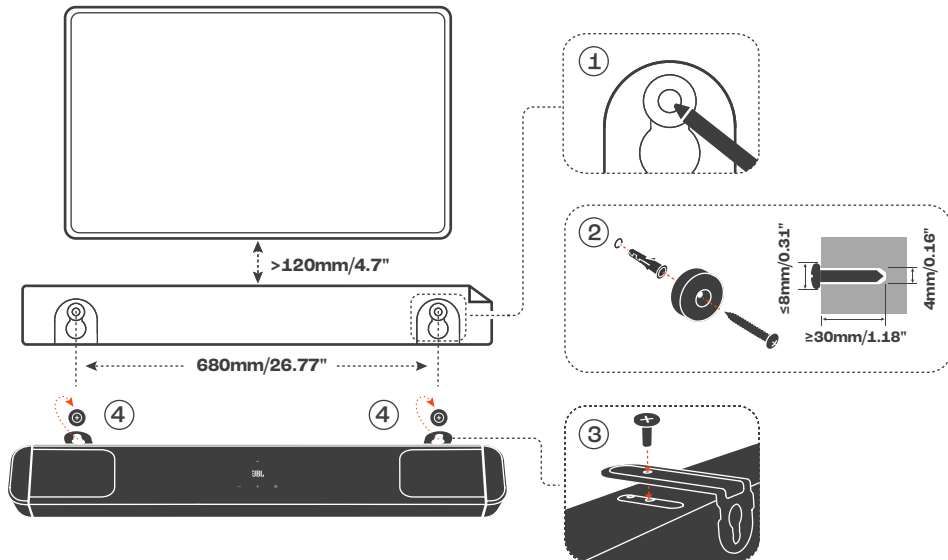


WALL MOUNTING

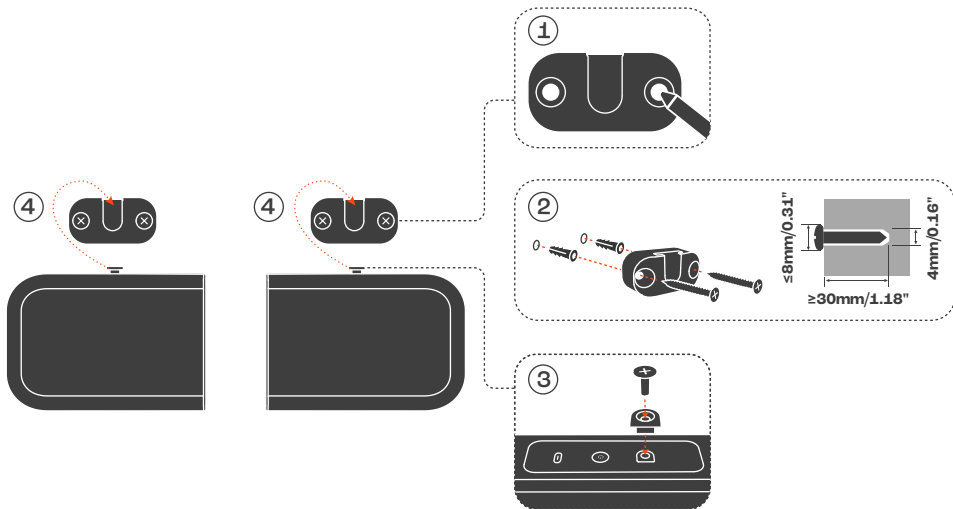


CONNECT

(FOR eARC TV)

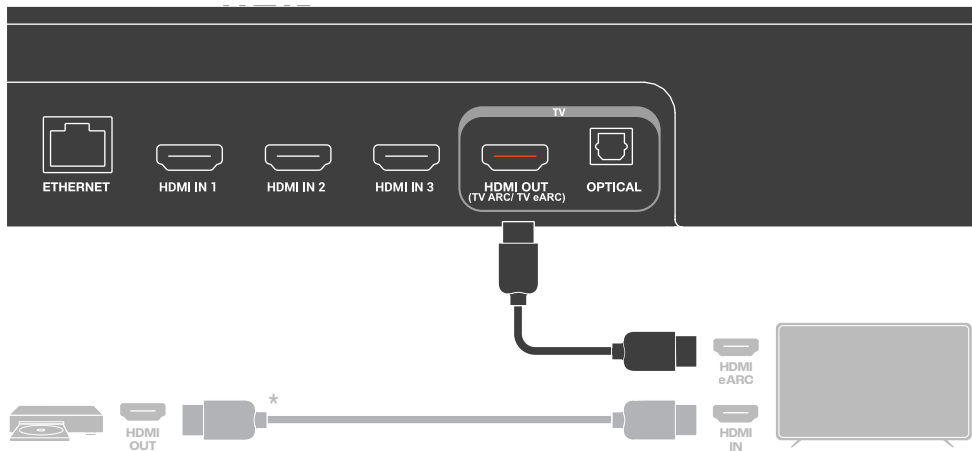


CONNECT


(FOR ARC TV)

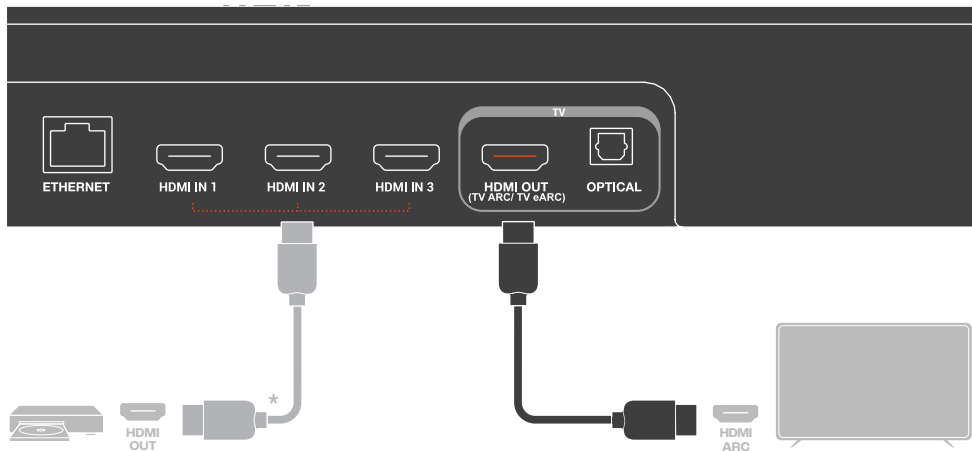

POWER ON & CHARGE

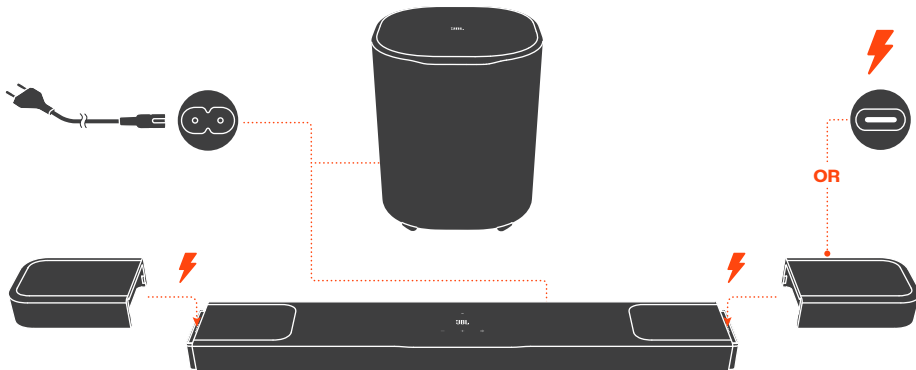


SOUND CALIBRATION

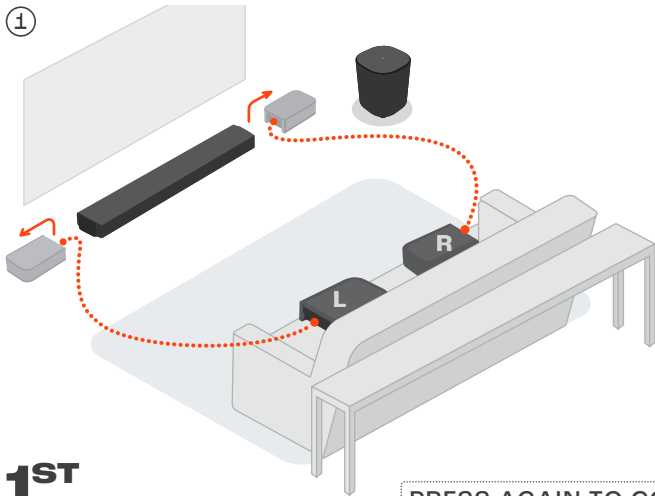

1ST
CALIBRATION



1-CALIBRATION

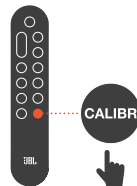

PRESS AGAIN TO CONFIRM




1-DONE

SOUND CALIBRATION



④

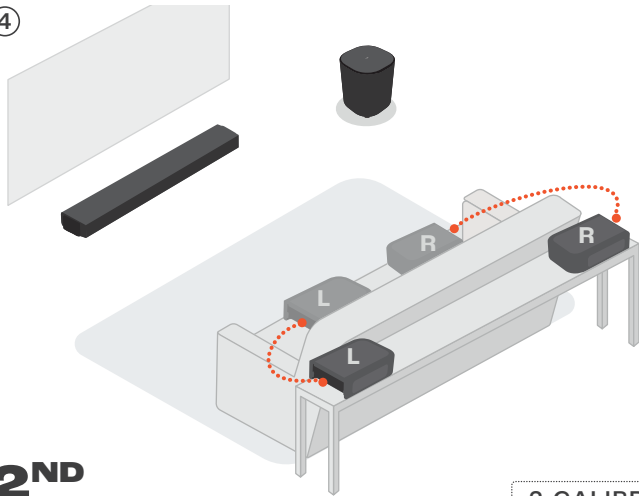


2ND
CALIBRATION

⑤



PRESS CALIBR AGAIN

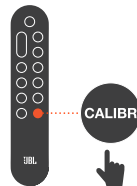

⑥




2-CALIBRATION



2-DONE

APP

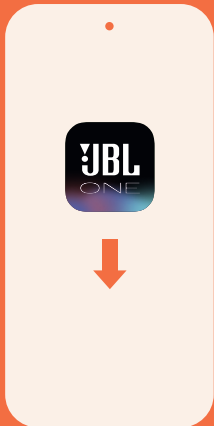

Connect your Android™ or iOS device to the Wi-Fi network and follow app instructions to complete speaker setup.



JBL ONE



GET IT ON
Google Play



Download on the
App Store

*The availability of features will vary between countries and not all features may be available in your country.

TECH SPEC

General specification

- Model: BAR 1000MK2 (soundbar unit)
BAR 1000MK2 SURROUND (detachable speaker)
BAR 1000MK2 SUB (subwoofer unit)
- Sound system: 7.1.4 channel
- Power supply: 100 - 240 V AC, ~ 50/60 Hz
- Total speaker power output* (Max. @THD 1%): 960 W
- Soundbar output power** (Max. @THD 1%): 500 W
- Surround speaker output power*** (Max. @THD 1%): 2 x 80 W
- Subwoofer output power**** (Max. @THD 1%): 300 W
- Soundbar transducer: 6 x (44 x 80) mm racetrack drivers, 2 x 1" (25 mm) tweeters, 2 x 2.75" (70 mm) up-firing full-range drivers
- Surround speaker transducer: 2 x (44 x 90) mm racetrack drivers, 2 x 2.75" (70 mm) up-firing full-range drivers
- Subwoofer transducer: 10" (260 mm)
- Networked standby power: <2.0 W
- Operating temperature: 0 °C - 45 °C
- Lithium battery: 3.635 V, 6600 mAh
- Detachable surround speaker playlist: up to 10 hours (may vary according to content type and volume level)

HDMI specification

- HDMI video input: 3
- HDMI video output (with Enhanced Audio Return Channel, eARC): 1
- HDMI HDCP version: 2.3
- HDR pass through: HDR10+, Dolby Vision

Audio specification

- Frequency response: 33 Hz - 20 kHz (-6 dB)
- Audio inputs: Optical, Bluetooth, USB (USB playback is available in US version. For other versions, USB is for Service only.)

USB specification

- USB port: Type A

- USB rating: 5 V DC, 0.5 A
- Supporting file formats: mp3
- MP3 codec: MPEG 1 Layer 2/3, MPEG 2 Layer 3, MPEG 2.5 Layer 3
- MP3 sampling rate: 16 - 48 kHz
- MP3 bitrate: 80 - 320 kbps

Wireless specification

- Bluetooth version: v5.3
 - Bluetooth profile: A2DP v1.3, AVRCP v1.5
 - Bluetooth transmitter frequency range: 2400 MHz - 2483.5 MHz
 - Bluetooth transmitter power: <15 dBm (EIRP)
 - Wi-Fi network: IEEE 802.11 a/b/g/n/ac/ax (2.4 GHz / 5 GHz)
 - 2.4G Wi-Fi transmitter frequency range: 2412 - 2472 MHz (2.4 GHz ISM Band, USA 11 Channels, Europe and others 13 Channels)
 - 2.4G Wi-Fi transmitter power: <20 dBm (EIRP)
 - 2.4G wireless transmitter frequency range: 2406 - 2474 MHz
 - 2.4G wireless transmitter power: <10 dBm (EIRP)
 - 5G Wi-Fi transmitter frequency range: 5.15 - 5.35 GHz, 5.470 - 5.725 GHz, 5.725 - 5.825 GHz
 - 5G Wi-Fi transmitter power: 5.15 - 5.25 GHz <23 dBm, 5.25 - 5.35 GHz & 5.470 - 5.725 GHz <20 dBm, 5.725 - 5.825 GHz <14 dBm (EIRP)
- Note:** Band 5.6 - 5.64 GHz will be disabled when shipped to Australia / New Zealand.

Dimensions

- Total soundbar dimensions (W x H x D): 1203 x 52 x 128 mm / 47.4" x 2.0" x 5.0"
- Soundbar dimensions (W x H x D): 854 x 52 x 128 mm / 33.6" x 2.0" x 5.0"
- Detachable surround speaker dimensions (each) (W x H x D): 189 x 52 x 128 mm / 7.4" x 2.0" x 5.0"
- Subwoofer dimensions (W x H x D): 325 x 400 x 325 mm / 12.8" x 15.7" x 12.8"
- Soundbar weight: 5.5 kg / 12.1 lbs
- Detachable surround speaker weight (each): 0.9 kg / 2 lbs
- Subwoofer weight: 9.1 kg / 20 lbs
- Packaging dimensions (W x H x D): 980 x 398 x 495 mm / 38.58" x 15.67" x 19.49"
- Packaging weight: 22.6 kg / 49.8 lbs (EMEA/UK/AU/NZ); 19.9 kg / 44.4 lbs (Others)

* RMS @THD 1%: 480 W | ** RMS @THD 1%: 250 W | *** RMS @THD 1%: 2 x 40 W | **** RMS @THD 1%: 150 W

EN

1. Information on power consumption

This equipment complies with European Commission Regulation (EU) 2023/826.

- Off: N/A
- Standby (when all wireless connections are deactivated): < 0.5 W
- Networked standby for Soundbar: < 2.0 W

2. The period of time after which the power management function switches the equipment automatically into:

Off	N/A	
Standby	When all wired ports are disconnected and all wireless network connections are deactivated	Switched to standby mode after 10 minutes
Networked standby	When any wireless network connection is activated	Switched to networked standby mode after 10 minutes of inactivity in operational mode

3. If this equipment has the wireless network connections:

How to activate wireless network connections:

- Switch into wireless mode (Bluetooth, Google Cast™, AirPlay casting audio & etc).
- The product will enter networked standby after 10 minutes of inactivity, after which it can be re-activated via Wi-Fi connection with energy using products (e.g. players, mobile phone, etc).

How to deactivate wireless network connections:

- Hold  on the remote control for more than 5 seconds firstly;
- Then hold  on the remote control for more than 5 seconds.

4. Recommended external Adaptor information (for SURROUND):

- Power adaptor with rating output: 5.0 V DC, 2.5 W - 10.0 W.
- Energy efficiency rating: level VI or complies with corresponding regional or national laws and regulation.

FR

1. Informations sur la consommation électrique

Cet équipement est conforme au Règlement (UE) 2023/826 de la Commission européenne.

- Éteint : S. O.
- Veille (lorsque toutes les connexions sans fil sont désactivées) : < 0,5 W
- Veille en réseau pour la barre de son : < 2,0 W

2. La durée après laquelle la fonction de gestion de l'énergie commute automatiquement l'équipement dans l'état :



Éteint	S. O.	
Veille	Lorsque tous les ports câblés sont déconnectés et que toutes les connexions réseau sans fil sont désactivées	Mise en veille après 10 minutes
Veille en réseau	Lorsqu'une connexion réseau sans fil est activée	Passage en veille en réseau après 10 minutes d'inactivité en état opérationnel

3. Si cet équipement a des connexions réseau sans fil :

Activation des connexions réseau sans fil :

- Basculez en mode sans fil (Bluetooth, Google Cast, diffusion audio AirPlay, etc.).
- Le produit entre en veille en réseau après 10 minutes d'inactivité, après quoi il pourra être réactivé via connexion Wi-Fi avec des produits utilisant de l'énergie (par ex. lecteurs, téléphone mobile, etc).

Désactivation des connexions réseau sans fil :

- Appuyez d'abord pendant plus de 5 secondes sur  de la télécommande ;
- Appuyez ensuite pendant plus de 5 secondes sur  de la télécommande.

4. Informations sur l'adaptateur externe recommandé (pour le SURROUND) :

- Adaptateur secteur avec sortie nominale : 5,0 V DC, 2,5 W - 10,0 W
- Évaluation de l'efficacité énergétique : niveau VI ou conforme aux lois et règlements régionaux ou nationaux correspondants.

DA

1. Oplysninger om strømforbrug

Dette udstyr er i overensstemmelse med Europa-Kommissionens forordning (EU) 2023/826.

- Slukket: Ikke relevant
- Standby (når alle trådløse forbindelser er deaktiveret): < 0,5 W
- Standby i netværk for soundbar: < 2,0 W

2. Den tidsperiode, hvorefter strømstyringsfunktionen automatisk skifter udstyret til:

Slukket	Ikke relevant	
Standby	Hvis forbindelsen til alle kablede porte er afbrudt, og alle trådløse netværksforbindelser er deaktiveret	Skiftet til standbytilstand efter 10 minutter
Standby i netværk	Når enhver trådløs netværksforbindelse er aktiveret	Skiftet til netværks-standbytilstand efter 10 minutters inaktivitet i driftstilstand

3. Hvis dette udstyr har trådløse netværksforbindelser:

Sådan aktiverer du trådløse netværksforbindelser:

- Skift til trådløs tilstand (Bluetooth, Google Cast, AirPlay casting af lyd osv.).
- Produktet går i netværksbaseret standby efter 10 minutters inaktivitet, hvorefter det kan genaktiveres via wi-fi-forbindelse med energiforbrugende produkter (f.eks. spillere, mobiltelefoner osv.).

Sådan deaktiverer du trådløse netværksforbindelser:

- Tryk og hold  på fjernbetjeningen i mere end 5 sekunder først;
- Hold derefter  inde på fjernbetjeningen i mere end 5 sekunder.

4. Information om anbefalede ekstern adapter (til SURROUND):

- Strømadapter med klassificeret udgang: 5,0 V DC, 2,5 W - 10,0 W
- Energieffektivitetsvurdering: niveau VI eller i overensstemmelse med tilsvarende regionale eller nationale love og bestemmelser.

DE

1. Informationen zum Stromverbrauch

Dieses Gerät entspricht der Verordnung (EU) Nr. 2023/826 der Europäischen Kommission.

- Aus: K. A.
- Standby (wenn alle Funkverbindungen deaktiviert sind): < 0,5 W
- Vernetzter Standby für Soundbar: < 2,0 W

2. Die Zeitspanne, nach der die Energiemanagement-Funktion das Gerät automatisch in die folgenden Modi schaltet:

Aus	K. A.	
Standby-Modus	Wenn alle verkabelten Anschlüsse getrennt und alle kabellosen Netzwerkverbindungen deaktiviert sind	Der Standby-Modus wird nach 10 Minuten aktiviert
Vernetzter Standby-Modus	Wenn eine beliebige kabellose Netzwerkverbindung aktiviert ist	Umschaltung in den vernetzten Standby-Modus nach 10 Minuten Inaktivität im Betriebsmodus

3. Wenn dieses Gerät über kabellose Netzwerkverbindungen verfügt:

Aktivieren von kabellosen Netzwerkverbindungen:

- Wechsle in den kabellosen Modus (Bluetooth, Google Cast, AirPlay Casting Audio usw.).
- Das Gerät wechselt nach 10 Minuten Inaktivität in den vernetzten Standby-Modus. Danach kann es über eine WLAN-Verbindung mit energieverbrauchenden Produkten (z. B. Playern, Mobiltelefonen usw.) reaktiviert werden.

Deaktivieren von kabellosen Netzwerkverbindungen:

- Halte  auf der Fernbedienung mehr als 5 Sekunden lang gedrückt;
- Drücke dann  auf der Fernbedienung länger als 5 Sekunden.

4. Informationen zum empfohlenen externen Adapter (für SURROUND):

- Netzadapter mit Nennausgang: 5,0 V DC, 2,5 - 10,0 W
- Energieeffizienzklasse: Klasse VI oder entspricht den entsprechenden regionalen oder nationalen Gesetzen und Vorschriften.



The power delivered by the charger must be between min 2.5 Watts required by the radio equipment, and max 10 Watts in order to achieve the maximum charging speed.

- FR La puissance délivrée par le chargeur doit être comprise entre 2,5 watts minimum requis par l'équipement radio et 10 watts maximum afin d'atteindre la vitesse de charge maximale.
- DA Den effekt, som opladeren leverer, skal være mellem mindst 2,5 watt, som kræves af radioustyret, og højst 10 watt for at nå den maksimale opladningshastighed.
- DE Die vom Ladegerät gelieferte Leistung muss zwischen mindestens 2,5 Watt, die das Funkgerät benötigt, und maximal 10 Watt liegen, um die maximale Ladegeschwindigkeit zu erreichen.
- ES La potencia que aporta el cargador debe estar entre un mínimo de 2,5 W requerido por el equipo de radio y un máximo de 10 W para lograr la máxima velocidad de carga.
- FI Laturin antaman tehon on oltava vähintään 2,5 watin ja enintään 10 watin välillä, jotta saavutetaan suurin mahdollinen latausnopeus.
- HU A töltő által leadott teljesítménynek a rádióberendezés által igényelt min. 2,5 Watt és max. 10 Watt között kell lennie a maximális töltési sebesség eléréséhez.
- IT La potenza erogata dal caricatore deve essere compresa tra min 2,5 Watt richiesta dall'apparecchiatura radio, e max 10 Watt per raggiungere la velocità di ricarica massima.
- NL Het door de oplader geleverde vermogen moet tussen minimaal 2,5 Watt liggen dat is vereist door de radioapparatuur, en maximaal 10 Watt om de maximale laadsnelheid te bereiken.
- NO For å oppnå maksimal ladehastighet må strømmen fra laderen være mellom min. 2,5 watt som kreves av radioustyret og 10 watt.
- PL Moc dostarczana do ladowarki musi mieścić się w zakresie od minimum 2,5 W wymaganym przez sprzęt radiowy i maksymalnie 10 W, aby osiągnąć maksymalną prędkość ładowania.
- PT A energia fornecida pelo carregador deve situar-se entre o mínimo de 2,5 Watts necessário pelo equipamento de comunicações e o máximo de 10 Watts, de modo a alcançar a velocidade máxima de carregamento.
- SK Výkon dodávaný nabíjačkou musí byť v rozmedzí od min. 2,5 W požadovaného rádiovým zariadením do max. 10 W, aby sa dosiahla maximálna rýchlosť nabíjania.
- SV Effekten som laddaren levererar måste ligga mellan min 2,5 watt som krävs för radioutrustningen och max 10 watt för att uppnå maximal laddningshastighet.

AR

- 1 معلومات بشأن استهلاك الطاقة
يتوافق هذا الجهاز مع لائحة المفوضية الأوروبية رقم (EU) 2023/826.
- إيقاف التشغيل: لا ينطبق
 - وضع الاستعداد (عندما يتم إلغاء تنشيط جميع الاتصالات اللاسلكية): > 0.5 واط
 - وضع الاستعداد المتصل بالشبكة للعرض الصوتي: > 2.0 واط
- 2 الفترة الزمنية التي تقوم بعدها وظيفة إدارة الطاقة بتبديل الجهاز تلقائيًا إلى وضع:
- | | |
|----------------------|---|
| إيقاف التشغيل | لا ينطبق |
| وضع الاستعداد | عند فصل جميع المنافذ السلكية وإلغاء تنشيط جميع اتصالات الشبكة اللاسلكية |
| وضع الاستعداد المتصل | عند تنشيط أي اتصال بالشبكة لاسلكية |

3 إذا كان لهذا الجهاز اتصالات بالشبكة اللاسلكية:

كيفية تنشيط اتصالات الشبكة اللاسلكية:

- التحويل إلى الوضع اللاسلكي (Bluetooth، Google Cast، AirPlay، بث الصوت عبر AirPlay وغيرها).
 - يدخل المنتج في وضع الاستعداد التلقائي بعد 10 دقائق من عدم النشاط، ويمكن إعادة تنشيطه عن اتصال Wi-Fi من جهاز متصل (مثل مشغل وسائط، هاتف محمول، وما إلى ذلك).
 - كيفية إلغاء تنشيط اتصالات الشبكة اللاسلكية:
 - أولًا، اضغط مطولاً على لجهاز التحكم عن بُعد لأثر من 5 ثوانٍ.
 - ثم اضغط مطولاً على لجهاز التحكم عن بُعد لأثر من 5 ثوانٍ.
- 4 معلومات المحول الخارجي الموصى به (SURROUND):
- محول قدرة مع مواصفات خرج: 5.0 فولت تيار مستمر، 2.5 واط - 10.0 واط
 - تصنيف كفاءة الطاقة: المستوى السادس (IV) أو يتوافق مع اللوائح واللوائح الإقليمية أو الوطنية ذات الصلة.

HE

1 מי לעל ריבת חשמל

1 זהו עומד בתקנות הנציבות האירופית (EU) 2023/826.

- בו: לא רלוונטי
- מצב המתנה (כאשר כל חיבורי האלחוטיים מושבתים): > 0.5 וואט
- מצב המתנה ברשת עבור מקור קול: > 2.0 וואט

2 פרק הזמן שלאחריו הפונקציה לניהול ריבת חשמל מעבירה את המכשיר אוטומטית למצב:

בו	לא רלוונטי
המתנה	כאשר כל חיבורי הקול והרשת מנותקות וכל חיבורי הרשת האלחוטית מושבתים
המתנה ברשת	כאשר חיבור רשת אלחוטית כלשהו מו על

3 אם יד זה וכל חיבורי רשת אלחוטית:



כי להפעיל את חיבורי הרשת האלחוטית:

- מעבר למצב אלחוט (שם שי (Bluetooth, Google Cast, AirPlay, ומה).
 - המור ייכנס למצב המתנה ברשת לאחר 10 דקות של חוסר פעילות, ולאחר מכן ייהיה להפעיל אותו מחדש באמצעות חיבור Wi-Fi עם אם קת חשמל באמצעות רמז (למשל לנגנים, סלפון נייד ומה).
 - כי לבטל חיבורי רשת אלחוטית:
 - תחילה, יש לחצות ולהחזיק את לחצן בשלט-רחוק למשך יותר מחמש שניות.
 - לאחר מכן, לחצו והחזיקו את לחצן בשלט-רחוק למשך יותר מחמש שניות.
- 4 מי לעל מתאם חי וני מומלץ (SURROUND):
- מתאם חשמל עם הספק נקוב: 5.0 וולט DC, 2.5 וואט - 10.0 וואט
 - יורג פעילות אנרגטית: רמה VI או עמי הבחוקים ובתקנות האזוריים או הארציים המתאימים.

FCC/IC Radiation Exposure Statement: This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux radiations FCC/ IC CNR-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

Use Restriction: This device is restricted to indoor use when operating in the 5150 to 5350 MHz frequency range in following countries:

	BE	EL	LT	PT	
	BG	ES	LU	RO	
	CZ	FR	HU	SI	
	DK	HR	MT	SK	
	DE	IT	NL	FI	
	EE	CY	AT	SE	
	IE	LV	PL	UK(NI)	

Belgium (BE), Greece (EL), Lithuania (LT), Portugal (PT), Bulgaria (BG), Spain (ES), Luxembourg (LU), Romania (RO), Czech Republic (CZ), France (FR), Hungary (HU), Slovenia (SI), Denmark (DK), Croatia (HR), Malta (MT), Slovakia (SK), Germany (DE), Italy (IT), Netherlands (NL), Finland (FI), Estonia (EE), Cyprus (CY), Austria (AT), Sweden (SE), Ireland (IE), Latvia (LV), Poland (PL), United Kingdom (UK) and Northern Ireland (UK (NI)).

This product contains open source software licensed under GPL. For your convenience, the source code and relevant build instruction are also available at https://harman-webpages.s3.amazonaws.com/Harman_One_OS_C_package_license_list.htm

Please feel free to contact us at:

Harman Deutschland GmbH

ATT: Open Source, Gregor Krapf-Gunther, Parkring 3

85748 Garching bei Munchen, Germany

or OpenSourceSupport@Harman.com if you have additional question regarding the open source software in the product.



This equipment is a Class II or double insulated electrical appliance.

WARNING: Please refer to the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

安全信息包括产品标识和电源额定值，请参阅设备底部的主标签。



Este produto está homologado pela Anatel, de acordo com os procedimentos regulamentados para avaliação da conformidade de produtos para telecomunicações e atende aos requisitos técnicos aplicados. Para maiores informações, consulte o site da Anatel – www.anatel.gov.br
Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Atenção: conforme lei brasileira nº 11.291, a exposição prolongada a ruídos superiores a 85dB pode causar danos ao sistema auditivo.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HARMAN International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



The Wi-Fi CERTIFIED™ Logo is a registered trademark of Wi-Fi Alliance®.

COMPATIBLE WITH



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.



FOR DTS PATENTS, SEE [HTTP://XPERI.COM/DTS-PATENTS/](http://XPERI.COM/DTS-PATENTS/). MANUFACTURED UNDER LICENSE FROM DTS, INC. AND ITS AFFILIATES. DTS, DTS:X, AND THE DTS:X LOGO ARE REGISTERED TRADEMARKS OR TRADEMARKS OF DTS, INC. AND ITS AFFILIATES IN THE UNITED STATES AND/OR OTHER COUNTRIES. © DTS, INC. AND ITS AFFILIATES. ALL RIGHTS RESERVED.



Google, Android, Google Home, Google Cast and other marks are trademarks of Google LLC.

Google Assistant is not available in certain languages and countries. Availability and performance of certain features, services, and applications are device and network dependent and may not be available in all areas.



Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Apple, and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

To use AirPlay with JBL Bar 1000MK2, the latest version of iOS, iPadOS, or macOS is recommended.



Use your phone, tablet or computer as a remote control for Spotify.

Go to spotify.com/connect to learn how.

The Spotify Software is subject to third party licenses found here:

<https://www.spotify.com/connect/third-party-licenses>.

ROON READY

Being Roon Ready means that HARMAN uses Roon streaming technology, for an incredible user interface, simple setup, rock-solid daily reliability, and the highest levels of audio performance, without compromise.



FR

Cet appareil,
ses accessoires
et cordons
se recyclent

REPRISE
À LA LIVRAISON



OU

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr





BAR 1000MK2



OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

The JBL BAR 1000MK2 (soundbar, detachable speakers and subwoofer) has been designed for use with 100-240 volt, 50/60 Hz AC current. Connection to a line voltage other than that for which your product is intended can create a safety and fire hazard and may damage the unit. If you have any questions about the voltage requirements for your specific model or about the line voltage in your area, contact your retailer or customer service representative before plugging the unit into a wall outlet.

Do Not Use Extension Cords

To avoid safety hazards, use only the power cord supplied with your unit. We do not recommend that extension cords be used with this product. As with all electrical devices, do not run power cords under rugs or carpets, or place heavy objects on them. Damaged power cords should be replaced immediately by an authorized service center with a cord that meets factory specifications.

Handle the AC Power Cord Gently

When disconnecting the power cord from an AC outlet, always pull the plug; never pull the cord. If you do not intend to use this speaker for any considerable length of time, disconnect the plug from the AC outlet.

Do Not Open the Cabinet

There are no user-serviceable components inside this product. Opening the cabinet may present a shock hazard, and any modification to the product will void your warranty. If water accidentally falls inside the unit, disconnect it from the AC power source immediately, and consult an authorized service center.



To protect battery lifespan, fully charge at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.

When using an external adapter, the output voltage/current of the external adapter should not exceed 5V/3A.



WARNING

DO NOT ATTEMPT TO OPEN, SERVICE, OR DISASSEMBLE THE BATTERY | DO NOT SHORT CIRCUIT | MAY EXPLODE IF DISPOSED OF IN FIRE | RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE | DISPOSE OR RECYCLE USED BATTERIES ACCORDING TO THE INSTRUCTIONS

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS 2

1. INTRODUCTION 4

2. WHAT'S IN THE BOX 5

3. PRODUCT OVERVIEW 6

- 3.1 Soundbar 6
 - 3.2 Detachable speakers 7
 - 3.3 Subwoofer 7
 - 3.4 Remote control 7
-

4. PLACE 8

- 4.1 Desktop placement 8
 - 4.2 Wall-mounting 9
-

5. CONNECT 10

- 5.1 Connect with your TV and digital devices 10
 - 5.2 Connect to your Bluetooth device 11
 - 5.3 Connect to your home network 11
-

6. SETUP 12

- 6.1 Connect the detachable rear speakers and subwoofer 12
 - 6.2 Charge the detachable speakers 13
 - 6.3 3D surround sound 13
-

7. PLAY 16

- 7.1 Switch on/Auto standby/Auto wakeup 16
- 7.2 Play from the TV source 16
- 7.3 Play from the HDMI IN source 17
- 7.4 Play from the Bluetooth source 17
- 7.5 Play over your home network 17
- 7.6 Multi-room playback 19

8. SOUND SETTINGS 20

- 8.1 Audio sync 20
 - 8.2 Detachable speaker audio settings 20
-

9. RESTORE FACTORY SETTINGS 21

10. SOFTWARE UPDATE 21

11. RE-CONNECT THE SUBWOOFER 22

12. PRODUCT SPECIFICATIONS 22

13. TROUBLESHOOTING 23

14. TRADEMARKS 25

15. OPEN SOURCE LICENSE NOTICE 26

1. INTRODUCTION

Thank you for purchasing the JBL BAR 1000MK2 (soundbar, detachable speakers and subwoofer) which is designed to bring an extraordinary 3D sound experience to your home entertainment system. We encourage you to take a few minutes to read through this manual, which describes the product and includes step-by-step instructions for setting up and getting started.


To make the most of product features and support, you may need to update the product software through the Internet in the future. Refer to the software update section in this manual to ensure that your product has the latest software.

Designs and specifications are subject to change without notice. If you have any questions about the soundbar, installation or operation, please contact your retailer or customer service representative, or visit our website: www.jbl.com.

JBL One app

With the JBL One app, you can

- easily complete product setup;
- connect *music streaming services;
- discover new music with integrated music services;
- access software updates when they are available;
- personalize audio settings;
- access additional features.

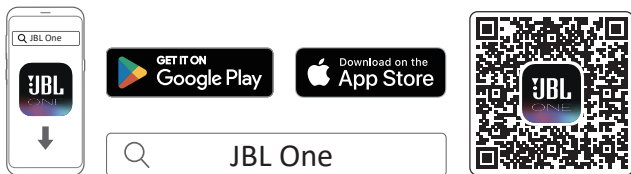

For more information, see “[5.3 Connect to your home network](#)” and “[7.5 Play over your home network](#)”.

NOTES:

- *Subscription may be needed and not provided by the JBL One app.
- App screens in this Owner’s Manual may vary due to software updates. Always follow the app instructions.


2. WHAT'S IN THE BOX

Unpack the box carefully and ensure that the following parts are included. If any part is damaged or missing, do not use it and contact your retailer or customer service representative.


Soundbar




Subwoofer

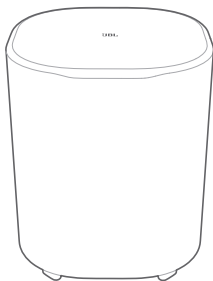

 
Detachable speakers (with rechargeable battery)



Remote control (with 2 AAA batteries)

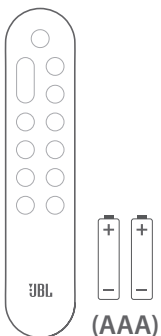


Power cord*

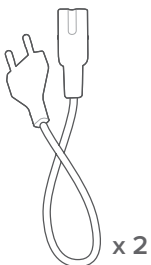


x 2

* Power cord quantity and plug type vary by regions.

 HDMI cable (1.2m/3.9ft)



Side caps

 


(For the soundbar)




(For the detachable speakers)

Wall-mounting kit

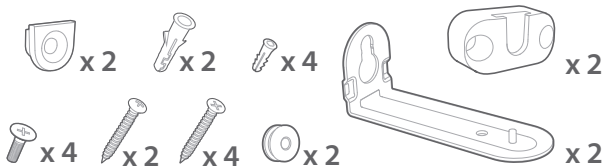


Product information & wall-mounting template

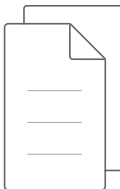

3. PRODUCT OVERVIEW

3.1 Soundbar

3.1.1 Front panel & Top panel

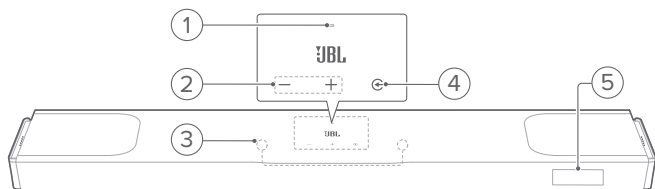

1) Status indicator

System:		
	Regular pulsing (white)	System startup
	Fast pulsing (white)	Software updating in progress
	Solid (amber)	Restoring factory settings
Network connection:		
	Slow pulsing (white)	Wi-Fi setup mode, or network disconnected
	Solid (white)	Network connected
	Solid (yellow)	Weak Wi-Fi connection

2) - / + (Volume)

- Wake up the soundbar.
- Decrease or increase the volume.
- Press the two buttons together to mute or unmute.
- Hold the two buttons together for more than 10 seconds to enter Wi-Fi setup mode.

3) Microphone

- For sound calibration


4) ⏪ (Source)

- Wake up the soundbar.
- Select a sound source: **TV** (default, for audio input from TV connection where the **HDMI OUT / HDMI OUT** connector is prioritized over the **OPTICAL / OPTICAL** connector), Bluetooth or **HDMI IN**.
- Hold for more than 3 seconds to enter Bluetooth pairing mode.


5) Status display

3.1.2 Rear connectors

Americas version (excluding Brazil)

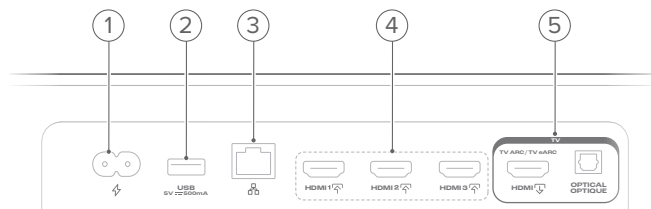

All other versions

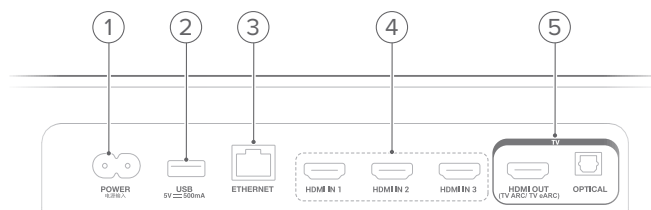

1) ⚡ / POWER

- Connect to power (with the supplied power cord).

2) USB

- USB connector for software update (for service only).
- Connect to USB storage device for MP3 file playback (for US version only).

3) 🌐 / ETHERNET

- Connect to your home network through an Ethernet cable.

4) HDMI (1/ 2 / 3) / HDMI IN (1/ 2 / 3)

- Connect to the HDMI output on your digital device.

5) TV connectors


HDMI OUT / HDMI OUT

- Connect to the HDMI ARC / HDMI eARC input on your TV.

OPTICAL / OPTICAL

- Connect to the optical output on your TV or digital device.

3.2 Detachable speakers

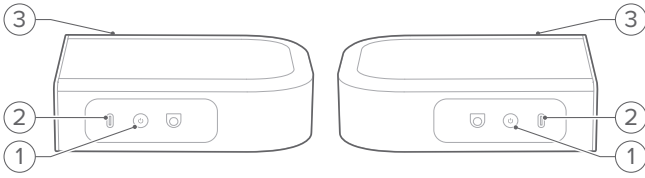

1) Power

- Press to switch on.
- Hold for more than 3 seconds to switch off.


2) Type-C USB connector

- For battery charging

3) Status indicator

Battery power:		
	Flashing (red)	Low battery
	Solid (red)	Battery charging in progress
Wireless connection:		
	Regular flashing (white)	Reconnecting to the soundbar / Disconnected from the soundbar
	Solid (white)	Connected to the soundbar

3.3 Subwoofer

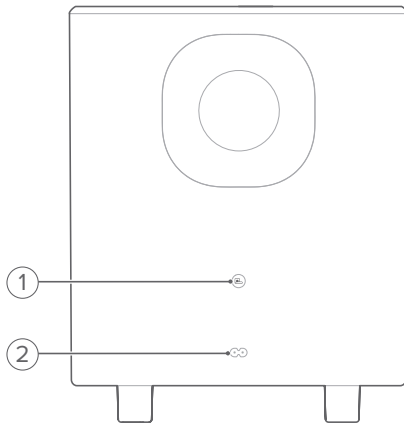

1) Connection status indicator

- Connection status indicator

	Solid (white)	Connected to the soundbar
	Fast flashing (white)	Pairing mode
	Regular flashing (white)	Reconnecting mode
	Solid (amber)	Standby mode


2) Power connector

- Connect to power (with the supplied power cord).

3.4 Remote control

Americas version (excluding Brazil)

All other versions

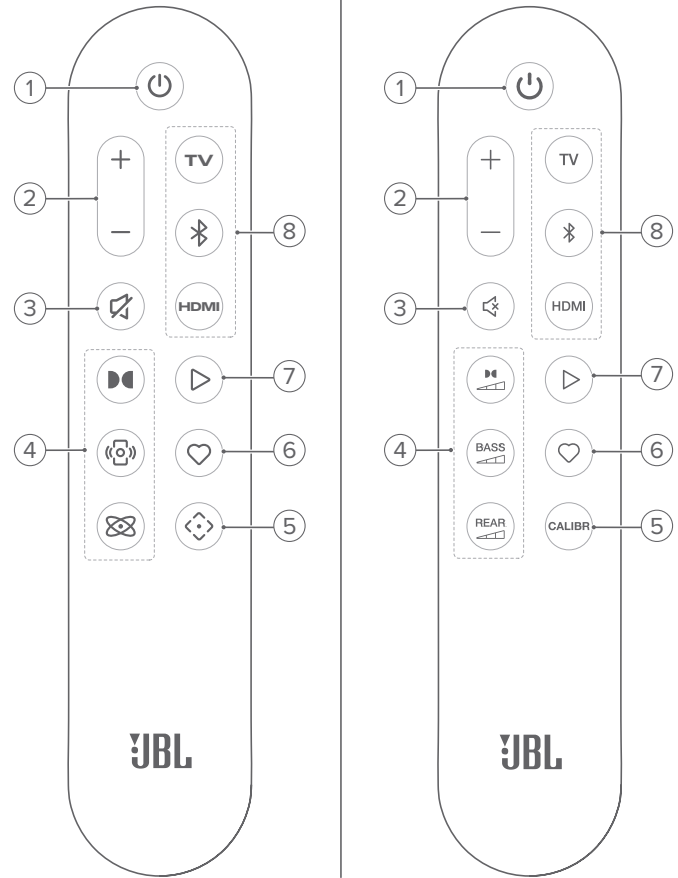

1) Power

- Switch on or to standby.

2) + / -

- Press to increase or decrease the volume.
- Hold to increase or decrease the volume continuously.

3) Mute / unmute

- Mute / unmute.

 
4) Sound effect buttons



- Select the level of Dolby Atmos® / DTS:X® effect: middle (default), high or low.



- Select the bass level for subwoofer: 1/2/3 (default)/4/5.



- Select the surround sound level for the detachable speakers: middle (default), high, muted or low.

5) CALIBR

- Start sound calibration.

- 6) **♥ (Moment)**
- Press to directly access the playlist or speaker settings that you have personalized in the JBL One app.
- 7) **▷ (Playback controls for Wi-Fi music streaming or Bluetooth)**
- Single press: Pause or resume playback
 - Double press: Next track
 - Triple press: Previous track

8) **Source selectors**

TV

- Select the **TV** source (default, for audio input from TV connection where the **HDMI IN** / **HDMI OUT** connector is prioritized over the **OPTICAL** / **OPTICAL** connector).

📶 (Bluetooth)

- Select the Bluetooth source.
- Hold for more than 3 seconds to enter Bluetooth pairing mode.


HDMI

- Repeatedly press to switch between the **HDMI IN** sources: HDMI 1 (default) / 2 / 3.

4. PLACE

4.1 Desktop placement

Place the soundbar, detachable speakers and subwoofer on a flat and stable surface. Refer to the recommended distance in the following diagram.

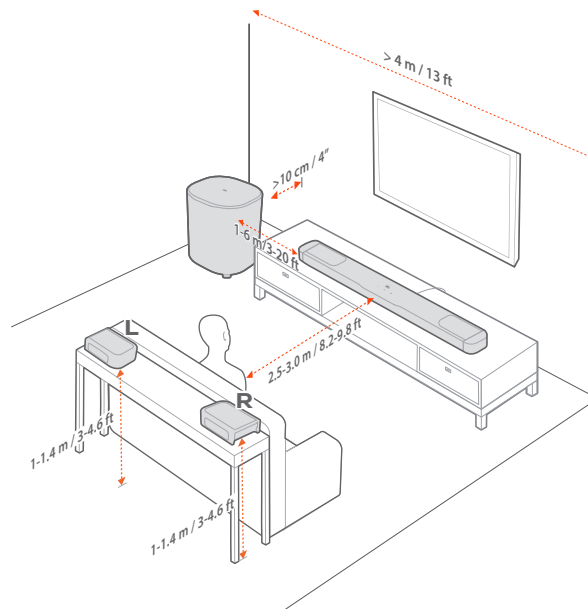


NOTES:

- The power cord shall be properly connected to power.
- Do not place any objects on the top of the soundbar, detachable speakers or subwoofer.
- Charge the detachable speakers in time to ensure sufficient battery power (See [“6.2 Charge the detachable speakers”](#)).
- Use the supplied side caps to cover the two ends of the soundbar after you detach the rear surround speakers (See Step 6 under [“4.2.2 Wall-mount the detachable speakers as rear surround speakers”](#)).

4.2 Wall-mounting

Wall-mount the soundbar and detachable rear speakers together or separately.

4.2.1 Wall-mount the soundbar

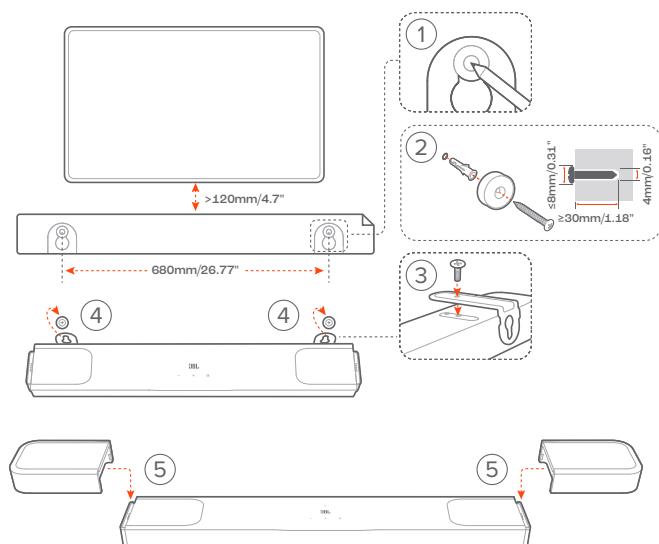


1. Preparation:
 - a) With the distance of about 120mm / 4.7" from your TV, stick the supplied wall-mounting template to a wall by using adhesive tapes.
 - b) Use your ballpen tip to mark the screw holder location. Remove the template.
 - c) On the marked location, drill a 4 mm / 0.16" hole.
2. Install the support for wall-mounting bracket.
3. With the screw, fasten the wall-mounting bracket onto the bottom of the soundbar.
4. Mount the soundbar.
5. After the soundbar is securely wall-mounted, dock the two detachable speakers onto the soundbar.

NOTES:

- Make sure that the wall can support the weight of the soundbar.
- Install on a vertical wall only.
- Avoid a location under high temperature or humidity.
- Before wall-mounting, make sure that cables can be properly connected between the soundbar and external devices.
- Before wall-mounting, make sure that the soundbar is unplugged from power. Otherwise, it may cause an electric shock.
- To move the soundbar, first remove the two detachable speakers to avoid accidental damage.
- Use the supplied side caps to cover the two ends of the soundbar after undocking the rear surround speakers (See Step 6 under "[4.2.2 Wall-mount the detachable speakers as rear surround speakers](#)").

4.2.2 Wall-mount the detachable speakers as rear surround speakers

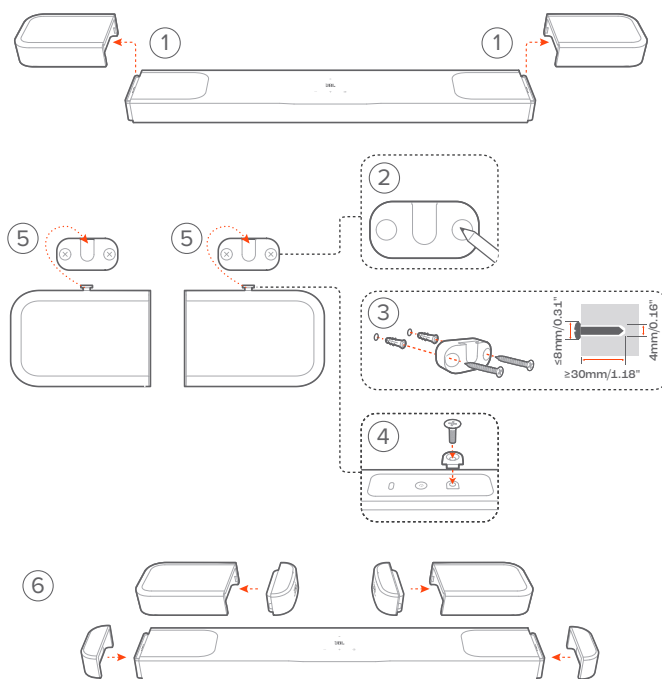

1. From the soundbar, remove the two detachable speakers
2. Use your ballpen tip to mark the location.
3. Install the wall-mounting bracket.
4. Fasten the support onto the back of the speakers.
5. Mount the speakers.
6. Install the side caps as needed.

5. CONNECT

5.1 Connect with your TV and digital devices

For audio playback through the soundbar, connect the soundbar with your TV through the supplied HDMI cable or an optical cable (sold separately).


An HDMI connection supports digital audio and video with a single connection. HDMI connectivity is the best option for your soundbar.

NOTES:

- When both HDMI and optical cables are connected to the soundbar for audio input from TV connection, the HDMI connection is prioritized.
- Full compatibility with all HDMI-CEC devices is not guaranteed.
- With the 2 up-firing speakers and the detachable surround speaker design, the Dolby surround upmixer of the soundbar can expand the legacy channel-based audio of Dolby Digital format, including 5.1 and 7.1 content, and provide an immersive 3D Atmos experience.
- * The HDMI cable (for digital device connection) and the optical cable are sold separately.

5.1.1 TV (HDMI eARC)

(Recommended connection for the best Dolby Atmos / DTS:X experience)

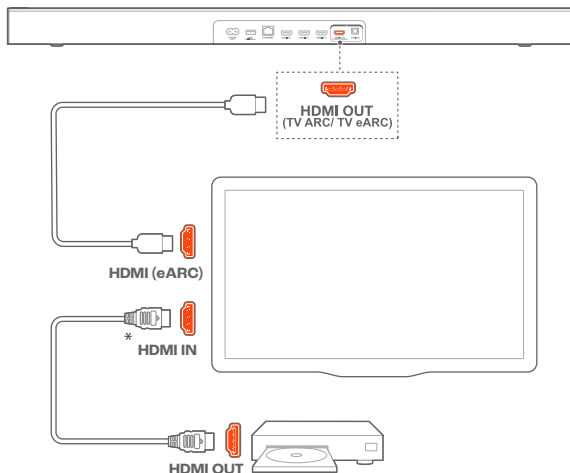


1. Connect the soundbar with the **HDMI IN (eARC)** connector on your TV by using the supplied HDMI cable.
 - On your TV, check that HDMI-CEC and HDMI eARC have been enabled. Refer to the owner's manual of your TV for more information.
2. Use an HDMI cable (V2.0 or later) to connect your TV with your digital device, such as a streaming device, set-top box, DVD/Blu-ray player or game console.
 - On your digital device, check that HDMI-CEC has been enabled. Refer to the owner's manual of your digital device for more information.
 - On your TV and digital device, select "Bitstream" or "Raw data" in the audio output settings for the best Dolby Atmos experience.

NOTE:

- To play audio from the digital device connected to your TV, select the **TV** source (See "[7.2 Play from the TV source](#)").

5.1.2 TV (HDMI ARC)

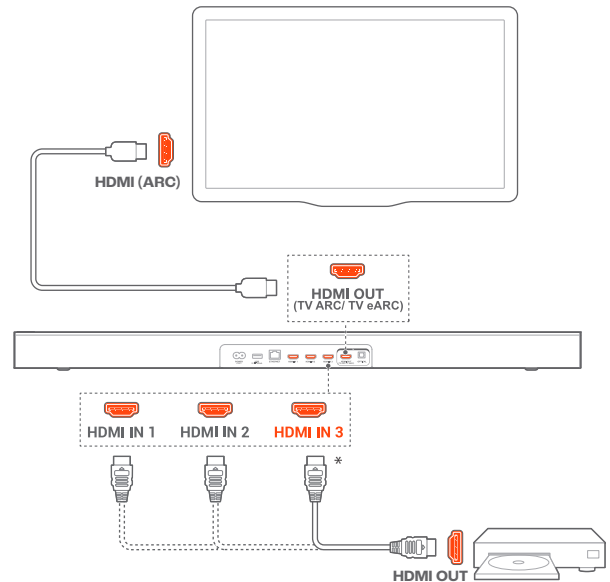


1. Connect the soundbar with the **HDMI IN (ARC)** connector on your TV by using the supplied HDMI cable.
 - On your TV, check that HDMI-CEC and HDMI ARC have been enabled. Refer to the owner's manual of your TV for more information.
2. Use an HDMI cable (V2.0 or later) to connect the soundbar with your digital device, such as a set-top box, DVD/Blu-ray player or game console.
 - On your digital device, check that HDMI-CEC has been enabled. Refer to the owner's manual of your digital device for more information.
 - On your digital device, select "Bitstream" or "Raw data" in the audio output settings for the best Dolby Atmos experience.

NOTES:

- To play audio from the digital device connected to the soundbar, select the **HDMI IN** source (See "[7.3 Play from the HDMI IN source](#)").
- If your TV does not support HDMI eARC, make sure that you connect your digital device through the **HDMI (1/ 2/ 3)** / **HDMI IN (1/ 2/ 3)** connector on the soundbar instead of your TV. Otherwise, the Dolby Atmos information cannot pass through the **HDMI (ARC)** connectors to the soundbar.

5.1.3 OPTICAL

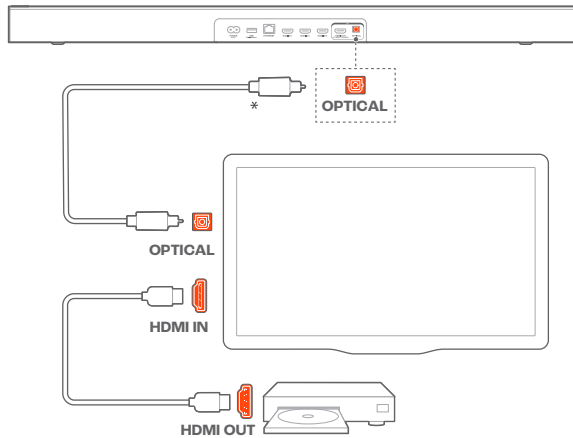


1. Connect the soundbar with your TV by using an optical cable.
2. Use an HDMI cable (V2.0 or later) to connect your TV with your digital device, such as a streaming device, set-top box, DVD/Blu-ray player or game console.

NOTE:

- To play audio through the optical cable, select the **TV** source (See [“7.2 Play from the TV source”](#)).

5.2 Connect to your Bluetooth device

Through Bluetooth, connect the soundbar with your Bluetooth device, such as a smartphone, tablet and laptop.

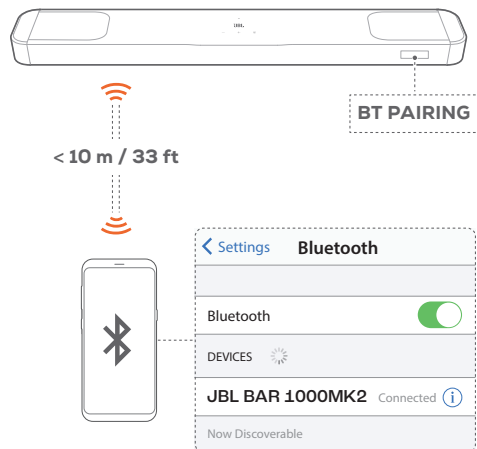


5.2.1 Connect a Bluetooth device

1. To select Bluetooth source, press **⏻** on the soundbar or **📶** on the remote control.
 - **“BT PAIRING”**: Ready for Bluetooth pairing
2. On your Bluetooth device, enable Bluetooth and search for **“JBL BAR 1000MK2”** within three minutes.
 - **“BT CONNECTED”**: Successful connection. A confirmation tone is heard.

5.2.2 Reconnect the last paired device

Your Bluetooth device is retained as a paired device when the soundbar goes to standby mode. Next time you switch to the Bluetooth source, the soundbar reconnects the last paired device automatically.

5.2.3 Connect to another Bluetooth device

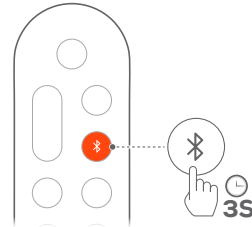

1. In the Bluetooth source, hold **⏻** on the soundbar or **📶** on the remote control until **“BT PAIRING”** is displayed.
 - The soundbar enters the Bluetooth pairing mode.
2. Follow the Step 2 under [“5.2.1 Connect a Bluetooth device”](#).
 - If the device has ever been paired with the soundbar, first unpair **“JBL BAR 1000MK2”** on the device.


NOTES:

- The Bluetooth connection will be lost if the distance between the soundbar and Bluetooth device exceeds 10 m / 33 ft.
- Electronic devices may cause radio interference. Devices that generate electromagnetic waves must be kept away from the soundbar, such as microwaves and wireless LAN devices.

5.3 Connect to your home network


With the JBL One app and the supported streaming services (Google Cast, AirPlay, Spotify Connect, Tidal Connect and Roon Ready), the soundbar allows you to stream audio from smartphones or tablets.

5.3.1 Wi-Fi connection with your home network

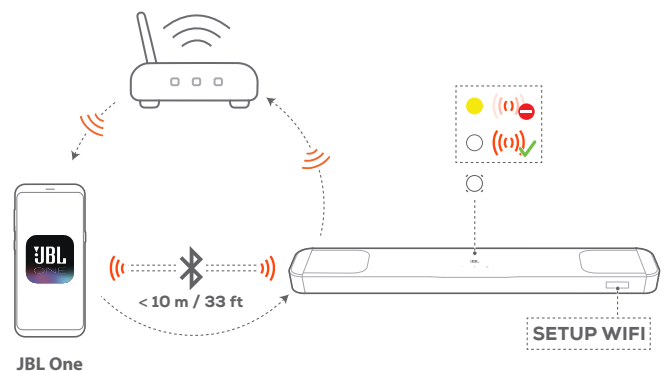

1. On the soundbar, enter the Wi-Fi setup mode:
 - Press any button on the soundbar (See [“7.1 Switch on/ Auto standby/Auto wakeup”](#)).
 - If the soundbar has not been connected to a network, the screen shows **“HELLO”** and then, **“SETUP WIFI”**.
 - If your soundbar is not discovered by the JBL One app, hold **⏻** and **+** together for more than 10 seconds to re-enter the Wi-Fi setup mode.


2. Connect your Android™ or iOS device to your home Wi-Fi network. Download the JBL One app.
3. Launch the JBL One app. Follow the app instructions to complete Wi-Fi setup.

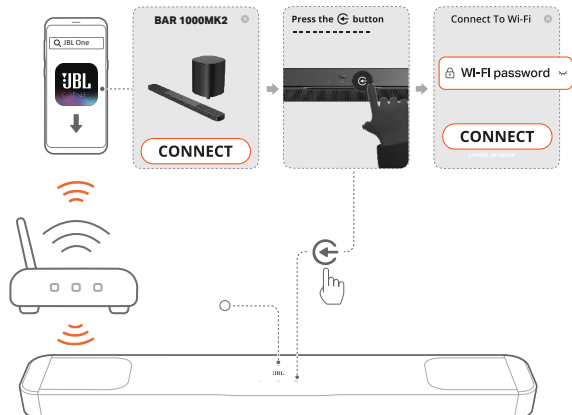

- ○ (Solid white): The soundbar is connected to your home network.
- You can stream music from the JBL One app or the streaming services you have enabled in the JBL One app (See “[7.5 Play over your home network](#)”).

5.3.2 Wired connection with your home network (Optional)

1. Use an Ethernet cable (not supplied) to connect the soundbar to your home network.

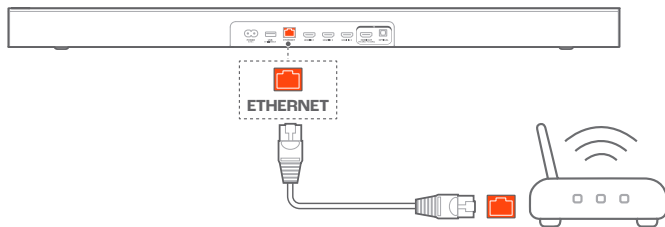


2. On your Android or iOS device, download and launch the JBL One app for music streaming.

NOTES:

- On your Android or iOS device, you can rename the soundbar in the JBL One app.
- On your iOS device, add the soundbar to the Apple Home app and manage it together with other AirPlay-compatible speakers.
- On your iOS device, if the soundbar has been added to your home Wi-Fi network, you can start AirPlay streaming from an AirPlay-compatible app (See “[7.5.4 Play through AirPlay](#)”).
- Availability of online music streaming services varies by country.
- Some features require subscriptions or services not available in all countries.

6. SETUP

6.1 Connect the detachable rear speakers and subwoofer

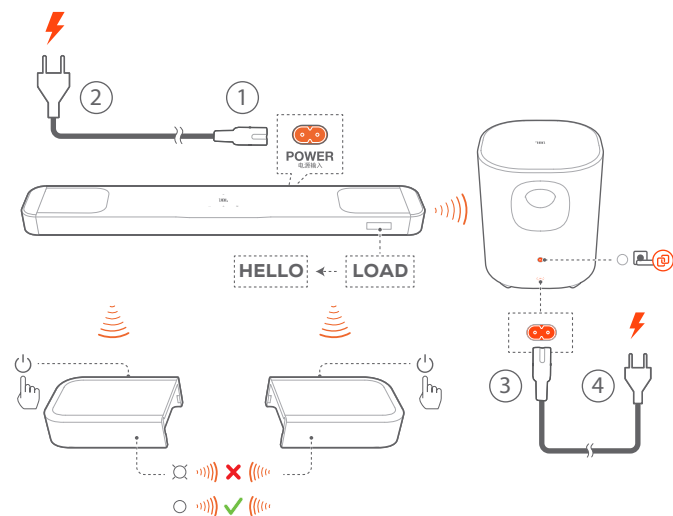

1. Connect the soundbar to power by using the supplied power cord.
 - The screen on the soundbar shows “LOAD” and then, “HELLO”.
2. Do the following to start the connection:
 - Connect the subwoofer to power by using the supplied power cord.
 - The soundbar connects the subwoofer automatically.
Connected: turns solid white on the subwoofer.
 - Dock the detachable speakers onto the soundbar, or press on the detachable speakers to fast re-connect to the soundbar.
 - The soundbar connects the detachable speakers automatically.
Connected: The status indicator turns solid white (○) on the detachable speakers.

NOTES:

- Use the supplied power cords only.
- Before connecting to power, make sure that you have completed all other connections (See “[5.1 Connect with your TV and digital devices](#)”).


6.2 Charge the detachable speakers

When the detachable surround speakers are out of battery, the wireless connection with the soundbar will be lost.

The first time you use the two detachable speakers, charge them for more than 3 hours to ensure sufficient battery power.

→ When the battery power runs low, the status indicator flashes red on the detachable surround speakers and **“REAR SPKR LOW BATT”** is displayed on the soundbar.

→ When the battery power runs out, **“DOCK REAR SPKR”** is displayed on the soundbar.

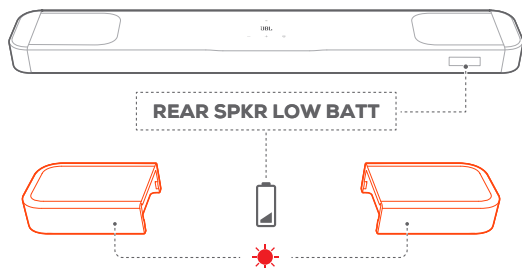


6.2.1 Charge by docking the detachable speakers


Charging starts when you dock the detachable speakers onto the soundbar.

→ When the soundbar switches to standby mode, ● turns on; ● turns off when the detachable speakers are fully charged.

→ It takes about 4 hours for the empty battery to be fully charged.

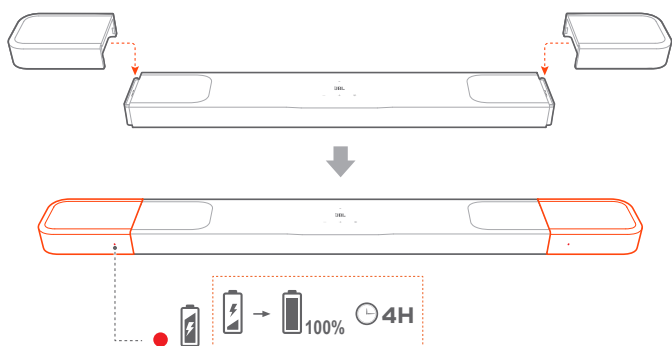

6.2.2 Charge through a USB cable

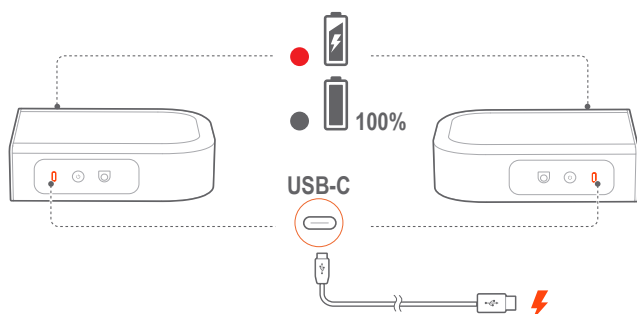

- Use a USB-C cable (not supplied) to connect the detachable speakers to power respectively.
- For the detachable speakers, the status indicator is used for status indication of both battery power and wireless connection (See [“3.2 Detachable speakers”](#)).


6.3 3D surround sound

6.3.1 Sound calibration

Optimize your 3D surround sound experience for your unique listening environment.



For sound calibration, make sure that:

- your room is quiet;
- the soundbar and the two detachable rear speakers are fully in sight of each other, without obstacles in between;
- the left and right rear speakers are properly placed, the **L** speaker on the left and the **R** speaker on the right.

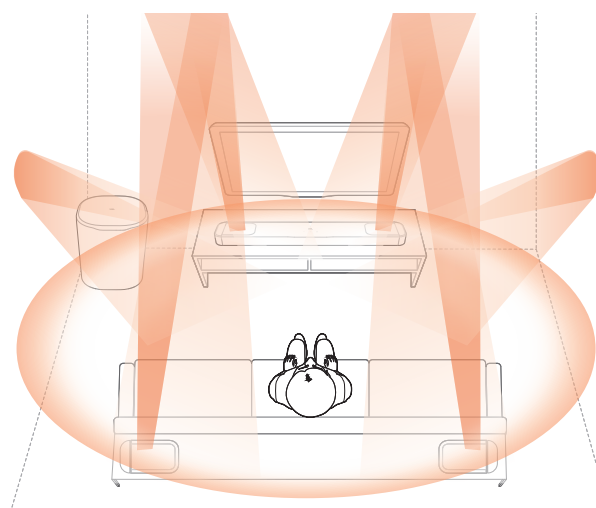


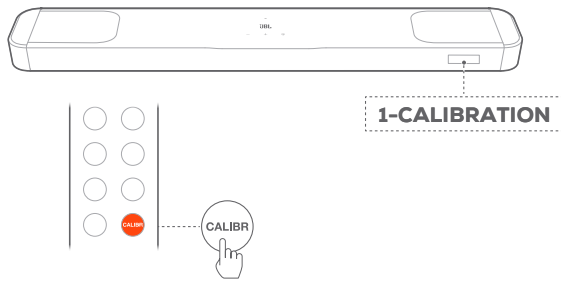
1) Calibrate the listening zone


1. Place the detachable rear speakers beside your seating position.

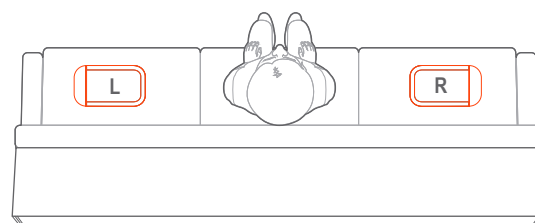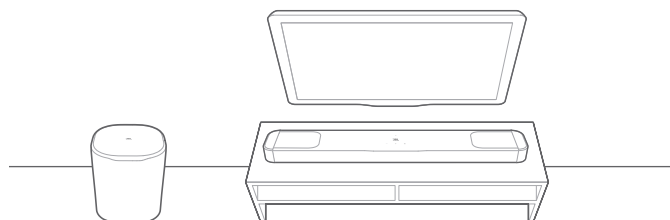


- Make sure that the two detachable speakers have been connected to the soundbar (See [“6.1 Connect the detachable rear speakers and subwoofer”](#)).

- On the remote control, press  / **CALIBR** to start calibration.
→ **"1-CALIBRATION"** is displayed on the soundbar.






- When **"PRESS AGAIN TO CONFIRM"** is displayed, press  / **CALIBR** again.
→ Countdown starts from 5 to 1.
→ Calibration tone is heard. Audio calibration starts.
"CALIBRATING": Calibration in progress
"1-DONE": Calibration of the listening zone is completed successfully.

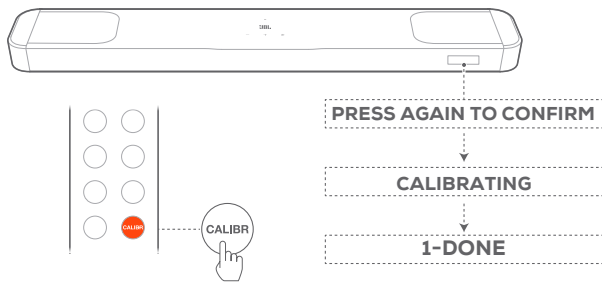


2) Calibrate the speaker position



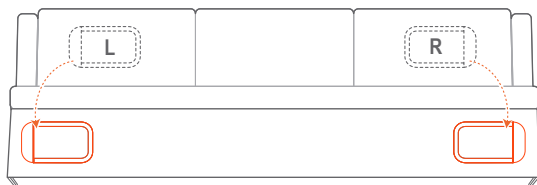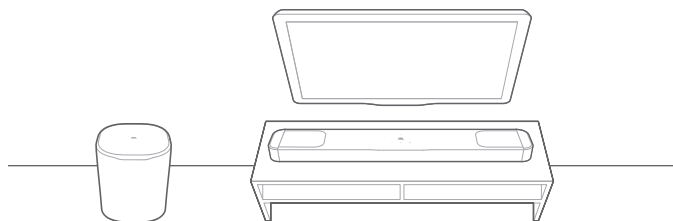


- Place the detachable rear speakers in your desired location.

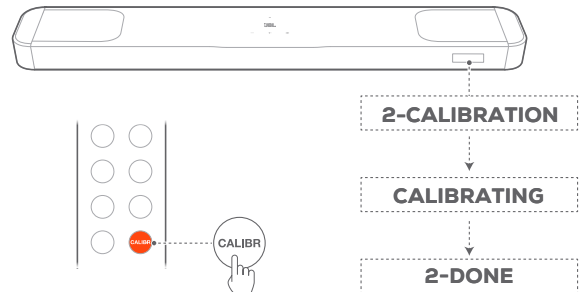

- On the remote control, press  / **CALIBR**.
→ **"2-CALIBRATION"** is displayed on the soundbar.
→ Countdown starts from 5 to 1.
→ Calibration tone is heard. Audio calibration starts.
"CALIBRATING": Calibration in progress
"2-DONE": Calibration of the speaker position is completed successfully.





NOTES:

- During sound calibration, all buttons on the remote control are disabled except for  and  / **CALIBR**.
- During sound calibration, environmental sound will be recorded. Hold  / **CALIBR** for 10 seconds, then press  /  to play the recorded audio (for US version only).

6.3.2 Dolby Atmos / DTS:X

With Dolby Atmos or DTS:X, overhead audio distribution is provided for powerful 3D sound immersion.

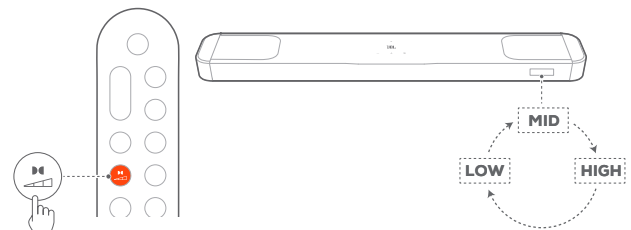


- To play the surround sound of Dolby Atmos or DTS:X, connect and play your Blu-ray player or streaming device as described under ["5.1 Connect with your TV and digital devices"](#).
- To select suitable strength for Dolby Atmos or DTS:X, press  on remote control to toggle between middle (default), high, or low.

NOTE:


- The Dolby Atmos or DTS:X sound effects are respectively applicable to Dolby or DTS:X audio content only.

6.3.3 Rear adjustment

With both detachable rear speakers undocked, you can adjust the surround sound level.

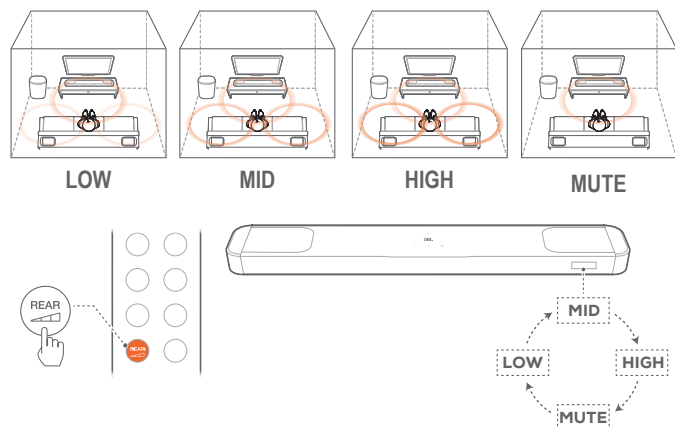


1. Check that the soundbar and the detachable rear speakers are connected wirelessly (See [“6.1 Connect the detachable rear speakers and subwoofer”](#)).
2. On the remote control, press / to toggle between surround sound levels.
 - “MID”/“HIGH”/“MUTE”/“LOW” is displayed (Default: “MID”).
 - “UNDOCK REAR SPKR” is displayed if the detachable rear speakers have been docked onto the soundbar.

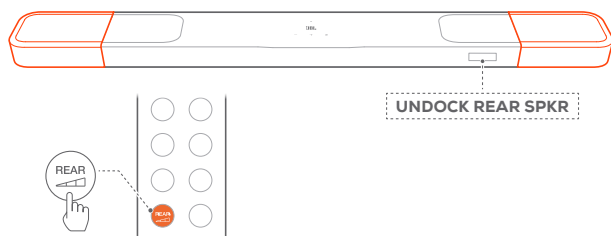

6.3.4 Bass adjustment

You can make bass adjustment as needed.

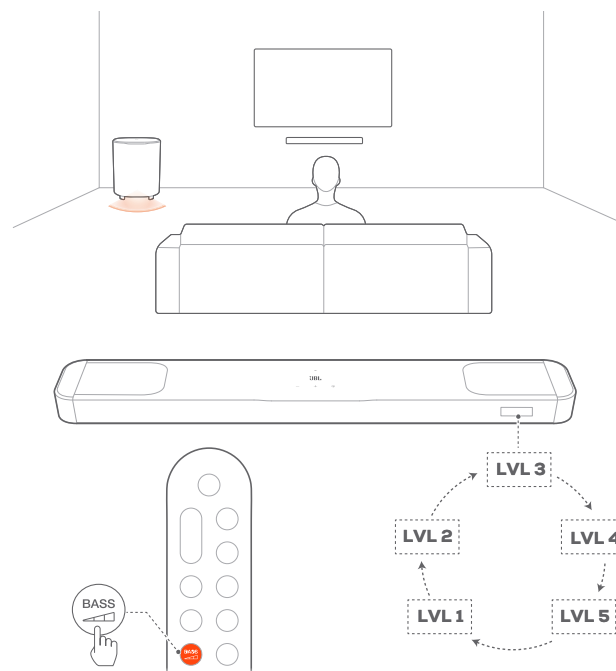

- On the remote control, press / to toggle between bass levels.
 - “LVL1” to “LVL5” is displayed (Default: “LVL3”).

7. PLAY

7.1 Switch on/Auto standby/Auto wakeup



7.1.1 Switch on

To switch on, press \mathcal{U} on the remote control, or press any button on the soundbar to wake up the system.

- “HELLO” is displayed.
- The subwoofer is reconnected to the soundbar automatically. Connected: turns solid white.
- The detachable speakers are reconnected to the soundbar automatically. Connected: The status indicator turns solid white (○).

7.1.2 Auto standby

If the soundbar is inactive for more than 10 minutes, it will switch to standby mode automatically. “STDBY” is displayed.

- The subwoofer also goes to standby, and turns solid amber.
- The detachable speakers switch to standby, and the status indicator turns off for wireless connection status.
- Next time you switch on the soundbar, it returns to the last selected source.

NOTE:

- On the detachable speakers, hold \mathcal{U} for more than 3 seconds to switch off; press \mathcal{U} again to reconnect to the soundbar.


7.1.3 Auto wakeup

In standby mode, the soundbar will wake up automatically when

- the soundbar is connected to your TV through the HDMI eARC/ARC connection and your TV is switched on;
- the soundbar is connected to your TV and digital device such as a set-top box, DVD/Blu-ray player or game console through HDMI cables, and your digital device is switched on;
- the soundbar is connected to your home network and audio is streamed to the soundbar through the music streaming services.

7.2 Play from the TV source

With the soundbar connected, you can enjoy TV audio from the soundbar speakers.

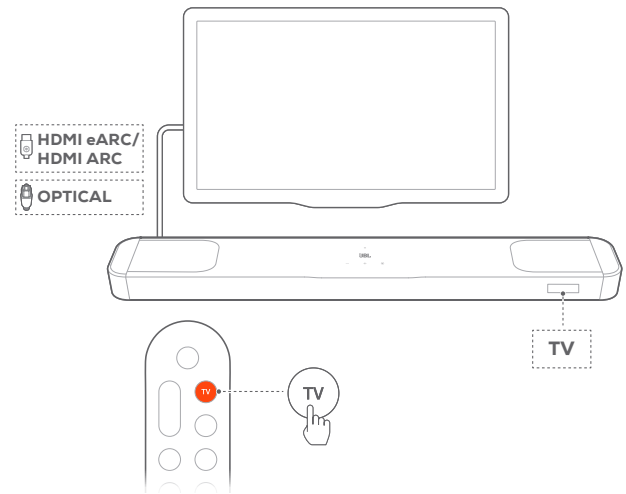

1. Make sure that your TV is set to support external speakers and the built-in TV speakers are muted. Refer to the owner's manual of your TV for more information.
2. Make sure that the soundbar has been properly connected to your TV (See “[5.1 Connect with your TV and digital devices](#)”).
3. To select the TV source, press \mathcal{G} on the soundbar or TV on the remote control.
 - “TV”: The TV source is selected.
 - In the factory settings, the TV source is selected by default.

NOTE:

- If the soundbar is connected to your TV through both an HDMI cable and an optical cable, the HDMI cable source is selected for the TV connection.

7.2.1 TV remote control setup

To use your TV remote control for both your TV and the soundbar, check that your TV supports HDMI-CEC. If your TV does not support HDMI-CEC, follow the steps under “[TV remote control IR learning](#)”.

HDMI-CEC

If your TV supports HDMI-CEC, enable the functions as instructed in your TV user manual. You can control the “volume +/-, mute/unmute, and power on/standby” functions on your soundbar through the TV remote control.

TV remote control IR learning

Through IR learning, you can program the soundbar to accept IR commands from your TV remote control, and then use your TV remote control for simple commands.

1. On the soundbar, hold \mathcal{G} and $+$ until “LEARNING” is displayed.
 - The soundbar enters the TV remote control learning mode.

2. Point your TV remote control at the soundbar. Follow the screen instructions to operate the buttons on your TV remote control:


- When any one of “POWER”, “VOL+”, “VOL-”, or “MUTE” is displayed on the soundbar, press the desired button on your TV remote control.
 - “DONE”: These commands are learnt by the soundbar.
 - The soundbar returns to the last selected source.
- To exit the TV remote control learning mode, hold **⏪** and **+** on the soundbar until “EXIT LEARNING” is displayed.
 - The learnt functions are discarded.

NOTE:

- The soundbar will exit the TV remote control learning mode automatically if no action is taken for 30 seconds. The learnt functions are discarded.

7.3 Play from the HDMI IN source

With the soundbar connected as shown, your digital device can play video on your TV and audio from the soundbar speakers.

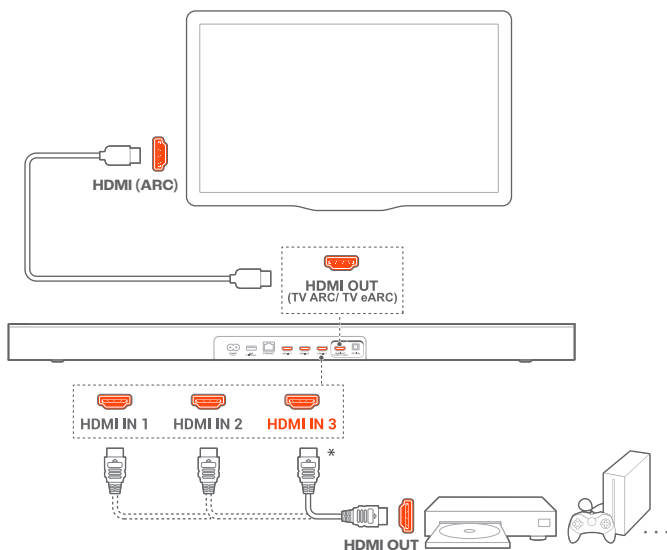


1. Make sure that the soundbar has been properly connected to your TV and digital device (See “[5.1 Connect with your TV and digital devices](#)”).
2. Switch on your digital device.
 - Your TV and the soundbar wake up from standby mode and switch to the input source automatically.
 - To select the **HDMI IN** source on the soundbar, press **⏪** on the soundbar or **HDMI** on the remote control.

NOTE:

- Full compatibility with all HDMI-CEC devices is not guaranteed.

7.4 Play from the Bluetooth source

Through Bluetooth, stream audio play on your Bluetooth device to the soundbar.

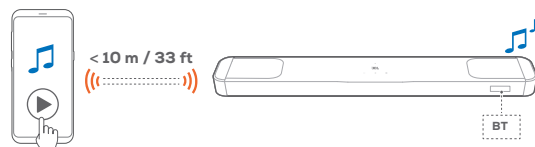

1. To select the Bluetooth source, press **⏪** on the soundbar or **BT** on the remote control.
2. Check that the soundbar has been properly connected to your Bluetooth device (See “[5.2 Connect to your Bluetooth device](#)”).
3. Start audio play on your Bluetooth device.
 - Alternatively, press **▶** on the remote control to control playback.
4. Adjust the volume on the soundbar, remote control or your Bluetooth device.

7.5 Play over your home network

NOTES:

- The soundbar can support audio streaming, but not video streaming.
- During Wi-Fi music streaming, music playback will pause on the currently connected device when you start music playback on a second connected device.
- When the soundbar switches between your home Wi-Fi and wired network during AirPlay, music playback will pause and resume in a few minutes, depending on broadband bandwidth conditions. For the connection to your home wired network, see “[5.3 Connect to your home network](#)”.

Before you start, make sure that:


- your Android or iOS device is connected to the same Wi-Fi network as your soundbar (See “[5.3 Connect to your home network](#)”).


7.5.1 Play with Google Cast

With Google Cast, stream audio from your Android or iOS device to the soundbar.

On your Android or iOS device:

1. Launch the JBL One app, and check that you have enabled Google Cast.

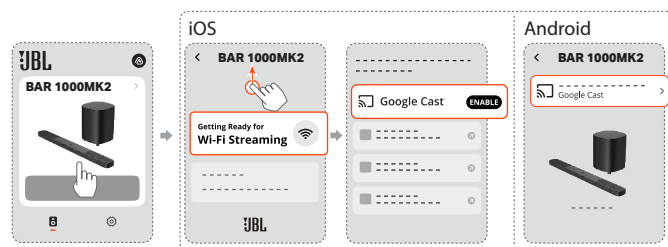

- On a Google Cast-enabled app, play music, tap the cast icon  and select the connected soundbar.




7.5.2 Play through Spotify Connect


Through Spotify Connect, stream audio from your Android or iOS device to the soundbar.

NOTE:

- Subscription is required for Spotify Connect.

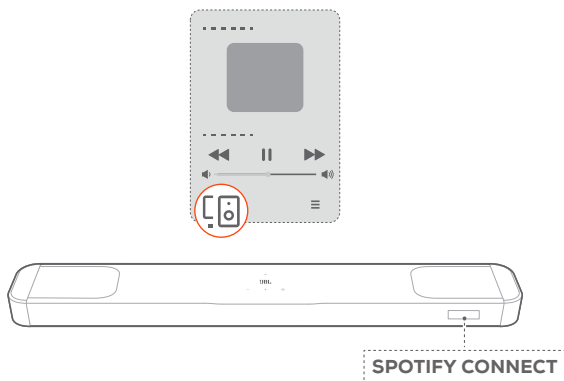

On your Android or iOS device:


- Launch the Spotify app and select a song to play.
- Tap the speaker icon  in the bottom corner of your screen.
- Select the connected soundbar from the device list, and then start audio streaming.

7.5.3 Play through Tidal Connect


Through Tidal Connect, stream audio from your Android or iOS device to the soundbar.

NOTE:

- Subscription is required for Tidal Connect.

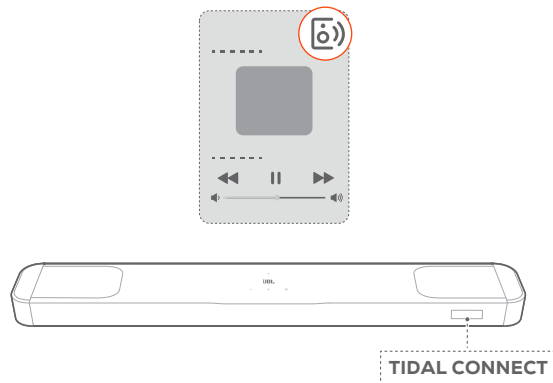


On your Android or iOS device:

 
- Launch the Tidal app and select a song to play.
- Tap on the device selector  at the top right of the screen.
- Select the connected soundbar from the device list, and then start audio streaming.

7.5.4 Play through AirPlay

Through AirPlay, stream audio on your iOS device to the soundbar.

On your iOS device:

- Swipe down from the upper right corner to enter the Control Center.
- Tap  to select the connected soundbar and then start audio streaming from an app.

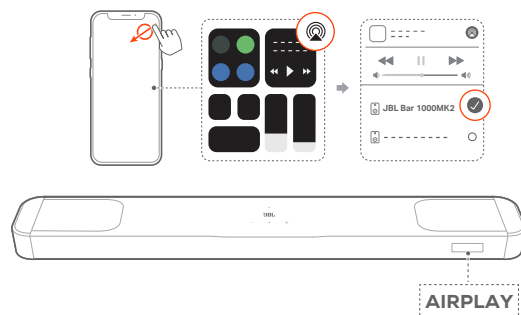


7.5.5 Play through the JBL One app

Through the JBL One app, stream audio from enabled music services to the soundbar.

On your Android or iOS device,

- Launch the JBL One app, browse available *music streaming services to select music, and then start music streaming to the connected soundbar.

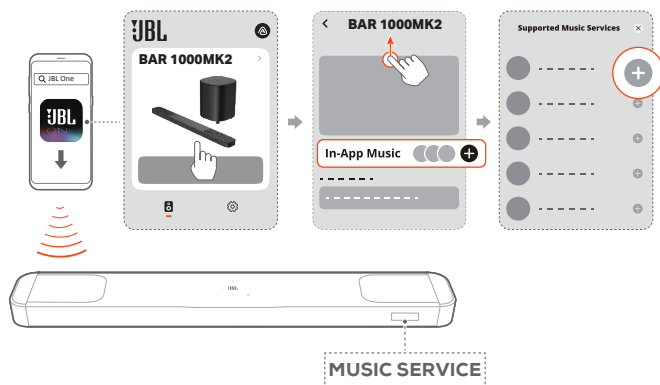


NOTE:


- *Subscription may be needed and not provided by the JBL One app.

Access your presets with the ♥ (Moment) button

1. On the JBL One app,
 - Personalize the ♥ (Moment) feature, and set your own playlist.

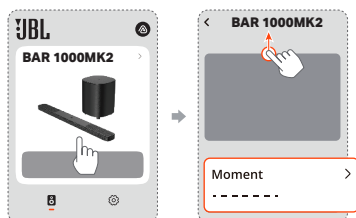


2. On the soundbar,
 - Press ♥ on the remote control to directly access your music playlist and speaker settings that you have personalized in the JBL One app.

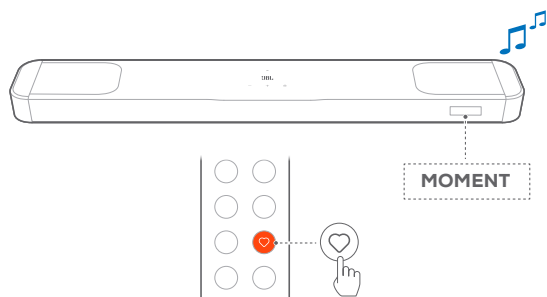

7.6 Multi-room playback

With the multi-room playback, you can stream music on your Android or iOS device to multiple Google Cast / AirPlay-enabled soundbars.


7.6.1 Google Cast


1. Through the Google Home app, connect multiple Google Cast-enabled speakers to the same network, assign them to multiple rooms, and create groups as needed.
2. Run a Google Cast-enabled app on your smartphone or tablet.
3. Play music. Press  and select the grouped soundbars.

NOTES:

- To create a multi-room speaker group in the Google Home app, make sure that you have connected all the soundbars to the same home network and have used the same Google login account. Refer to the Google Home app for more details.
- Depending on the bandwidth of your local network, you can stream music to up to 6 Google Cast-enabled soundbars.

7.6.2 AirPlay

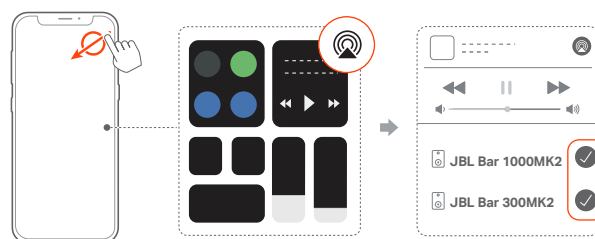

1. On an iOS device, enter the Control Center.
2. Tap  to select multiple connected soundbars as needed.
3. Start music streaming from an app.

8. SOUND SETTINGS

8.1 Audio sync

With the audio sync function, you can synchronize audio and video to make sure that no delay is heard from your video content.

1. On the remote control, hold **TV** for more than 3 seconds and then press **+**.
→ **"SYNC"** is displayed.
2. Within 5 seconds, press **+** or **-** on the remote control to adjust the audio delay and match with video.
→ The audio sync timing is displayed.

NOTE:

- You can also adjust the audio delay through the JBL One app.


8.2 Detachable speaker audio settings

Using the JBL One app, while both detachable speakers are undocked, you can:

- adjust the volume level of the detachable speakers;
- check the battery status of the detachable speakers;
- enable Audio Broadcasting to adjust the audio settings of the detachable speakers to your preference;
- enable Night Listening to create a quiet listening environment at night.


8.2.1 Audio Broadcasting

1. In the JBL One app, enable Audio Broadcasting and select your preferred audio settings: Mono or Stereo.

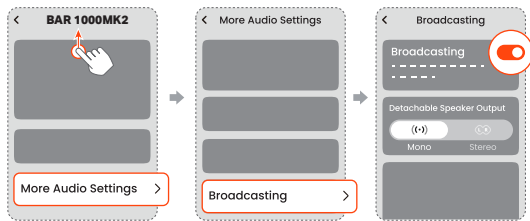

- When the Mono audio channel is selected, **"MONO BROADCASTING"** is displayed on the soundbar.
- When the Stereo audio channel is selected, **"STEREO BROADCASTING"** is displayed on the soundbar.


2. Undock one or both detachable speakers from the soundbar, and then move the detachable speaker(s) to your desired locations.

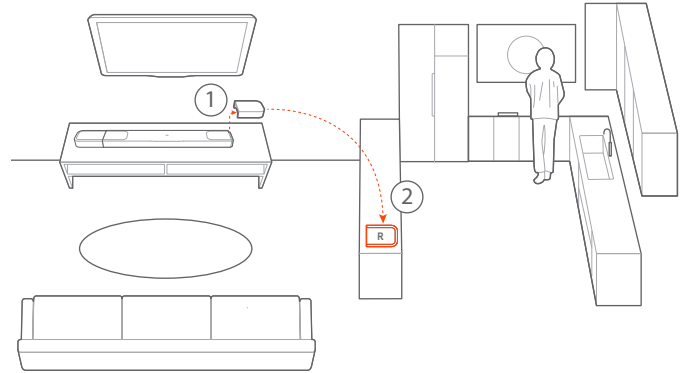


- You can enjoy audio from the soundbar at the living room and audio from the detachable speaker in the kitchen or other areas of the room.

8.2.2 Night Listening

1. In the JBL One app, enable Night Listening.

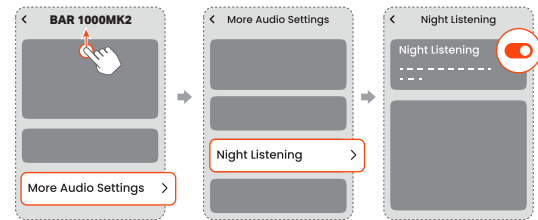

2. Undock the detachable speakers from the soundbar, and then move the detachable speakers close to you.

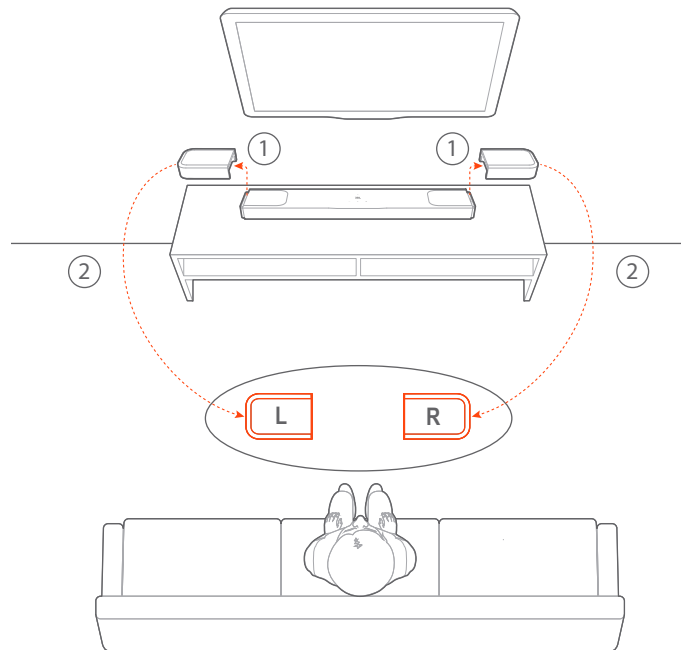

- The soundbar and subwoofer are muted. You can enjoy audio at night without disturbing others.

9. RESTORE FACTORY SETTINGS

To restore the factory settings, hold **Ⓢ**, **+** and **-** for more than 5 seconds.

→ **“RESET”** is displayed.

→ When the factory reset is complete, the soundbar will automatically restart.

10. SOFTWARE UPDATE



Connect the soundbar to your home network. Online updates will be performed automatically when software updates are available.

→ **“WAIT”**: Software updating in progress


→ **“DONE”**: Software updating completed

NOTE:




- Software updates will be synchronized to the two detachable speakers when they are connected to or docked onto the soundbar.

11. RE-CONNECT THE SUBWOOFER

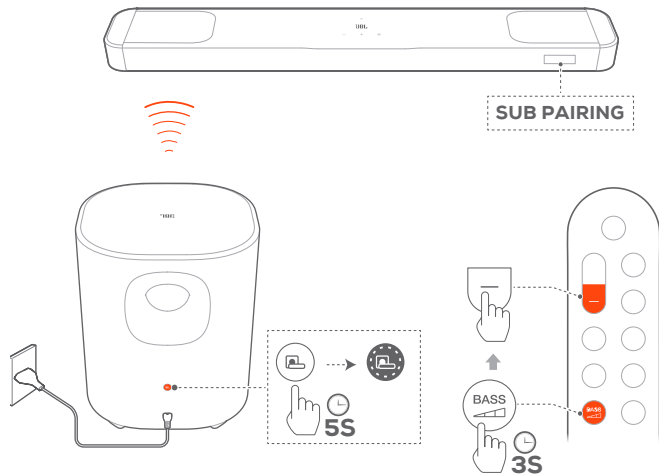

The soundbar and subwoofer are paired at factories. After power-on, they are paired and connected automatically. In some special cases, you may need to pair them again.



To re-enter the subwoofer pairing mode

1. On the rear panel of the subwoofer, hold  until it turns fast flashing white.
2. To enter the subwoofer pairing mode on the soundbar, hold  / BASS on the remote control for more than 3 seconds, and then press  on the remote control.
 - “SUB PAIRING”: The subwoofer is ready for pairing.
 - “SUB PAIRED”: The subwoofer is connected.

NOTE:

- If pairing is not completed within 3 minutes, the subwoofer will exit pairing mode and enter standby.  turns from fast flashing white to off. To return to the pairing mode, press .

12. PRODUCT SPECIFICATIONS

General specification:

- Model: BAR 1000MK2 (soundbar unit)
BAR 1000MK2 SURROUND (detachable speaker)
BAR 1000MK2 SUB (subwoofer unit)
- Sound system: 7.1.4 channel
- Power supply: 100 - 240 V AC, ~ 50/60 Hz
- Total speaker power output* (Max. @THD 1%): 960 W
- Soundbar output power** (Max. @THD 1%): 500 W
- Surround speaker output power*** (Max. @THD 1%): 2 x 80 W
- Subwoofer output power**** (Max. @THD 1%): 300 W
- Soundbar transducer: 6 x (44 x 80) mm racetrack drivers, 2 x 1" (25 mm) tweeters, 2 x 2.75" (70 mm) up-firing full-range drivers
- Surround speaker transducer: 2 x (44 x 90) mm racetrack drivers, 2 x 2.75" (70 mm) up-firing full-range drivers
- Subwoofer transducer: 10" (260 mm)
- Networked standby power: <2.0 W
- Operating temperature: 0 °C - 45 °C
- Lithium battery: 3.635 V, 6600 mAh
- Detachable surround speaker playtime: up to 10 hours (may vary according to content type and volume level)

HDMI specification

- HDMI video input: 3
- HDMI video output (with Enhanced Audio Return Channel, eARC): 1
- HDMI HDCP version: 2.3
- HDR pass through: HDR10+, Dolby Vision

Audio specification

- Frequency response: 33 Hz - 20 kHz (-6 dB)
- Audio inputs: Optical, Bluetooth, USB (USB playback is available in US version. For other versions, USB is for Service only.)

USB specification

- USB port: Type A
- USB rating: 5 V DC, 0.5 A
- Supporting file formats: mp3
- MP3 codec: MPEG 1 Layer 2/3, MPEG 2 Layer 3, MPEG 2.5 Layer 3
- MP3 sampling rate: 16 - 48 kHz
- MP3 bitrate: 80 - 320 kbps

Wireless specification

- Bluetooth version: v5.3
- Bluetooth profile: A2DP v1.3, AVRCP v1.5
- Bluetooth transmitter frequency range: 2400 MHz - 2483.5 MHz
- Bluetooth transmitter power: <15 dBm (EIRP)
- Wi-Fi network: IEEE 802.11 a/b/g/n/ac/ax (2.4 GHz / 5 GHz)

- 2.4G Wi-Fi transmitter frequency range: 2412 - 2472 MHz (2.4 GHz ISM Band, USA 11 Channels, Europe and others 13 Channels)
- 2.4G Wi-Fi transmitter power: <20 dBm (EIRP)
- 2.4G wireless transmitter frequency range: 2406 - 2474 MHz
- 2.4G wireless transmitter power: <10 dBm (EIRP)
- 5G Wi-Fi transmitter frequency range: 5.15 - 5.35 GHz, 5.470 - 5.725 GHz, 5.725 - 5.825 GHz
- 5G Wi-Fi transmitter power: 5.15 - 5.25 GHz <23 dBm, 5.25 - 5.35 GHz & 5.470 - 5.725 GHz <20 dBm, 5.725 - 5.825 GHz <14 dBm (EIRP)

Note: Band 5.6 - 5.64 GHz will be disabled when shipped to Australia / New Zealand.

Dimensions

- Total soundbar dimensions (W x H x D): 1203 x 52 x 128 mm / 47.4" x 2.0" x 5.0"
- Soundbar dimensions (W x H x D): 854 x 52 x 128 mm / 33.6" x 2.0" x 5.0"
- Detachable surround speaker dimensions (each) (W x H x D): 189 x 52 x 128 mm / 7.4" x 2.0" x 5.0"
- Subwoofer dimensions (W x H x D): 325 x 400 x 325 mm / 12.8" x 15.7" x 12.8"
- Soundbar weight: 5.5 kg / 12.1 lbs
- Detachable surround speaker weight (each): 0.9 kg / 2 lbs
- Subwoofer weight: 9.1 kg / 20 lbs
- Packaging dimensions (W x H x D): 980 x 398 x 495 mm / 38.58" x 15.67" x 19.49"
- Packaging weight: 22.6 kg / 49.8 lbs (EMEA/UK/AU/NZ); 19.9 kg / 44.4 lbs (Others)

* RMS @THD 1%: 480 W

** RMS @THD 1%: 250 W

*** RMS @THD 1%: 2 x 40 W

**** RMS @THD 1%: 150 W

13. TROUBLESHOOTING

Never try to repair the product yourself. If you have problems using this product, check the following points before you request services.

System

The unit will not turn on.

- Check if the power cord is plugged into power and the soundbar.

The soundbar has no response to button pressing.

- Restore the soundbar to factory settings (See "[9. RESTORE FACTORY SETTINGS](#)").

Sound

No sound from soundbar

- Make sure that the soundbar is not muted.
- Select the correct audio input source on the remote control.
- Connect the soundbar to your TV or other devices properly.
- Restore the soundbar to factory settings (See "[9. RESTORE FACTORY SETTINGS](#)").

Distorted sound or echo

- If you play audio from your TV through the soundbar, make sure that your TV is muted or the built-in TV speaker is disabled.

Audio and video are not synchronized.

- Enable the audio sync function to synchronize audio and video (See "[8.1 Audio sync](#)").

No height sound effects of Dolby Atmos

- If your TV supports HDMI ARC only, make sure that you have connected your digital device to the soundbar through the **HDMI (1/ 2 / 3)** / **HDMI IN (1/ 2/ 3)** connector on the soundbar (See "[5.1.2 TV \(HDMI ARC\)](#)").
- Enjoy the sound effects of Dolby Atmos when you play movies from the TV / HDMI source. For audio streaming over Bluetooth or casting apps (enabled by Google Cast or AirPlay), Dolby Atmos is not supported.

Bluetooth

A device cannot be connected with the soundbar.

- Check if you have enabled Bluetooth on the device.
- If the soundbar has been paired with another Bluetooth device, reset Bluetooth (see "[5.2.3 Connect to another Bluetooth device](#)").
- If your Bluetooth device has ever been paired with the soundbar, reset Bluetooth on the soundbar, unpair the soundbar on the Bluetooth device, and then pair the Bluetooth device with the soundbar again (see "[5.2.3 Connect to another Bluetooth device](#)").

Poor audio quality from a connected Bluetooth device

- The Bluetooth reception is poor. Move the source device closer to the soundbar, or remove any obstacle between the source device and the soundbar.

The connected Bluetooth device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the source device closer to the soundbar, or remove any obstacle between the source device and the soundbar.

Wi-Fi

Failed to connect to Wi-Fi.

- Make sure that Wi-Fi is turned on.
- Make sure that you have selected the right network and entered the correct password.
- Make sure that your router or modem is turned on and within the range.
- In your router settings, make sure that you have set the security type to WPA2 or auto.
- Make sure that your soundbar is connected to the same wireless LAN as your smartphone or tablet.
- If you have difficulties in setting up Wi-Fi, re-enter the Wi-Fi setup mode by holding **+** and **-** on the soundbar until **"SETUP WIFI"** is displayed.

Playback

AirPlay cannot find the soundbar as an AirPlay speaker for music streaming.

- On your Apple device, update the software to the latest version: iOS 13.4 and later, Mac OS 10.15.4 and later, or TV OS 14.3.
- Make sure that your Apple device has been connected to the same network as the soundbar.
- For a PC running iTunes for Windows, you can stream music from your PC to the soundbar through Bluetooth.

Music playback does not work smoothly when the sound source switches from Bluetooth to Google Cast or AirPlay.

- The quality of audio casting and playback are dependent on the traffic and coverage of the network that connects the soundbar and your casting devices, such as phones, tablets and PCs.

Music playback does not resume when the sound source switches from Bluetooth to TV / HDMI IN, and then back to Bluetooth.

- The music playback in the Bluetooth device stops when the sound source switches from Bluetooth to TV / HDMI IN. When you switch back to the Bluetooth source, start music playback in the Bluetooth device again.

Remote control

The remote control does not work.

- Check if the batteries are drained. If so, replace them with new ones.
- Reduce the distance and angle between the remote control and the main unit.

Failed to complete the TV remote control learning.

- Check if you are using an infra-red TV remote control. The IR learning is not supported by a Bluetooth TV remote control.

Low power standby mode

Failed to enter the low power standby mode

- To enter the low power standby mode, when the detachable speakers are docked on the soundbar, hold **⏻** on the remote control for 10 seconds until **"CEC 1"** is displayed on the soundbar. Next, hold **⏻** for another 10 seconds until **"CEC 2"** is displayed. After entering the **"CEC 2"** mode, the soundbar will switch to the standby mode while continuing to charge the detachable speakers. When the detachable speakers are fully charged after about 4 hours, the soundbar will automatically switch to the low power standby mode and stop charging the detachable speakers.
- To exit the low power standby mode, unplug the power cord and then plug it again.

14. TRADEMARKS



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HARMAN International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



The Wi-Fi CERTIFIED™ Logo is a registered trademark of Wi-Fi Alliance®.

COMPATIBLE WITH



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.



FOR DTS PATENTS, SEE [HTTP://XPERI.COM/DTS-PATENTS/](http://xperi.com/dts-patents/). MANUFACTURED UNDER LICENSE FROM DTS, INC. AND ITS AFFILIATES. DTS, DTS:X, AND THE DTS:X LOGO ARE REGISTERED TRADEMARKS OR TRADEMARKS OF DTS, INC. AND ITS AFFILIATES IN THE UNITED STATES AND/OR OTHER COUNTRIES. © DTS, INC. AND ITS AFFILIATES. ALL RIGHTS RESERVED.



Google, Android, Google Home, Google Cast and other marks are trademarks of Google LLC.

Google Assistant is not available in certain languages and countries. Availability and performance of certain features, services, and applications are device and network dependent and may not be available in all areas.



Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Apple, and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

To use AirPlay with JBL Bar 1000MK2, the latest version of iOS, iPadOS, or macOS is recommended.



Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how.

The Spotify Software is subject to third party licenses found here: <https://www.spotify.com/connect/third-party-licenses>.

ROON READY

Being Roon Ready means that HARMAN uses Roon streaming technology, for an incredible user interface, simple setup, rock-solid daily reliability, and the highest levels of audio performance, without compromise.

15. OPEN SOURCE LICENSE NOTICE

This product contains open source software licensed under GPL.
For your convenience, the source code and relevant build instruction
are also available at [https://harman-webpages.s3.amazonaws.com/
Harman_One_OS_C_package_license_list.htm](https://harman-webpages.s3.amazonaws.com/Harman_One_OS_C_package_license_list.htm).

Please feel free to contact us at:

Harman Deutschland GmbH

HATT: Open Source, Gregor Krapf-Gunther, Parkring 3

85748 Garching bei Munchen, Germany

or OpenSourceSupport@Harman.com if you have additional
question regarding the open source software in the product.




HARMAN International Industries,
Incorporated 8500 Balboa Boulevard,
Northridge, CA 91329 USA
www.jbl.com


© 2025 HARMAN International Industries, Incorporated.

All rights reserved.

JBL is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries. Features, specifications and appearance are subject to change without notice.

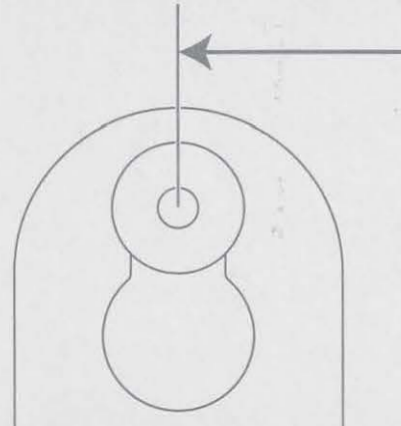

680mm / 26.77"

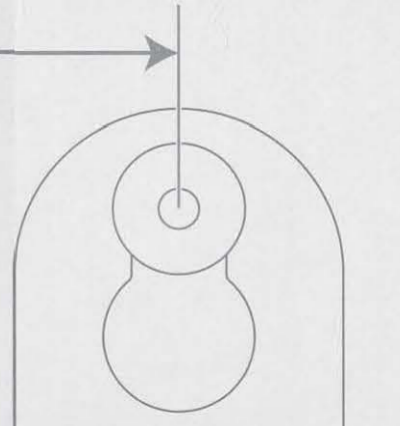

203024488



BAR 1000MK2

7.1.4 channel soundbar system with detachable surround speakers, Dolby Atmos® and DTS:X®



Get real spatial sound in seconds.

Real spatial sound—the kind that fills your space from floor to ceiling with true Dolby Atmos® and DTS:X height effects—can be yours in seconds. Just pick up the detachable wireless speakers from either end of the JBL BAR 1000MK2 soundbar and place them behind where you're sitting. That's it.

While you're pulled into the center of the action, you'll enjoy deep, punchy bass from a 10" subwoofer and MultiBeam™ 3.0 for the widest, most cinematic soundstage. If you need to step out of the room while you're catching up with your favorite video podcast or enjoying your go-to streaming playlist on your TV, take one of the wireless speakers along and you won't have to miss a thing.

JBL can do this because our speakers are trusted in cinemas, recording studios, and concert halls. And this immersive sound experience works seamlessly with all TV brands. Enjoy the freedom of unbound cinematic sound.

Features

- ▶ Real panoramic surround sound with detachable wireless speakers
- ▶ 960W max output power and a 10" wireless subwoofer
- ▶ True Dolby Atmos® and DTS:X
- ▶ MultiBeam™ 3.0
- ▶ PureVoice 2.0
- ▶ SmartDetails
- ▶ Broadcasting
- ▶ Night listening
- ▶ Easy sound calibration
- ▶ Works with all ecosystems and music streaming services
- ▶ JBL ONE App
- ▶ HDMI eARC with 4K Dolby Vision passthrough

Dolby Atmos dtsx MultiBeam COMPATIBLE WITH Dolby Vision





BAR 1000MK2

7.1.4 channel soundbar system with detachable surround speakers, Dolby Atmos® and DTS:X®

Features and Benefits

Real panoramic surround sound with detachable wireless speakers

Elevate your 3D surround sound experience with dynamic, immersive height. Four up-firing speakers in the soundbar and wireless rear speakers deliver true Dolby Atmos® sound. No extra wires. No power connections. Just lift the detachable surround speakers off the soundbar—you can do it with just one hand—and place them behind where you want to sit, instantly transforming them into a true surround sound setup. It's that simple. Whether you're binge-watching your new favorite show or hosting a movie night, the speakers' rechargeable long-lasting batteries mean you'll enjoy immersive, cinematic surround sound for hours. When you're done, simply place them back on the soundbar to charge overnight.

True Dolby Atmos® and DTS:X

Plunge into theater-quality 3D spatial sound with true Dolby Atmos® and DTS:X. Shiver as spaceships fill the sky overhead. Feel explosions that rumble through your body. Experience music like you're right there in the recording studio.

MultiBeam™ 3.0

Wherever you're sitting, you'll be in the middle of the action. Our MultiBeam™ 3.0 delivers a wide, cinema-like soundstage that makes every high-speed chase or epic fight scene come alive. The sound beams perfectly fill your room, delivering the most immersive, lifelike, and realistic sound reproduction.

PureVoice 2.0

Never miss a softly spoken line or a whispered plot twist. JBL's own PureVoice 2.0 automatically raises or optimizes the dialogue, based on both ambient sound in the scene and your soundbar's volume. So you'll always hear every word, clearly and consistently, in cinema-quality sound.

SmartDetails

Hear all the subtleties in a film's sound mix, just like you would in the theater. From a creaking door to a faraway shout, experience every detail the way the filmmakers intended in a clear, balanced sound field, thanks to JBL's own advanced sound enhancement technology.

Broadcasting

You don't want to miss any of the big game, even when you're in the kitchen making another batch of hot wings. Just bring one—or both, for stereo sound—of the detachable wireless speakers with you and you'll hear the same great movie-quality audio your family and guests are enjoying in the other room.

Night listening

Enjoy your favorite shows or movies without disturbing others. Just put the wireless detachable speakers in front of you and use the JBL ONE app to turn on night listening. The soundbar and the subwoofer are automatically muted, while the speakers deliver an intimate high-quality audio experience just for one. Or two.

JBL ONE App

Set up the soundbar using the JBL ONE app, then make it yours. Customize the sound your way with a precise equalizer, browse your favorite music apps, and get software upgrades for all the latest features, right from your couch.

Technical Specifications

General Specifications

- ▶ Sound system: 7.1.4 channel
- ▶ Power supply: 100 - 240V AC, ~ 50/60Hz
- ▶ Total speaker power output* (Max. @THD 1%): 960W
- ▶ Soundbar output power** (Max. @THD 1%): 500W
- ▶ Surround speaker output power*** (Max. @THD 1%): 2x 80W
- ▶ Subwoofer output power**** (Max. @THD 1%): 300W
- ▶ Soundbar transducer: 6x (44x80)mm racetrack drivers, 2x 1" (25mm) tweeters, 2x 2.75" (70mm) up-firing full-range drivers
- ▶ Surround speaker transducer: 2x (44x90)mm racetrack drivers, 2x 2.75" (70mm) up-firing full-range drivers
- ▶ Subwoofer transducer: 10" (260mm)
- ▶ Lithium battery: 3.635V, 6600mAh
- ▶ Detachable surround speaker playtime: up to 10 hours (may vary according to content type and volume level)

HDMI Specification

- ▶ HDMI video input: 3
- ▶ HDMI video output (with Enhanced Audio Return Channel, eARC): 1
- ▶ HDMI HDCP version: 2.3
- ▶ HDR pass through: HDR10+, Dolby Vision

Audio Specification

- ▶ Frequency response: 33Hz - 20kHz (-6dB)
- ▶ Audio inputs: Optical, Bluetooth, USB (USB playback is available in US version. For other versions, USB is for Service only.)

USB specification

- ▶ USB port: Type A
- ▶ USB rating: 5V DC, 0.5A
- ▶ Supporting file formats: mp3

Wireless specification

- ▶ Bluetooth version: v5.3
- ▶ Bluetooth profile: A2DP v1.3, AVRCP v1.5
- ▶ Bluetooth transmitter frequency range: 2400 MHz – 2483.5 MHz
- ▶ Bluetooth transmitter power: <15 dBm (EIRP)
- ▶ Wi-Fi network: IEEE 802.11 a/b/g/n/ac/ax (2.4GHz/5GHz)
- ▶ 2.4G Wi-Fi transmitter frequency range: 2412 - 2472 MHz (2.4 GHz ISM Band, USA 11 Channels, Europe and others 13 Channels)
- ▶ 2.4G Wi-Fi transmitter power: < 20 dBm (EIRP)
- ▶ 5G Wi-Fi transmitter frequency range: 5.15 - 5.35GHz, 5.470 - 5.725GHz, 5.725 - 5.825GHz
- ▶ 5G Wi-Fi transmitter power: 5.15 - 5.25GHz <20dBm, 5.25 - 5.35GHz & 5.470 - 5.725GHz <20dBm, 5.725 - 5.825GHz <14dBm (EIRP)

Note: Band 5.6 - 5.64 GHz will be disabled when shipped to Australia / New Zealand.

Dimensions

- ▶ Total soundbar dimensions (W x H x D): 1203 x 52x 128mm / 47.4" x 2.0" x 5.0"
- ▶ Soundbar dimensions (W x H x D): 854 x 52 x 128mm / 33.6" x 2.0" x 5.0"
- ▶ Detachable surround speaker dimensions (each) (W x H x D): 189x 52 x 128mm / 7.4" x 2.0" x 5.0"
- ▶ Subwoofer dimensions (W x H x D): 325 x 400 x 325 mm / 12.8" x 15.7" x 12.8"
- ▶ Soundbar weight: 5.5kg / 12.1 lbs
- ▶ Detachable surround speaker weight (each): 0.9 kg / 2 lbs
- ▶ Subwoofer weight: 9.1 kg / 20 lbs
- ▶ Packaging dimensions (W x H x D): 980 x 398 x 495 mm / 38.58" x 15.67" x 19.49"
- ▶ Packaging Weight: 22.6kg / 49.8lbs (EMEA/UK/AU/NZ);19.9kg / 44.4lbs (Others)*

RMS @THD 1%: 480W

What's in the Box

- 1x Main soundbar
- 2x Detachable wireless surround speakers
- 1x Wireless subwoofer
- Remote control with 2 x batteries
- Power cords (up to 6pcs depending on region SKUs)
- 1 x HDMI cable
- 2 x L-shape wall-mount bracket (main bar) + 2 x U-shape wall-mount bracket (for surround speakers) kit with screws
- 4 x Side caps
- Quick start guide
- Safety instruction and Warranty card
- Wall mount template

Disclaimer: Some features require subscriptions or services not available in all countries



HARMAN International Industries, Incorporated
8500 Balboa Boulevard, Northridge, CA 91329 USA
www.jbl.com

© 2025 HARMAN International Industries, Incorporated. All rights reserved. JBL is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries. Features, specifications and appearance are subject to change without notice. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HARMAN International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.



Safety Instruction and Warranty Card

Instructions de sécurité et fiche de la garantie



PRODUCT REGISTRATION ENREGISTREMENT DU PRODUIT

register.jbl.com

SIGN UP & STAY TUNED
INSCRIVEZ-VOUS ET RESTEZ À JOUR

Register your product • Enregistrez votre produit • Registro del producto

*Product registration may not be available for all countries

*L'enregistrement des produits peut ne pas être possible dans certains pays.



SCAN ME
BALAYEZ CE CODE

ENGLISH

Download the full warranty card and safety information and other helpful information from our website:
www.jbl.com/warrantyandsafetybooks

FRANÇAIS

Téléchargez la carte de garantie et les informations de sécurité complètes ainsi que d'autres informations utiles sur notre site Web :
www.jbl.com/warrantyandsafetybooks

FRANÇAIS (CANADA)

Téléchargez la fiche complète de la garantie et les informations de sécurité ainsi que d'autres renseignements utiles de notre site Web :
www.jbl.com/warrantyandsafetybooks

ESPAÑOL


Descarga la tarjeta de garantía completa, la información de seguridad y otra información útil de nuestro sitio web:
www.jbl.com/warrantyandsafetybooks



ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

For all products:

1. Clean only with a dry cloth.
2. Do not block any ventilation openings. Install this apparatus in accordance with the manufacturer's instructions.
3. Do not install this apparatus near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
4. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
5. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
6. Use only attachments/accessories specified by the manufacturer.
7. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the

power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

10. To disconnect this apparatus from the AC mains completely, disconnect the power-supply cord plug from the AC receptacle.
11. The main plug of the power-supply cord shall remain readily operable.
12. This apparatus is intended to be used only with the power supply and/or charging cable provided by the manufacturer.

The following instructions may not apply to waterproof devices. Refer to your device user manual or quick start guide for more waterproof instruction if any.

- Do not use this apparatus near water.
- Do not expose this apparatus to dripping or splashing, and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.



THIS SYMBOL ON THE PRODUCT MEANS THERE IS UNINSULATED, DANGEROUS VOLTAGE WITHIN THE PRODUCT ENCLOSURE THAT MAY PRESENT A RISK OF ELECTRICAL SHOCK.



THIS SYMBOL ON THE PRODUCT MEANS THERE ARE IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THIS GUIDE.

For Products That Transmit RF Energy:

(i) This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

(ii) Radiation Exposure statement

This equipment complies with FCC and IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

For radio equipment operates in 5150-5850MHz

FCC and IC Caution:

High power radars are allocated as primary users of the 5.25 to 5.35 GHz and 5.65 to 5.85 GHz bands. These radar stations can cause interference with and/or damage to LE LAN (Licence-Exempt Local Area Network) devices. No configuration controls are provided for this wireless equipment allowing any change in the frequency of operations outside the FCC grant of authorization for US operation according to Part 15.407 of the FCC rules.

IC Caution:

User should also be advised that:

- (i) The device for operation in the band 5150 - 5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) The maximum antenna gain permitted for devices in the bands 5250 - 5350 MHz and 5470 - 5725 MHz shall comply with the e.i.p. limit; and

(iii) The maximum antenna gain permitted for devices in the band 5725 - 5825 MHz shall comply with the e.i.p. limits specified for point-to-point and non point-to-point operation as appropriate.

Use Restriction Attention in European Union, operation is limited to indoor use within the band 5150-5350 MHz.

For devices with headphone jacks

WARNINGS/CAUTIONS



Do NOT use the headphones at a high volume for any extended period.

- To avoid hearing damage, use your headphones at a comfortable, moderate volume level.
- Turn the volume down on your device before placing the headphones on your ears, then turn the volume up gradually until you reach a comfortable listening level.

For Products That Include Batteries

Instructions for Users on Removal, Recycling and Disposal of Used Batteries
To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries. For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-

CAUTION FCC AND IC STATEMENT FOR USERS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES(B)/NMB(B)

FCC SDOCSUPPLIER'S DECLARATION OF CONFORMITY

HARMAN International hereby declares that this equipment is in compliance with the FCC Part 15 Subpart B.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by HARMAN could void the user's authority to operate the equipment.

management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire, explosion or leakage of flammable liquid/gas, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), sunshine or like, expose to extremely low air pressure or dispose of in fire or water. Replace only with specified batteries. The symbol indicating 'separate collection' for all batteries and accumulators shall be the crossed-out wheeled bin shown below:



WARNING - For Products Contain Coin/Button Cell Batteries

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD: This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

HARMAN International Industries, Incorporated. All rights reserved.
JBL is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries. Features, specifications and appearance are subject to change without notice.



WARRANTY CARD / FICHE DE LA GARANTIE

EN WARRANTY CARD

SET UP INFORMATION & PRODUCT REGISTRATION

Congratulations with the purchase of your new Product. We have done our utmost to make your experience the best one possible. If you have any questions when setting up your Product and would like some helpful hints, we recommend that you visit the relevant country specific support website for your Product: www.jbl.com. There you will also find relevant contact information. If you cannot find the information you are looking for, please contact the vendor that sold the Product to you or contact the relevant JBL customer support center by electronic mail or phone.

We recommend that you register your Product via the relevant country specific website for your Product. Your registration will allow us to inform you about updates for certain products, possible new offers and new Products and/or applications. Registering is easy; just follow the instructions on the relevant country specific website for your Product.

NOTE: THIS LIMITED WARRANTY DOES NOT APPLY TO CONSUMERS IN THE EUROPEAN ECONOMIC AREA (EEA) MEMBER STATES, AUSTRALIA AND NEW ZEALAND AS THEY ARE PROTECTED BY LOCAL CONSUMER LAW AND BENEFIT FROM LOCAL STATUTORY WARRANTIES

misrepresentation by the seller, performance variations resulting from installation-related circumstances such as source quality or AC power or Product modifications; any unit on which the serial number has been effaced, modified or removed, or units used for other than home use. This Limited Warranty is valid only for JBL products purchased from an authorized dealer.

Except to the extent expressly prohibited in your jurisdiction by applicable law, all implied warranties, including fitness for a particular purpose and merchantability are hereby excluded and in no event shall HARMAN or any HARMAN subsidiary be liable for any indirect, direct, incidental, special or consequential loss or damages whatsoever (including, without limitation, other pecuniary loss) arising out of the use of or inability to use the Product, even if HARMAN and/or a HARMAN subsidiary have been advised of the possibility of such damages. To any extent that HARMAN cannot lawfully disclaim implied warranties under this Limited Warranty, all such implied warranties are limited in duration to the duration of this warranty. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by jurisdiction.

HOW TO OBTAIN WARRANTY SERVICE

Contact the dealer who sold you this Product, or contact JBL customer support using the contact information on the relevant country specific support website for your Product to request warranty service. To validate your right to this Limited Warranty, you must provide the original sales invoice or other proof of ownership and date of purchase. Do not return your Product without prior authorization from the corresponding dealer or HARMAN. Warranty repair of the HARMAN Product must be carried out by an authorized dealer or service center. Unauthorized warranty repair will void the warranty and is performed at your sole risk.

You are also welcome to consult the relevant country specific HARMAN support website for your Product for helpful hints.

LIMITED WARRANTY

WHO IS PROTECTED BY THE WARRANTY

This limited warranty (the "Limited Warranty") protects only the original end-user ("you" or "your"), and is not transferable and is applicable only in the country (excluding EEA member states and the Russian Federation) in which you originally purchased your JBL Product (the "Product"). Any attempt to transfer this warranty shall immediately make this warranty void.

LIMITED WARRANTY

HARMAN International Industries, Incorporated ("HARMAN") is the manufacturer and through its local subsidiary, warrants to you that the Product (including components provided inwith the Product) will be free from defects in workmanship and materials for a period of ONE year from the date of retail purchase by you (the "Warranty Period"). During the Warranty Period, the Product (including components), will be repaired or replaced at HARMAN's option, without charge for either parts or labor OR at HARMAN's sole option, the price of the Product may be refunded, subject to depreciation based on your purchase price for the Product pro-rated over the remaining balance of the Warranty Period. Any warranty service or replacement of parts will not extend the Warranty Period.

This Limited Warranty does not cover defects which are a result of: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs by someone other than an authorized JBL service center; (6) deterioration of component parts, the nature of which is to become worn or depleted with use, such as batteries and headphone ear pads.

Furthermore, this Limited Warranty covers only actual defects within the Product itself, and does not cover the cost of installation or removal from a fixed installation, setup or adjustments, claims based on

WHO PAYS FOR WHAT

This Limited Warranty covers all expenses for labor and materials required for the repair OR replacement of the Product that is found to be defective, and a reasonable return shipping charge within the country of repair. Please be sure to save the original shipping carton(s), because a charge will be made for additional cartons/packaging.

You will be charged for the cost of examining a unit that is not in need of repair (including resulting shipping costs), or for necessary repairs not covered by this Limited Warranty.

We sincerely thank you for your expression of confidence in JBL. We wish you many years of listening pleasure.

HARMAN

HARMAN International Industries, Incorporated
8500 Balboa Boulevard, Northridge, CA 91329 USA



203024103

SSA2020-002_JBL_Non HP_Safety&Warranty_US_(130 x 60mm)_V3

roon



Level up your listening with the ultimate music player



roon

Roon is the music player app for music fanatics.

It identifies your music and adds tons of rich metadata – reviews, bios, lyrics, credits, tour dates, photos, and performer and composer credits – that power the discovery of new music and reconnect you to old favorites.

Then it lets you listen on all your gear, at the highest possible sound quality.

ENJOY ALL YOUR MUSIC

TIDAL

qobuz

KKBOX

INTERNET RADIO

PC/NAS

ON ALL YOUR GEAR



HARMAN

ARCAM

mark Levinson

roon
READY

Google
Chromecast

AirPlay



Get your free 60-day Roon trial today!

J [REDACTED] D

Redeem your code at <https://roon.link/redeem>

Need help with Roon? <https://roon.link/contact>