



## Unicorn Ride On

060-ROT-30

## Owner's Manual

\*Product appearance and colors may vary from the photo.



### **WARNING:**

**This product should only be assembled by an adult.**

**Maximum User Weight : 44 lbs / 20 kg**

 


For Age

**18 - 36**  
**Mo**

Welcome to Kidzone's world of ride-ons where fun and adventure await! Little ones have a blast riding our toys at home, in the park, or on the sidewalk.

At Kidzone, our goal is to make playtime more fun for kiddos, while ensuring comfort and safety. Our ride-ons help create joyful moments for the entire family that'll turn into forever memories!

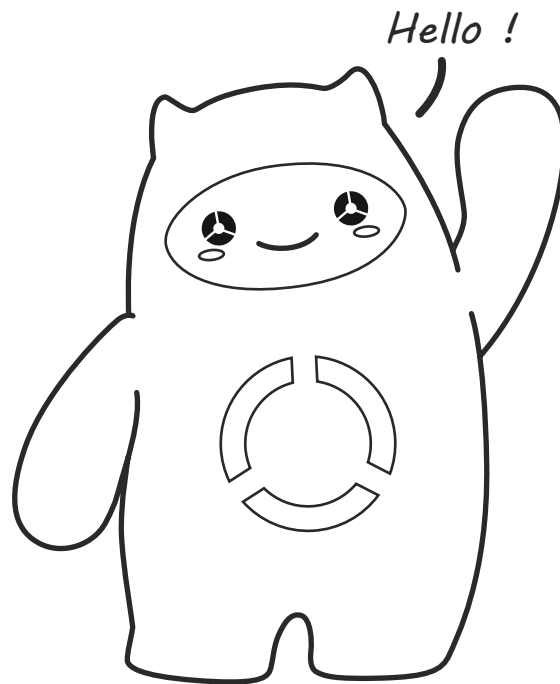

 **ATTENTION**

This owner's manual contains important safety, performance, and maintenance information.

Read the manual before allowing your child to ride on the product.

Keep this manual for future reference.

# Table of Contents

<b>04</b>	<b>Safety Instruction</b>
<b>06</b>	<b>Product Specification</b>
<b>07</b>	<b>Parts and Accessories</b>
<b>08</b>	<b>Assembly Instruction</b>
<b>13</b>	<b>User's Instruction</b>
<b>16</b>	<b>User's Instruction</b> Charging
<b>17</b>	<b>Care and Maintenance</b>
<b>18</b>	<b>Troubleshooting</b>
<b>20</b>	<b>Warrenty Information</b>

# Safety Instruction



When using electrical product, basic safety precaution should always be followed including the following:

Failure to follow the safety instructions may result in property damage, serious injury or death.

 
## WARNING

### DISCLAIMER

- Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.


### BASIC SAFETY

- **This product is only designed to be used by children age 18 - 36 months old.**
- **Do not exceed the maximum weight capacity of 44 lbs / 20 kg.**
- **Adult and/or supervisors must instruct the user all common safety rules and safe practice.**
- **This product should be operate on a flat and smooth surface. Do not use this product in any slippery conditions including rain, snow, and ice, or at any potential dangerous places.**
- **Do not drive the vehicle on the grass , rugged or muddy ground.**
- **To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.**
- **RISK OF FIRE. Do not bypass. Replace only with original size and type.**
- **Do not use this product as a traffic tool.**
- **Never leave children unattended with the ride-on toy. Close supervision is necessary when your children is using the product.**
- **If necessary, adult and/or supervisors should be responsible for setting up gate and barriers to ensure a safe environment for child rider.**
- **Be aware and alert children that hands, legs, hair, clothings, and loose items can potentially get caught in moving parts. Avoid placing body parts on moving parts and do not wear loose clothing while using the ride-on toy.**
- **Avoid using this product in tight environment to prevent damage to the product or injury to the user.**
- **This product does not equip with brakes. Do not use this product in areas that requires active braking to prevent possible rolls, crashes, or bodily injury.**
- **Do not use this product in the dark. Only operate this product during daytime or in a well lit area.**
- **Avoid continuously hitting into obstacle to prevent overheating or damaging the motor. Drive away or remove obstacle as soon as possible.**
- **For your child's safety, make sure the seatbelt is securely fasten and the rider is wearing personal protective equipment, such as helmet, when operating this product.**
- **To reduce the risk of falling, ensure hold the rein by hands when riding.**

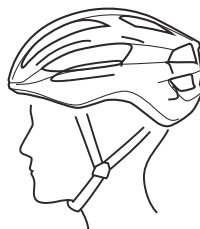

Correct Fitting

 Make sure the helmet covers your forehead.

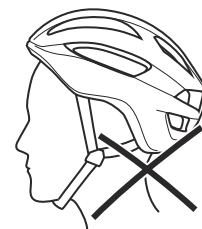

Incorrect Fitting

Forehead is exposed and vulnerable to injury.

## CAUTION

Failure to follow these instruction may result in permanent damage to the product or parts.

### CELL BATTERY AND RECHARGEABLE BATTERY HANDLING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or re-chargeable batteries.
- Permanent damage to the battery may occur if it is completely drained. Do not let the battery to drain completely.
- On average, you will need to charge the battery for 8 - 12 hours. Do not charge the battery for more than 20 hours. Failure to charge the battery as directed could cause permanent damage to the battery and void the warranty.
- Only an adult who has read and understands the safety instruction should handle, charge, and recharge the battery.
- Disconnect the battery if not used for a long period of time.

## WARNING

Failure to follow these instruction may result in bodily harm, serious injury, or death.

### CHOCKING HAZARD, ASSEMBLY WARNING

- This product contains small parts before assembly. Keep children away when assembling the ride-on toy. The assembly should only performed by an adult.
- Remove and dispose all protective materials, plastic bag, and packaging before assembly.
- This product should not be used by children under the age of 18 months old.

### ELECTRIC SHOCK, FIRE HAZARD, FLAMMABLE AND EXPLOSIVE WARNING

- To protect against electrical shock, do not let cord, charger, transformer, battery or the product contact with water or other liquid.
- Do not drive the vehicle into any puddle or contact with any liquid to prevent electrical shock.
- Do not change, modify, or add any electrical wiring on the product. Alternations could potentially cause short circuit, a fire, or irreversible damage to the electrical system.
- Only use charger and battery provided or recommended by the manufacturer. Using the wrong type of battery or charger could cause a fire and potentially property damage and serious injury.
- Check the battery, charger, and connectors for any sign of excessive wear or damage each time you charge the battery. Do not use the charger or the battery if damages are present. Change and replace damage part before use.
- Do not lift or carry the battery by the wires or charger. You might damage the wires and cause electric shock or fire.
- Do not charge more than 20 hours. You might over heat the battery and cause damage or a fire.

### CORROSIVE CHEMICAL WARNING

- Contact or exposure to battery leakage may cause serious injury. If contact or exposure occurs to the skin or in the eyes, or if the chemical is swallowed, call medical emergency immediately.
- Battery posts, terminals, and related accessories contain lead and lead compounds which are toxic and corrosive. Never open the battery.

# Product Specification



 
Model no.	060-ROT-30
Charger input	AC 120 V, 0.25 A, 60 Hz
Charger output	DC 12 V
Battery	12 V
Battery Charge Time	8 - 12 hours
Speed	about 1.18 mph ( 1.9 km/h)
Suitable Age	18 - 36 months old
Maximum User Weight	44 lbs / 20 kg



# Parts and Accessories



A. Unicorn Frontend  
1x

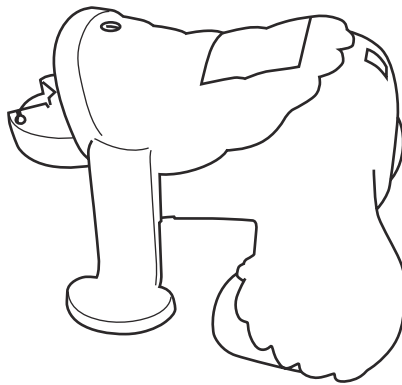

B. Unicorn backend  
1x



C. Connecting Bolt  
1x



 
D. Large Washer  
1x



E. Small Washer  
1x



F. Nut  
1x

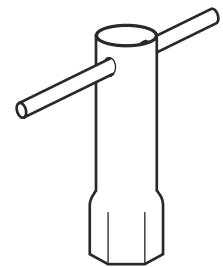


G. Box Wrench  
2x



H. Carrot Toy  
1x



 I. Comb  
1x

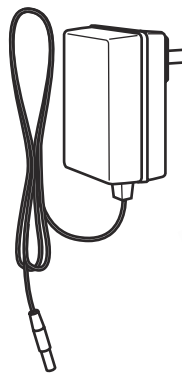

J. Charger  
1x



K. Bolt cover  
1x



L. Tail  
1x


# Assembly Instruction



 
## WARNING

**This product should only be assembled by an adult.  
Children can be harmed by small parts, sharp edges and points or by electrical items. Care should be taken when unpacking and assembling the product.**

Tools required (not included)



1

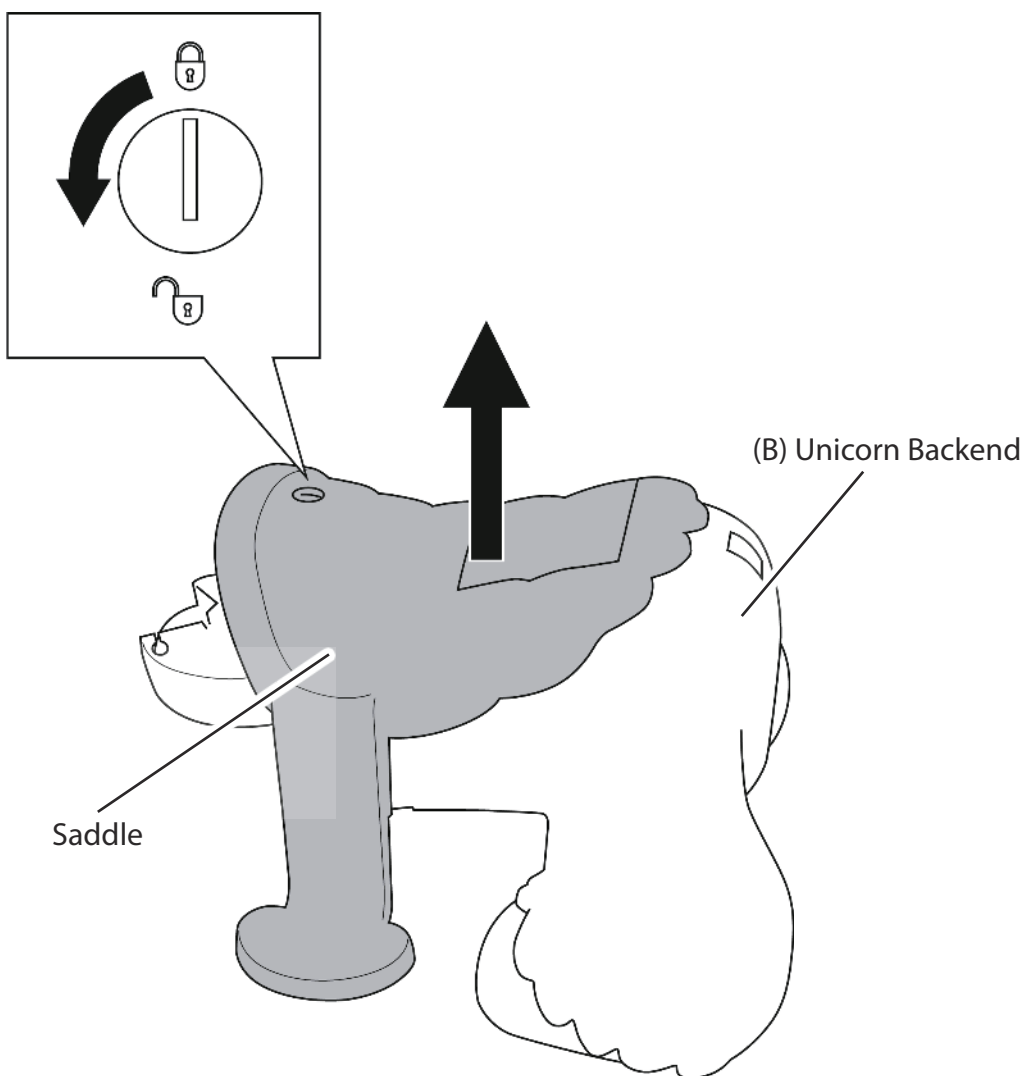 


- Remove the saddle from the unicorn backend.



# Assembly Instruction

 2

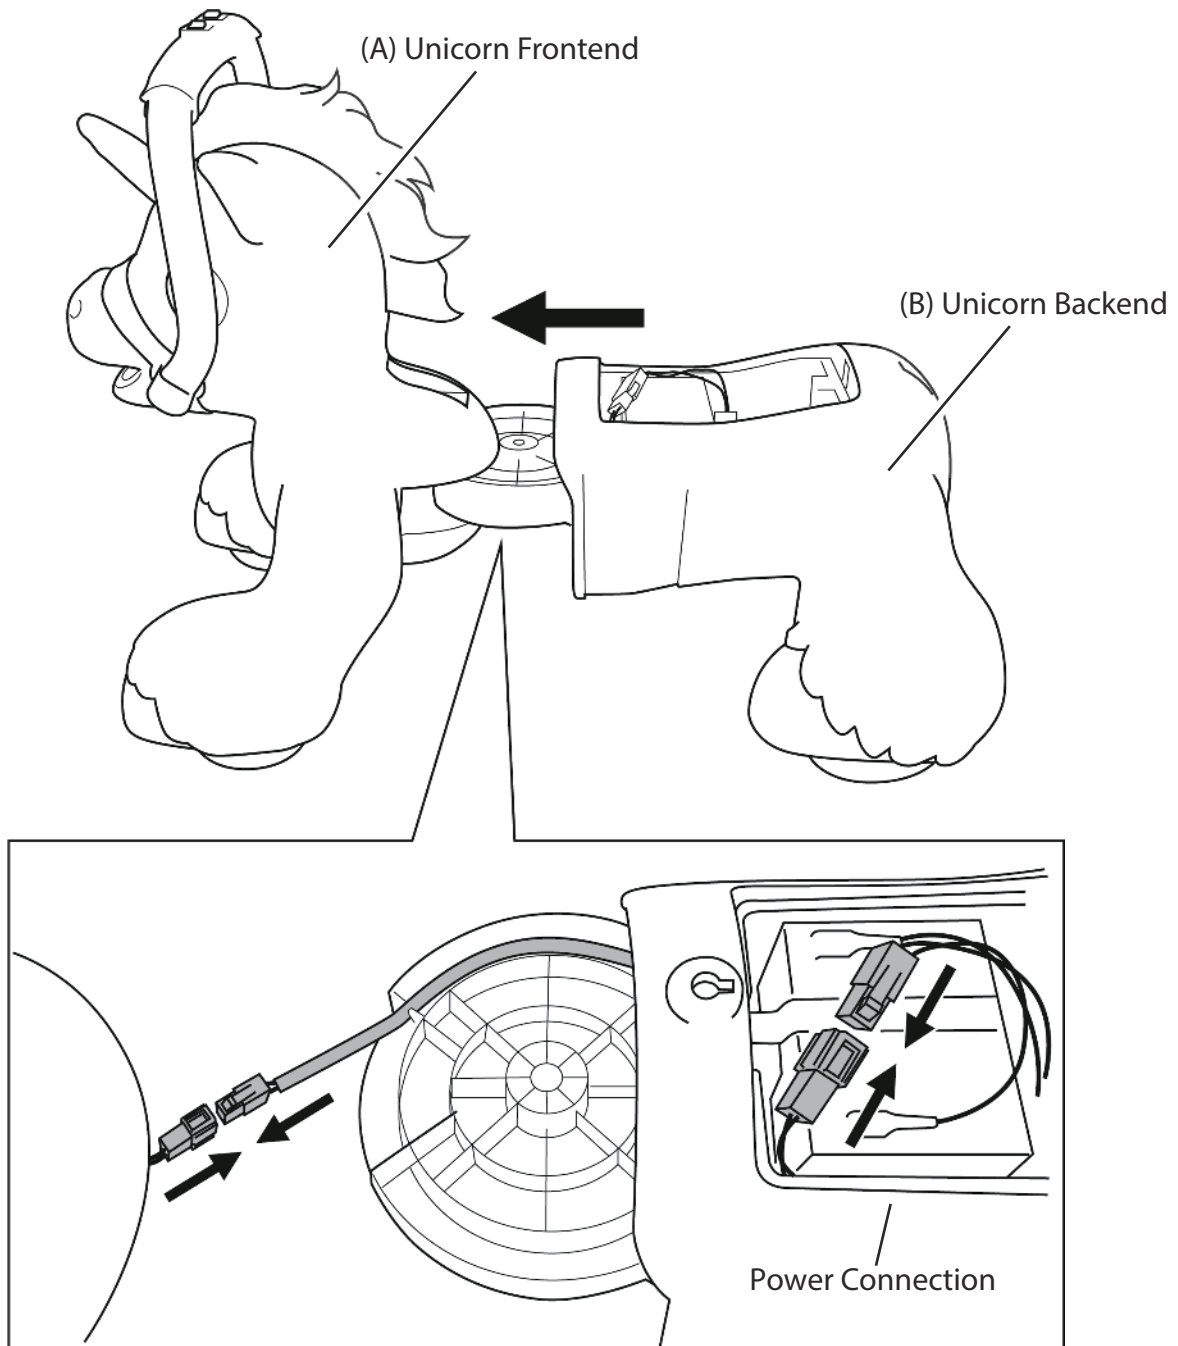

- Connect the electrical connectors from the unicorn frontend to that of the backend.
- Slide the backend to the frontend. Manage the wire cord and make sure it does not get pinched by the unicorn body. (Make sure the wire has been place in the inner square hole of frontend.)

## ATTENTION

 


**This product is packed with the battery disconnected.  
Connect the battery before use.**

# Assembly Instruction



3

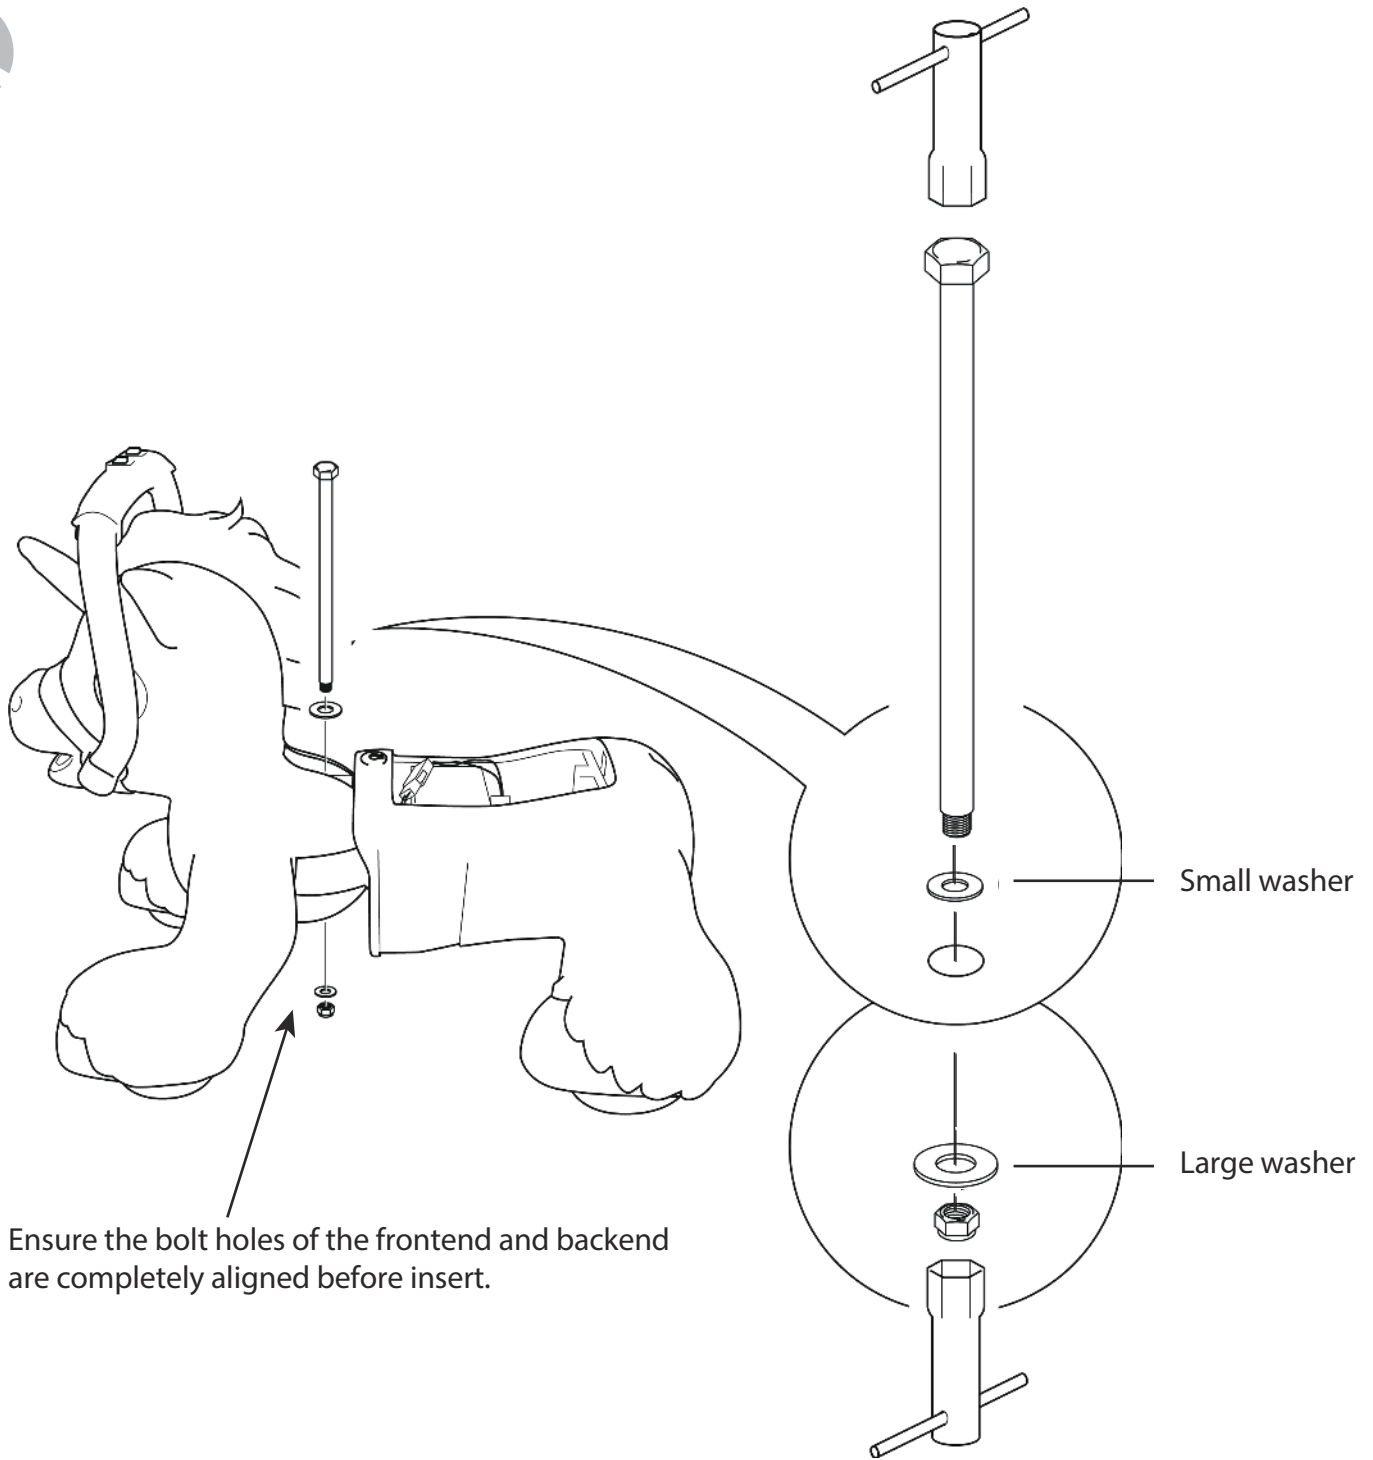

- Connect the unicorn body with the connecting bolt and secure it in place with washers and nut.

# Assembly Instruction



4

 


- Attach the bolt cover and tail to the unicorn.

# Assembly Instruction




5

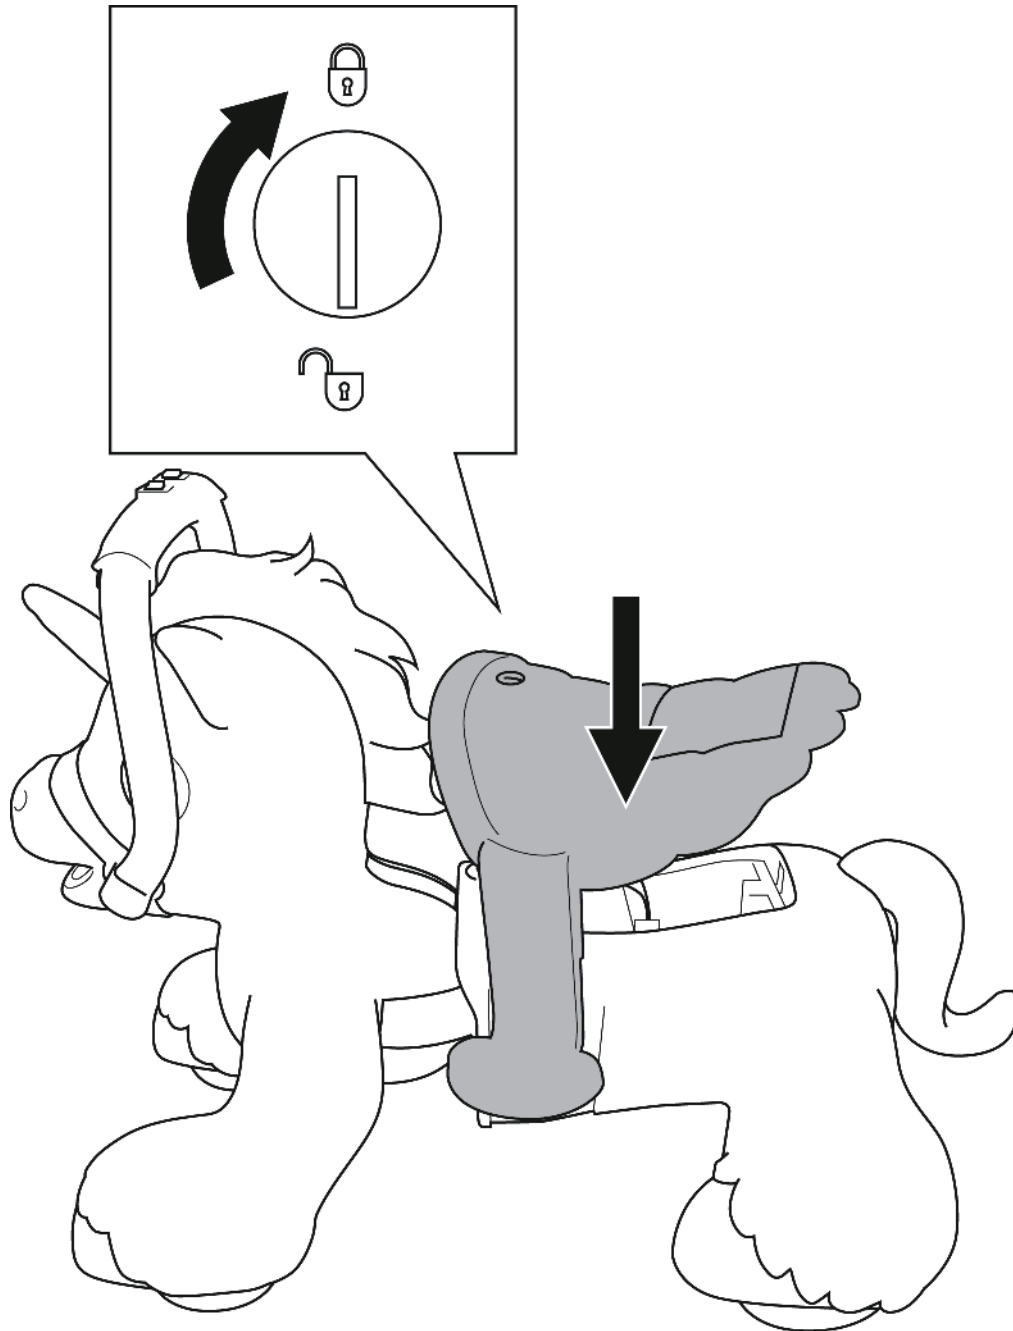

- Re-attach the saddle back to the unicorn and lock it in place.



# User's Instruction

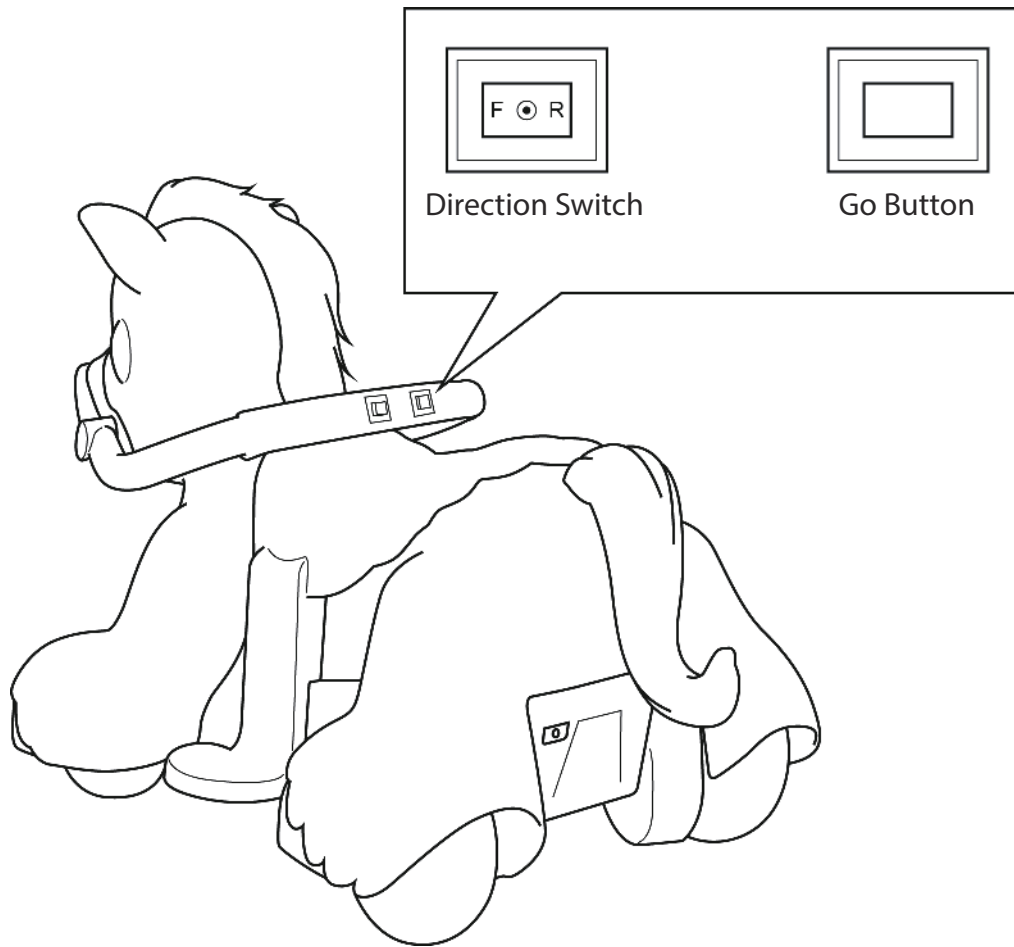 

Control the unicorn

## Direction Switch

Select forward / rear direction using the switch

 
 
 
## CAUTION

**Do not change direction until the vehicle comes to a complete stop.  
Sudden change in direction may result in permanent damage to the motor.**

## Go Button

Press and hold the button to move the unicorn.


# User's Instruction

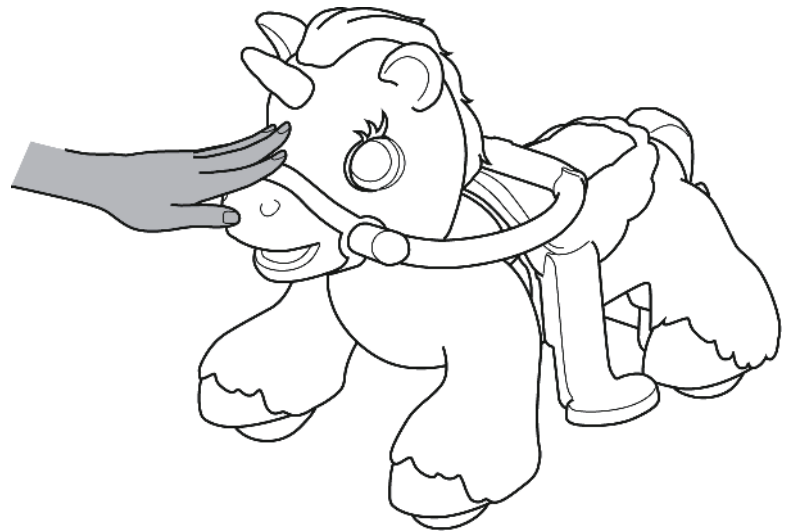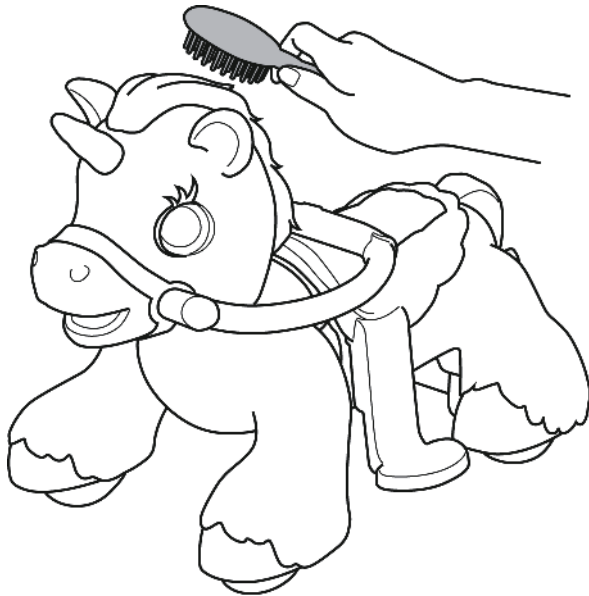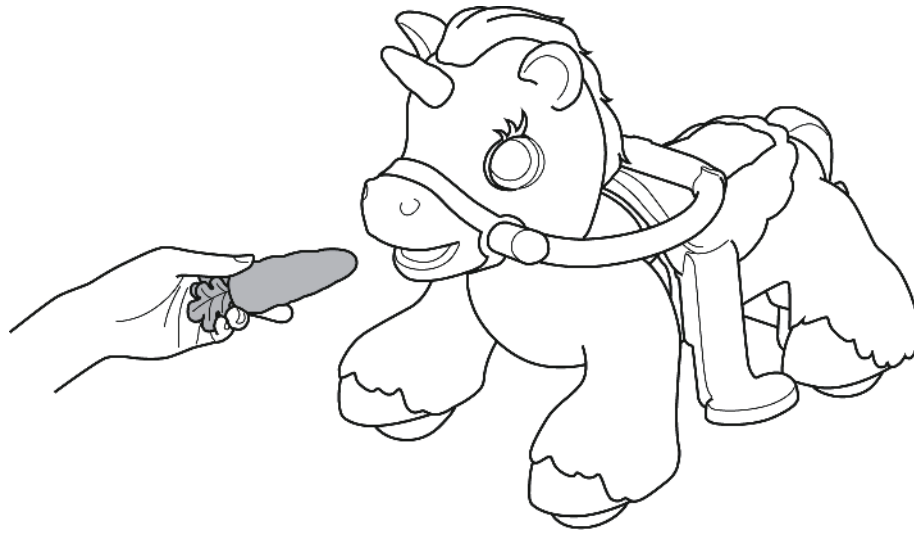

## How to Play

Feed, brush (need to press the button), Pet (keep touch the nose) and ride the unicorn and the unicorn will make different sounds.

 
# User's Instruction

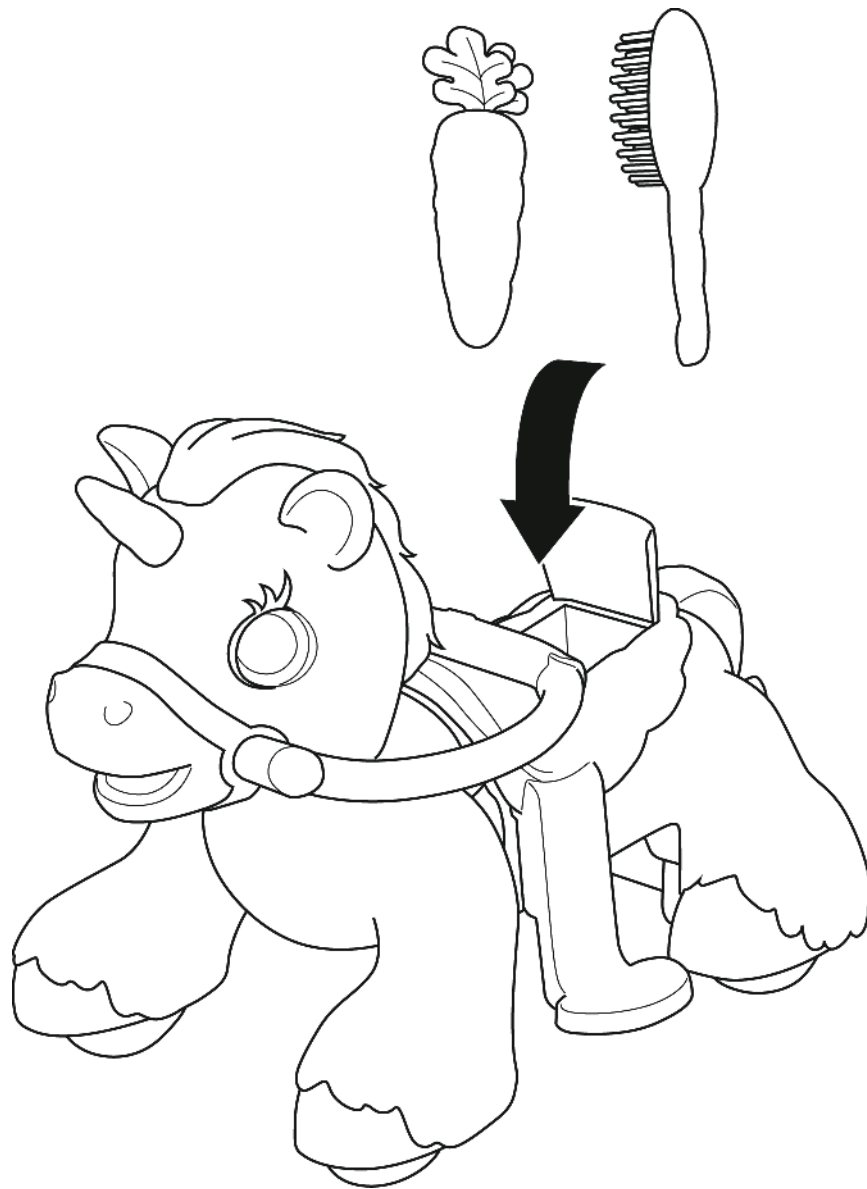

## Internal Storage

Carrot toy and comb can be stored into the storage space inside the saddle.
 
## User Instruction (Charging)

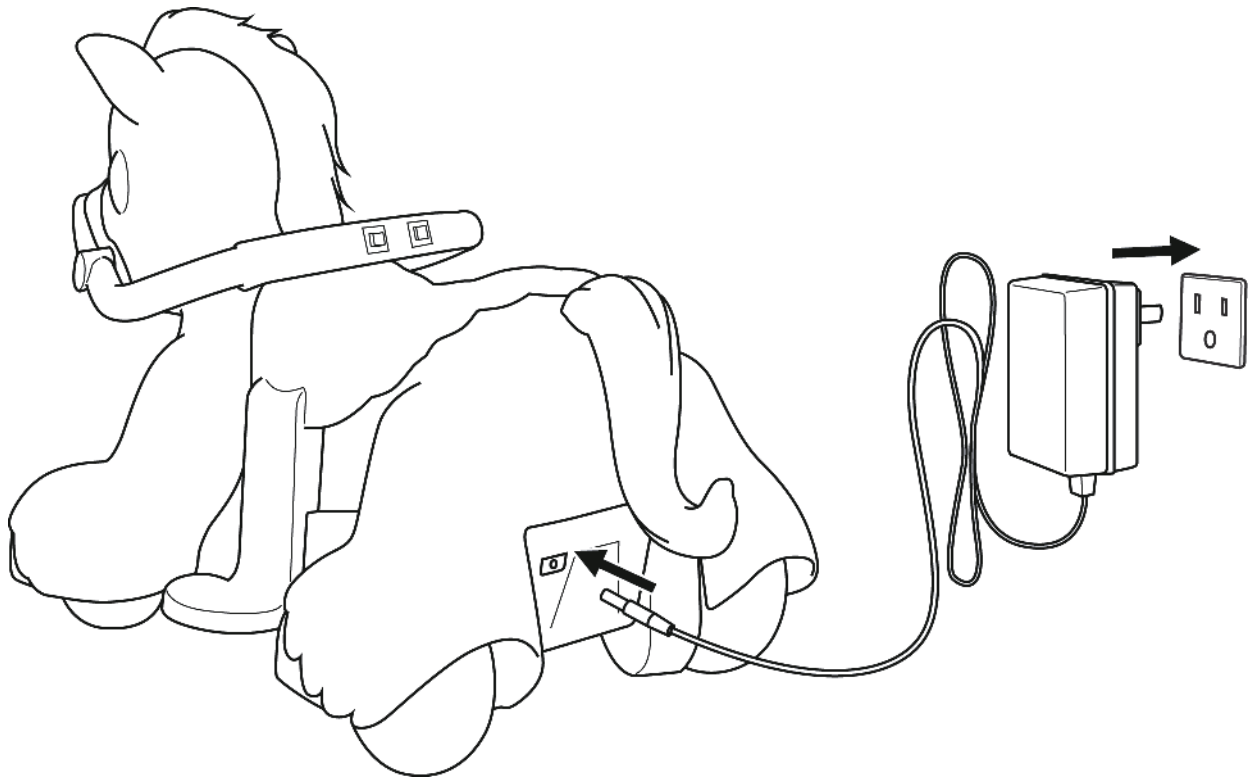

### **WARNING**

**The battery should only be charged by an adult.**

#### Charging the battery

1. Connect the charger to the charging port.
  2. Plug the charger into a wall outlet. The battery will start charging.
- The vehicle must be OFF when charging.
  - The indicator on charger turn red when charging, and turn green after charging completed.
  - Recharge the battery if the vehicle operates slowly.
  - **DO NOT** operate the vehicle when charging.

#### NOTE:

- Charge the battery for 4 - 6 hours before the initial use, and can not more than 10 hours.
- Damage to the battery may occur if it is completely drained.
- Charge the battery for about 8 - 12 hours after use.
- Do not charge the battery for more than 20 hours.
- **Charge the battery at least once a month even if not operating the vehicle for a long time to maximize the battery life.**
- Do not charge or store the battery upside down.
- Keep the charger and battery away from flames, sparks, or any flammables.

## Care and Maintenance



- Check the product regularly and make sure there is no missing or loose parts. Re-tighten any loose parts if necessary.
- Make sure there is no cracked or broken plastic parts.
- Store the product away from heat source when not using, cover it with a tarp and away from wet weather.
- Turn off the product and disconnect the battery if the product is not use for a long period of time.
- Clean the vehicle with a cloth. Use a non-wax furniture polish to restore shine to plastic parts. Do not use abrasive cleaner.
- Do not wash the product with a hose or immerse any parts in water or other liquid.
- Occasionally use lightweight oil to lubricate moving parts.
- Regularly charge the battery to prolong the battery life.
- Do not store the product near heat source, such as stoves and heaters. Plastic parts may melt under high temperature.

# Troubleshooting



Problem	Possible Reason	Solution
Vehicle does not move	Low Battery	Fully charge the battery
	Fuse Protection	Fuse will reset automatically in about 10 seconds then resume the power
	Disconnected / Badly connected battery	Reconnect the battery
	Failed battery / engine	Contact Customer Service
Vehicle does not run very long	Low Battery	Fully charge the battery
	Old / Damaged Battery	Replace battery if necessary
Vehicle runs very slow	Low Battery	Fully charge the battery
	Old Battery	Replace battery if necessary
	Vehicle is overloaded	Make sure user's weight is under 44 lbs / 20 kg
	Vehicle is being used in harsh environment	Avoid using the vehicle in harsh environment

# Troubleshooting



Problem	Possible Reason	Solution
Vehicle needs a push to go forward	Poor wire connection	Check if the battery connectors are firmly connected. Contact Customer service if necessary
	"Dead spot" on motor	Contact customer service
Loud grinding sound or clicking sound from the motor or gear box	Damaged motor or gear box	Contact customer service
Battery does not charge	Disconnected / Badly connected battery	Reconnect the battery
	Disconnected / Badly connected charger	Make sure the charger is firmly plugged into the power source and connected to the charging port
	Charger not working	Contact customer service
Vehicle does not stop	Damaged equipment	Contact customer service
Charger feels warm with charging	Normal	N/A

# Limited Term Warranty (One Year from Date of Purchase)

## WARRANTY TERMS

KIDZONE warrants that its merchandise are free from manufacturing defects (workmanship and/or material) and will either give credit or replace defective parts for a period of up to one (1) year from the date of purchase in accordance with the conditions set forth below. If a manufacturing defect is found, KIDZONE should be notified promptly of the defect and supplied a copy of the invoice and delivery ticket. Inspection by a KIDZONE employee or representative may be necessary to verify that a manufacturing defect exists, or you may be required to submit samples to KIDZONE along with a digital image of the defects. If replacement is required in accordance with this warranty and the defective material or merchandise has been discontinued or unavailable, KIDZONE reserves the right to select and supply similar merchandise or offer full credit for the merchandise; otherwise the same material or merchandise will be supplied for replacement purposes. This warranty is made solely to the retailer and is not transferable under any circumstances. It is the retailer's responsibility to contact KIDZONE with a claim. We will not handle claims from consumers directly; all requests must go through the retailer who sold the merchandise to the consumer. We advise all retailers to retain invoices for a minimum of one (1) year for warranty purposes. This warranty supersedes and replaces all implied warranties of merchantability and use for particular purpose. No representative, employee, agent or any other person is authorized to assume for KIDZONE any additional liability or responsibility in connection with KIDZONE's merchandise except as described above. Implied warranties or merchantability and fitness of the merchandise are limited to a period of one (1) year from the date of purchase. In no event shall KIDZONE be liable for indirect, consequential or incidental damages of any kind.

## ADDITIONAL CONDITIONS

THE FOLLOWING EXAMPLES ARE NOT MANUFACTURER'S DEFECTS:

- Colors may vary slightly from the photo because of photography and printing tolerances.
- Sizes stated in U.S. standard measurements may vary slightly due to product are manufactured using the metric system.
- No returns for buyer's remorse.
- No returns - other than stated above will be accepted.

## ADDITIONAL CONDITIONS

WARRANT IS VOID FOR ANY OF THE FOLLOWING CONDITIONS:

1. Improper maintenance or improper use resulting in damage.
2. Any product modifications by dealer, consumer, or other parties not authorized by KIDZONE will void this warranty.
3. Floor samples sold or products designated "AS IS" at the time of purchase are not covered by the warranty
4. Warranty does not cover minor variations or differences between floor samples or printed illustrations and your product.
5. Cost of packaging and shipping to and from KIDZONE is not covered by the warranty unless expressly arranged by KIDZONE.
6. This warranty covers only articles of appliances intended for residential use only, does not cover any industrial, commercial, institutional or Rental use.
7. Dissatisfaction due to buyer's remorse.
8. Normal wear and tear.
9. Damages incurred during transportation.
10. Damages incurred during assembling or maintenance.
11. Damage incurred by accidents or abuse.

## FCC Statement



Model: 060-ROT-30

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**This Product conforms to toy safety standards CPSIA and ASTM-F963.**

**Importer: Align Inc.**

**Importer Address: City of Industry, CA 91748 United States**

**Importer Tel: 1-800-946-6151**





© All copyright of this document belongs to KIDZONE.  
This document may not be printed, translated, reproduced, or distributed in whole or in part without written permission from KIDZONE.



**kidzone<sup>®</sup>**

[www.kidzonetoy.com](http://www.kidzonetoy.com)

