

AGED 8+ YEARS

2.4GHz SMART TALKING ROBOT

MANUAL



PACKAGE CONTENTS

1 Smart Talking Robot, 1 Remote Control, 1 User's Manual

IMPORTANT SAFETY PRECAUTIONS

- READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.**
- Do not use your robot near water. Clean using a soft cloth or paper towel.
 - Do not place your robot on any wall surfaces.
 - Do not allow children under age eight to play with robot without adult supervision.
 - Do not expose your robot to excessive heat, flames or fire.
 - Always store all batteries in suitable carriers.
 - Do not use for venting dry chemicals, as this can lead to static discharge during usage.
 - Do not expose your robot to temperatures above 80°C. Keep out of direct sunlight.
 - Do not drink, plumb or ingest your robot to excessive trauma.
 - Your robot is not intended for commercial use.

ROBOT




REMOTE CONTROL



INSERTING BATTERIES


Robot

- Remove the cover battery cover.
 - Insert 3 x 1.5V AAA batteries.
 - Place the battery cover.
- Attention: remove batteries after use have finished using your product.

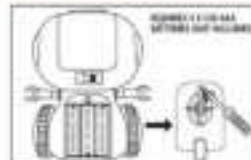

Remote control

- Remove the cover battery cover.
 - Insert 3 x 1.5V AAA batteries.
 - Place the battery cover.
- Attention: remove batteries after use have finished using your product.

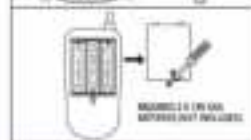

POWERING ON YOUR ROBOT

Once you have finished batteries into your robot and remote control, you can go ahead and power on your robot. Use the green and hold the ON/OFF button a second on the robot. When the indicator light on the indicator starts flashing, that means they are switched.

NOTE: When your robot is waiting for or power, it will emit a warning sound of "bi-bi-bi". Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.

MOVING YOUR ROBOT

You can use your remote control to move your robot forward in different directions.

By pressing the up or down arrow buttons your robot will move forward or backward.

By pressing the left and right arrow buttons, your robot will turn left or right.



LISTENING / VOICE TRANSMISSION

Control the robot and voice if close to who you want to talk to. Press open that the listening button to hear it real time.

Control the robot and voice if close to who you want it to talk to. Press activated the call button to talk.

MUSIC

There are 2 kinds of music, press the Music button, the robot will dance with music.

SOUND EFFECT

There are 2 kinds of sound effects, press the sound effect button to play.

PROGRAMMING YOUR ROBOT TO WALK

Press the Program button when you need press Forward / Backward / Turn left / Turn right buttons the controller to program your own. Robot can be programmed with one to 30 actions.

Press the Program play button to enter what performs the programmed actions.

Keycode: 43022045

WARNING: CHOKING HAZARD
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.

WARNING: CHOKING HAZARD
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.
Small parts. Not for children under 3 years.