



## Precautions before Product Use

For the convenience of users, LG PC Manuals are provided in an electronic format.

The images in the owner's manual may differ depending on the language selected and are subject to change without prior notice.

Any malfunction in the built-in solid state drive (SSD) may result in loss of stored data. You must back up all critical user data to an external storage device (USB HDD, memory card, etc.).

If you shut the system down before it is completely loaded, the product may not shut down properly. Shut down the system after it is completely loaded. (It takes about one or two minutes to completely load the system and may vary depending on the conditions.)

For more information on how to use the product, refer to the LG Easy Guide of the LG PC Manuals.

## Checking the Components

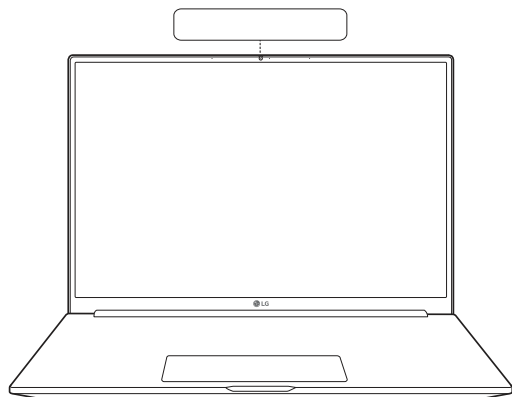 
The components shown below are provided when you purchase the product. Check the components before use.

- When cleaning the product, use a cleaning agent dedicated to the PC. If you use thinner, benzene, alcohol or other similar agent, the product may be damaged or deformed.





 
## Product Tour

Front



## System Shutdown / Power Off


Press the [  ] key or [Ctrl] + [ESC] to display the Start menu.


- Press the Start button [  ] > Power button [  ] and select [Shut down].



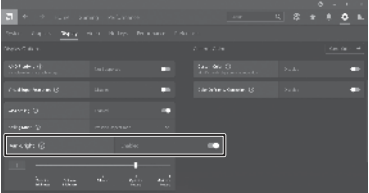

## Important Safety Precautions




Check the following 'Important Safety Precautions' to prevent unexpected danger or damage in advance.

'Important Safety Precautions' is divided into 'WARNING' and 'CAUTION.'

-  **WARNING:** Noncompliance with the instruction may cause serious physical damage or fatal injuries.

	<p>Do not use the product on top of carpet, blanket or bed. Also, do not put the adapter under the blanket.</p> <ul style="list-style-type: none"><li>• The product may malfunction, cause a fire</li></ul>		

Symptom	Cause and Solution
Screen brightness changes while the battery mode is in use.	<p>This product has a Vari-Bright™ function that extends battery life by adjusting screen brightness according to the user's environment.</p> <p>If you do not want to use the Vari-Bright™ function, change the settings as follows.</p> <ul style="list-style-type: none"> <li>• Press the Start button [  ] and run [All apps] &gt; [AMD Radeon Software].</li> <li>• Turn off the function or change the settings in [Vari-Bright] in the [  ] &gt; [Display] tab.</li> </ul>  <ul style="list-style-type: none"> <li>- The [AMD Radeon Software] app will be automatically installed when connected to Internet. The app name and settings screen may vary depending on the version of the graphics driver.</li> </ul>
The touchpad is not functioning properly.	<ul style="list-style-type: none"> <li>• Press the Start button [  ]</li> </ul>

Symptom	Cause and Solution
The wireless network is not connected.	<ul style="list-style-type: none"> <li>• Press [Fn] + [F6] to check if the wireless network device is turned off.               <ul style="list-style-type: none"> <li>- Press [Fn] + [F6] to set airplane mode to [OFF].</li> <li>Click the Wi-Fi [  ] icon on the right side of the taskbar and check if AP displays properly.</li> </ul> </li> <li>• Every time you press [Fn] + [F6], the wireless network and airplane mode turns on or off.</li> <li>• You may not be able to connect to a secure wireless network. Ask the wireless network administrator.</li> <li>• Reinstall the wireless LAN driver.</li> </ul>
I want to reinstall the driver.	<ul style="list-style-type: none"> <li>• Press the Start button [  ] and then select Settings [  ] &gt; [Apps] &gt; [Apps &amp; features]. Then remove the driver to be reinstalled.</li> <li>•</li> </ul>

