

LIMITLESS™

## 3,000mAh Emergency Power Bank

User Manual



### WHAT'S INCLUDED

- (1) Limitless 3,000mAh Emergency Power Bank
- (1) 36" Type-C to USB Charging Cable

### COMPONENTS

1. Type-C Charging Port (Input/Output)
2. USB Charging Port (Output)
3. 4x Battery Indicator Lights
4. Built-in Type-C Cable (Output)



### HOW TO USE

#### Getting Started

The Power Bank will arrive with a partial charge. It is recommended to charge the battery to 100% before use.

#### Checking the Battery Level

Plug the Power Bank into a device to check the current battery percentage.

#### OR

Plug the Power Bank into a power source (not included). The 4x LED Indicator Lights will illuminate, indicating how much battery is left. See the table below.

LED INDICATOR LIGHT	CHARGE REMAINING
●●●●	0%
○●●●	1-25%
○○●●	26-50%
○○○●	51-75%
○○○○	76-100%

#### Recharging the Power Bank

1. Plug the Type-C end of the included 36" USB Cable into the Type-C Port and plug the opposite end into a USB charger (not included).
2. The Indicator Lights will begin to blink. Once all 4x Indicator Lights turn solid, the Power Bank is fully charged. Disconnect from power once fully charged.

#### Using the Power Bank

1. To charge a device via the USB or Type-C Charging Port, connect a compatible cable. Once the device is connected, it will begin charging automatically.



2. To charge a device via the Type-C Cable, pull out the cable from its storage slot and connect to a device. Once the device is connected, it will begin charging automatically.



### TECH SPECS

**Model:** LIM-EMR3KPB-XXXX  
**Battery Capacity:** 3,000mAh | 11.1Wh  
**Recharging Time (From 0%):** 2 Hours

**Type-C Charging Port (Input/Output):** 5V=3A | 15W  
**Built-In Cable Output:** 5V=3A | 15W  
**USB Charging Port (Output):** 5V=2A | 10W

**Temperature Range (Operation):** -4°-104°F  
**Charging Operation Temperature:** 32°-113°F  
**Discharging Operation Temperature:** -4°-140°F

**Dimensions:** 3.86" x 1.58" x 1.24"  
**Weight:** 0.23 lbs

#### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### WAIVER & RELEASE

By using the Limitless 3,000mAh Emergency Power Bank, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the Limitless 3,000mAh Emergency Power Bank. By using the Limitless 3,000mAh Emergency Power Bank, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the Limitless 3,000mAh Emergency Power Bank, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the Limitless 3,000mAh Emergency Power Bank.

### AIR TRAVEL

- **You may carry the Emergency Power Bank on an airplane.**
- Do **NOT** travel with the Emergency Power Bank in your checked baggage.

For more information, visit:  
<https://www.faa.gov/hazmat/packsafe#hazardousMaterial>

### SAFETY WARNINGS

- The Limitless 3,000mAh Emergency Power Bank is **NOT** a toy and should be kept away from children.
- Do **NOT** use the Limitless 3,000mAh Emergency Power Bank near a magnetic or electric field.
- Keep the Limitless 3,000mAh Emergency Power Bank in a cool and dry place away from heat sources, moisture, and dust. Avoid leaving the device in places with high temperatures such as cars parked under the sun.
- Do **NOT** use the Limitless 3,000mAh Emergency Power Bank if it has been damaged and/or modified.
- Do **NOT** submerge the Limitless 3,000mAh Emergency Power Bank or its accessories in water.
- Be cautious of drops, bumps, abrasions, or other impacts to the Limitless 3,000mAh Emergency Power Bank. If there is any damage to the device such as dents, punctures, tears, deformities, or corrosion due to any cause, discontinue use. Contact Limitless Innovations or dispose of it in accordance to state and local guidelines.
- Do **NOT** attempt to replace the battery as it is a non-serviceable part.
- Do **NOT** attempt to disassemble, repair, or open the Limitless 3,000mAh Emergency Power Bank or its accessories in any way.
- Do **NOT** subject the Limitless 3,000mAh Emergency Power Bank to harsh chemicals.
- Do **NOT** use at an altitude higher than 6,562 feet (2,000 meters).
- Batteries should be recycled or disposed of, as per state and local guidelines. Do **NOT** dispose of this product in the trash, as this can create a fire hazard.

- If the Limitless 3,000mAh Emergency Power Bank is not used for long periods of time, you should charge and discharge once every three months.
- When charging a device, the Limitless 3,000mAh Emergency Power Bank may feel warm, this is a normal operating condition and should not be cause for concern.
- All products have gone through a thorough quality assurance inspection. If you find that your Limitless 3,000mAh Emergency Power Bank is excessively hot, is emitting odor, is deformed, abraded, cut, or is experiencing or demonstrating an abnormal phenomenon, immediately stop all product use and contact Limitless Innovations.
- Do **NOT** apply excessive force on the Limitless 3,000mAh Emergency Power Bank or drop it: By doing so, it may damage the internal components of the device, and risk short circuiting the device when used.
- Do **NOT** overcharge the Limitless 3,000mAh Emergency Power Bank as this may cause it to overheat and deplete efficiency. Follow the guidelines on the time required to fully charge your Limitless 3,000mAh Emergency Power Bank. If the device becomes excessively hot during charging or discharging, unplug it from the power source or device immediately.
- **CAUTION:** Risk of fire and burns. Do **NOT** open, crush, heat above 140° F (60° C) or incinerate.
- **NEVER** store or transport where the port, adapter, or cable connectors can come in contact with loose metal objects. Contact with metal objects can cause a short circuit that can result in the battery overheating or catching fire.
- Do **NOT** insert any foreign objects into the port, adapter, or cable connector of the Limitless 3,000mAh Emergency Power Bank.

LIMITLESS™

All rights reserved. Limitless™ is a trademark of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown. All other trademarks included herein are property of their respective owners. Accessories sold separately.

**LimitlessInnovations.com**  
Support@LimitlessInnovations.com  
(855) 843-4828

© **Limitless Innovations, Inc.**  
Designed in USA. Made in China.



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



/LimitlessInnov



Limitless Innovations