

# living & co.

**RECHARGEABLE  
USB DC DESK FAN 15CM**



**INSTRUCTION MANUAL  
Model: CL-F1570  
(SAVE THESE INSTRUCTIONS)**

---

**AFTER SALES SUPPORT**

**☎ NZ 0800 422 274**

# CONTENTS

IMPORTANT SAFEGUARDS .....	2
FOR YOUR SAFETY .....	2
PRODUCT OVERVIEW .....	5
OPERATION .....	5
Charging the Battery .....	6
Safety Protection Device .....	6
Operating the fan .....	6
Adjusting angle of the fan .....	7
TECHNICAL SPECIFICATIONS .....	8
CARE AND CLEANING .....	8
PROTECTING THE ENVIRONMENT .....	9
WARRANTY .....	10

## IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:


### FOR YOUR SAFETY

- Read all instructions carefully, even if you are quite familiar with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Take care when any appliance is used near pets.
- Do not leave the charge cable connected continuously for more than 4 hours.
- Do not operate any appliance with a damaged charge cord / connector plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not use outdoors.
- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- Do not attempt to repair, disassemble or modify the appliance. There are no user- serviceable parts.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or user.
- To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.
- Do not use fan near curtains, plants, window treatment, or where other objects can become caught in the blades.
- Do not operate with wet hands while in recharging the fan.
- Do not let the charge cable hang over the edge of a table or counter or let it come into contact with any hot surfaces.

- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not operate fan in the presence of explosive and/or flammable fumes. Do not place the fan near an open flame, cooking or other heating appliance.
- Do not place the fan close to an open window. Rain splashing on the fan could cause an electric shock hazard.
- Do not leave the appliance running or operable in a place where young children or animals could have access to it without supervision.
- Do not use the fan without fully assembled. The fan must operate standing upright.
- To protect against fire, electrical shock and injury to persons, do not immerse unit in water or spray with liquids.
- Ventilation should not be impeded by covering the ventilation openings. Slots and opening are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.
- Do not immerse any part of the appliance in water or any other liquid.
- Place the fan on a stable level, even surface table when operating to avoid overturning.
- Switch off the appliance and unplug the USB before cleaning or inspecting any part of the appliance.
- Do not operate with a damaged charger or after the fan malfunctions, has been dropped or damaged in any manner. DO NOT operate the fan with a broken blade, safety guard or with any obvious damage to the enclosure.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the manufacturer.
- Do not put heavy objects on the appliance.
- Keep fingers, hair and clothing away from this appliance.
- Do not put the unit close to heat-generating devices or near flammable and dangerous materials.
- For optimal airflow circulation, leave a distance of at least 30cm around the appliance on every side.

- Always direct the airflow in order to optimize cooling. Avoid corners, small objects and other surfaces or objects which may impede the airflow.
- This fan includes an internal Lithium battery, do not position the fan in a high temperature (more than 40°C) environment or near fire. Do not impact, squeeze the batteries.
- Do not operate the fan continuously for more than 4 hours in order to avoid overheating / permanent damage.
- Warning: Do not operate without the fan grilles properly in place. Do not use if grille becomes deformed, damaged or loosen to avoid injury to persons.
- Do not charge the fan on the carpet or flammable materials.
- **WARNING:** Do not place the unit on or near a hot gas electric burner.
- **WARNING:** When using rechargeable lithium powered appliances, basic safety precautions, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

## PRODUCT OVERVIEW

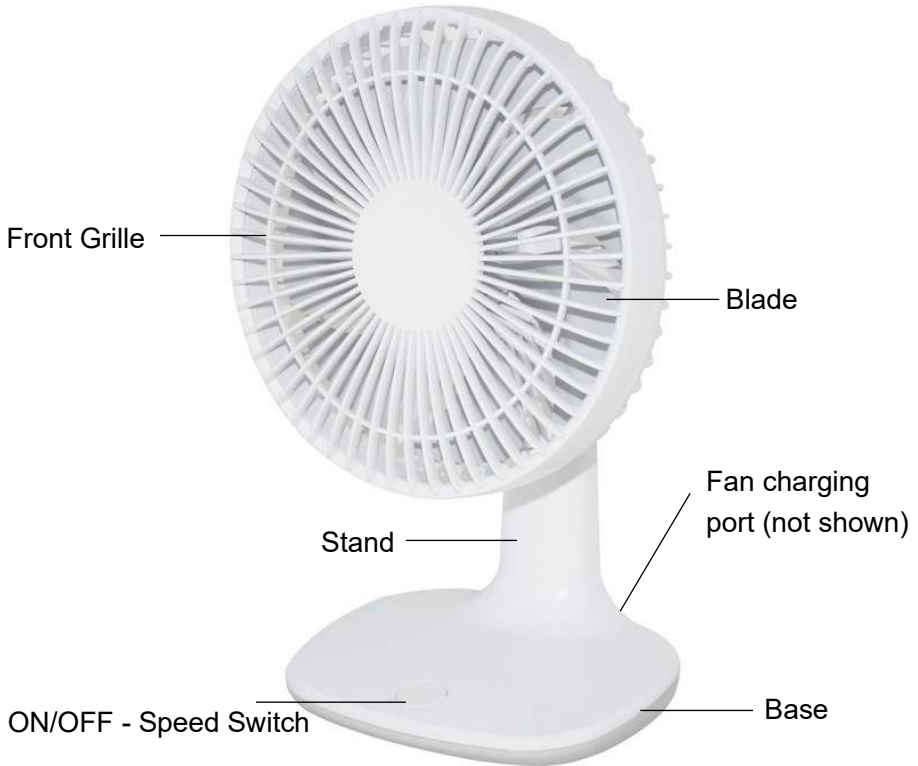

### What's in box:

Desk fan

USB cable (not provided with power adapter)

Instruction manual

## OPERATION


Remove the fan from the box, remove the packaging materials before operation.

Set the fan base on a stable, firm desk.

## Charging the Battery

You should charge the fan before using.

Connect the USB cable to a USB charging port (from a USB charging adapter, power board or similar device - not provided) and the other end to the fan charging port. Plug the USB charging adapter/power board or similar device into a power outlet.

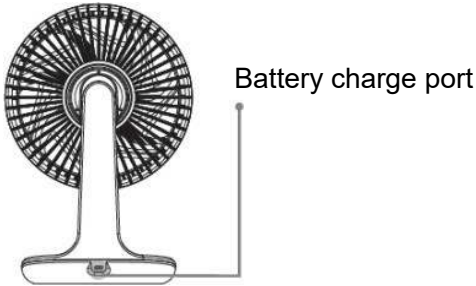

During charging, the Red LED indicator light adjacent to the fan power On/Off button will continually flash to indicate it is charging. When battery is fully charged, the LED Indicator light will change colour and illuminate white, indicating that charging process is completed.

Disconnect the USB cable from both the fan and charging device on completion of the charging process, when battery is fully charged.

## Safety Protection Device

The fan has a built-in Overcharging/Low voltage discharge device, that protects the appliance against overcharging or short circuit.

In an over charging or low voltage battery discharge condition the protection device will Auto Shut-Off the charging to the battery. In this state, allow fan to rest for a few minutes, before switching it back On.

## Operating the fan

With the fan is fully charged, press the power On/Off/ Speed selection button to turn the fan On.

Repeated pressing of this button will change the fan speed.



Power Off/On-Speed button

Press power Off/On-Speed button Once = Low fan speed setting

Press power Off/On-Speed button Twice = Medium fan speed setting

Press power Off/On-Speed button Three times = High fan speed setting

Press power Off/On-Speed button Four Times = Off

### Adjusting angle of the fan

This fan allows for adjusting air flow angle, while tilting, Hold the fan head with hand and gently lift or lower it to your desired angle. The max. adjusting angle is approximately  $35^\circ$  from up to down.

**Warning:** Do not over force or press the fan head while adjusting the angle of the fan. The fan head cannot be rotated left or right, only up or down.



## TECHNICAL SPECIFICATIONS

Rated Voltage	5V DC
Rated Power	5W
Recharge Current	DC 5V 1.0A(Max.)
Capacity of Battery	1800 mAh Li-ion battery
Run Time	1-5hrs
Full Recharge Time	2.5-3h

**Note:** As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated in the packaging.


## CARE AND CLEANING

Always disconnect the USB cable from charging adapter, power board or similar charging device before cleaning the fan.

Do not immerse any part of the fan, USB cable or adapter in liquids.

While cleaning the grille and fan blade, you should disassemble the front grille and blade as below:

1. Remove the small safety screw in lower back of the grille.
2. With one hand hold the rear grille, the other hand hold front grille and rotate the front grille in anti-clockwise to loosen it.

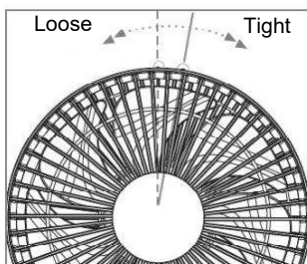

## CARE AND CLEANING (continued)

You can use a damp-dry cloth to wipe the grille, base surface and fan blade. Wait for the cleaned parts to completely dry before re-installation in order to avoid water coming into contact with the fan motor and micro USB charging port.

Avoid using detergent, spray, solvents or chemicals as these may cause damage to the appliance.

After cleaning process is completed, re-install the front grille as per installation method below:

1. Reposition the front grille to the back grille by aligning the locking tabs.
2. With one hand on the rear grille and other on the front grille, rotate the front grille to lock it in position until aligning with lock mark on rear grille.
3. Re-tighten the small safety screw in back of rear grille.
4. Store the fan in a cool, dry place, ideally in its original packaging while it is not in use.

## PROTECTING THE ENVIRONMENT

This rechargeable desk fan incorporates a built-in a lithium battery.

The products and internal battery must not be disposed of with normal household waste. Please recycle electrical products and batteries according to local council regulations.

Do not put the battery in fire, do not drill or compact the battery.

# living & co.



## WARRANTY

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we back them up with a one year warranty when accompanied by proof of purchase.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

IM Version 1.0 – March.,2022