



**OUTDOOR TECH.**

**FUEL+**

**10,050mAh**

**POWER**

**BANK**

**& LANTERN**



**IPX67 WATERPROOF**



**SHOCK PROOF**

**Hi**



**Good call on picking up the Outdoor Tech® Fuel+ power bank & Lantern. Your experience of the universe will soon be enhanced powerfully. This manual exists to help make sure that you use them correctly, so you're definitely going to want to relax for a hot second and look through this.**

**Kisses,**



**OUTDOOR TECH.**

## CONTENTS



10,050 mAh Power Bank/Lantern



 
 
Carabiner

**THREE-IN-ONE**  
USB to USB-C, Lightning, Micro-USB  
cable included.



## ANATOMY


- A. Battery Level Indicator Lights (White LED x4)
- B. Silicon Shock-Proof Bumper
- C. Lantern (3 light modes)
- D. Power Button ON/OFF
- E. USB Charge Port (Charge-Output)
- F. USB-C Charge Port (Charge-Input/Output)

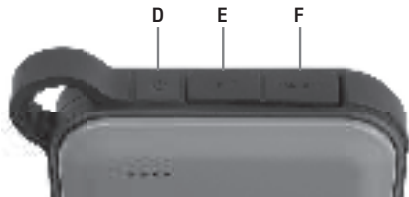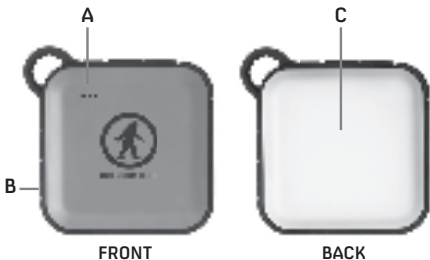

## ■ CHARGING YOUR POWER BANK

### HOW TO CHARGE YOUR FUEL+

 1. Plug the included 3-in-1 charge cable into the USB-C input port of the Fuel+ Power Bank.
2. Insert the other side of the cable into an AC adapter connected to a wall socket. (Adapters with PD output is recommended for faster charging)
3. Charging to the battery pack will start automatically and the LED will start to flash and turn on one by one. Charging will end automatically when all four LEDs are solid.
4. Disconnect the adapter and charging cable.

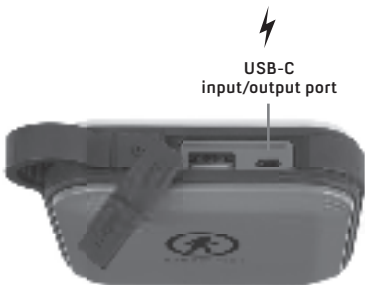

## BATTERY LEVEL

### HOW TO CHECK YOUR BATTERY LEVEL

1. Press the power button once the LED indicator lights will turn on.
2. Depending on the remaining battery level, the LED indicators will show differently.

 
Remaining Capacity	LED 1	LED 2	LED 3	LED 4
75-100%	●	●	●	●
50-75%	●	●	●	○
25-50%	●	●	○	○
10-25%	●	○	○	○
0-10%	●   ●	○	○	○

3. If there is no device connected after pressing the power button, LED indicators will turn off in about 30 seconds automatically.

## CHARGING STUFF

### CHARGING YOUR DEVICES

1. Connect your smartphone or other device to the battery pack with the included 3-in-1 charge cable. Charging will start automatically.
2. While charging a device the battery pack LED indicators will turn off one by one with the decrease of the battery level inside.

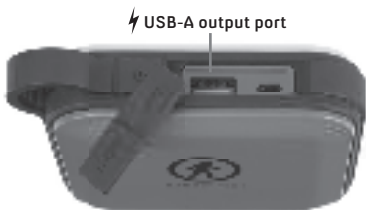

Remaining Capacity	LED 1	LED 2	LED 3	LED 4
75-100%	●	●	●	●
50-75%	●	●	●	○
25-50%	●	●	○	○
10-25%	●	○	○	○
0-10%	●   ●	○	○	○

3. When the last LED indicator flashes, charging to the device will end.

## LANTERN MODE

### HOW TO USE THE LANTERN

1. Press and hold the power button for 2 seconds, the LED lantern will turn On/Off.
2. Click once more on the power button for brighter mode.
3. Press once more while the lantern is in brighter mode to go into SOS where the lantern starts flashing.
4. To turn off SOS mode press once more to go back to normal mode.



#### PRESS POWER BUTTON:

Press & hold 2 seconds:

ON/Normal Mode

Press again: Bright Mode

Press again: SOS Mode (Flashing)

Press again: Normal Mode

Press & hold 2 seconds:

OFF

Turning on the lantern will increase the temperature of the power bank, it is not recommended to charge or discharge the power bank when using the lantern, the input and output will be protected after reaching a certain temperature.

## ■ CARE & MAINTENANCE

- Do not access the input/output simultaneously. It may affect the product's performance and not charge properly.
- Keep the Fuel+ away from direct sunlight or hot places. High temperatures will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Use a soft, dry cloth to wipe the surface. Do not use intensive chemical products or detergent to clean the product.
- Charge the product at least once every three months, to prevent the batteries from drying out.
- For best performance, fully charge the Fuel+ before charging other devices.
- Do not try to disassemble the Fuel+.
- Do not scratch the surface with sharp things.
- It is normal for the battery to heat up during its charge. The temperature should be below 113 Fahrenheit & does not affect the Fuel+ performance.
- All products have passed the strict quality inspection, Do not use the battery if it gives off an odor, generates heat, becomes deformed, abrasion, damaged or appears abnormal in any way.

## ■ SPECS

- **Battery Capacity:** 10,050mAh, 36.18Wh, 3.6V
- **Battery Type:** Lithium-ion
- **Number of Cells:** 3
- **Charge Time:** 3 hours
- **3-in-1 Charge Cable Length:** 39.37in (100cm)
- **USB-C Output:** 5V/3A, 9V/2A, 12V/1.5A
- **USB-C Output:** PD Power Deliver 18W
- **USB-C Input:** 5V/3A, 9V/2A
- **USB-A Output:** 5V/3A, 9V/2A, 12V/1.5A
- **Total Output:** 18W max
- **IPX Rating:** IP67 Waterproof
- **Dimensions:** 3.8in x 3.8in x 1.1in (97mm x 97mm x 28mm)
- **Weight:** 0.59 lbs (270g)



# DON'T BE SO ANTISOCIAL



Facebook.com/outdoortechnology  
Twitter & Instagram: @outdoortech

Questions, comments, complaints, secret desires,  
or just to say what's up: email [info@outdoortech.com](mailto:info@outdoortech.com)

K bye.



[www.outdoortech.com](http://www.outdoortech.com)