



Russell Hobbs

INSTRUCTIONS and WARRANTY



ЭРА-Мир
электроника

MODEL No. 18663-56

FUTURA 1.5L FILTER COFFEE MAKER

1 year standard warranty.
Warranty will be extended for another year if you register
your product online within 12 months of purchase
(visit <https://russellhobbswarranty.co.za/>)



Congratulations on purchasing your Russell Hobbs Futura 1.5L Filter Coffee Maker. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE RUSSELL HOBBS FUTURA 1.5L FILTER COFFEE MAKER

- 1.5L/ 12 cup capacity
- 97°C brewing temperature
- Automatic Pause and Anti-drip system allows serving while the machine continues to brew
- Water Tank with visible level indicator
- Removable filter holder for easy cleaning
- Hot plate to keep your coffee warm
- Glass carafe with flip top lid
- Includes permanent removable filter
- 950-1150W
- Suitable for ground coffee
- 1 year standard warranty. Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://russellhobbswarranty.co.za/>)

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:


1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. This appliance is intended for household use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless

they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

7. Children should be supervised to ensure that they do not play with the appliance.
8. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, the manufacturer or a qualified person must replace it in order to avoid an electrical hazard.
9. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
10. To reduce the risk of electric shock, do not immerse or expose the unit, plug or the power cord to water or any other liquid. Do not use it with wet hands.
11. Never immerse the unit in water or any other liquid for cleaning purposes.
12. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
13. Always unplug the unit to cool, when not in use, before cleaning or when adding or removing parts.
14. Insert and use only original parts.
15. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
16. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
17. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
18. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
19. Keep the appliance and cord away from direct radiating heat from the sun, dampness, sharp edges and other dangers.
20. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
21. Use on a hard, flat level surface only, to avoid interruption of airflow underneath the appliance.
22. Do not remove the filter holder during water or coffee flow.
23. Do not allow the power cord to come into contact with hot parts of the appliance e.g. cup warming plate, filter holder, steam nozzle.
24. Keep hands away from hot parts of the appliance, including the carafe and the dispenser.
25. Do not set a hot carafe on a wet or cold surface.

26. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension cord, ensure that the cord is suited to the power consumption of the appliance to avoid overheating of the extension cord, the appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
27. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
28. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
29. Do not operate this appliance by means of an external timer or separate remote control system.
30. Never move the machine during operation!
31. Always ensure there is water in water tank not less than minimum level before operating the machine.
32. Never touch very hot parts of the machine (e.g. brew unit during operations).
33. Do not touch the steam or water jets.
34. Never cover the machine during operation

PARTS DIAGRAM

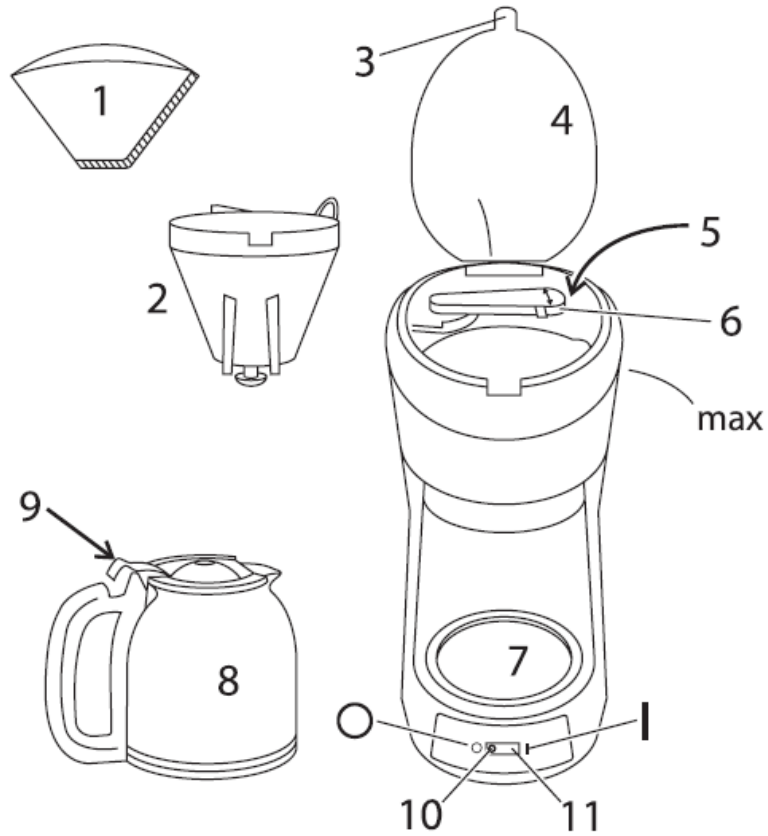

1. Paper filter #4 (not supplied)/
Permanent removable filter (supplied)

2. Filter holder

3. Grip

4. Lid

5. Insert Water

6. Water pipe

7. Hotplate

8. Glass carafe

9. Press to open

10. Light

O. Off I. On

11. Power switch

HINTS AND TIPS TO GET THAT PERFECT BREW

COFFEE

For best results, use medium-ground filter coffee. The amount will vary with the type of coffee used and your personal taste. We suggest starting with two rounded teaspoons of medium coffee per cup. However there is no hard and fast rule as tastes will vary.

MILK

In this regard, personal taste should rule, not convention. What we do say is that if you like milk in your coffee – we recommend using warm or hot milk to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scold or burn the mouth but hot enough to let the flavour fill the mouth, sinuses and nose... not just the taste buds.

BOTTLED WATER

If you use bottled water, make sure that it has no added ingredients, flavourings, etc. and use 'flat/ still' water, not 'sparkling'. The carbon dioxide which gives the 'sparkle' will adversely affect the flavour of your coffee.

BEFORE USING FOR THE FIRST TIME

Carefully unpack the coffee maker and remove all protective packing materials. Please keep all protective packing materials away from babies and children to avoid any possible danger. It is recommended to dispose of these as soon as possible.

You may wipe the outside of the machine using a clean damp cloth. Do not immerse the coffee maker in water or other liquids. To remove any dust that may have accumulated during packing, wash the carafe, lid and filter holder with warm soapy water. Thereafter rinse with clean water and let dry. Do not use any type of harsh abrasive cleaners.

We recommend that you rinse the machine prior to brewing your first pot of coffee. This will remove any dust that may have settled inside the coffee maker. To do this, fill the reservoir to the max mark and run the appliance without coffee. Let it cool, discard the water, then use it normally.

Note: We recommend that you use only cold water. The automatic brewing system has been designed to work at its best with cold water.

OPERATING THE APPLIANCE

1. Place the coffee maker on a flat, level surface, such as a countertop.
2. Check that the switch on the appliance is set to the “O” or OFF position.
3. Put the plug into the power socket.
4. Open the top lid and insert the permanent filter or a paper filter into the filter holder.
5. Put filter-ground coffee into the filter. The amount will vary with the type of coffee and individual taste, but we suggest two rounded teaspoons per cup of water. Note: Be sure not to over-fill the filter with too much coffee. Tip: We recommend using fresh top quality ground coffee specifically for an automatic filter coffee maker. Experiment to learn how much ground coffee to use for the strength of coffee you prefer. Tastes vary and there are no hard and fast rules.
6. Open the hinged lid to the water reservoir located on the top of the coffee maker. Fill the glass carafe with cold water up to the marked level for the desired amount of coffee. NOTE: We recommend using only cold water as the automatic brewing system has been designed to work best with cold water.
7. Empty the cold water from the carafe into the water reservoir. Close the hinged lid. Place the glass carafe with the lid in place on to the warming plate.
8. Move the switch to the “1”/ ON position. The light will glow to show that the unit is operating. The light will stay on until the switch is turned to the “O” or OFF position.
9. Shortly afterwards, hot water will disperse slowly through the ground coffee, brewing hot tasty coffee. Here you will see coffee starting to drip into the glass carafe.
10. Once all the water has been pumped out of the water reservoir, the heating process will switch itself off automatically and move the power to the hotplate for the “keep warm” mode which is designed to keep your coffee at the proper serving temperature.
11. Move the switch to the “O” or OFF position once you have finished using the coffee maker. The light will go off.
12. Unplug, and let the appliance and carafe cool down fully before cleaning, or for about 10 minutes before refilling.

TIP: We recommend keeping the unused coffee in a tightly sealed container in your refrigerator.

TO MAKE A QUICK CUP OF COFFEE

- You can remove the carafe at any time. To prevent the filter holder from overflowing, replace the carafe on the hotplate within approximately 20 seconds.

NON-DRIP FEATURE

- Your Russell Hobbs coffee maker has been designed with a non-drip feature. If you wish at any time during the brewing cycle, you may temporarily remove the glass carafe from the unit and pour a cup of hot coffee. The warming cycle will be interrupted and hot coffee will drip from the filter basket. This feature is also designed so that coffee will not drip onto the warming plate if you remove the glass carafe from the coffee maker during the brewing process.

SERVING AND KEEPING WARM

- After brewing is completed you may remove the glass carafe from the warming plate.
- For the best flavour serve the coffee immediately after brewing.
- Put the glass carafe back on to the warming plate to keep the coffee warm.
- The keep-warm period is limited to maximum 40 (forty) minutes after which the appliance will turn off automatically. This feature has been incorporated for increased safety and lower energy consumption.
- Make sure to switch off the coffee machine after use.

NOTE: Always allow the coffee maker to cool down between brewing cycles for approximately 5 minutes.

CARE AND MAINTENANCE

- Unplug the appliance when not in use, before moving and before cleaning.
- The permanent filter may be removed for easy cleaning. Ensure that you tip the contents of the filter holder into the bin before starting the cleaning process.
- Clean the outside of the coffee maker with a damp cloth, and buff with a dry cloth.
- The heating element may be wiped with a clean, damp cloth when necessary.
- Do not use any type of abrasive cleaner on any part of your coffee maker.

- Do not use abrasive cleaning agents.
- Be sure that the warming plate is cold before cleaning.
- Never immerse the appliance in water.
- Never use a cloth to clean the inside of the water reservoir as this may leave fuzzy deposits in the reservoir. Just rinse with cold water periodically.
- You may clean the carafe and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all traces of soap.
- Do not put any part of the appliance in a dishwasher.

DESCALING

- To prevent a build-up of deposits due to water conditions in certain areas, do ensure that the reservoir is completely cleaned after each use. It may be necessary to periodically descale your machine.
- We recommend that you descale your machine every 3-4 months, although this period will depend on the hardness of water and frequency of use of the machine.
- To do this, pour a measure of half water/half vinegar into the water reservoir and operate the coffee maker as if you were making coffee. Alternatively, dissolve 2 dessert spoons of tartaric acid in half a litre of lukewarm water. (DO NOT use ground coffee)
- Repeat the process a further three times but using CLEAN COLD WATER ONLY to thoroughly rinse out the appliance.
- Alternatively, a well-known brand of descalent suitable for coffee makers or plastic kettles can be used. In this case, follow the instructions given by the manufacturer

Note: Products returned under guarantee with faults due to scale will be subject to a repair charge.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances must not be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

STORING THE APPLIANCE

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Home of Living Brands (Pty) Limited service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.


CHANGING THE PLUG

Should the need arise to change the fitted plug, follow the instructions below.

This unit is designed to operate on the stated current only. Connecting to other power sources may damage the appliance. Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow	= Earth
Blue	= Neutral
Brown	= Live

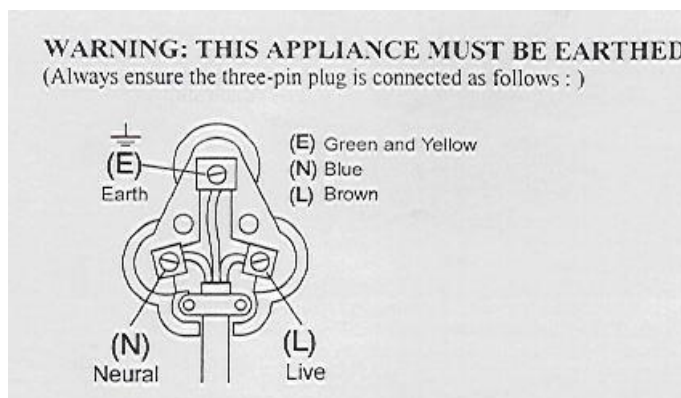

A FEW RECIPES TO GET YOU STARTED

IRISH COFFEE

Ingredients:-

2 tbsp. Irish Whiskey

1-2 tsp. sugar

Hot Coffee

Double Cream

Method:-

- Warm a stemmed glass or goblet by running under hot water.
- Pour the Irish Whiskey into the warmed glass adding the sugar.
- Fill with hot coffee to within 1 inch of the brim and stir well.
- Slowly pour some double cream over the back of the teaspoon allowing it to float on top of the coffee.
- Drink through the cream without stirring.

Variations:-

- For Highland Coffee, prepare in the same manner, using Scotch Whiskey instead of Irish Whiskey.
- For Calypso Coffee, prepare in the same manner using Tia Maria.
- For Cherry Coffee, prepare in the same manner using Cherry Brandy. Drizzle an additional teaspoon of Cherry Brandy over the Cream, so that it is tinged pink and garnish with one or two un-stemmed cherries.
- For Café Menthe, prepare in the same manner using Crème de Menthe and lightly whipped double cream. Serve with thin chocolate mint wafers.
- For Mexican Coffee, prepare in the same manner using Kahlua and lightly whipped double cream. Serve sprinkled with finely grated chocolate.

JAMAICAN COFFEE COCKTAIL

Ingredients:-

2 tbsp. dark Jamaican Rum

170-220ml freshly made coffee, well chilled and sweetened to taste

Ice Cubes

Double cream, chilled and lightly whipped

Ground Cinnamon, grated nutmeg or chocolate

Method:-

- Combine the rum and chilled coffee in a tall glass. Stir well and add ice.
- Spoon the cream over the coffee.
- Sprinkle with Cinnamon, nutmeg or chocolate.
- Serve with straws and a cocktail spoon.

CAFÉ A L'ORANGE FRAPPE

Ingredients:-

30ml freshly made and chilled coffee, sweetened to taste

2 tbsp. Grand Marnier

1 tbsp. double cream, chilled

Grated orange zest and a twist of orange peel

Crushed Ice

Method:-

- Stir the coffee, Grand Marnier and cream together until thoroughly blended.
- Put some crushed ice into a small cocktail glass and pour the cocktail over the ice.
- Sprinkle with some grated orange zest and garnish with a twist of orange peel.
- Serve with a short straw.

CAFÉ RUMBA

Ingredients:-

170ml freshly made and chilled coffee, sweetened to taste

1 scoop Vanilla or Coffee ice-cream

2 tbsp. Jamaican Rum

Ground Cinnamon, grated nutmeg or chocolate

Method:-

- Pour coffee, ice-cream and Rum into a Russell Hobbs Electric Blender and blend until completely smooth.
- Serve in a tall glass, sprinkled with Cinnamon, nutmeg or chocolate.

CAFÉ ALEXANDER

Ingredients:-

30ml freshly made coffee, well chilled and sweetened to taste

2 tbsp. dark Cream de Cacao

2 tbsp. brandy

30g double cream, chilled

Ground Cinnamon, grated nutmeg or chocolate

Crushed ice

Method:-

- Put some crushed ice into a cocktail shaker.

- Add coffee, Crème de Cacao, brandy and cream. Shake well until frothy and strain into a cocktail glass.
- Top with finely grated chocolate, nutmeg or cinnamon.

Coffee blends well with a range of flavours, try some of the following ideas...

- Infuse coffee with pieces of cinnamon stick, crushed cardamom pods or cloves for a delicious hint of spiciness.
- Add a thinly pared slice of lemon or orange zest to black coffee or add a little strained juice of an orange or lemon for just a hint of fresh citrus flavour.
- Grated chocolate served in iced coffee improves the flavour OR add a swirl of whipped cream to black coffee and decorate with a flourish of chocolate curls.
- To round off a dinner party, try a Café Royal. Put a sugar lump on a spoon, pour over cognac and set alight. Pour immediately into a cup of hot coffee and stir until the sugar is dissolved.

PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE

IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.

**1 YEAR STANDARD
WARRANTY**

Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://russellhobbswarranty.co.za/>)

W A R R A N T Y AND EXTENDED WARRANTY

1. Home of Living Brands (Pty) Limited ("Home of Living Brands") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Home of Living Brands shall extend the warranty period for a further period of 1(one) year ("extended warranty period**"), on condition that the purchaser registers the product on the website, within 12 months from the date of purchase of the product. The website address for registration is as follows:
<https://russellhobbswarranty.co.za/>.
3. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period or if applicable, the extended warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
4. The faulty product must be taken to the supplier's service centre to exercise the warranty.
5. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where (a) the customer is not the cause of the product breaking, and (b) the product has been used for the intended purpose stipulated in the product manual. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.

6. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer. In this regard any accessories supplied with the product by the supplier, may be excluded in this warranty or extended warranty (see Exclusions to Warranty and Extended Warranty document).
7. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer, subject to the supplier's discretion.
8. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.
- 9.

HOME OF LIVING BRANDS (PTY) LTD (JOHANNESBURG)

JOHANNESBURG	TEL NO. (011) 490-9600
CAPE TOWN	TEL NO. (021) 552-5161
DURBAN	TEL NO. (031) 303-1163

www.homeoflivingbrands.com

www.russellhobbs.co.za

www.facebook.com/RussellHobbsSA

EXCLUSIONS TO WARRANTY AND EXTENDED WARRANTY

1. Any accessories supplied with the product, including but not limited to, bowls, jugs, mills or carafes made either of glass or plastic and supplied with this appliance (hereinafter referred to as "the accessory or accessories"), is warranted to be free from material and workmanship defects for the duration of the appliance warranty.
2. The accessories should give trouble free service when used in accordance with the directions described in the instruction manual. However, the accessories will be damaged if subjected to impact, and this damage is not covered by the warranty. Such impact damage can occur either from the outside (if for example it is dropped or knocked against a hard surface), or from within (if for example foreign objects are placed within the accessories and the power is switched on).
3. Should you need to replace an accessory during the warranty period; a claim for a free replacement will only be considered if the item (including all shards and broken parts) is returned to the nearest HOLB service centre for examination.
4. The remains of the accessory will be carefully examined by the relevant professionals and if it is determined (at the sole discretion of HOLB) that the damage was caused by impact, then the claim will be refused and will not be covered by the warranty or any extended warranty.
5. Any replacement part provided in terms of clause 4 above will become a chargeable item payable by the customer.