



# ConfCam EPTZ 1080P HD Remote



Quick guide

134-22




[www.sandberg.world](http://www.sandberg.world)

## Product overview

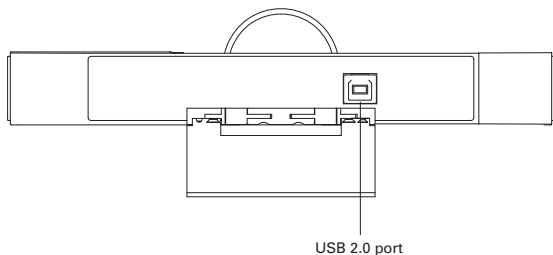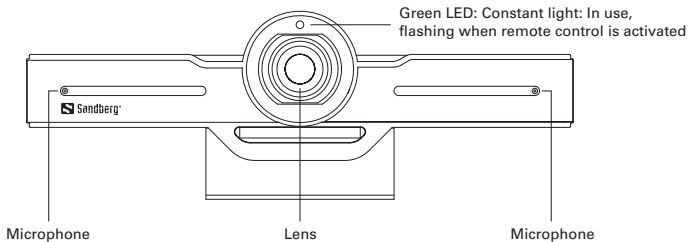

## Mounting options

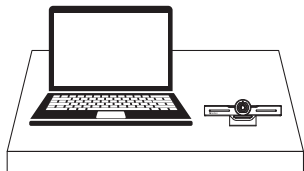


On a Desk



On a PC Monitor



On a tripod, for example  
Sandberg item no. 134-26

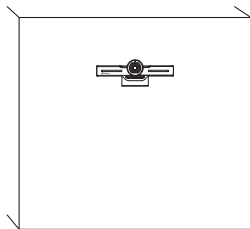


On a Wall

Screw the wall mount bracket on the wall, refer to the following picture 1.  
Fasten the camera on the wall mount bracket, refer to the following picture 2.


(Picture 1)



(Picture 2)

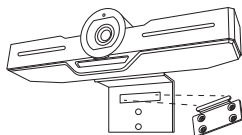

## Connect webcam to USB port on computer

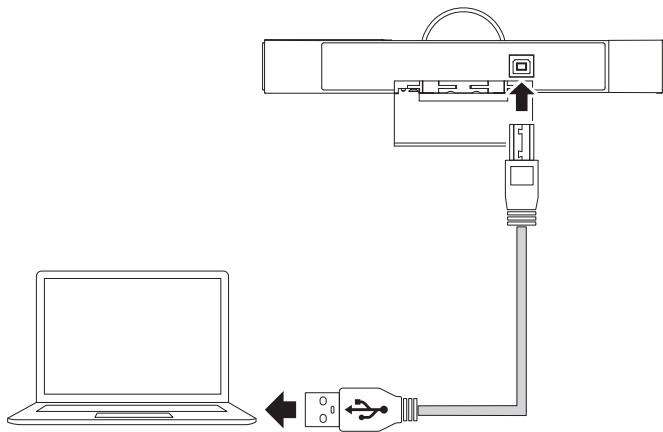

## Software installation


---

*The camera works driver-less and is compatible with most chat-applications.*


*If you want to get further options for video-effects and image adjustments, please follow this link:  
**[www.sandberg.world/webcamguide](http://www.sandberg.world/webcamguide)***

---

Choose this device name on the device list for  
video-camera and recording microphone:

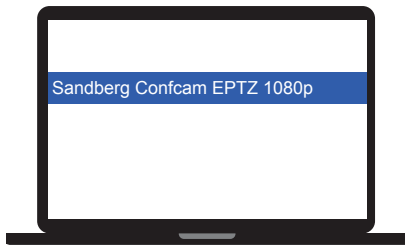

## Remote control

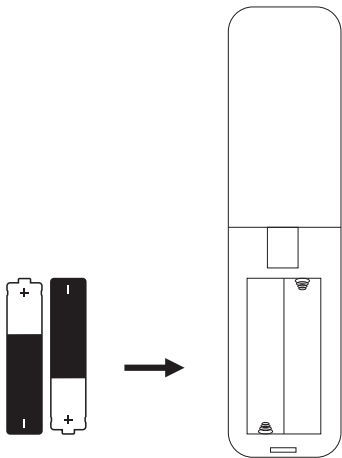


Open the back of the remote control and insert 2 x AAA batteries.

## Digital Pan, Tilt and Zoom functions (EPTZ)





### Zoom:

The camera supports EPTZ 3x digital zoom. When you zoom into the image the option opens for moving Up / Down (Tilt) and Left / Right (Pan).

1. Press Zoom+  on the remote control to zoom in image.

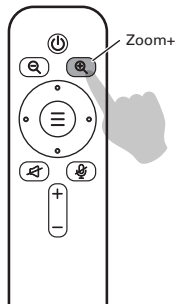


 2. After the image is zoomed in, you can move the image viewing angle Up / Down (Tilt) and Left / Right (Pan).

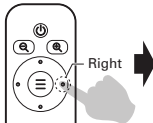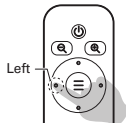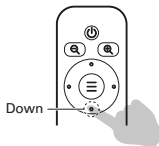

## Picture in Picture (PIP)


After the image is zoomed in, you can see the full out-zoomed image in a small overlay frame (PIP).

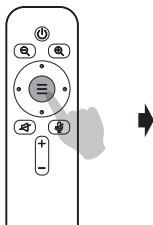


1. Press "Camera OSD Menu (Middle)", select "Image".



2. Select "PIP" to "On". Picture in Picture function turns on, users can see small picture-in-picture window at the bottom of right.

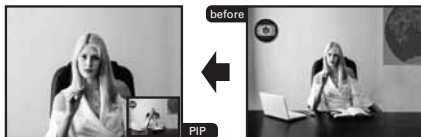

## On-Screen-Display (OSD) menu

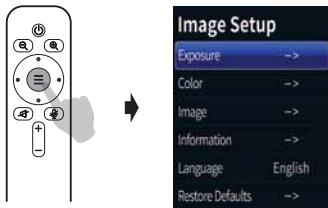

### Image Setup

#### ► Exposure

Brightness: Adjust image brightness ..... Adjustable Value: 0-255; Default: 64

Backlight: Adjust the backlight ..... Optional: Off / On; Default: Off

AE: Adjust the exposure settings ..... Optional: Auto/ Shutter; Default: Auto

Shutter: Shutter speed ..... Optional: 1/10000-1/25; Default: 1/25

Flicker: Anti-flicker adjustment ..... Optional: 50/60; Default: 50

Back: Back to previous menu

#### ► Color

Hue: Adjust image hue ..... Optional: 0-100; Default: 50

Saturation: Adjust image saturation ..... Optional: 0-100; Default: 50

Sharpness: Adjust image sharpness ..... Optional: 0-127; Default: 50

WB: Select white balance mode ..... Optional: Auto/Manual; Default: Auto

Color Temp: Adjust color temperature ..... Optional: 1500-15000; Default: 5000

Back: Back to previous menu

#### ► Image

Image Flip: Mirror and rotate image ..... Optional: Off/All/Flip/Mirror;  
Default: Off

Frame: Select image frame ..... Optional 30/25; Default: 30

Image Mode: Select image style ..... Optional Normal/Clear/Bright/Beauty  
Default: Normal

PIP: Picture in picture function, ----- Optional: Off/On;  
Default: Off

Back: Back to previous menu

► **Information**

Version: Firmware version info.

Model: Camera model info.

Date: Firmware version date.

\*The information may vary according to product updates.

► **Language**

OSD menu language.

► **Restore Defaults**

Restore camera parameters to default values.



1. No Pan/Tilt movement function while OSD Menu on screen.
2. Shutter can only be adjusted if it is selected as Shutter in the AE menu.



**Support**

*<http://helpdesk.sandberg.world>*

## Warranty

*There is a five-year warranty on your Sandberg product.  
Please read the warranty terms and register your new  
Sandberg product at [www.sandberg.world/warranty](http://www.sandberg.world/warranty)*

**5**  
Years  
Warranty

For information on handling electronic waste, see [www.sandberg.world/weee](http://www.sandberg.world/weee)

