



10C EVO

MOTORCYCLE BLUETOOTH® CAMERA
AND COMMUNICATION SYSTEM

HD SPEAKERS

1.3.0

QUICK START GUIDE

ENGLISH

RIDE CONNECTED

Blast your favorite tunes, talk over the intercom with your buddies, hear directions from your GPS and more, all through your headset. With built-in Bluetooth® capabilities, UHD camera, HD speakers and a microphone using Advanced Noise Control™, technology has never felt so minimal or freeing.

- Bluetooth® Integrated
- 1.6 Km (1.0 Mile) Intercom
- UHD Camera Integrated
- Four-Way Intercom
- Smart Audio Mix™
- Advanced Noise Control™
- WiFi Enabled
- Audio Multitasking™
- Audio Source Priority

GETTING STARTED

- This product comes with a Quick Start Guide, which is a basic version of the User's Guide. **A FULL VERSION OF THE USER'S GUIDE CAN BE DOWNLOADED AT SENA.COM.**
- Update this product for free with the latest firmware to fully enjoy the new advanced features built into this product. Visit sena.com to see how to update your product.
- Users can follow Sena on Facebook, YouTube, Twitter and Instagram to receive the most up to date information on products, helpful tips and all other announcements regarding Sena products.

SENA

SENA Technologies, Inc.

Customer Support: sena.com


10C EVO

GETTING STARTED

GETTING STARTED

How to Use This Guide

The legend and callouts are here to help you read the illustrations. New technology can be confusing, but we've created a simple way to perform actions using illustrations.

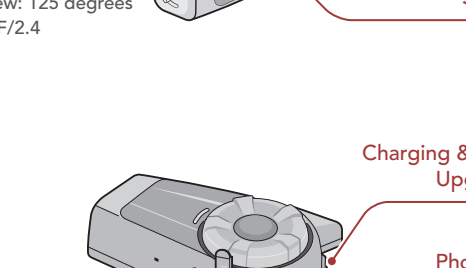

Buttons



GETTING STARTED

Icon Legend

- TAP 1x**: Tap button/Jog Dial the specified number of times
- HOLD 10s**: Press and Hold button/Jog Dial for the specified amount of time
- ROTATE L**: Rotate Jog Dial clockwise (right) or counterclockwise (left)
- ROTATE R**: Rotate Jog Dial clockwise (right) or counterclockwise (left)
- ROTATE L**: Rotate while Pressing Jog Dial clockwise (right) or counterclockwise (left)
- ROTATE R**: Rotate while Pressing Jog Dial clockwise (right) or counterclockwise (left)
- "Hello"**: Audible prompt

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Product Details




10C EVO

QUICK START GUIDE

QUICK START GUIDE

Installation

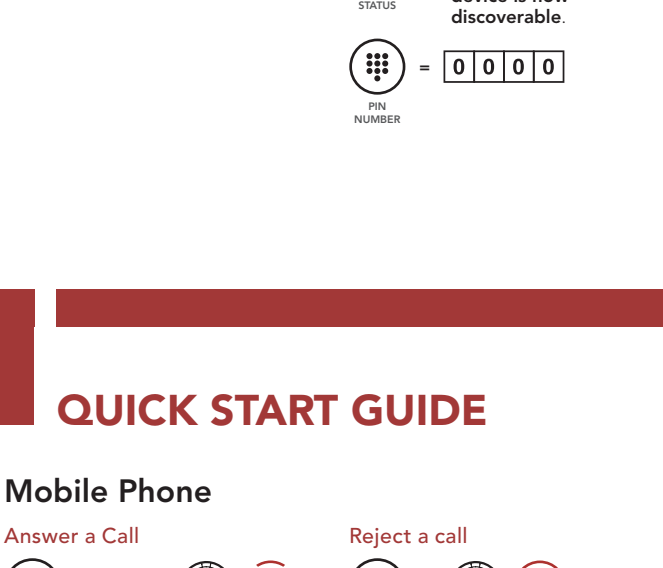

Sena Motorcycles App

- Download
 - Android: Google Play Store > **Sena Motorcycles**
 - iOS: App Store > **Sena Motorcycles**

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Sena Camera App

The **Sena Camera App** allows you to see a live preview from the camera, manage recorded videos as well as configure the video settings using the built-in WiFi feature on camera system. When the camera and the **Sena Camera App** are connected, the camera is synchronized with the smartphone's date and time. Download the **Sena Camera App** for Android and Apple operating systems from sena.com.

Sena Device Manager

The **Sena Device Manager** allows you to upgrade the firmware and configure its settings directly from your PC or Apple computer. Download the **Sena Device Manager** from sena.com.

Basic Operations

- Powering On**: [Power Button] = [Camera Button] (HOLD 1s)
- Powering Off**: [Power Button] = [Camera Button] (TAP 1x)
- Volume Up**: [Volume Up Button] = [Jog Dial] (ROTATE R)
- Volume Down**: [Volume Down Button] = [Jog Dial] (ROTATE L)

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Checking the Battery Level

- Visual Method**: [Battery Icon] = [Camera Button] (HOLD 1s)
- Audible Method**: [Speaker Icon] = [Camera Button] (HOLD 5s)
- Battery Level Indicators**: HIGH, MED, LOW (indicated by colored dots)
- "Battery level high/medium/low"**: Audible prompt

Bluetooth Pairing (Phone, MP3, GPS)

- Mobile Phone Pairing**: [Phone Icon] = [Camera Button] (HOLD 5s) → [LED STATUS] (Alternating blue and red flashing lights indicate device is now discoverable)
- PIN NUMBER**: [PIN Icon] = [Camera Button] (TAP 1x) → [PIN NUMBER] (0 0 0 0)

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Mobile Phone

- Answer a Call**: [Phone Icon] = [Camera Button] (TAP 1x) or [Camera Button] (HOLD 2s)
- Reject a call**: [Phone Icon] = [Camera Button] (HOLD 2s)
- End a Call**: [Phone Icon] = [Camera Button] (TAP 1x) or [Camera Button] (HOLD 2s)
- Make a Call with Voice Dialer**: [Phone Icon] = [Camera Button] (TAP 1x)

Music Controls

- Play/Pause**: [Play/Pause Icon] = [Camera Button] (HOLD 1s)
- Track forward**: [Track Forward Icon] = [Jog Dial] (ROTATE R)
- Track backward**: [Track Backward Icon] = [Jog Dial] (ROTATE L)

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Camera Controls

- Camera On**: [Camera Icon] = [Camera Button] (TAP 1x)
- Start Recording**: [Camera Icon] = [Camera Button] (HOLD 1s)
- Camera Off**: [Camera Icon] = [Camera Button] (TAP 1x) or [Camera Button] (HOLD 2s)
- Stop Recording**: [Camera Icon] = [Camera Button] (HOLD 1s)

Taking Photos

- [Camera Icon] = [Camera Button] (TAP 1x)
- Note:** If the video resolution is 2160p/30fps, you cannot take a photo during video recording.
- Note:** You cannot record videos without a microSD card. Your microSD card needs to be formatted before using the camera. MicroSD cards up to 128 GB and U3 or higher cards are compatible.
- Format SD Card**: [Format Icon] = [Camera Button] (HOLD 5s)
- [Checkmark Icon] = [Camera Button] (TAP 1x)

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Intercom

Up to three other people can be paired with the headset for Bluetooth intercom conversations.

- Pairing Headset A with Headset B**: [Headset A Icon] and [Headset B Icon] = [Camera Button] (HOLD 5s)
- Start/End Intercom with Headset B**: [Headset B Icon] = [Camera Button] (TAP 1x)
- Intercom Pairing Status**: [LED STATUS] = Flashing blue LED confirms intercoms are paired.

10C EVO

QUICK START GUIDE

QUICK START GUIDE

Headset Configuration Menu

- Accessing the Headset Configuration Menu**: [Settings Icon] = [Camera Button] (HOLD 10s)
- Navigating Between Menu Options**: [Right Arrow Icon] = [Jog Dial] (ROTATE R)
- Execute Menu Options**: [Checkmark Icon] = [Camera Button] (TAP 1x)
- [Left Arrow Icon] = [Jog Dial] (ROTATE L)

Troubleshooting

- Factory Reset**: [Settings Icon] = [Camera Button] (HOLD 10s)
- [Red Dot Icon] = Solid red
- [Checkmark Icon] = [Camera Button] (TAP 1x)
- Fault Reset**: [Fault Reset Icon] = [Camera Button] (TAP 1x)
- Note:** Fault Reset will not restore the headset to factory default settings.

10C EVO

QUICK REFERENCE

QUICK REFERENCE

TYPE	OPERATION	BUTTON COMMANDS
------	-----------	-----------------

Basic Operations	Power on / Power off	[Camera Button] (HOLD 1s) or [Camera Button] (TAP 1x)
	Volume up / Volume down	[Jog Dial] (ROTATE R) or [Jog Dial] (ROTATE L)

Mobile Phone	Answer phone call	[Phone Icon] or [Camera Button] (TAP 1x)
	End phone call	[Phone Icon] or [Camera Button] (HOLD 2s)
	Reject phone call	[Phone Icon] (HOLD 2s)
	Voice dial	[Phone Icon] (TAP 1x)

Speed dial	Speed dial	[Phone Icon] (TAP 2x)
------------	------------	-----------------------

10C EVO

QUICK REFERENCE

QUICK REFERENCE

TYPE	OPERATION	BUTTON COMMANDS
------	-----------	-----------------

Music	Play/Pause music	[Camera Button] (HOLD 1s)
	Track forward	[Jog Dial] (ROTATE R)
	Track backward	[Jog Dial] (ROTATE L)

Camera	Camera On	[Camera Button] (TAP 1x)
	Camera Off	[Camera Button] (TAP 1x) or [Camera Button] (HOLD 2s)
	Start/Stop recording	[Camera Button] (HOLD 1s)
	Taking Photos	[Camera Button] (TAP 1x)

Intercom	Intercom pairing	[Camera Button] (HOLD 5s)
	Start/End intercom	[Camera Button] (TAP 1x)