

S H A R P E R I M A G E[®]

100X ULTRAZOOM BINOCULARS

Item No. 205410

User Guide



Thank you for purchasing the Sharper Image 100X Ultrazoom Binoculars. This device is ideal for many viewing needs. Please take a moment to read this User's Guide and store it for future reference.

FEATURES

- High power: zooms from 10X to 100X
- Superior clarity
- Military grade construction
- Nonslip hand grips
- Rubber, fold-down eyecups
- Lightweight — only 1.8 lbs.
- Ideal for sports, concerts, birding and other outdoor adventures
- Tripod adapter hole (under plastic cap) **Note:** tripod adapter bracket not included.

PARTS IDENTIFICATION



WHAT IS IPD?

The interpupillary distance (IPD) is the distance between the centers of the left and right eye pupil. If the interpupillary distance of the binoculars does not match your eyes, you may see shadowing or two distinct images. To find your correct IPD, adjust the position of the binocular barrels until you see one image. This will also reduce shadowing. Once you have found the ideal IPD, look at the scale for future reference. For subsequent uses, you can save time by using the IPD scale to set the IPD without looking into the binoculars.

USING YOUR BINOCULARS

IPD ADJUSTMENT: Set the interpupillary distance [IPD] by grasping the body and bending it until you can see one circle of view. The setting for your eyes will be indicated on the IPD scale. [Note the scale setting for later use.]

FOCUSING: Close your right eye and sight an object with your left eye. Focus the binoculars by rotating the center focus wheel until the image is sharp and clear. Open your right eye and close your left eye. Rotate the right eyepiece until the object sighted is sharp and clear. [Note the setting of the diopter scale for later use.] Both sides [eyes] are now in focus and you will need to use only the center focus wheel to focus on the other objects.

RUBBER FOLD-DOWN EYE CUPS: Rubber eye cups provide comfort and promote viewing ease. Fold down the eye cups for use with eyeglasses.

CARE AND MAINTENANCE

- Keep the included lens covers on the lenses when binoculars are not in use.
- When wiping the lenses, use the included lens cloth or a soft, lint-free cloth.
- To remove any remaining dirt or smudges, add one or two drops of isopropyl alcohol to the cloth.
- Store your binoculars in a moisture-free area.

IMPORTANT NOTE: *Never attempt to clean your binoculars internally or try to take them apart.*

CAUTION!

Viewing the sun can cause permanent eye damage. Do not view the sun with these binoculars, or even with the naked eye.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 [877] 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

[Click Here to Read More.....](#)

[Mobile friendly optimized manual:](#)

[Sharper Image 100x Ultrazoom Binoculars User Manual](#)

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.