

PHOTO/VIDEO/REPLAY SETTINGS:

CHANGING PHOTO SETTINGS

- Select **Photo Mode**
- Press the **Menu button** to access the photo menu settings
- Press the **Up and Down buttons** to navigate the menu options and to select the setting you want to change
- Press the **Snap/Ok button** to access setting submenu options
- Press **Snap/Ok** to confirm

PHOTO MENU	SUB MENU	PHOTO MENU	SUB MENU
SHOOTING MENU	SINGLE SHOOT	COLOR	COLOR
	2 SECONDS TIMING		BLACK AND WHITE
RESOLUTION	5M - 2592 X 1944	ISO	AUTOMATIC
	3M - 2048 X 1536		100
CONTINUOUS CAPTURE MODE	5 SECONDS TIMING	IMAGE STABILIZER	OFF
	10 SECONDS TIMING		ON
PHOTO QUALITY	HIGH QUALITY	EXPOSURE	+2.0
	STANDARD		+5/3
SHARPNESS	STRONG	DATE	-2.0
	ECONOMIC		+1/3
WHITE BALANCE	AUTOMATIC	DATE DATE/TIME	+4/3
	SUNLIGHT		+1.0
	CLOUDY		+2/3
	TUNGSTEN LAMP		+1/3
	FLUORESCENT LAMP		+0
			-1/3
			-2/3
			-1.0
			-4/3
			-5/3
			-2.0

CHANGING VIDEO SETTINGS

- Select **Video Mode**. Press the **Menu button** to access video menu settings
- Press the **Up and Down buttons** to navigate the menu options
- Press the **Snap/Ok button** to access setting submenu options
- Press **Snap/Ok** to confirm

VIDEO MENU	SUB MENU	VIDEO MENU	SUB MENU
RESOLUTION	1080HD - 1920 X 1080	EXPOSURE	+2.0
	1080P - 1440 X 1080		+5/3
VOICE RECORDING	720P - 1280 X 720	DATE	+1.0
	WVGA - 848 X 480		+2/3
	VGA - 640 X 480		+1/3
			+0
			-1/3
			-2/3
			-1.0
			-4/3
			-5/3
			-2.0

CHANGING REPLAY SETTINGS

- Select **Replay mode**
- Press the **Menu button** to access the video menu settings
- Press the **Up and Down buttons** to navigate the menu options
- Press the **Snap/Ok button** to access setting submenu options
- Press **Snap/Ok** to confirm

REPLAY MENU	SUB MENU	REPLAY MENU	SUB MENU
DELETE	DELETE SELECTED VIDEO	PROTECTION	LOCK SELECTED FILE
	DELETE ALL VIDEOS		UNLOCK SELECTED FILE
SLIDE SHOW	2 SECONDS		LOCK ALL FILES
	5 SECONDS		UNLOCK ALL FILES
	8 SECONDS		

SYSTEM SETTINGS:

CHANGING SYSTEM SETTINGS

- In **Photo or Video Mode**, press the **Menu button** twice to access System Settings
- Press the **Up and Down buttons** to navigate the menu options
- Press the **Snap/Ok button** to access setting submenu options
- Press **Snap/Ok** to confirm

SYSTEM MENU	SUB MENU	PHOTO MENU	SUB MENU
DATE & TIME	YEAR	SCREEN PROTECTION	OFF
	MONTH		1 MINUTE
	DAY		3 MINUTES
	HOUR		5 MINUTES
	MINUTE		0
	SECOND		1
AUTO POWER-OFF	OFF	SOUND VOLUME	2
	1 MINUTE		3
	3 MINUTES		4
	5 MINUTES		5
KEY SOUND	ON		6
	OFF		7
			8
LANGUAGE	SIMPLIFIED CHINESE	LIGHT SOURCE FREQUENCY	50 HZ
	TRADITIONAL CHINESE		60 HZ
	RUSSIAN	FORMAT	FORMATTING THE MEMORY WILL DELETE ALL DATA
	KOREAN	DEFAULT VERSION	RESTORE DEFAULTS
	ENGLISH	VERSION	VIEW VERSION
	FRENCH		
	JAPANESE		
	ITALIAN		
	GERMAN		
	SPANISH		

SPECIFICATIONS:

BINOCULAR SPECIFICATION	12 X 32	LCD DISPLAY	2" LTPS 4.3
MAGNIFICATION	12X	PHOTO FORMAT	JPEG
100M VISUAL FIELD	96M	VIDEO DISPLAY	AVI
EXIT PUPIL DIAMETER	3.8MM	VIDEO REC FUNCTION	SUPPORT
DISTANCE OF EXIT PUPIL DIAMETER	8MM	LANGUAGE	SIMPLIFIED CHINESE TRADITIONAL CHINESE RUSSIAN KOREAN ENGLISH FRENCH JAPANESE ITALIAN GERMAN SPANISH
MINIMUM FOCUS DISTANCE	8M	REMOVABLE DISK	SUPPORT
PHOTO MODE RESOLUTION/PIXELS	5M - 2592 X 1944 3M - 2048 X 1536 2M - 1920 X 1080 1.3M - 1280 X 960 VGA - 640 X 480	WEB CAMERA	SUPPORT
VIDEO MODE RESOLUTION/PIXELS	1080HD - 1920 X 1080 1080P - 1440 X 1080 720P - 1280 X 720 WVGA - 848 X 480 VGA - 640 X 480	MEMORY CARD	MAXIMUM 32GB
		USB INTERFACE	2.0
		BATTERY TYPE	BUILT IN LITHIUM BATTERY NOTE: SUPPORT EXTERNAL MOBILE POWER SUPPLY (5V 1A)

PC & MAC CONNECTION:

HOW TO CONNECT THE 12X ZOOM DIGITAL CAMERA BINOCULARS TO YOUR COMPUTER

- Connect the USB to the camera while the device is turned OFF. Turn the camera ON and the LCD screen will show two options: Storage and Camera
- To upload your saved photos and videos to your computer, select the Storage option and press the Snap/Ok button. Your computer will recognize the device
- To use the camera as a webcam, select the Camera option and press the Snap/Ok button. Your computer will recognize the camera as a webcam to be used with specific programs like Skype, Facebook, etc. This option only works with the following operating systems: Windows 2000/XP/Vista/Windows 7, MAC OS X 10.3.6 and above

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.

SHARPER IMAGE®

12X ZOOM DIGITAL CAMERA BINOCULARS

Item No. 207051

User Guide




Thank you for purchasing the Sharper Image 12X Zoom Digital Camera Binoculars. Please take a moment to read this guide and store it for future reference.

INTRODUCTION:

12X Zoom Digital Camera Binoculars combine an all-optical binocular system with a high definition digital video camera. The LCD display gives you quick control over various functions to help you capture the perfect photo or video. Use the 12X magnification, 32 mm aperture binocular system to get a closer look at the subject of your choice. Ideal for hunting, birdwatching, surveillance jobs, sporting events, outdoor adventures and more!

INCLUDED COMPONENTS:

Before using the device, check to make sure that all items listed below have been included with your device.

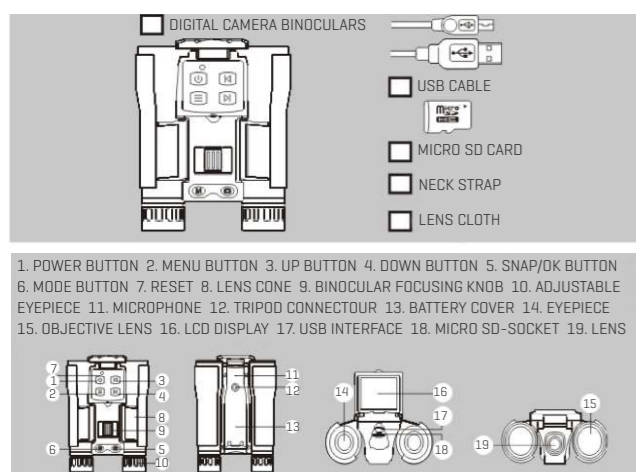

HOW TO USE:

EYE DISTANCE ADJUSTMENT

Hold the binoculars in a neutral, observational position and rotate the two lens cones (A) and (B) inward or outward until you see a single circle through the lenses. Make sure to adjust this every time you use the device.



FOCUSING

Close your right eye and observe with your left eye. Rotate the central focusing knob (A) until the image is clear. Next, close your left eye and observe with your right eye. Rotate the right adjustable eyepiece (B) until the image becomes clear. At this point the focal lengths on both sides have been adjusted, so you only need to rotate the central focusing knob to focus on targets.



USERS WITH GLASSES

If you wear glasses, simply fold down the rubber eye flaps (A) and (B), and move your eyes closer to the eyepieces in order to establish a proper field of view.



CLEANING & MAINTENANCE:

- To remove dust or fingerprints on the lenses, use a clean microfiber cloth
- Only use liquid cleaning products recommended for prescription lenses
- Do not attempt to clean the inside of the device
- Keep your binoculars in a dry, ventilated place when not in use
- Staring at the sun may cause damage to your eyes

BATTERY:

This item has a built-in rechargeable Lithium battery that automatically charges the camera every time you connect it to a computer via USB cable. When the battery is low, the LCD display shows "Battery Low" accompanied by a red indicator light. After recharging the battery, the indicator light will turn off.


INSTALLING MICRO-SD CARD:

The power must be OFF when installing the included Micro-SD card. Make sure the Micro-SD card (A) is inserted into the correct slot (B) with the printed side facing down and the gold contact pins facing in. Insert the card until you hear a click.

To remove the Micro-SD card you must turn the camera OFF. Once it is OFF, simply push the card inwards to disengage the locking mechanism (the card will pop out).

It is recommended that you use Class 4 or above SD cards with a minimum of 4GB storage. Low speed cards do not support 1080p recording, so this could result in lower quality video.

To safely use your Micro-SD card, do not remove it or turn off the power of your device when the card is being read. Always format a new card before using it.

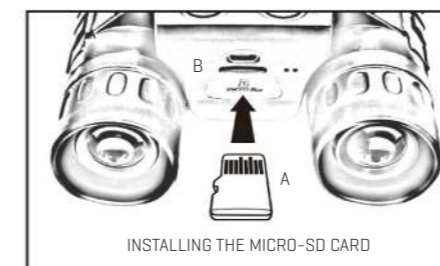

CAMERA:

MODE OPTIONS

With the camera turned ON, press the Mode button to select the mode you want to use: Photo Mode, Replay Mode or Video Mode.

PHOTO MODE

The camera automatically stays in Photo Mode when it is turned ON. You can either take a photo when looking through the binocular lenses, or with the LCD screen opened (Snap/Ok button).

VIDEO MODE

Press the Mode button to switch to video mode, then press the Snap/Ok button to start recording video. Press Snap/Ok again to play videos or review photos.

REPLAY MODE

Press the Mode button to switch to Replay Mode, then press the Up and Down buttons to select photos or videos. Press Snap/Ok to play videos or review photos.

To use the digital zoom feature, press the Up and Down buttons when in Photo or Video Mode to select your digital zoom range. For best results, hold the binoculars tightly or use a tripod to prevent movement and/or shaking.

