

Use and Care Manual

Before First Use:

Fully charge the device using the included USB cable before initial use.

Rinse the exterior and the pour spout with clean water. Do not submerge the main body unit.

Operating Instructions:

Charging: Connect the provided USB cable to the charging port on the aerator and to a standard USB power adapter (5V, 1A recommended). The indicator light will show the charging status. A full charge typically takes 2-3 hours.

Attachment: Securely insert the aerator's silicone stopper into the opening of a standard wine bottle. Ensure a tight fit to prevent leaks.

Aeration and Pouring: Hold the bottle at a comfortable angle over a glass. Press and hold the operation button. Wine will flow through the aerator and out the spout. Release the button to stop the flow.

Preservation Mode: When not actively pouring, the aerator remains sealed in the bottle to help preserve the wine's freshness for a short period.

Cleaning and Maintenance:

Self-Cleaning Function: After use, fill a glass with clean water. Submerge only the pour spout into the water. Press and hold the operation button to pump water through the internal tubes for 15-20 seconds or until the water runs clear.

Exterior Wipe: Wipe the main body with a soft, damp cloth. Do not use abrasive cleaners.

Decalcification (For Areas with Hard Water): If mineral buildup occurs, run a mixture of half water and half white vinegar through the system using the self-cleaning function, followed by several cycles of clean water.

Drying: Shake off excess water and allow the aerator to air dry completely before storing.

Storage:

Store the device in a clean, dry place. Disconnect it from the bottle and ensure it is fully dry before storage to prevent mold or mildew.

Troubleshooting:

Device does not turn on: Ensure the battery is charged. Connect to a USB power source.

Wine flows slowly or not at all: Check that the button is fully pressed. Ensure the bottle opening and aerator stopper are clean and free of debris. The wine bottle may be vacuum-sealed; break the seal first.

Minor leaking: Confirm the silicone stopper is fully and evenly inserted into the bottle neck.

Unusual noise: Check for obstructions in the spout. Ensure the device is properly attached and the bottle is not tilted excessively.

Safety Precautions:

This is an electrical appliance. Do not immerse the main body, charging port, or button in water or other liquids.

Use only with the provided or a standard USB charging cable (5V DC).

Use only for its intended purpose with wine. Do not use with corrosive or flammable liquids.

Keep out of reach of children.

Unplug from charging once the battery is full.

Do not attempt to disassemble or repair the device.