

Use and Care Manual – Popcorn Poppers

This manual provides general guidance for the safe use, care, and maintenance of popcorn poppers. Please read all instructions before using the appliance and retain this manual for future reference.

Important Safety Information

- Read all instructions before use.
- For household use only.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children during operation and cooling.
- Use the appliance only on a stable, heat-resistant surface.
- Do not operate the appliance if the cord or plug is damaged.
- Unplug the appliance when not in use and before cleaning.
- Allow the appliance to cool completely before handling or storing.

Getting Started

Before first use, remove all packaging materials. Wash any removable parts according to the cleaning instructions in this manual. Place the popcorn popper on a flat, dry surface.

How to Use

- 1 Ensure the appliance is properly assembled before use.
- 2 Add popcorn kernels as recommended.
- 3 Close or secure any covers or lids before turning on the appliance.
- 4 Turn on the popcorn popper and allow it to operate until popping slows or stops.
- 5 Turn off and unplug the appliance after use.
- 6 Use caution when opening the lid or removing popped corn, as hot steam may be released.

Care and Cleaning

- Always unplug the appliance and allow it to cool before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- Wash removable parts with warm, mild soapy water if applicable.
- Dry all parts thoroughly before reassembling or storing.
- Do not place non-removable electrical components in water or a dishwasher.

Storage

Store the popcorn popper in a cool, dry place. Ensure the appliance is clean and completely dry before storage. Avoid wrapping the power cord tightly around the appliance.

Basic Troubleshooting

- If the appliance does not turn on, ensure it is properly plugged into a working outlet.
- If popcorn does not pop properly, check that the appliance is correctly assembled and used.
- If unusual odors or noises occur, turn off and unplug the appliance immediately.

Disposal

Dispose of the appliance in accordance with local regulations for electrical products. Do not dispose of electrical appliances with household waste where prohibited.