

Use and Care Manual

10'x10' Outdoor Party Tent with 4 Removable Sidewalls

1. Intended Use

This tent is designed for temporary outdoor use to provide shade and shelter at events such as weddings, parties, camping, and other outdoor gatherings. It is not intended for permanent installation or use in extreme weather conditions.

2. Setup Instructions

Refer to the Installation Guide included with your tent for detailed assembly steps. Ensure all parts are secured and anchored properly before use.

3. Cleaning and Maintenance

- **Cleaning:**
 - Use a soft brush or cloth to remove loose dirt and debris.
 - For fabric canopy and sidewalls, clean with mild soap and lukewarm water.
 - Avoid harsh chemicals or abrasive cleaners which may damage the fabric or coatings.
 - Rinse thoroughly and allow to dry completely before storage to prevent mildew.

- **Frame Maintenance:**
 - Wipe metal parts with a damp cloth to remove dirt.
 - Check regularly for rust or damage.
 - Apply a light coating of rust inhibitor or spray paint if corrosion is noticed.

4. Storage

- Ensure all parts are completely dry before disassembling to avoid mold and mildew.
 - Disassemble the tent as per the Installation Guide.
 - Store the canopy, sidewalls, and frame components in the provided carry bag.
 - Keep the tent in a cool, dry place away from direct sunlight and extreme temperatures to prolong product life.
-

5. Safety Precautions

- Always secure the tent with stakes and ropes, especially in windy conditions.
 - Do not use during severe weather such as heavy rain, storms, or strong winds.
 - Avoid placing the tent near open flames or heat sources.
 - Keep children supervised around the tent structure.
 - Inspect all components before each use for wear or damage.
-

6. Troubleshooting

Issue	Possible Cause	Solution
Canopy fabric sagging	Improper tension or loose connections	Re-tighten canopy and secure all attachments
Frame instability	Stakes or ropes not secured	Anchor tent properly using stakes and ropes
Rust spots on frame	Exposure to moisture	Clean and apply rust inhibitor or touch-up paint