


# Tronsmart

## User manual

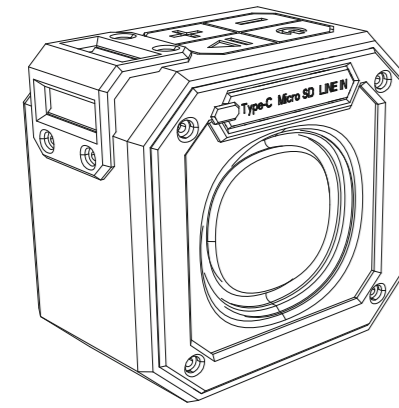

### Tronsmart Element Groove Wireless Speaker

#### English

Thank you for choosing Tronsmart Element Groove Wireless Speaker. Element Groove is equipped with Bluetooth 5.0 for optimal connection & pairing with your Bluetooth enabled device. Please read the user manual before use and keep it handy for future reference.

#### FEATURES

- Silicon covered exterior with IPX7 water-resistance rating.
- Passive radiator for deep bass.
- True Wireless Stereo for stereo surround sound.
- Output up to 10W.
- Up to 24 hours of playtime.
- Bluetooth 5.0.

- Equipped with USB Type-C port supporting DC 5V/1A input charging.
- Supports voice assistant for music streaming, phone calls, weather inquiries and much more.

Note: Voice Assistant is supported by Siri, Google and other local Android voice assistants that run on Samsung, Huawei, Xiaomi and more devices.


#### PACKAGE CONTENTS

- 1 x Element Groove wireless speaker
- 1 x Charging cable
- 1 x 3.5mm AUX cable
- 1 x 60cm lanyard
- 1 x Warranty card

#### BUTTON CONFIGURATIONS

- 1 Power ON/OFF;
- 2 True Wireless Stereo
- 3 Play/Pause/Hands-free /Bluetooth disconnect /Voice assistant
- 4 Volume-/Previous track
- 5 Volume+/Next track

- 6 Charging port
- 7 Micro SD/TF card slot
- 8 AUX-in
- 9 True Wireless Stereo indicator
- 10 Bluetooth indicator

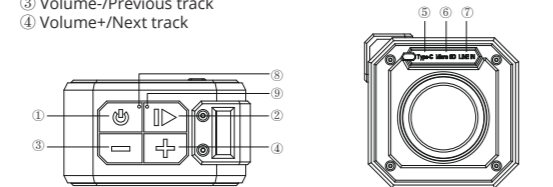

#### FUNCTIONS

🔊	ON: Hold to power ON. OFF: Hold for 3 seconds to power OFF.
	True Wireless Stereo: Power on two speakers, double press of one speaker quickly to enter True Wireless Stereo pairing mode. During True Wireless Stereo paired mode, double press quickly again to disconnect them.
▶	Switch playing mode: During Bluetooth mode, press to switch to Micro SD/TF card mode.
	Play/Pause: Press to play and pause the music.
	Answer/Hang up a phone call: During an incoming call, press to answer or hang up the phone call.
	Reject a phone call: Hold for 3 seconds to reject the incoming call.
📶	Redial: During Bluetooth connected mode, double press quickly to redial the last dialed number.
	Voice assistant: After your device is paired to the speaker, hold the button for 2 seconds to activate voice assistant.
	Press to lower down the volume.
⏪	Hold to choose previous track.
	Press to increase the volume.
⏩	Hold to choose next track.

#### SPECIFICATIONS

Model	Element Groove
Bluetooth	5.0
Transmission range	30m/100ft (open area)
Waterproof	IPX7
Output	10W
Playtime	Up to 24 hours (medium volume)
Power supply	DC 5V/1A
Battery capacity	3.7V/2500mAh
Charging time	About 2.5 hours
Loudspeaker size	58mm
Distortion	≤1.0%
Frequency	115Hz-15KHz
Dimension	4.05 x 2.24 x 4.05in / 103 x 57 x 103mm
Product weight	463±5g / 13.33±0.2 oz

#### BLUETOOTH PAIRING

Turn ON the speaker, the blue LED light flashes, and then activate the Bluetooth in your device. Go to device's Bluetooth settings, scan for new Bluetooth devices and upon discovering the device 'Tronsmart Element Groove', click to pair with it. Hold Play/Pause button for 8 seconds to disconnect the Bluetooth.

#### True Wireless Stereo MODE

What is True Wireless Stereo?  
true wireless stereo, which means two Groove Bluetooth speakers are able to be paired and then play music synchronously, providing stereo surround sound.

#### How to pair two Groove speakers?

1. Turn ON two speakers and confirm they are disconnected to any Bluetooth device.
2. Double press the Power ON/OFF button quickly on one speaker, then you will hear a voice prompt and the True Wireless Stereo indicator light flashes yellow, which means it enters True Wireless Stereo pairing mode and will pair with each other automatically. After connecting successfully, you will hear a sound prompt from two speakers and the True Wireless Stereo indicators of both are kept ON yellow while the Bluetooth indicator of the main speaker flashes blue quickly.
3. Go to device's Bluetooth settings, scan for 'Tronsmart Element Groove', click to pair with it. The Bluetooth indicator of main speaker being steady ON blue means the connection to Bluetooth device is successful. And when start to play music, this blue indicator will flash slowly.

#### How to disconnect True Wireless Stereo?

During True Wireless Stereo mode, double press the Power ON/OFF button of one speaker, then the True Wireless Stereo will be disconnected.  
Note: Once two speakers are well paired for the first time, they will be automatically paired next time without the above pairing operations as long as they are ON.

#### How to connect the speaker to Amazon Echo/Echo Dot?

1. Login the Alexa App, and finish the setting of the Echo/Echo Dot (if you haven't set it up).
2. Connect the Echo/Echo Dot to WiFi successfully.
3. Then tap "Home / Settings / Your Echo's (Echo Dot's) Name / Bluetooth / Pair A New Device". You will get to the interface "Bluetooth Setup", and see the reminder "Please make sure your device is in pairing mode". Find and tap "Tronsmart Element Groove" from the list and wait for the pairing process

complete. After completed, you can command your speaker via Alexa.

Note: Confirm you have turned on the speaker and it is under Bluetooth searching and pairing mode, or you can not find the device on the Bluetooth list.

#### AUX-IN MODE

The speaker also features one AUX audio in port. Simply connect the speaker with your mobile phone/MP3 player/PC/laptop with the 3.5mm audio jack cable. Once the blue light flashes slowly, then you can play music via the wired connection.

#### MICRO SD/TF CARD MODE

Press the Power ON/OFF button to switch Bluetooth Mode to Micro SD/TF card Mode. The memory capacity of Micro SD/TF card should be no more than 64GB.

#### LED

Bluetooth: Blue light flashes slowly for waiting for pairing mode. Blue light kept ON for connected successfully.  
Micro SD/TF & AUX-IN: Blue light flashes slowly.  
True Wireless Stereo: The True Wireless Stereo indicator flashes yellow slowly for pairing. Yellow light kept ON for paired successfully. Light goes off for canceling the pair.  
Charging: Red light ON for charging. Red light goes OFF for charging completion.

#### SLEEP MODE

The Groove speaker will go into Sleep Mode if it does not pair with any device through Bluetooth, which helps to save battery. When you need to use it, press the Power ON/OFF button to turn it on.

#### NOTE

You can hold the Power ON/OFF button for 5-8 seconds to turn off the speaker forcibly when it is malfunctions.

#### TIPS

Because of the powerful output of this speaker, please do not be too close to the speaker and keep an appropriate distance away to listen to the music. To avoid any discomfort caused by excessive sound, it is recommended to listen to music at a suitable volume.

#### CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS.

To prevent possible hearing damage, do not listen at high volume levels for long periods.

#### CARE & MAINTENANCE

Please keep this manual handy for future reference. To clean the Tronsmart Element Groove Bluetooth Speaker use a lightly dampened cloth in water to clean the exterior in-case it gets dirty. Do not use any form of detergents or cleaning material to clean the product, any type of chemical may make this device unusable. Do not disassemble this product. It contains no user serviceable parts. Do not drop or jump on it, treat it with care for the best performance. Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place. Do not dispose this product in fire, batteries may explode or leak.

#### WARRANTY INFORMATION

Your 'Tronsmart Element Groove Wireless Speaker' is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Should your product prove defective within 12 months from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim. Please pack the product carefully to avoid damages in transit. Under this warranty, Tronsmart will repair or replace any parts found to be defective due to manufacturer's defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Tronsmart is not responsible in any way for damages, losses or inconveniences caused by equipment with the 'User Manual' or any additional safety, use, or warnings included in the product materials. Further, Tronsmart is not liable for incidental use of this product and any liability shall not exceed the purchase price of the product. This Warranty gives you specific legal rights. You may also have other rights which vary from state to state.

#### THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modifications or commercial use.

- Damage in return transit.
- Unsupervised use by children under 18 years of age.

(Tronsmart and its subsidiaries assume no liability for damage caused by the use of the Element Groove Wireless Speaker other than for its intended use or as instructed above in the User Manual.)

#### FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



SHENZHEN VALUE IN ACTION TECHNOLOGY CO., LTD.

A3 Hekan Industrial Building, 41# Wuhe Str, Bantian, Longgang District, 518129 Shenzhen, China

Email: support@tronsmart.com

800-270-1082 (USA & Canada)

+86-755-23603740 (Global)

FCC ID: 2AQRD-GROOVE



www.tronsmart.com ☎ 204-720086