

# URBAN



10,000mAh Compact Powerbank

# CAMP 4

USER MANUAL

## Quick Start Guide

Thank you for choosing the "URBAN Camp 4" to better use this product, please read the quick start guide carefully before use and properly manage it.

## Product Specifications

<b>Product Name:</b>	URBAN Camp 4
<b>Model Number:</b>	UBPB004
<b>Battery:</b>	Li-Polymer Cell
<b>Capacity:</b>	10,000mAh/38.5Wh
<b>Type C Input (Port &amp; Cable):</b>	5V=2.4A, 9V=2A, 12V 1.5A, 18W(Max)
<b>Type C Output (Port &amp; Cable):</b>	5V=3A, 9V=2.22A, 12V=1.67A, 10V=2.25A, 22.5W(Max)
<b>Total Output:</b>	Auto ID 5V=3A, 22.5W(Max)
<b>Weight:</b>	170g

## Product Details



### Note:

- If you want to charge faster We recommend that you prioritize using a single port for charging



## Operating Instructions

1. Press the power button to display the remaining power
2. Power input and output: Use the power cable to connect the power adapter or build-in cable to charge the power bank, connect the power bank and the device to be charged through the power cable, or using build in cable to charge for mobile phone

## How to charge for powerbank

1. Please use a Type-C charging cable or built-in charging cable to charge the mobile power supply.
2. It is recommended to connect a 20W power adapter to charge the mobile power supply.
3. When charging, the digits on the mobile power supply blink continuously
3. When fully charged, the LED display 100%.

## Charging for mobile device

1. Mobile power supply is used to charge mobile phones, tablets, computers and other devices.
2. Connect the device to the mobile power supply via the power cable, and the mobile power supply will automatically charge the device.
3. When the mobile device is charging, the LED digital display will show the remaining battery level, and the indicator light for PD fast charging will turn on.
4. After the mobile device is fully charged, the mobile power supply will automatically shut down within 30 seconds.



## Note

1. The full charging time of this power bank is about 2-3 hours (18W input).
2. If the power bank cannot be charged or the mobile phone cannot be charged by the power bank, please check whether the connection cable is normal and firm, whether the charging port and accessories are suitable or not. It is recommended to use a regular brand power adapter to charge the power bank.
3. There is a conversion rate for the power bank, so the capacity of the power bank is not equal to the rechargeable capacity.
4. If the power bank cannot be turned on due to short-circuit protection caused by improper operation, please charge the power bank to activate it.

## Safety Information

**Warning:** Failure to follow these safety instructions may result in fire, electric shock, damage or other injury.

1. Please try to keep the storage temperature of the product between 10-35°C
2. Do not fall, do not disassemble or puncture, repair the power bank by yourself.
3. Do not expose the power bank in fire, high temperature or water.
4. Stop using the power bank if you find any abnormal phenomena such as expansion or expansion of the charged device.
5. This device is not suitable for using by persons with immature physical, perceptual and mental abilities (including children), nor by persons lacking relevant experience and knowledge, unless supervised and guided by someone who is professionally responsible for their personal safety. Please control children to ensure that they do not use this device as a toy.
6. Do not leave the product in the car for a long time, especially when parked in the sun.
7. Do not put foreign bodies into the product interface. Please charge your power bank at least every three months

