

VEVOR

Affordable. Reliable. Home Improvement.

ELECTRONIC DRINK MIXER

Model:00-DM10-U01A

VEVOR Support Center




00-DM10-U01A

VEVOR



Affordable. Reliable. Home Improvement.

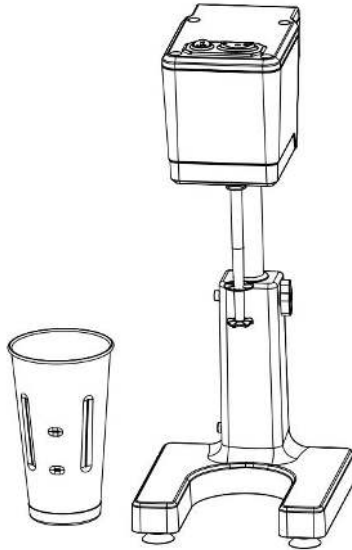


ELECTRONIC DRINK MIXER

Model:00-DM10-U01A



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Keep children away from the machine for fear of danger.

	<p>For your safety of this product, always read the instruction book carefully before using.</p>
	<p>Alternating current</p>
	<p>Connect an earth terminal to the ground</p>

When using electrical appliances, basic safety precautions should be followed, including the following.

1. READ ALL INSTRUCTIONS.
2. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
3. Please check that the specified supply voltage in the product is consistent with the supply voltage (AC only).
4. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledges.
5. Close supervision is necessary when any appliance is used near children.
6. Children should be supervised to ensure that they do not play with the appliance
7. To protect against electrical hazards, do not put the Drink Mixer in water or other liquids
8. Avoid contact with moving parts. Do not attempt to defeat any safety interlock mechanisms
9. Do not operate the Drink Mixer or any other electrical equipment with a damaged cord or plug, or after the unit malfunctions or is dropped or damaged in any manner. Contact the manufacturer at their customer service through web site for information on examination, repair, or adjustment.
10. Do not use outdoors. FOR HOUSEHOLD USE ONLY
11. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.

12. Put this instruction manual in a safe place. Do not discard.
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
14. Electric Shock Danger! Non-professional personnel are forbidden to repair the products, otherwise it may result in electrical shock. When failures happen, it should be repaired by qualified maintenance personnel.
15. WARNING! It is strictly prohibited to put the main body of the machine and the power cord into any liquid. The machine must be fully cool before cleaning.
16. Do not place the product directly on the fire or near the source of fire, otherwise the product will be damaged or even result in danger. Once part of the product is on fire, do not directly use water to extinguish the fire. Use a wet cloth to cover the fire site.
17. When the plug is plugged into the socket, it must be plugged to the end, otherwise it will cause the components overheating and burning due to poor contact.
18. Do not leave the product to work with no one watching. If the machine is overheating, please stop working immediately and unplug the power.
19. Turn the appliance OFF, then unplug from the outlet when not in use.
20. Before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord. Permanently Installed – Make sure appliance is OFF when not in use, before putting on or taking off parts, and before cleaning.
21. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
22. Keep hands and utensils out of container to reduce the risk of injury to persons or damage to the mixer.
23. Never add to container while appliance is operating


SAVE THESE INSTRUCTIONS

PRODUCTS SPECIFICATIONS

Model	00-DM10-U01A
Voltage	AC 120V 60Hz
Rated Amp.	1.1A
Speed	2 speed setting +Pulse

PARTS AND FEATURE

Explanation of the Product's components:

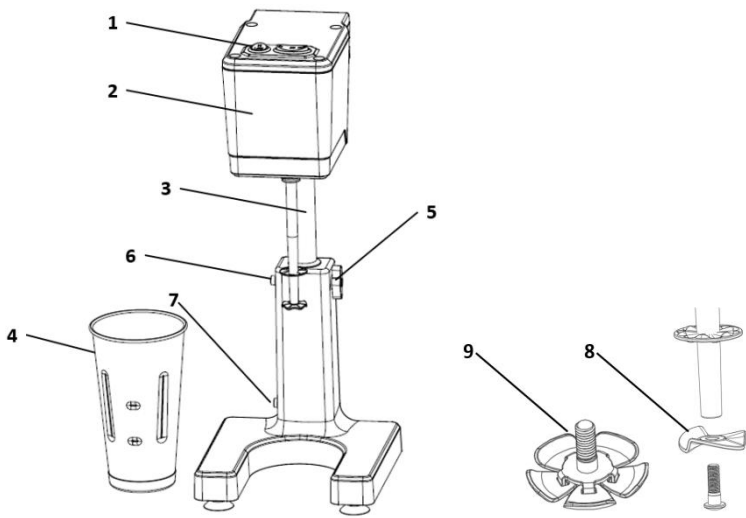


1. Control Switch
2. Motor Housing
3. Stand Post
4. Mixing Cup
5. Wing Knob

6. Upper Post Button
7. Lower Post Button
8. Solid Disk Agitator
9. Moving-Wing Agitators

MOVE THE STAND POST UP AND DOWN

Moving Post Upward (For Operating Drink Mixer)

- 1.Press the Lower Post Button.
- 2.Lift the Motor Housing upward until the Upper Post Button locks into Stand Post.
- 3.Tighten the Wing Knob.

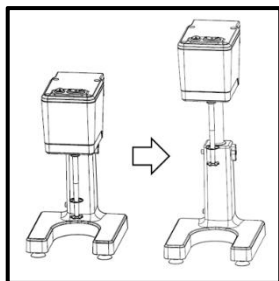


Moving Post Downward (For Storage)

- 1.Loosen the Wing Knob.
- 2.Press the Upper Post Button.
- 3.Lower the Post downward until the Lower Post Button locks into Stand Post.

OPERATING THE DRINK MIXER



- 1.Lift up the Motor Housing until the Upper Post Button locks into Post, and turn the Wing lock tightly.
- 2.Plug in Power Cord
- 3.Please follow the steps below; otherwise, ingredient may splash out easily.
 - Place the ingredients into the Mixing Cup.
 - Select the desired speed.
 - Grip the cup firmly and move it upward until the mixing shaft is immersed in the ingredients.
 - Turn the motor ON or using the Pulse

- Once mixing is complete, Turn OFF the motor and then lower the cup

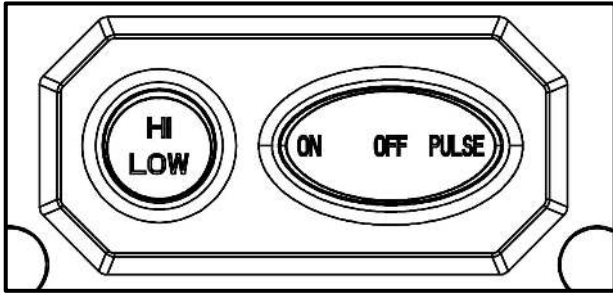

KEY Knob /Button

- 1.Speed Switch
 - a. Choosing speed for LO or HI
2. ON/OFF/Pulse Switch
 - a. Choosing ON, OFF, or Pulse

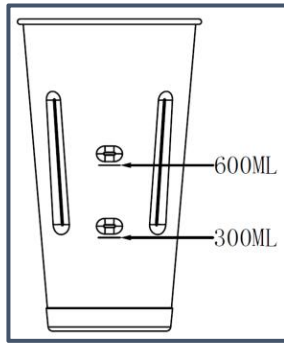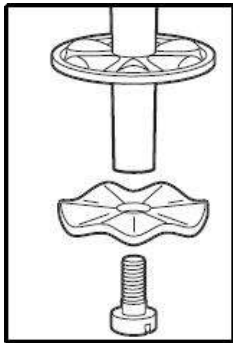

CHANGING AGITATORS

- 1.Unplug Drink Mixer
- 2.Loosen the screw/Agitator by turning it clockwise.
- 3.Remove the Agitator
- 4.Insert new agitator and screw back in.

MAX INGREDIENTS LEVEL MARK

1.Max liquid level mark (liquid only)

2.Max ingredients level mark (liquid +solid ingredients)

CLEANING

- UNPLUG MIXER POWER CORD FROM ELECTRICAL OUTLET.
- DO NOT PUT IT IN THE DISHWASHER
- DO NOT IMMERSE APPLIANCE IN WATER OR OTHER LIQUID.

1.To clean the drink mixer, wipe with a damp cloth or spongy. Do not use abrasive cleaners of any type.

2.STEP 1: To clean the mixing shaft, place 200ml warm, soapy water in Mixing Cup and place it on the mixer's normal operating position. Run on LO speed for 30 seconds—empty Cup. When finished, turn the unit OFF.

3.STEP 2: Repeat Step 1 with warm water only to rinse mixer shaft.

4.With unit turned to OFF, unplug unit and wipe residual soap and water from the mixing shaft with a damp cloth or sponge.

5.The Mixing Cup should be washed in warm, soapy water or in a dishwasher

HELPFUL HINTS

1.Always turn unit off or unplug the Drink Mixer before disassembling or assembling parts.

2.Keep all the instructions and service information in a safe and handy place.

3.For mixing heavy drinks, use HI speed only; for light drinks with more liquid, use LO speed.

4.If using ice, only use crushed ice in the Drink Mixer.

5.Clean the Drink Mixer thoroughly before initial use.

6.Keep mixing cups clean. Wash, rinse and sanitize thoroughly after use.

7.Be sure that all detachable parts are fastened tightly before operating the Drink Mixer.

8. Operate the Drink Mixer only when it is fully assembled.
9. To avoid splashing drinks of thin consistency, operate on Speed LO.
10. Keep a firm grip on the cup while using PULSE.
11. Moving-Wing Agitators is only for soft ice cream.
12. The Basic Milkshake recipe is: 50ml ice cream +150ml cold Milk

TROUBLESHOOTING GUIDE

	Problem	Solution
1	Ingredients are not being mixed Properly	Try select a different speed or adjust the ingredients composition.
2	Motor does not turn ON	The unit features a thermal overload protection circuit. Turn unit OFF, wait 30min. Then turn on again.
3	Excessive Product splash-out (Some splash-out is common)	<ul style="list-style-type: none"> ● Ingredients too full ● Speed setting too high for ingredients ● Agitator fastened tightly to the spindle ● Agitator bent or worn.

Manufacture: Guangdong Highland Electrical Appliance Co., Ltd.

Address: No.30, Middle Industry Road, Xiaolan Town, Zhongshan City, Guangdong Province, China.

