

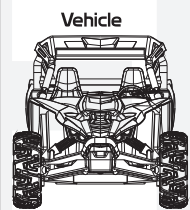


YAMAHA

SXZ 1000R

6+
AGES

CONTENTS

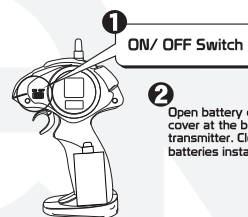
USB Charging
Cord (Included)3.7V 700 mAH
Rechargeable
Battery Pack
(Included)

Battery

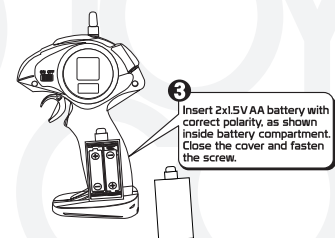
All batteries included.

Vehicle
1 x 3.7V Lithium
(Included)Transmitter
2 x AA.15V
(Included)

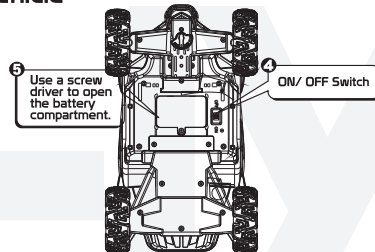
TRANSMITTER



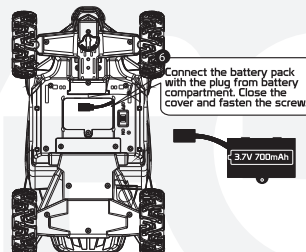
1 ON/ OFF Switch

2 Open battery compartment
cover at the bottom of the
transmitter. Close it after
batteries installed.3 Insert 2x1.5V AA battery with
correct polarity, as shown
inside battery compartment.
Close the cover and fasten
the screw.

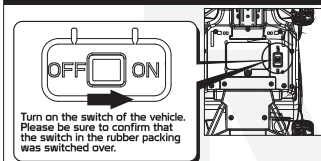
Vehicle

5 Use a screw
driver to open
the battery
compartment.

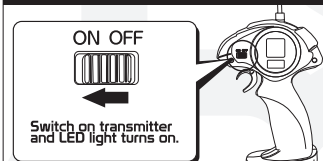
ON/ OFF Switch

Connect the battery pack
with the plug from battery
compartment. Close the
cover and fasten the screw.

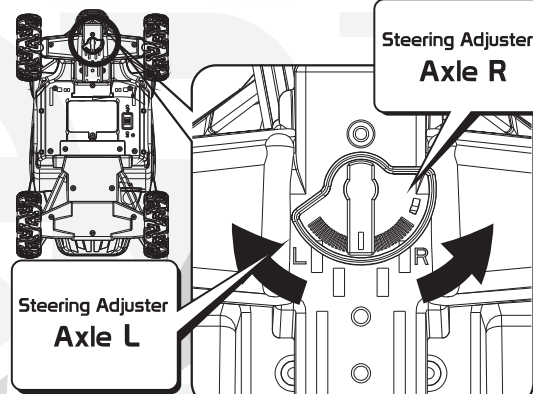
VEHICLE - ON/ OFF

Turn on the switch of the vehicle.
Please be sure to confirm that
the switch in the rubber packing
was switched over.

TRANSMITTER - ON/OFF

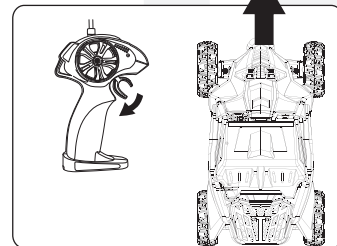
Switch on transmitter
and LED light turns on.

TURNING ALIGNMENT

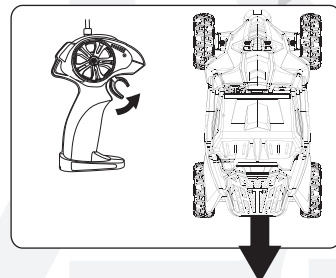
Steering Adjuster
Axle RSteering Adjuster
Axle LTurn the steering axle adjuster at the bottom
towards "L" when the vehicle drives to the right
unintentionally. If it turns left unintentionally, turn
the adjuster towards "R".

REMOTE INSTRUCTION

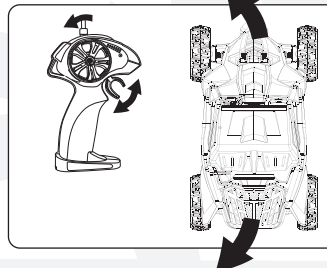
Forward



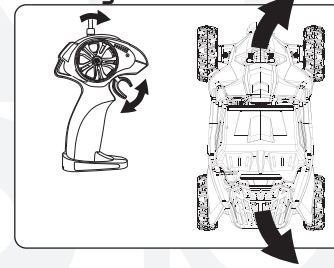
Backward



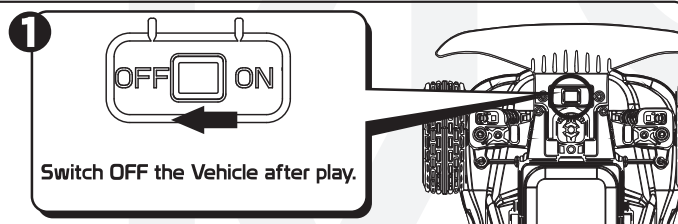
Turn Left



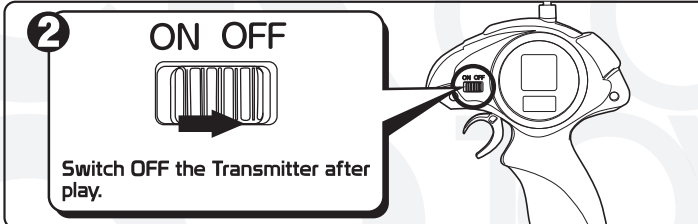
Turn Right



After Play



Switch OFF the Vehicle after play.

Switch OFF the Transmitter after
play.

Battery Safety Information:

- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are to be recharged by Adult only.
- Remove used-up batteries immediately.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-rechargeable batteries) in fire, as batteries may explode or leak.

This device complies with the Part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received,
including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

**HYPER**

Made in China