

USER MAINTENANCE

Your styling tool is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the appliance from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug it, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the appliance. Damage will occur at the high flex point of entry into the appliance causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your styling tool is easy to store. Allow it to cool, and store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections.

Do not wrap cord tightly around appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

TO STRAIGHTEN

To straighten hair, pull small section taut, then pass brush over hair from roots to ends. Repeat procedure until natural waves are relaxed.

TO WAVE

For flowing waves, separate a wider section of hair than you normally do for curling, and roll it as you usually do. For best results, hair should be at least 6–8 inches long.

ON BLUNT CUTS

Use hot brush on blunt cuts to eliminate kinks or unwanted flips by just turning the hair under.

FOR TOUSLED HAIR


Create soft, tousled waves by curling each hair section in a random direction. Then, turn head upside down, shake, and gently scrunch hair with fingers. Bring head back to position and repeat for fullest volume.

WIDE WAVES

Pick up a section of hair and place the hot brush under it close to the scalp, making half a turn downward. Remove the hot brush. Working with the same hair section, start where you left off and place the hot brush on top of the hair, curling it up half a turn. Proceed down the same hair section, alternating the curl upward and downward. Repeat procedure with remaining sections of hair. For best results, hair should be about 6–8 inches long.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Service Center

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Please register this product at:
www.conair.com/registration

For information on any Conair or InfnitiPRO by Conair product, call 1-800-3-CONAIR or visit us on the web at: www.conair.com/infniti

©2016 Conair Corporation
150 Millford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

16PA019346

IB-14235

Instruction & Styling Guide
For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®
Model 2015G



INFNITI^{PRO} CONAIR GOLD

¾ in. GOLD-PLATED HOT BRUSH

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug the appliance immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

CURLING BASICS

1. Plug the hot brush cord into a standard household electrical outlet (120V). When the red ready dot has turned white, the proper styling temperature has been reached. The hot brush has 30 heat settings — HIGH settings are for use on thick, wavy hair; MEDIUM settings are for use on normal hair; LOW for dry or chemically treated hair.

2. Use of the hot brush is very easy to master. Roll one section of hair at a time around the hot brush from the bottom up. **TO AVOID TANGLING, NEVER ROLL THE HAIR AROUND THE HOT BRUSH MORE THAN TWO TIMES.** When hair is warm (not hot) to the touch, the curl is set. For hair that is harder to curl, leave the hot brush in place a little longer. A hot brush generally gives a lighter curl than a curling iron — for very hard-to-curl hair, try switching to your curling iron.

3. The hot brush can be used for quick touch-ups without shampooing. After heating the hot brush, simply brush the hair back to its original style. To change the style, mist the hair lightly with water before using the hot brush. No combing is necessary!

NOTE: Please refer to the temperature setting guide for heat settings.

NOTE: Do not use this styling appliance on hair extensions.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

GETTING STARTED

The appliance's 30 temperature settings and instant heat technology combine to provide styling versatility for all hair textures. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or coarse hair, keep the heat setting high. You can vary the appliance's temperature according to your particular need!


Plug the appliance cord into any household outlet (120V). Press power ON/OFF button. Red light will blink until it reaches desired temperature setting and then becomes solid. To activate Turbo Heat®, press Turbo ON/OFF button and green light will go on and increase straightening comb temperatures up to 200°C/36°F. To turn off, press power ON/OFF button again until red light goes out. Never leave your appliance on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

For faster styling results, we have added a unique optional Turbo Heat® ON/OFF feature. Press the Turbo Heat® button to deliver up to 20°C/36°F more heat in the highest setting, for maximum styling performance.

Temperature Setting Guide

Temp. Setting	Hair Type
Low 1–5	Delicate, thin, easy-to-style hair
Med. 6–10	Average to thick or treated hair
Med.- High 11–15	Thick or wavy hair
High 16–20	Hard-to-style hair
Maximum 21–30	Very resistant hair
Turbo Heat®	Up to 20°C/36°F burst of heat for difficult styling spots

WARNING: The barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling iron is turned on. Always do a test curl before using the curling iron to ensure the proper setting for your hair type.

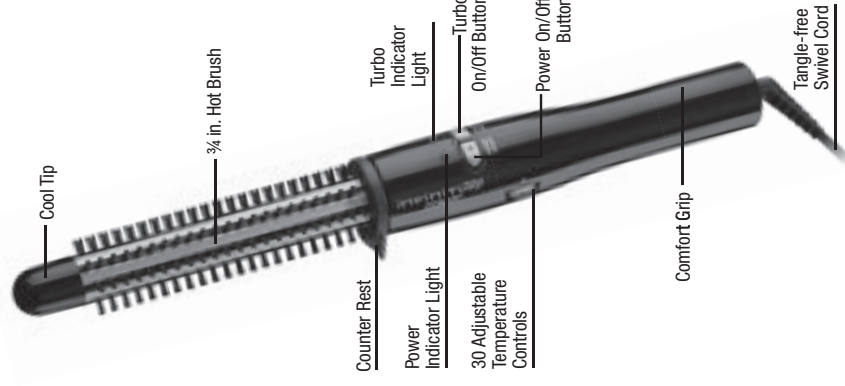

INSTRUCCIONES DE MANTENIMIENTO

Su aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie la superficie exterior con un paño limpio. En caso de mal funcionamiento, desconecte el aparato, permita que se enfríe y regréselo a un centro de servicio autorizado. No trate de reparar el aparato.

PRECAUCIÓN

NUNCA jale, tuerza ni retuerza el cable eléctrico. Nunca enrolle el cable alrededor del aparato; esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.

ALMACENAJE

Cuando no lo utiliza, su aparato es fácil de almacenar. Permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tiree ni retuerza el cable al nivel del enchufe.

No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

PARA ALISAR EL CABELLO

Agarre una sección fina y cepille lentamente el cabello de la raíz a las puntas. Repita hasta haber relajado las ondas naturales.

PARA CREAR ONDAS

Separe una sección más gruesa que para rizar el cabello y enróllela alrededor del cepillo. Obtendrá resultados óptimos con cabello de 6–8 pulgadas (15–20 cm) de largo.

PARA PEINAR “BOBS”

Gire el cepillo hacia dentro al llegar a las puntas para doblar estas hacia dentro.

RIZOS NATURALES


Para crear ondas suaves y naturales, rice cada sección en direcciones elegidas al azar. Después, voltee la cabeza hacia abajo, ágíela y estruje el cabello con los dedos. Repita para obtener más cuerpo.

ONDAS AMPLIAS

Coloque el cepillo por debajo de la sección de cabello, cerca del cuero cabelludo, y dele media vuelta hacia abajo. Quite el cepillo. Ahora, coloque el cepillo un poco más abajo, por encima de la sección de cabello, y dele media vuelta hacia arriba. Siga alternando los rizos hacia arriba/abajo hasta llegar a las puntas. Repita la misma técnica todo alrededor de la cabeza. Obtendrá resultados óptimos con cabello de 6–8 pulgadas (15–20 cm) de largo.

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTÉNGALO ALEJADO DEL AGUA

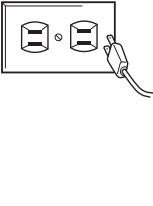

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente.

Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

GARANTÍA LIMITADA DE DOS AÑOS

(VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un periodo de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US\$7.50 por gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el periodo de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLICITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLICITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O

IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

infinitiPRO CONAIR GOLD

CEPILLO CALIENTE DORADO DE ¾ PULGADA (19 MM)



Instrucciones

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.

CONAIR®

Modelo 2015G

Para registrar su producto, visítenos en:

www.conair.com/registration

Para más información sobre los productos Conair o InfinitiPRO by Conair, llame al 1-800-3-CONAIR o visítenos en www.conair.com/infiniti

©2016 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

16PA019346

IB-14235

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en la presencia de niños, siempre debe tomar precauciones básicas de seguridad, incluso las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO —Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado.

Para reducir el riesgo de muerte o herida por descarga:

- Siempre desconecte el aparato inmediatamente después del uso.**
- No lo use en el baño o la ducha.
- No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
- No coloque el aparato ni lo deje caer al agua u otro líquido.
- Si el aparato cayera al agua, desconéctelo inmediatamente. **no toque el agua.**

ADVERTENCIA — Para reducir el

FUNCIONAMIENTO BÁSICO

Este aparato ofrece 30 opciones de temperatura, para todo tipo de cabello, y calienta muy rápidamente. Si su cabello es fino, le recomendamos que utilice un nivel de temperatura bajo. Si su cabello es espeso, grueso, ondulado o resistente, le recomendamos que utilice un nivel de temperatura alto. ¡Personalice la temperatura, según su tipo de cabello!

Conecte el cable a una toma de corriente de 120 V. Oprima el botón de encendido/apagado ON/OFF. El indicador luminoso rojo parpadeará hasta que la unidad alcance la temperatura seleccionada; después, permanecerá encendido. Para activar la función Turbo Heat®, oprima el botón turbo; el indicador luminoso verde se encenderá y la temperatura de las placas aumentará de 20 °C (36 °F). Para apagar el aparato, oprima el botón de encendido/apagado ON/OFF; el indicador luminoso rojo se apagará. Nunca descuide ni abandone el aparato después de encenderlo. Para su seguridad, el aparato se apagará automáticamente después de 60 minutos.

GUÍA PARA UN SÚPER PEINADO

La mejor apariencia empieza por un corte de cabello bien mantenido. Siempre cuide su cabello con champúes, acondicionadores y productos de peinado de calidad superior.

FUNDAMENTOS DEL RIZADO

1. Conecte el aparato a una toma de corriente de 120 V. Permita que se caliente hasta que el indicador de temperatura rojo se vuelva blanco. El cepillo caliente cuenta con 30 ajustes de

temperatura: ajustes altos (HIGH) para el cabello grueso u ondulado; ajustes medios (MEDIUM) para el cabello normal; y ajustes bajos (LOW) para el cabello seco o maltratado.

2. El cepillo caliente es muy fácil de usar. Trabajando desde abajo hasta arriba de la cabeza, separe una sección de cabello y enróllela alrededor del cepillo. **SIN DAR MÁS DE DOS VUELTAS PORQUE ESTO PUEDE ENREDAR EL CABELLO.** Cuando el cabello esté tibio (ya no caliente), el rizo está fijado. Si su cabello es resistente, espere un poco más antes de sacar el cepillo. Por lo general, los cepillos calientes crean rizos más suaves que las tenazas. Si su cabello es muy resistente, pueda que tenga que usar una tenaza para rizarlo.

3. Su cepillo caliente puede usarse para hacer retoques rápidos, sin necesidad de lavar el cabello. Permita que el aparato se caliente, y luego vuelva a peinar el cabello como lo peinó al principio. Para cambiar de estilo, humedezca ligeramente el cabello antes de peinarlo. ¡No hay necesidad de usar un peine!

NOTA: véase la tabla a continuación para determinar qué nivel de temperatura usar, según el tipo de cabello.

NOTA: no utilice este aparato sobre cabello sintético/extensions.

Para resultados más rápidos, su peine cuenta con una función Turbo Heat® opcional. Simplemente presione el botón Turbo Heat® en cualquier momento para aumentar la temperatura en 20 °C (36 °F) y conseguir resultados óptimos.

Ajuste de temperatura	Tipo de cabello
Bajo 1–5	Cabello delicado, fino o dócil
Medio 6–10	Cabello normal a grueso o tratado
Medio/Alto 11–15	Cabello grueso u ondulado
Alto 16–20	Cabello resistente
Máximo 21–30	Cabello muy resistente
Botón Turbo Heat®	Aumenta la temperatura en 20 °C (36 °F), para lograr resultados más rápidos en áreas resistentes

ADVERTENCIA: el tubo se pone muy caliente en segundos; evite el contacto con la piel después de encender el aparato. Siempre haga una prueba preliminar para asegurarse de que esté usando el nivel de temperatura adecuado para su cabello.

