

## Innehållsförteckning

Förpackningens innehåll	1
Specifikationer	1
Viktiga säkerhetsåtgärder och varningar	2
Lär känna den smarta luftfritösen	6
Före första användning	7
Använda den smarta luftfritösen	8
Skötsel och underhåll	13
Tillbehör	13
Felsökning	14
Information om begränsad garanti	16
Kundtjänst	18

## Förpackningens innehåll

1 10 liters luftfritös med dubbla korgar
2 bottenplattor
1 korgdelare
1 silikonång
1 bruksanvisning
1 snabbstartsguide

## Specifikationer

<b>Modell</b>	CAF-TF101S-AEUR
<b>Strömförsörjning</b>	AC 220–240 V, 50 Hz
<b>Nominell effekt</b>	2 800 W
<b>Kapacitet</b>	10 l
<b>Temperaturområde</b>	35–240 °C
<b>Tidsintervall</b>	1 min–48 tim.
<b>Mått (inklusive handtag)</b>	33,8 cm djup x 51,8 cm bredd x 31,3 cm höjd
<b>Vikt</b>	9,2 kg
<b>Effektförbrukning, vänteläge med nätverk</b>	<2.0W
<b>Effektförbrukning, vänteläge/av</b>	<1.0W

SV

# LÄS OCH SPARA DESSA ANVISNINGAR VIKTIGA SÄKERHETSÅTGÄRDER OCH VARNINGAR

Följ de grundläggande säkerhetsföreskrifterna när du använder luftfritösen. Läs alla anvisningar.

## Viktiga säkerhetspunkter

- Rör **inte** vid heta ytor. Använd handtagen.
- Blockera **inga** ventilationsöppningar. Varm ånga släpps ut genom öppningarna. Håll händer och ansikte borta från öppningarna.
- **FÖRSIKTIGT:** De varma bottenplattorna kan ramla ut när du vänder på korgen.

### Obs!



- Sätt fast bottenplattorna i korgen för att minska risken för att de faller ut.
- Ta **alltid** ut varm mat med tången.

## Allmän säkerhetsinformation

- Förhindra elektriska stötar genom att **inte sänka ned luftfritösens** nätkabel, kontakt eller hölje i vatten eller andra vätskor.
- Noggrann övervakning krävs när barn finns i närheten av eller använder luftfritösen.
- Dra ut kontakten när den inte används och före rengöring. Låt delarna svalna innan du sätter dit eller tar bort dem.
- Använd **inte** luftfritösen om den är skadad eller inte fungerar normalt, eller om nätkabeln är skadad. Kontakta **Kundtjänst** (se sidan 18).
- Använd **inte** reservdelar eller tillbehör från tredje part, eftersom det kan orsaka personskador.
- Använd **inte** utomhus.
- Placera **inte** luftfritösen eller någon av dess delar på spisen, nära gas- eller elektriska brännare eller i en uppvärmd ugn.
- Var mycket försiktig när du flyttar luftfritösen (eller tar ut korgen) om den innehåller varm olja eller andra upphettade vätskor.
- Placera **alltid** bottenplattorna på en värmebeständig yta när du har tagit ut dem ur korgen.
- Rengör **inte** med skursvampar av metall. Metallfragment kan lossna och vidröra elektriska delar, vilket skapar risk för elektriska stötar.
- Placera **inte** något på luftfritösen. Placera **inte** något på luftfritösen.
- Barn 8 år eller äldre och personer med nedsatt fysisk, sensorisk eller mental förmåga eller bristande erfarenhet och kunskap får använda den här luftfritösen om de övervakas eller har fått anvisningar om att använda luftfritösen på ett säkert sätt och förstår riskerna.
- Rengöring och underhåll får endast utföras av barn som är äldre än 8 år och under övervakning.
- Barn måste övervakas för att säkerställa att de **inte** leker med luftfritösen.
- Den här luftfritösen är inte avsedd att användas med extern timer eller separat fjärrkontrollsystem.
- Anvisningar om att rengöra tillbehör finns i **Skötsel och underhåll** (sidan 13).
- Använd **endast** luftfritösen enligt anvisningarna i den här bruksanvisningen.
- Inte för kommersiellt bruk. **Endast** för hushållsbruk.

## Under luftfritering

- En fritös använder **endast** varmluft. Fyll **aldrig** korgen med olja eller fett.
- Använd **aldrig** luftfritösen utan att sätta i korgen.
- Lägg **inte** överdimensionerade livsmedel eller metallredskap i luftfritösen.
- Använd **inte** matlagningssprej som innehåller drivgas. Drivgasen kan förstöra korgens beläggning.
- Fyll **inte** i för mycket livsmedel i fritöskorgen. Stora mängder livsmedel kan vidröra värmeslingorna och orsaka brandrisk.
- Vidrör **inte** korgen eller bottenplattorna under eller omedelbart efter luftfritering.
- Lägg **inte** papper, kartong, icke värmebeständig plast eller liknande material i luftfritösen. Det går att använda bakplåtspapper eller folie.
- Lägg **aldrig** bakplåtspapper i fritösen utan mat på det. Luftcirkulationen kan få papper att lyfta och vidröra värmeslingorna.
- Lägg **aldrig** tunna och lätta livsmedel såsom cornflakes i luftfritösen. Var uppmärksam på mindre matbitar. Luftcirkulationen kan få tunna och lätta livsmedel eller små matbitar att lyfta och vidröra värmeslingorna.
- Använd **alltid** värmesäkra behållare. Var mycket försiktig om du använder behållare som inte är av metall eller glas.
- Placera luftfritösen på avstånd från brandfarliga material (gardiner, draperier, osv.). Använd på en plan, stabil, värmebeständig yta på avstånd från värmekällor eller vätskor.
- Stäng omedelbart av och koppla från luftfritösen om du ser att mörk rök kommer ut. Vit rök är normalt och orsakas av upphettning av fett eller matstänk, men mörk rök innebär att maten brinner eller att det finns ett elektriskt problem. Vänta tills röken försvinner innan du drar ut korgen. Om orsaken inte var vidbränd mat måste du kontakta **Kundtjänst** (sidan 18).

- Lämna **inte** luftfritösen utan uppsikt när den används.
- Stäng av fritösen genom att trycka en gång på .  förblir orange och alla andra knappar stängs av.
- Koppla från apparaten genom att fatta tag i kontakten och dra ut den ur uttaget. Dra **aldrig** i kabeln.

## Ström och nätkabel [Figur 2]

- Stäng av luftfritösen innan du tar ut kontakten ur nätuttaget.
- **Undvik** att nätkabeln (eller förlängningskabeln) hänger över kanten på bordet eller bänken eller vidrör varma ytor.
- Om nätkabeln är skadad måste den bytas ut av VESYNC (SINGAPORE) PTE. LTD. eller andra behöriga personer för att undvika elektrisk fara eller brandrisk. Kontakta **Kundtjänst** (sida 18).
- Förhindra kvävningsrisk genom att ta bort och kassera skyddshöljet.
- Använd **aldrig** nätuttag under bänken när du kopplar in luftfritösen.
- Luftfritösen får **endast** användas i elinstallationer med **220–240 V, 50 Hz**. Anslut **inte** till andra typer av uttag.
- Förvara luftfritösen och dess kabel utom räckhåll för barn under 8 år.

**Obs!** Den här luftfritösen har en kort nätkabel för att minska risken för trassel eller att någon snubblar på den. Använd förlängningskablar med försiktighet. Förlängningskabelns elektriska klassificeringsmärkning måste vara minst lika hög som luftfritösens elektriska klassificering (se **Specifikationer**, sidan 1)

## Förlängningskablar

- Det finns längre förlängningskablar som går att använda med försiktighet. Om du använder en längre förlängningskabel:
  - Nätkabelns eller förlängningskabelns elektriska klassificeringsmarkering måste vara minst lika hög som luftfritösens elektriska klassificering.
  - Kabeln måste placeras så att den inte hänger över en bänk- eller bordsskiva där småbarn kan dra i den eller snubbla över den av misstag.
- Om nätkabeln är skadad måste den bytas ut av VESYNC (SINGAPORE) PTE. LTD. eller av behöriga personer för att undvika elektrisk fara eller brandrisk. Kontakta **Kundtjänst** (sidan 18).

## Elektromagnetiska Fält (EMF)

COSORI smart luftfritös uppfyller alla standarder för elektromagnetiska fält (EMF). Om den hanteras på rätt sätt och enligt anvisningarna i den här bruksanvisningen är apparaten säker att använda baserat på de vetenskapliga studier som finns tillgängliga idag.

**Obs!** Föremål märkta med följande symbol kan nå höga temperaturer och måste hanteras försiktigt.



**FÖRSIKTIGT:** Mycket varm yta.

# SPARA DESSA ANVISNINGAR



Den här symbolen betyder att produkten inte får kasseras som hushållsavfall utan måste lämnas till en lämplig återvinningsanläggning. Korrekt kassering och återvinning hjälper till att skydda naturresurser, människors hälsa och miljön.

Kontakta kommunen, avfallshanteringstjänsten eller butiken där du köpte produkten för mer information om kassering och återvinning av produkten.

### Den här produkten är RoHS-kompatibel.

Den här produkten uppfyller direktivet 2011/65/EU och dess ändringar om begränsning av användning av vissa farliga ämnen i elektrisk och elektronisk utrustning.

# Konfigurera VeSync-appen

## Obs!

- VeSync-appen förbättras kontinuerligt och kan ändras med tiden. Vid eventuella avvikelser, följ anvisningarna i appen.
- Det krävs en mobil enhet för att köra appen, Wi-Fi eller mobildata och iOS-version 12 eller Android-version 7 (eller senare). Data- och meddelandeavgifter kan tillkomma. Registrering krävs.

1. Ladda ned VeSync-appen genom att skanna QR-koden eller sök efter VeSync i Apple App Store® eller Google Play™ Butik.

**Obs!** För Android™-användare: Välj Allow (Tillåt) för att använda VeSync.




2. Öppna VeSync-appen. Tryck på **Log in** (Logga in) om du redan har ett konto. Skapa ett nytt konto genom att trycka på **Sign Up** (Registrera dig).

**Obs!** Du måste skapa ett eget VeSync-konto för att använda tjänster och produkter från tredje part. De fungerar inte med ett gästkonto. Ett VeSync-konto gör det även möjligt för familj och vänner styra den smarta luftfritösen.

3. Sätt i kontakten till den smarta luftfritösen för att starta parkopplingsläget.
4. Tryck på + och välj den smarta luftfritösen.
5. Följ anvisningarna i appen för att ställa in den smarta luftfritösen.

## Obs!

- Det går att ändra namnet och ikonen när som helst genom att gå till den smarta luftfritörens skärm och trycka på .

## Koppla från Wi-Fi®

- Koppla bort Wi-Fi® genom att trycka och hålla ned  i 15 sekunder tills wifi-indikatorn släcks. Det här återställer den smarta luftfritörens standardinställningar och kopplar bort den från VeSync-appen.
- Återanslut genom att följa anvisningarna i VeSync-appen om att lägga till en enhet.

## VeSync-appens funktioner

VeSync-appen ger åtkomst till ytterligare smarta funktioner i luftfritösen, inklusive de som visas nedan.

### Fjärrkontroll

- Alla smarta luftfritösfunktioner går att fjärrstyra, utom att starta tillagning (för att följa säkerhetsföreskrifterna i UL).
- Det går att övervaka tillagningen på avstånd.

### Recept i appen

- Förprogrammerade recept från COSORI:s egna kockar finns i appen. Dessa recept ställer in rekommenderad tid och temperatur automatiskt.
- Skapa och spara anpassade recept.

**Obs!** VeSync-appen uppdateras kontinuerligt och appfunktionerna utökas.

# LÄR KÄNNA DEN SMARTA LUFTFRITÖSEN

---

## Obs!

- **Öppna inte** luftfritösens översida. Det är inte ett lock.
- Korgen och bottenplattorna är tillverkade i aluminium och har non-stick-beläggning.

## Bild på luftfritös [Figur 1.1]

- |                |                  |                 |
|----------------|------------------|-----------------|
| 1. Luftintag   | 5. Ventiler      | 9. Korghandtag  |
| 2. Luftutsläpp | 6. Kontrollpanel | 10. Korgdelare  |
| 3. Bärhandtag  | 7. Bottenplattor | 11. Silikontång |
| 4. Nätkabel    | 8. Korg          |                 |

## Bild på display [Figur 1.2]

**Obs!** När du trycker på en knapp för att använda en tillagningsfunktion blir den orange och visar att den är aktiv.

SV

### Kontrollpanel

- |                          |                     |
|--------------------------|---------------------|
| A. Höj/sänk temperaturen | F. STOR ZON         |
| B. På/av                 | G. MATCHA           |
| C. Tillagningsfunktioner | H. ZON 2            |
| D. ZON 1                 | I. Öka/minska tiden |
| E. SYNKA                 | J. Starta/pausa     |

### Display

- |                                   |                      |
|-----------------------------------|----------------------|
| a. Övre värmeelement på           | d. Wifi-indikator    |
| b. Övre och undre värmeelement på | e. Temperaturdisplay |
| c. Tillagningsstatus              | f. Tidsvisning       |

**Obs!** Wifi-indikatorn visar VeSyncs konfigurationsstatus. Se anvisningarna i VeSync-appen för mer information.

## Displaymeddelanden [Figur 1.3]

Cooking (Tillagar) [figur a] och [figur b]

Paused (Pausad) [figur c] och [figur d]

Basket is Removed/Cooking Paused  
(Korg borttagen/tillagning pausad)  
[figur e]

Cooking Finished (Tillagning avslutad)  
[figur f]

Cooling (Avkylning) [figur g]

# FÖRE FÖRSTA ANVÄNDNING

## Installation

1. Ta bort allt emballage från luftfritösen, inklusive tillfälliga klistermärken och plastfolie.
2. Placera luftfritösen på en stabil, jämn och värmebeständig yta. Placera den inte nära områden som kan skadas av varm luft eller ånga (såsom väggar eller skåp).

**Obs!** Lämna 13 cm utrymme bakom och över luftfritösen. **[Figur 3]** Lämna tillräckligt utrymme framför luftfritösen för att ta ut korgen.



3. Diska korgen, korgdelaren och bottenplattorna noggrant antingen i diskmaskin eller med en icke-repande svamp.
4. Torka av luftfritösens insida och utsida med en lätt fuktad trasa. Torka med handduk.
5. Sätt tillbaka bottenplattorna i korgarna och placera korgarna i luftfritösen. **[Figur 5]**

**Obs!** Lägg i bottenplattorna genom att luta bottenplattan för att sätta in en sida först och tryck sedan ned den andra sidan. Bottenplattorna passar bara på ett sätt i korgen. **[Figur 4]**

## Testkörning

En testkörning bekantar dig med luftfritösen, kontrollerar att den fungerar korrekt och rensar den från eventuella rester från tillverkningen.

1. Kontrollera att luftfritösens korgar är tomma och koppla in luftfritösen.
2. Tryck på .

3. Tryck på **GRANDZONE**. Displayen visar **200 °C** och **20 MIN**.
4. Tryck på  för att ändra tiden till 10 minuter.
5. Tryck på  för att börja värma. När testkörningen är klar piper luftfritösen.
6. Ta ut korgen. Låt korgen svalna helt i 10–30 minuter.

### Obs!

- Alla luftfritöser kan lukta plast från tillverkningsprocessen. Det är normalt. Kontakta **Kundtjänst** (se sidan 18) om plastlukten inte minskar efter en testkörning.
- Var försiktig när du vänder på korgen efter tillagning, eftersom de varma bottenplattorna kan falla ut och orsaka en säkerhetsrisk.

## Silikoninlägg

- Bottenplattorna har fyra livsmedelssäkra silikoninlägg. Dessa inlägg passar in plattan mot korgens botten.
- Lägg i bottenplattorna i korgen genom att luta bottenplattan för att sätta in en sida först och tryck sedan ned den andra sidan. Bottenplattorna passar bara på ett sätt i korgen. **[Figur 5]**

**Obs!** Om du tvingar in bottenplattan i korgen på fel sätt kan skada uppstå.

- **Låt inte** barn leka med silikoninläggen eller svälja dem.

SV

# ANVÄNDA DEN SMARTA LUFTFRITÖSEN

Det går att övervaka tillagningen, följa recept i appen och få åtkomst till ytterligare funktioner i VeSync-appen. En lista med smarta funktioner finns i **VeSync-appens funktioner** (sidan 5).












## Luftfritering

### Obs!

- **Placera inte** något på luftfritösen. Det stör luftflödet och orsakar dålig luftfritering. **[Figur 6]**
- Luftfritösen är ingen oljefritös. Fyll **inte** korgen med olja, stekfett eller annan vätska.
- Var uppmärksam på varm ånga när du tar ut korgen ur luftfritösen.

## Tillagningstabell

Resultaten kan variera. Recept och matlagingsinspiration finns i appen VeSync.

Funktion	Temp	Tid	Temp.område	Tidsintervall	Övre värme	Undre värme
AIR FRY (LUFTFRITERA)	200 °C	20 min.	120–205 °C	1–60 min		
ROAST (STEK)	190 °C	30 min.	120–205 °C	1–240 min		
BAKE (UGNSBAKA)	160 °C	25 min.	80–205 °C	1–240 min		
GRILL (GRILLA)	240 °C	10 min.	205–240 °C	1–30 min		Ej tillämpligt
REHEAT (VÄRM UPP)	165 °C	15 min.	40–205 °C	1–60 min		
Dry (Torka)	55 °C	6 tim.	35–95 °C	30 min–48 tim		


**Obs!** Övre och undre värme är ungefärlig och inte verklig effekt. Det övre och undre värmeelementets verkliga temperatur kan variera. Temperaturområdet som visas i tabellen visar ungefärlig högsta temperatur som varje värmeelement kan uppnå.

## Tillaga i Grandzone




1. Lägg i bottenplattorna i korgen. **[Figur 7]**

### Obs!

- Bottenplattorna gör det möjligt för överflödiga olja att droppa ned på korgens botten.
- Lägg i bottenplattorna i korgen genom att luta bottenplattan för att sätta in en sida först och tryck sedan ned den andra sidan.
- Bottenplattorna får inte användas till vissa recept, såsom muffins och bröd.

2. Tryck på .
3. Välj **GRANDZONE**.
4. Välj en matlagningsfunktion.

**Obs!** Tillagningsfunktioner är förprogrammerade med perfekt tid och temperatur för tillagning av olika maträtter. Det går även att anpassa deras tid och temperatur.

5. Anpassa tid och temperatur genom att trycka på  eller  för tid och temperatur. Det här går att göra när som helst under tillagningen. Gå tillbaka till funktionens standardinställningar om du har ändrat dem genom att trycka på funktionsknappen igen. **[Figur 8]**
6. Tryck på  för att börja luftfritera.
7. Luftfritösen piper när den är klar. Displayen visar End (Slut).
8. Ta ut korgen ur luftfritösen och var uppmärksam på varm ånga. Använd en tång eller värmesäkra redskap för att ta ut maten ur korgen.

**FÖRSIKTIGT:** De varma bottenplattorna kan ramla ut när du vänder på korgen.


- a. Säkerställ att korgen står på ett plant underlag.
  - b. Var uppmärksam på varm olja eller fett som har ansamlats i korgen. Undvik stänk genom att tömma ut oljan innan du sätter tillbaka korgen. **[Figur 9]**
9. Låt svalna före rengöring.

## Tillaga i en enkel zon



1. Lägg bottenplattorna och korgdelaren i korgen. **[Figur 10]**

### Obs!

- Bottenplattorna gör det möjligt för överflödiga olja att droppa ned på korgens botten.
- Lägg i bottenplattorna i korgen genom att luta bottenplattan för att sätta in en sida först och tryck sedan ned den andra sidan.
- Bottenplattorna får inte användas till vissa recept, såsom muffins och bröd.

2. Tryck på .
3. Välj knappen för zonen som du vill använda.
4. Välj en matlagningsfunktion.

**Obs!** Tillagningsfunktioner är förprogrammerade med perfekt tid och temperatur för tillagning av olika maträtter. Det går även att anpassa deras tid och temperatur.

5. Det är valfritt att ställa in temperatur och tid genom att trycka på  eller . **[Figur 8]**
6. Tryck på  för att börja luftfritera.
7. Luftfritösen piper när den är klar. Displayen visar End (Slut).
8. Ta ut korgen ur luftfritösen och var uppmärksam på varm ånga. Använd en tång eller värmesäkra redskap för att ta ut maten ur korgen.

**FÖRSIKTIGT:** De varma bottenplattorna kan ramla ut när du vänder på korgen.

- a. Säkerställ att korgen står på ett plant underlag.
  - b. Var uppmärksam på varm olja eller fett som har ansamlats i korgen. Undvik stänk genom att tömma ut oljan innan du sätter tillbaka korgen. **[Figur 9]**
9. Låt svalna före rengöring.





## Tillaga i dubbla zoner


Tillaga med två zoner för att laga två olika maträtter samtidigt. **ZONE 1** och **ZONE 2** går att styra oberoende av varandra.

1. Lägg bottenplattorna och korgdelaren i korgen.

### Obs!

- Bottenplattorna gör det möjligt för överflödiga olja att droppa ned på korgens botten.
- Lägg i bottenplattorna i korgen genom att luta bottenplattan för att sätta in en sida först och tryck sedan ned den andra sidan.
- Bottenplattorna får inte användas till vissa recept, såsom muffins och bröd.

2. Tryck på .
3. Välj **ZONE 1**.
4. Välj en matlagningsfunktion.
5. Anpassa tid och temperatur genom att trycka på  eller  för tid och temperatur. Det här går att göra när som helst under tillagningen. Gå tillbaka till funktionens standardinställningar om du har ändrat dem genom att trycka på funktionsknappen igen.
6. Välj **ZONE 2** och upprepa steg 4 och 5.
7. Tryck på  för att börja luftfritera.

**Obs!** Om du maten du tillagar i en av zonerna blir klar innan tillagningstiden är slut går det att pausa zonen genom att välja den och trycka på .

8. Luftfritösen piper när den är klar. Displayen visar End (Slut).
9. Ta ut korgen ur luftfritösen och var uppmärksam på varm ånga. Använd en tång eller värmesäkra redskap för att ta ut maten ur korgen.

**FÖRSIKTIGT:** De varma bottenplattorna kan ramla ut när du vänder på korgen.



10. Säkerställ att korgen står på ett plant underlag.
11. Var uppmärksam på varm olja eller fett som har ansamlats i korgen. Undvik stänk genom att tömma ut oljan innan du sätter tillbaka korgen. **[Figur 9]**
12. Låt svalna före rengöring.

## Pausa tillagning

Tillagning pausas automatiskt när korgen tas ut. Sätt tillbaka korgen för att fortsätta tillagningen.

Det går även att trycka på  för att pausa tillagning i båda zonerna. Tryck på  igen för att återuppta tillagningen.

## Pausa tillagningstiden i en zon (när båda zonerna används)

1. Välj zonen som du vill pausa.
2. Tryck på  för att pausa tillagningen.
3. Återuppta den pausade zonen genom att trycka på  igen.

**Obs!** Det går att justera inställningarna (tillagningsfunktion, tid och temperatur) under pausen.

## Avsluta tillagningstiden i en zon (när båda zonerna används)

Om maten du tillagar i en av zonerna blir klar innan tillagningstiden är slut går det att **stoppa en zon**. Tryck och håll ned zonen knapp i tre sekunder.






## Synkronisera tillagning

Programmera zonerna till att avsluta tillagning samtidigt när de använder olika funktioner, tillagningstider och temperaturer.

1. Lägg bottenplattorna och korgdelaren i korgen. **[Figur 10]**

### Obs!

- Bottenplattorna gör det möjligt för överflödiga olja att droppa ned på korgens botten.
- Lägg i bottenplattorna i korgen genom att luta bottenplattan för att sätta in en sida först och tryck sedan ned den andra sidan.
- Bottenplattorna får inte användas till vissa recept, såsom muffins och bröd.

2. Tryck på .
3. Välj **ZONE 1**. Välj en tillagningsfunktion och ändra sedan temperatur och tid genom att trycka på  eller .
4. Välj **ZONE 2**. Välj en tillagningsfunktion och ändra sedan temperatur och tid genom att trycka på  eller .

5. Tryck på **SYNC** (SYNKA).
6. Tryck på ►||. Zonen med längst tillagningstid startar tillagning. Den andra zonen visar HoLd (Väntar). Enheten startar den andra zonen när båda zonerna har samma kvarvarande tid.
7. Luftfritösen piper när den är klar. Displayen visar End (Slut).

**Obs!** Om maten du tillagar i en av zonerna blir klar innan tillagningstiden är slut går det att **stoppa en zon**. Tryck och håll ned zonens knapp i tre sekunder.

8. Ta ut korgen ur luftfritösen och var uppmärksam på varm ånga. Använd en tång eller värmesäkra redskap för att ta ut maten ur korgen.

**FÖRSIKTIGT:** De varma bottenplattorna kan ramla ut när du vänder på korgen.

- a. Säkerställ att korgen står på ett plant underlag.
  - b. Var uppmärksam på varm olja eller fett som har ansamlats i korgen. Undvik stänk genom att tömma ut oljan innan du sätter tillbaka korgen. **[Figur 9]**
9. Låt svalna innan rengöring.

## Matcha tillagning

Spegla inställningarna i ZONE 1 och ZONE 2 för att tillaga med samma funktion, temperatur och tid. Det här gör det möjligt att tillaga stora mängder samtidigt eller två olika rätter med samma inställningar.

1. Lägg bottenplattorna och korgdelaren i korgen. **[Figur 10]**

### Obs!

- Bottenplattorna gör det möjligt för överflödiga olja att droppa ned på korgens botten.
- Lägg i bottenplattorna i korgen genom att luta bottenplattan för att sätta in en sida först och tryck sedan ned den andra sidan.
- Bottenplattorna får inte användas till vissa recept, såsom muffins och bröd.

2. Tryck på ☺.
3. Välj **ZONE 1**. Välj en tillagningsfunktion och ändra sedan temperatur och tid genom att trycka på ^ eller v.

4. Tryck på **MATCH** (MATCHA) för att kopiera inställningarna för **ZONE 1** till **ZONE 2**.
5. Tryck på ►|| för att starta tillagning i båda zonerna.
6. Luftfritösen piper när den är klar. Displayen visar End (Slut).
7. Ta ut korgen ur luftfritösen och var uppmärksam på varm ånga. Använd en tång eller värmesäkra redskap för att ta ut maten ur korgen.

**FÖRSIKTIGT:** De varma bottenplattorna kan ramla ut när du vänder på korgen.

- a. Säkerställ att korgen står på ett plant underlag.
- b. Var uppmärksam på varm olja eller fett som har ansamlats i korgen. Undvik stänk genom att tömma ut oljan innan du sätter tillbaka korgen. **[Figur 9]**

8. Låt svalna innan rengöring.

## Tillagningsguide

### Korgdelare

- Korgdelaren förhindrar inte helt värmeöverföring och matstänk mellan korgarna under tillagning. Det är normalt.

### Överfyllning

- Om korgen är överfylld tillagas maten ojämnt.
- **FÖRSIKTIGT:** Tvinga **inte** in maten. Stora mängder livsmedel kan vidröra värmeslingorna och orsaka brandrisk.

### Använda olja

- Om du lägger till en liten mängd olja till maten blir den krispigare. Använd inte mer än 30 ml olja.
- Små mängder olja kan enkelt appliceras jämnt på alla livsmedel med hjälp av oljespray.
- **Använd inte** matlagningssprej som innehåller drivgas. Drivgas kan förstöra korgens non-stick-beläggning.

## Matråd

- Alla frysta måltider eller produkter som går att tillaga i ugn är lämpliga för luftfritering.
- Innan du lägger maten i korgen, placera kakor, pajar, eller andra maträtter som har smet eller fyllning i en värmesäker behållare.
- Produkter med hög fetthalt som luftfriteras gör att fett samlas under bottenplattorna. Håll bort fett dropp efter tillagning för att minska överdriven rök under tillagning.
- Livsmedel i flytande marinering utvecklar rök och orsakar stänk. Torka av sådana livsmedel före luftfritering.



## Pommes frites

- Tillsätt 8–15 ml olja för krispighet.
- Blötlägg i vatten 15 minuter när du tillagar pommes frites av rå potatis för att ta bort stärkelsen före luftfritering. Torka av med en handduk innan du tillsätter olja.
- Skär råa pommes frites till mindre bitar för krispigare resultat. Skär dem till bitar i storleken 0,5 x 7,5 cm.



**Obs!** Fler tips och recept finns i appen VeSync och i Snabbstartsguiden.

## Fler funktioner




### Byta temperaturenhet

- Tryck och håll ned temperatur  och  i tre sekunder.
- Luftfritösen piper en gång och temperaturenheten ändras från Celsius till Fahrenheit.
- Upprepa för att ändra tillbaka till Celsius.

### Slå på/av ljudet

- Tryck och håll ned temperatur  och tid  samtidigt i tre sekunder tills luftfritösen piper en gång.
- Upprepa för att slå på ljudet igen.

## Pausa

- Tryck på  för att pausa tillagningen. Luftfritösen slutar värmas upp och  blinkar tills du trycker på  igen för att återuppta tillagningen.
- Efter 30 minuters inaktivitet stängs fritösen av.
- Den här funktionen gör det möjligt att pausa tillagningen utan att ta ut korgen ur luftfritösen.

## Ställa in tillagningsfunktioner

Det enklaste sättet att luftfritera är att använda en tillagningsfunktion. Tillagningsfunktioner är förprogrammerade med perfekt tid och temperatur för tillagning av olika maträtter.

- Anpassa en funktion:
  - Välj en funktion och justera tid och temperatur.

**Obs!** Öka eller minska tid eller temperatur snabbt genom att trycka och hålla ned knapparna  eller .

- Tryck och håll ned funktionsknappen tills luftfritösen piper en gång.
- Återställ en funktion:
  - Utan att göra ändringar, tryck och håll ned funktionsknappen och **GRANDZONE** samtidigt i tre sekunder tills luftfritösen piper en gång.
- Återställ alla funktioner:
  - Tryck och håll ned **ZONE 1** och **ZONE 2** samtidigt i tre sekunder tills luftfritösen piper en gång.

## Återuppta tillagning automatiskt

- Luftfritösen slutar tillaga automatiskt när du tar ut korgen.
- Luftfritösen börjar automatiskt laga mat igen med befintliga inställningar när du sätter tillbaka korgen.

## Automatisk avstängning

- Om luftfritösen inte har aktiva tillagningsfunktioner rensar den alla inställningar och stänger av efter 20 minuters inaktivitet.

# SKÖTSEL OCH UNDERHÅLL

---

## Obs!

- Rengör **alltid** luftfritösens korg och bottenplattor efter varje användning.
- Det blir enklare att rengöra korgen om du lägger in aluminiumfolie vid tillagning (inte över bottenplattorna).

1. Stäng av och koppla från luftfritösen. Låt den svalna helt före rengöring. Ta ut korgen för att påskynda avkyllningen.
2. Rengör vid behov luftfritösens utsida med en fuktig trasa.
3. Korgen och bottenplattorna tål maskindisk. Det går även att rengöra dem med en icke-repande svamp och varmt vatten med diskmedel. Blötlägg vid behov.

## Obs!

- Korgen och bottenplattorna har non-stick-beläggning. Undvik att använda metallredskap och slipande rengöringsmedel.

## 4. För svårt fett:

- a. Blanda 30 g bikarbonat med 15 ml vatten till en bredbar pasta i en liten skål.
- b. Sprid pastan i korgen och på bottenplattorna med en svamp och skrubba. Låt den verka i 15 minuter innan du sköljer.
- c. Rengör korg och bottenplattor med diskmedel och vatten före användning.

## 5. Rengör luftfritösens insida med en lätt fuktig, icke-repande svamp eller trasa. Doppa **inte** ned i vatten. Rengör vid behov värmeslingan för att ta bort matrester. [Figur 11]

## 6. Torka före användning.

**Obs!** Kontrollera att värmeslingan är helt torr innan du slår på luftfritösen.

SV

# TILLBEHÖR

---

Det finns ytterligare tillbehör och utbytesdelar till luftfritösen. Kontakta **kundtjänst** för mer information (se sidan 18).

# FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

---

VESYNC (SINGAPORE) PTE. LTD. intygar härmed att den här produkten överensstämmer med de väsentliga kraven och andra relevanta bestämmelser i direktivet 2014/53/EU, UK Radio Equipment Regulations 2017 och alla andra tillämpliga direktivkrav i EU och Storbritannien. Den fullständiga försäkran om överensstämmelse finns på: <https://cosori.com/euro/compliance>

# FELSÖKNING

Problem	Möjlig lösning
Luftfritösen startar inte.	Kontrollera att luftfritösen är påslagen.
	Sätt in korgen ordentligt i luftfritösen.
Hur pausar jag en zon om jag använder båda zonerna?	Pausa en <b>zon</b> genom att först trycka på knappen <b>Zone</b> och sedan på ►  . Pausa båda zonerna genom att trycka på ►  .
Hur stoppar jag en zon om jag använder båda zonerna?	Stoppa en <b>zon</b> genom att trycka och hålla ned zonens knapp i tre sekunder.
Är det säkert att placera korgen på köksbänken?	Korgen värms upp under tillagning. Var försiktig vid hantering och placera endast korgen på värmebeständiga ytor.
Maten är inte färdiglagad.	Lägg mindre mängd livsmedel i korgen. Livsmedlen blir dåligt tillagade om korgen är överfylld.
	Öka tillagningstiden eller temperaturen.
Maten tillagas ojämnt.	Livsmedel som staplas eller ligger nära varandra måste skakas eller vändas under tillagningen.
Maten är inte krispig efter luftfritering.	Att spraya eller pensla på en liten mängd olja kan öka krispigheten (se <b>Tillagningsguide</b> på sidan 11).
Pommes frites tillagas inte rätt.	Se <b>Pommes frites</b> på sidan 12.
Korgen glider inte in enkelt i luftfritösen.	Kontrollera att korgen inte är överfylld med mat.
	Kontrollera att bottenplattorna ligger rätt i korgen.
Fritösen avger vit rök eller ånga.	När du använder luftfritösen för första gången kan den avge vit rök eller ånga. Det är normalt.
	Kontrollera att luftfritösens insida och korg är noggrant rengjorda och fria från fett.
	När du tillagar feta livsmedel samlas olja under bottenplattorna. Det här fettet avger vit rök och korgen kan bli varmare än vanligt. Det är normalt och påverkar inte tillagningen. Hantera korgen försiktigt.
Fritösen avger ett mörkt rökmoln.	Dra omedelbart ut luftfritösens elkontakt. Mörk rök betyder att maten brinner eller att det finns ett elektriskt problem. Vänta tills röken försvinner innan du drar ut korgen. Om orsaken inte var vidbränd mat måste du kontakta <b>Kundtjänst</b> (se sidan 18).
Luftfritösen luktar plast.	Alla luftfritöser kan lukta plast från tillverkningsprocessen. Det är normalt. Följ anvisningarna för <b>Testkörning</b> (sidan 7) för att få bort plastlukten. Kontakta <b>Kundtjänst</b> (se sidan 18) om den fortfarande luktar plast.
Tillagningstiden blir längre om du tillagar med <b>Grandzone</b> eller <b>Match cooking (Matcha tillagning)</b> .	Det är normalt. Det tar längre tid att tillaga större mängder livsmedel.

# FELSÖKNING (FORTS.)

Problem	Möjlig lösning
Hur justerar jag temperatur eller tid när jag endast använder en zon?	Välj den aktiva <b>zonen</b> , använd sedan pilarna för <b>TEMP</b> för att justera temperaturen och pilarna för <b>TIME</b> (TID) för att justera tiden.
Måste enheten förvärmas?	Enheten behöver inte förvärmas.
Går det att tillaga olika livsmedel i varje zon utan att oroa sig för att de påverkar varandras smak?	Ja, båda <b>zonerna</b> är självständiga med egna värmeelement och fläktar.
Displayen visar felkoden E1.	Det finns ett avbrott i temperaturövervakningen för ZONE 1. Kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E2.	Det finns en kortslutning i den övre temperaturövervakningen för ZONE 1. Kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E21.	Det finns ett avbrott i den undre temperaturövervakningen för ZONE 1. Kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E22.	Det finns en kortslutning i den undre temperaturövervakningen för ZONE 1. Kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E3.	Luftfritösens överhettningsskydd för ZONE 1 har aktiverats. Stäng av och koppla från luftfritösen och låt den svalna helt. Om displayen fortsätter att visa E3 måste du kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E24.	Det finns ett avbrott i temperaturövervakningen för ZONE 2. Kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E25.	Det finns en kortslutning i den övre temperaturövervakningen för ZONE 2. Kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E26.	Det finns ett avbrott i den undre temperaturövervakningen för ZONE 2. Kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E27.	Det finns en kortslutning i den undre temperaturövervakningen för ZONE 2. Kontakta <b>Kundtjänst</b> (se sidan 18).
Displayen visar felkoden E28.	Luftfritösens överhettningsskydd för ZONE 2 har aktiverats. Stäng av och koppla från luftfritösen och låt den svalna helt. Om displayen fortsätter att visa <b>E28</b> måste du kontakta <b>Kundtjänst</b> (se sidan 18).

SV

Om ditt problem inte finns med på listan måste du kontakta **Kundtjänst** (se sidan 18).

# INFORMATION OM BEGRÄNSAD GARANTI

<b>Produktnamn</b>	10 liters luftfritös med dubbla korgar
<b>Modell</b>	CAF-TF101S-AEUR
<i>Vi rekommenderar starkt att du antecknar beställnings-ID och inköpsdatum och sparar dem.</i>	
<b>Inköpsdatum</b>	
<b>Beställnings-ID</b>	

## Cosori begränsad produktgaranti

### Två (2) års begränsad garanti för konsumentprodukt

Etekcity GmbH ("Etekcity") garanterar att produkten är fri från material- och tillverkningsfel under **två år från det ursprungliga inköpsdatumet** ("Begränsad garantiperiod"), under förutsättning att produkten användes enligt bruks- och skötselansvisningarna (t.ex. i den avsedda miljön och under normala förhållanden). ***\*Den här garantin begränsar inte dina rättigheter enligt gällande nationella eller regionala konsumentskyddslag i din region, i vilket fall Begränsad garantiperiod förlängs i enlighet med gällande krav.***

### Förmåner i den begränsade garantin

Under den begränsade garantiperioden och enligt policyn för den här begränsade garantin, gör Etekcity efter eget beslut något av följande: (i) återbetalar inköpspriset om köpet gjordes direkt i Cosoris onlinebutik, (ii) reparerar material- och tillverkningsfel, (iii) ersätter produkten med en likvärdig eller bättre produkt, eller (iv) tillhandahåller butikskredit motsvarande inköpspriser.

### För vem gäller garantin?

Den här begränsade garantin gäller endast den ursprungliga konsumentens köp och går inte att överföra till efterföljande ägare av produkten, oavsett om produkten bytte ägare under den begränsade garantin giltighetsperiod. Den ursprungliga konsumenten som köpte produkten måste tillhandahålla intyg på felet eller funktionsfelet och bevisa inköpsdatum för att göra anspråk på förmåner i den begränsade garantin.

### Var medveten om ej auktoriserade återförsäljare eller handlare

Den här begränsade garantin gäller inte produkter

köpta hos ej auktoriserade återförsäljare eller handlare. Etekcity:s begränsade garanti gäller endast produkter köpta från auktoriserade återförsäljare eller handlare som är föremål för Etekcity:s kvalitetskontroller och har avtalat att följa dessa kvalitetskontroller. Var medveten om att produkter köpta från en ej auktoriserad webbplats eller handlare kan vara förfälskade, använda, defekta eller inte utformade för användning i ditt land. Skydda dig själv och dina produkter genom att säkerställa att du endast köper från Etekcity eller dess auktoriserade återförsäljare.

Kontakta vår kundtjänst om du har frågor om en viss återförsäljare eller om du tror att du har köpt produkten från en ej auktoriserad återförsäljare.

### Vad täcker inte garantin?

- Normalt slitage inklusive vanliga sliddelar, såsom dammbehållare, filter, rullborste, batteri, nätkabel eller skador på mattor eller golv på grund av olämplig användning.
- Om köpebeviset har ändrats på något sätt eller gjorts oläsbart.
- Om produktens modellnummer, serienummer eller produktionsdatumkod har ändrats, tagits bort eller gjorts oläsbar.
- Om produktens ursprungliga konstruktion har ändrats.
- Om produkten inte har använts enligt anvisningarna i bruksanvisningen.
- Skador orsakade genom att ansluta kringutrustning, ytterligare utrustning eller tillbehör som inte rekommenderas i bruksanvisningen.
- Skador orsakade genom olycka, missbruk, felaktig användning eller felaktigt eller otillräckligt underhåll.
- Skador eller fel orsakade genom service eller reparation av produkten av en obehörig serviceleverantör eller av någon annan än Etekcity.
- Skador eller fel som uppkommit genom kommersiell användning, uthyrning eller genom annan användning för vilken produkten inte är avsedd.
- Om enheten har skadats, inklusive men inte begränsat till skada orsakad av djur, blixtnedslag, onormal nätspänning, brand, naturkatastrof, transport, diskmaskin eller vatten (om inte bruksanvisningen uttryckligen uppger att produkten är diskmaskinssäker).
- Oavsiktliga och följdskador
- Skador eller fel som överskrider produktens kostnad.

### Garantianspråk i fem enkla steg:

1. Säkerställ att produkten ligger inom den angivna begränsade garantiperioden.
2. Säkerställ att du har kopia på fakturan eller beställnings-ID eller köpebevis.
3. Säkerställ att du har produkten. **KASSERA INTE** produkten innan du kontaktar oss.

4. Kontakta vår kundtjänst.
5. När vår kundtjänst har godkänt din begäran måste du returnera produkten med en kopia på fakturan och beställnings-ID.

### **Den enda och exklusiva gottgörelsen**

DEN OVANSTÅENDE BEGRÄNSADE GARANTIN ÄR ETEKCITY:S EXKLUSIVA SKYLDIGHET OCH VÅR ENDA OCH EXKLUSIVA GOTTGÖRELSE FÖR BROTT MOT GARANTIN ELLER ANNAN PRODUKTAVVIKELSE SOM OMFATTAS AV DEN HÄR BEGRÄNSADE PRODUKTGARANTIN. DEN HÄR BEGRÄNSADE GARANTIN ÄR EXKLUSIV OCH I STÄLLET FÖR ALLA ANDRA GARANTIER. INGEN ANSTÄLLD PÅ ETEKCITY CORPORATION ELLER NÅGON ANNAN PART HAR BEHÖRIGHET ATT GE ANNAN GARANTI UTÖVER DEN BEGRÄNSADE GARANTIN I DEN HÄR BEGRÄNSADE PRODUKTGARANTIN.

### **Ansvarsfriskrivning från begränsade garantier**

I DEN STÖRSTA UTSTRÄCKNING ENLIGT GÄLLANDE LAG, MED UNDANTAG FÖR DEN HÄR BEGRÄNSADE PRODUKTGARANTIN, TILLHANDAHÅLLER ETEKCITY CORPORATION PRODUKTERNA DU KÖPER FRÅN ETEKCITY CORPORATION I BEFINTLIGT SKICK OCH ETEKCITY CORPORATION FRISKRIVER SIG HÄRMED FRÅN ALLA GARANTIER, ANTINGEN UTTRYCKLIGA ELLER UNDERFÖRSTÅDDA, LAGSTADGADE ELLER ANDRA, INKLUSIVE, MEN INTE BEGRÄNSADE TILL GARANTIER FÖR SÄLJBARHET, ICKE-INTRÅNG OCH LÄMPLIGHET FÖR ETT VISST SYFTE.

### **Ansvarsbegränsning**

I DEN STÖRSTA UTSTRÄCKNING ENLIGT GÄLLANDE LAG, ÄR ETEKCITY CORPORATION, DESS DOTTERBOLAG ELLER LICENSGIVARE, SERVICELEVERANTÖRER, ANSTÄLLDA, AGENTER, TJÄNSTEMÄN ELLER LEDNING INTE SKADESTÅNDSSKYLDIGA FÖR:

(A) SKADOR SOM UPPSTÅR AV ELLER I SAMBAND MED PRODUKTER KÖPTA FRÅN ETEKCITY CORPORATION UTÖVER INKÖSPRISET BETALAT AV KÖPAREN FÖR SÅDANA PRODUKTER ELLER

(B) INDIREKTA, SÄRSKILDA, TILLFÄLLIGA SKADOR, FÖLJDSKADOR ELLER SKADESTÅND ÄVEN OM ETEKCITY CORPORATION ELLER NÅGON AV DESS LEVERANTÖRER HAR MEDDELATS OM MÖJLIGHETEN TILL SÅDANA SKADESTÅND.

OCH OAVSETT ORSAKADE AV SKADESTÅNDSGRUNDANDE HÄNDELSER (INKLUSIVE FÖRSUMLIGHET), AVTALSBROTT ELLER ANNAT. VÅR SKADESTÅNDSSKYLDIGHET FÅR INTE UNDER NÅGRA OMSTÄNDIGHETER ÖVERSTIGA DET AKTUELLA BELOPPET DU BETALADE FÖR DEN DEFEKTA PRODUKTEN, INTE

HELLER ÄR VI UNDER NÅGRA OMSTÄNDIGHETER SKADESTÅNDSSKYLDIGA FÖR DIREKTA ELLER INDIREKTA FÖLJDSKADOR, TILLFÄLLIGA, SÄRSKILDA SKADOR ELLER SKADESTÅND ELLER FÖRLUSTER.

FÖRUTOM DET SOM DEN HÄR BEGRÄNSADE PRODUKTGARANTIN TÄCKER ÄR ETEKCITY CORPORATION INTE ANSVARIGA FÖR KOSTNADER I SAMBAND MED ERSÄTTNING ELLER REPARATION AV PRODUKTER KÖPTA FRÅN DEM, INKLUSIVE MEN INTE BEGRÄNSADE TILL ARBETE, INSTALLATION ELLER ANDRA KOSTNADER ÅDRAGNA AV ANVÄNDAREN OCH I SYNNERHET KOSTNADER RELATERADE TILL BORTTAGNING ELLER ERSÄTTNING AV EN PRODUKT.

### **Andra rättigheter du kan ha**

EN DEL JURISDIKTIONER TILLÅTER INTE: (1) UNDANTAG FÖR UNDERFÖRSTÅDDA GARANTIER, (2) BEGRÄNSNING I VARAKTIGHET FÖR UNDERFÖRSTÅDDA GARANTIER OCH/ELLER (3) UNDANTAG FÖR ELLER BEGRÄNSNING AV TILLFÄLLIGA SKADOR ELLER FÖLJDSKADOR, VILKET INNEBÄR ATT FRISKRIVNINGARNA INTE GÄLLER DIG. I DESSA JURISDIKTIONER HAR DU ENDAST DE UNDERFÖRSTÅDDA GARANTIER SOM UTTRYCKLIGEN MÅSTE TILLHANDAHÅLLAS ENLIGT GÄLLANDE LAG. BEGRÄNSNINGAR I GARANTIER, SKADESTÅNDSSKYLDIGHET OCH GOTTGÖRELSE GÄLLER I HÖGSTA UTSTRÄCKNING TILLÅTEN I LAG.

ÄVEN OM DEN HÄR BEGRÄNSADE GARANTIN GER DIG VISSA RÄTTSLIGA RÄTTIGHETER KAN DU ÄVEN HA ANDRA RÄTTIGHETER I DIN JURISDIKTION. DEN HÄR BEGRÄNSADE PRODUKTGARANTIN OMFATTAS AV GÄLLANDE LAGAR SOM GÄLLER DIG OCH PRODUKTEN. LÄS LAGARNA I DIN JURISDIKTION FÖR ATT FULLSTÄNDIGT FÖRSTÅ DINA RÄTTIGHETER.

### **Ändringar i denna policy**

Vi kan efter eget tycke ändra villkoren och tillgängligheten för den här begränsade garantin, men ändringarna är inte retroaktiva.

Den här garantin är lämnas av:

Cosori Sweden  
Författarvägen 2  
834 99 TANDSBY  
Sverige

# KUNDTJÄNST

---

Kontakta vår hjälpsamma kundtjänst om du har frågor eller funderingar om produkten.

**Öppettider:** Mån–Fre, 08:00 - 16:00

**Avgiftsfritt nummer:** +46 08 917 800

**E-post:** Info@cosori.se

*\*Ha din beställningsfaktura och order-ID redo innan du kontaktar kundtjänst.*

## TILLSKRIVNINGAR

Google, Android och Google Play är varumärken som tillhör Google LLC.

App Store® är ett varumärke som tillhör Apple Inc.

Wi-Fi® är ett registrerat varumärke som tillhör Wi-Fi Alliance®.

iOS är ett registrerat varumärke som tillhör Cisco Systems, Inc. och/eller dess dotterbolag i USA och vissa andra länder.

Ordmärket Bluetooth® och logotyperna är registrerade varumärken som ägs av Bluetooth SIG, Inc. och all användning av sådana märken av VESYNC (SINGAPORE) PTE. LTD. Corporation sker under licens. Andra varumärken och handelsnamn tillhör respektive ägare.

SV

## VISA OSS VAD DU GÖR

---

Vi hoppas att det här har hjälpt dig. Vi ser fram emot att se dina fina resultat och hoppas att du vill dela med dig av dina tjustiga bilder! Vår community väntar på dina uppladdningar. Välj fritt mellan våra plattformar nedan. Fota, tagga och hashtagga så mycket du vill, Cosori-kocken!

**@Cosorisverige**



**@CosoriScandi**



## Table of Contents

Package Contents	1
Specifications	1
Important Safeguards & Warnings	2
Getting To Know Your Smart Air Fryer	6
Before First Use	7
Using Your Smart Air Fryer	8
Care & Maintenance	13
Accessories	13
Troubleshooting	14
Limited Warranty Information	16
Customer Support	18

## Package Contents

1 x	Dual Blaze TwinFry™ 10-Litre Air Fryer
2 x	Crisper Plate
1 x	Basket Divider
1 x	Silicone Tongs
1 x	User Manual
1 x	Quick Start Guide

## Specifications

<b>Model</b>	CAF-TF101S-AEUR
<b>Power Supply</b>	AC 220–240V, 50Hz
<b>Rated Power</b>	2,800W
<b>Capacity</b>	10 L
<b>Temperature Range</b>	35°–240°C / 95°–465°F
<b>Time Range</b>	1 min–48 hr
<b>Dimensions (including handle)</b>	33.8D x 51.8W x 31.3H cm / 13.3D x 20.4W x 12.3H in
<b>Weight</b>	9.2 kg / 20 lb
<b>Networked Standby Mode Power Consumption</b>	<2.0W
<b>Standby/Off Mode Power Consumption</b>	<1.0W

# READ AND SAVE THESE INSTRUCTIONS

## IMPORTANT SAFEGUARDS & WARNINGS

---

Follow basic safety precautions when using your air fryer. Read all instructions.

### Key Safety Points

- **Do not** touch hot surfaces. Use handles.
- **Do not** block any ventilation openings. Hot steam is released through openings. Keep your hands and face clear of openings.
- **CAUTION:** The hot crisper plates may fall out when turning the basket over.

**Note:**

- *Firmly insert the crisper plates into the basket to reduce the chance of them falling out.*
- **Always** use tongs to carefully remove hot food.

### General Safety



- To protect against electric shock, **do not immerse the air fryer** housing, cord, or plug in water or other liquids.
- Close supervision is necessary when the air fryer is used by or near children.
- Unplug when not in use, and before cleaning. Allow to cool before putting on or taking off parts.
- **Do not** use your air fryer if it is damaged, not working, or if the cord or plug is damaged. Contact **Customer Support** (see page 18).
- **Do not** use third-party replacement parts or accessories, as this may cause injuries.
- **Do not** use outdoors.
- **Do not** place the air fryer or any of its parts on a stove, near gas or electric burners, or in a heated oven.

- Be extremely cautious when moving your air fryer (or removing the basket) if it contains hot oil or other hot liquids.
- **Always** place the crisper plates on a heat-resistant surface after removing them from the basket.
- **Do not** clean with metal scouring pads. Metal fragments can break off the scouring pad and touch electrical parts, creating a risk of electric shock.
- **Do not** place anything on top of your air fryer. **Do not** store anything inside your air fryer.
- This air fryer can be used by children 8 years and older as well as persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the air fryer in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Children should be supervised to ensure that they **do not** play with the air fryer.
- This air fryer is not intended to be operated by means of an external timer or separate remote-control system.
- For instructions on cleaning the accessories, see **Care & Maintenance** (page 13).
- **Only** use your air fryer as directed in this manual.
- Not for commercial use. Household use **only**.

## While Air Frying

- An air fryer works with hot air **only**. **Never** fill the basket with oil or fat.
- **Never** use your air fryer without the basket in place.
- **Do not** place oversized foods or metal utensils into your air fryer.
- **Do not** use cooking sprays with propellants. Propellants may damage the air fryer basket's coating.
- **Do not** overfill the air fryer basket. Heaping amounts of food may touch the heating coils and cause a fire hazard.
- **Do not** touch the basket or crisper plates during or immediately after air frying.
- **Do not** place paper, cardboard, non-heat-resistant plastic, or similar materials into your air fryer. You may use parchment paper or foil.
- **Never** put baking paper, parchment paper, or foil into the air fryer without food on top. Air circulation can cause paper to lift and touch heating coils.
- **Never** put thin or lightweight food like cornflakes into the air fryer. Pay attention to small pieces of food. Air circulation can cause thin, lightweight, or small pieces of food to lift and touch heating coils.
- **Always** use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- Keep your air fryer away from flammable materials (curtains, tablecloths, etc.). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- Immediately turn off and unplug your air fryer if you see dark smoke coming out. White smoke is normal, caused by heating fat or food splashing, but dark smoke means that food is burning or there is a circuit problem. Wait for smoke to

clear before pulling the basket out. If the cause was not burnt food, contact **Customer Support** (page 18).

- **Do not** leave your air fryer unattended while in use.
- To turn the air fryer off, press  once.  will remain orange and all other buttons will turn off.
- To unplug, grab the plug and pull from the outlet. **Never** pull from the power cord.

## Power & Cord [Figure 2]

- Turn off the air fryer before removing the plug from the outlet.
- **Do not** let the power cord (or any extension cord) hang over the edge of a table or counter, or touch hot surfaces.
- If the power-supply cord is damaged, it must be replaced by VESYNC (SINGAPORE) PTE. LTD. or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (page 18).
- Remove and discard the plug's protective cover to prevent a choking hazard.
- **Never** use an outlet below the counter when plugging in your air fryer.
- Your air fryer should **only** be used with **220–240V, 50Hz** electrical systems. **Do not** plug into another type of outlet.
- Keep the air fryer and its cord out of reach of children less than 8 years old.

**Note:** This air fryer uses a short power-supply cord to reduce the risk of entangling or tripping. Use extension cords with care. The marked electrical rating of the extension cord must be as great as the rating of the air fryer (see **Specifications**, page 1).

## Extension Cords

- Longer extension cords are available and may be used if care is exercised in their use. If a longer extension cord is used:
  - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the air fryer.
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- If the power-supply cord is damaged, it must be replaced by VESYNC (SINGAPORE) PTE. LTD. or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (page 18).

## Electromagnetic Fields (EMF)

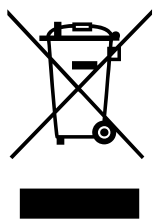
The COSORI Smart Air Fryer complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

**Note:** Items marked with the following symbol may reach high temperatures and should be handled carefully.



**CAUTION:** Hot surface.

# SAVE THESE INSTRUCTIONS



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

### **This product is RoHS compliant.**

This product is in compliance with Directive 2011/65/EU, and its amendments, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

## VeSync App Setup

### Note:

- The VeSync app is continually being improved and may change over time. If there are any differences, follow the in-app instructions.
- Requires device to run app, Wi-Fi or mobile data, and iOS version 12 or Android version 7 (or above). Standard data and messaging rates may apply. Registration is required.

1. To download the VeSync app, scan the QR code or search "VeSync" in the Apple App Store® or Google Play Store.

**Note:** For Android™ users, choose "Allow" to use VeSync.




2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.


**Note:** You must create your own VeSync account to use third-party services and products. These will not work with a guest account. With a VeSync account, you can also allow your family and friends to control your smart air fryer.

3. Plug in your smart air fryer to enter pairing mode.
4. Tap **+** and select your smart air fryer.
5. Follow the in-app instructions to set up your smart air fryer.

### Note:

- You can change the name and icon at any time by going to the smart air fryer screen and tapping .

## Disconnecting From Wi-Fi®

- To disconnect Wi-Fi®, press and hold the  for 15 seconds until the Wi-Fi indicator turns off. This will restore the smart air fryer's default settings and disconnect it from the VeSync app.
- To reconnect, please follow the instructions in the VeSync app for adding a device.

## VeSync App Features

The VeSync app allows you to access additional smart air fryer functions, including those listed below.

### Remote Control

- All smart air fryer functions can be controlled remotely, except for starting cooking (to comply with UL safety regulations).
- Cooking progress can be monitored from a distance.

### In-App Recipes

- Pre-programmed recipes made by COSORI's in-house chefs are available on the app. These recipes automatically set the recommended time and temperature.
- Create and save custom recipes.

**Note:** The VeSync app is continually updated and app features will expand.

# GETTING TO KNOW YOUR SMART AIR FRYER

---

**Note:**

- **Do not** try to open the top of the air fryer. This is not a lid.
- The basket and crisper plates are made of aluminium metal with nonstick coating.

## Air Fryer Diagram [Figure 1.1]

- |                    |                   |                    |
|--------------------|-------------------|--------------------|
| 1. Air Inlet       | 5. Vents          | 9. Basket Handle   |
| 2. Air Outlet      | 6. Control Panel  | 10. Basket Divider |
| 3. Housing Handles | 7. Crisper Plates | 11. Silicone Tongs |
| 4. Power Cord      | 8. Basket         |                    |

## Display Diagram [Figure 1.2]

**Note:** When you tap a cooking function button, it will turn orange to show that it's selected.

### Control Panel

- |                                  |                           |
|----------------------------------|---------------------------|
| A. Increase/Decrease Temperature | F. GRANDZONE              |
| B. On/Off                        | G. MATCH                  |
| C. Cooking Functions             | H. ZONE 2                 |
| D. ZONE 1                        | I. Increase/Decrease Time |
| E. SYNC                          | J. Start/Pause            |

## Display

- |                                       |                        |
|---------------------------------------|------------------------|
| a. Top heating elements on            | d. Wi-Fi Indicator     |
| b. Top and bottom heating elements on | e. Temperature Display |
| c. Cooking Status                     | f. Time Display        |

**Note:** The Wi-Fi indicator tells you your VeSync configuration status. See the VeSync in-app instructions for more information.

## Display Messages [Figure 1.3]

Cooking **[Figure a]** & **[Figure b]**

Cooking Finished **[Figure f]**

Paused **[Figure c]** & **[Figure d]**

Cooling **[Figure g]**

Basket is Removed/ Cooking Paused **[Figure e]**

# BEFORE FIRST USE

## Setting Up

1. Remove all packaging from inside and outside the air fryer, including any temporary stickers and plastic wrap.
2. Place the air fryer on a stable, level, heat-resistant surface. Keep away from areas that can be damaged by hot air or steam (such as walls or cupboards).


**Note:** Leave 13 cm / 5 inches of space behind and above the air fryer. **[Figure 3]** Leave enough room in front of the air fryer to remove the basket.



3. Wash the basket, basket divider, and crisper plates thoroughly, using either a dishwasher or a non-abrasive sponge.
4. Wipe the inside and outside of the air fryer with a slightly moist cloth. Dry with a towel.
5. Firmly insert the crisper plates and divider into the basket, then place the basket inside the air fryer. **[Figure 5]**

**Note:** When inserting the crisper plates, tilt the crisper plate to one side first, then press down on the other side. The crisper plates can only fit one way in the basket. **[Figure 4]**

## Test Run

A test run will help you become familiar with your air fryer, make sure it's working correctly, and clean it of possible residues in the process.

1. Make sure the air fryer baskets are empty and plug in the air fryer.
2. Tap .

3. Tap **GRANDZONE**. The display will show "200°C" and "20 MIN".
4. Tap  to change the time to 10 minutes.
5. Tap  to begin heating. When the test run is done, the air fryer will beep.
6. Remove the basket. Let the basket cool completely for 10–30 minutes.

### Note:

- Any air fryer may have a plastic smell from the manufacturing process. This is normal. If the plastic smell does not decrease after a test run, contact **Customer Support** (see page 18).
- Use caution when turning the basket over after cooking, as the hot crisper plates may fall out and create a safety hazard.

## Silicone Stoppers

- The crisper plates contain 4 silicone stoppers made of food-safe material. These stoppers keep the plate fitted to the bottom of the basket.
- When placing the crisper plates into the basket, tilt the crisper plate to insert one side first, then press down on the other side. The crisper plates can only fit one way in the basket. **[Figure 5]**

**Note:** Forcing the crisper plate into the basket incorrectly may cause damage.

- Make sure children **do not** play with the silicone stoppers or swallow them.

# USING YOUR SMART AIR FRYER

You can use the VeSync app to monitor cooking, follow in-app recipes, and access additional features. For a list of smart features, see **VeSync App Features** (Page 5).












## Air Frying

### Note:

- **Do not** place anything on top of your air fryer. This will disrupt airflow and cause poor air frying results. **[Figure 6]**
- An air fryer is not a deep fryer. **Do not** fill the basket with oil, frying fat, or any liquid.
- Be careful of hot steam when taking the basket out of the air fryer.

## Cooking Chart

Results may vary. For recipes and cooking inspiration, check out the VeSync app.

Function	Temp	Time	Temp Range	Time Range	Upper Power	Lower Power
AIR FRY	200°C	20 min	120°–205°C	1-60 min		
ROAST	190°C	30 min	120°–205°C	1-240 min		
BAKE	160°C	25 min	80°–205°C	1-240 min		
GRILL	240°C	10 min	205°–240°C	1-30 min		N/A
REHEAT	165°C	15 min	40°–205°C	1-60 min		
Dehydrate (DRY)	55°C	6 hr	35°–95°C	30 min-48H		


**Note:** Upper and Lower Power here are schematic, not actual firepower. The upper and lower heating elements' actual temperature may vary. The temperature range shown in the diagram only roughly shows the maximum temperature each heating element can achieve.

## Cooking in the Grandzone




1. Place the crisper plates into the basket. **[Figure 7]**

**Note:**

- The crisper plates allow excess oil to drip down to the bottom of the basket.
- When placing the crisper plates into the basket, tilt the crisper plate to insert one side first, then press down on the other side.
- The crisper plates may not be needed for certain recipes, such as muffins and breads.

2. Tap .
3. Select **GRANDZONE**.
4. Select a cooking function.

**Note:** Cooking functions are programmed with an ideal time and temperature for cooking certain foods. You can also customise their time and temperature.

5. To customise time and temperature tap  or  for time and temperature. You can do this anytime during cooking. To go back to a function's default settings right after changing them, press the function's button again. **[Figure 8]**
6. Tap  to begin air frying.
7. The air fryer will beep when finished. The display will show "End".
8. Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove the food from the basket.

**CAUTION:** The hot crisper plates may fall out when turning the basket over.


- a. Make sure the basket is resting on a flat surface.
  - b. Watch for hot oil or fat collected in the basket. To avoid splashing, drain oil before replacing the basket. **[Figure 9]**
9. Allow to cool before cleaning.

## Cooking in a Single Zone




1. Place the crisper plates and divider into the basket. **[Figure 10]**

**Note:**

- The crisper plates allow excess oil to drip down to the bottom of the basket.
- When placing the crisper plates into the basket, tilt the crisper plate to insert one side first, then press down on the other side.
- The crisper plates may not be needed for certain recipes, such as muffins and breads.

2. Tap .
3. Select the zone's button you want to use.
4. Select a cooking function.

**Note:** Cooking functions are programmed with an ideal time and temperature for cooking certain foods. You can also customise their time and temperature.

5. Optionally, change the temperature and time by tapping  or . **[Figure 8]**
6. Tap  to begin air frying.
7. The air fryer will beep when finished. The display will show "End".
8. Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove the food from the basket.

**CAUTION:** The hot crisper plates may fall out when turning the basket over.

- a. Make sure the basket is resting on a flat surface.
  - b. Watch for hot oil or fat collected in the basket. To avoid splashing, drain oil before replacing the basket. **[Figure 9]**
9. Allow to cool before cleaning.





## Cooking in Dual Zones


Cook using two zones to prepare different foods at the same time. **ZONE 1** and **ZONE 2** can be controlled separately from one another.

1. Place the crisper plates and divider into the basket.

### Note:

- The crisper plates allow excess oil to drip down to the bottom of the basket.
- When placing the crisper plates into the basket, tilt the crisper plate to insert one side first, then press down on the other side.
- The crisper plates may not be needed for certain recipes, such as muffins and breads.

2. Tap .
3. Select **ZONE 1**.
4. Select a cooking function.
5. To customise time and temperature tap  or  for time and temperature. You can do this anytime during cooking. To go back to a function's default settings right after changing them, press the function's button again.
6. Select **ZONE 2** and repeat steps 4 and 5.
7. Tap  to begin air frying.

**Note:** If you decide the food in one of the zones is done before the cook time is up, you can pause a zone by selecting that zone and tapping .


8. The air fryer will beep when finished. The display will show "End".
9. Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove the food from the basket.

**CAUTION:** The hot crisper plates may fall out when turning the basket over.



10. Make sure the basket is resting on a flat surface.
11. Watch for hot oil or fat collected in the basket. To avoid splashing, drain oil before replacing the basket. **[Figure 9]**
12. Allow to cool before cleaning.

## Pausing Cooking

Cooking will automatically pause when the basket is removed. Reinsert the basket to resume cooking.

Optionally, tap  to pause cooking of both zones. Tap  again to resume cooking.

### Pausing the cook time in one zone (while using both zones)

1. Select the zone you want to pause.
2. Tap  to pause cooking.
3. To resume the paused zone, tap  again.

**Note:** You can adjust the settings (cooking function, time, and temperature) during pause.

### Ending the cook time in one zone (while using both zones)

If you decide the food in one of the zones is done before the cook time is up, you can **stop a zone**. Press and hold that zone's button for 3 seconds.






## Sync Cooking

Program the zones to finish cooking at the same time when they use different functions, cook times, and temperatures.

1. Place the crisper plates and divider into the basket. **[Figure 10]**

### Note:

- The crisper plates allow excess oil to drip down to the bottom of the basket.
- When placing the crisper plates into the basket, tilt the crisper plate to insert one side first, then press down on the other side.
- The crisper plates may not be needed for certain recipes, such as muffins and breads.

2. Tap .
3. Select **ZONE 1**. Choose a cooking function then change the temperature and time by tapping  or .
4. Select **ZONE 2**. Choose a cooking function then change the temperature and time by tapping  or .

5. Tap **SYNC**.
6. Tap ►||. The zone with the longest time will begin cooking. The other zone will display "HoLd". The unit will start the second zone when both zones have the same time remaining.
7. The air fryer will beep when finished. The display will show "End".

**Note:** If you decide the food in one of the zones is done before the cook time is up, you can **stop a zone**. Press and hold that zone's button for 3 seconds.

8. Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove the food from the basket.

**CAUTION:** The hot crisper plates may fall out when turning the basket over.

- a. Make sure the basket is resting on a flat surface.
  - b. Watch for hot oil or fat collected in the basket. To avoid splashing, drain oil before replacing the basket. **[Figure 9]**
9. Allow to cool before cleaning.

## Match Cooking

Mirror settings across ZONE 1 and ZONE 2 to cook with the same function, temperature, and time. This allows you to cook large quantities at the same time or different foods using the same settings.

1. Place the crisper plates and divider into the basket. **[Figure 10]**

**Note:**

- The crisper plates allow excess oil to drip down to the bottom of the basket.
- When placing the crisper plates into the basket, tilt the crisper plate to insert one side first, then press down on the other side.
- The crisper plates may not be needed for certain recipes, such as muffins and breads.

2. Tap ☺.
3. Select **ZONE 1**. Choose a cooking function then change the temperature and time by tapping ^ or v.

4. Tap **MATCH** to copy **ZONE 1** settings to **ZONE 2**.
5. Tap ►|| to begin cooking in both zones.
6. The air fryer will beep when finished. The display will show "End".
7. Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove the food from the basket.

**CAUTION:** The hot crisper plates may fall out when turning the basket over.

- a. Make sure the basket is resting on a flat surface.
- b. Watch for hot oil or fat collected in the basket. To avoid splashing, drain oil before replacing the basket. **[Figure 9]**

8. Allow to cool before cleaning.

## Cooking Guide

### Divider

- The divider does not completely isolate the heat transfer and food splatters between the two baskets during cooking. This is normal.

### Overfilling

- If the basket is overfilled, food will cook unevenly.
- **CAUTION: Do not** pack in food. Heaping amounts of food may touch the heating coils and cause a fire hazard.

### Using Oil

- Adding a small amount of oil to your food will make it crispier. Use no more than 30 mL / 2 US tbsp of oil.
- Oil sprays are excellent for applying small amounts of oil evenly to all food items.
- **Do not** use cooking sprays with propellants. Propellants may damage the basket's nonstick coating.

## Food Tips

- You can air fry any frozen foods or goods that can be baked in an oven.
- To make cakes, hand pies, or any food with filling or batter, place food in a heat-safe container before placing in the basket.
- Air frying high-fat foods will cause fat to collect underneath the crisper plates. To avoid excess smoke while cooking, pour out fat drippings after cooking.
- Liquid-marinated foods create splatter and excess smoke. Pat these foods dry before air frying.



## French Fries

- Add 8–15 mL / ½–1 US tbsp oil for crispiness.
- When making fries from raw potatoes, soak uncooked fries in water for 15 minutes to remove starch prior to frying. Pat dry with a towel before adding oil.
- Cut uncooked fries smaller for crispier results. Try cutting fries into 0.6- by 7.6-cm / ¼- by 3-inch strips.



**Note:** For more tips and recipes, check out the VeSync app and Quick Start Guide.

## More Functions




### Switching Temperature Units

- Press and hold temperature  and  for 3 seconds.
- The air fryer will beep once, and the temperature unit will change from Celsius to Fahrenheit.
- Repeat to switch back to Celsius.

### Turn Sound On/Off

- Press and hold temperature  and time  at the same time for 3 seconds until the air fryer beeps once.
- Repeat to turn the sound back on.



## Pausing

- Tap  to pause cooking. The air fryer will stop heating, and  will blink until you tap  again to resume cooking.
- After 30 minutes of inactivity, the air fryer will turn off.
- This function allows you to pause cooking without removing the basket from the air fryer.

## Cooking Functions' Settings

Using a cooking function is the easiest way to air fry. Cooking functions are programmed with an ideal time and temperature for cooking certain foods.

- To customise a function:
  - Choose a function and adjust the time and temperature.

**Note:** To rapidly increase or decrease time or temperature, press and hold the  or  buttons.

- Press and hold the function's button until the air fryer beeps once.
- To reset a function:
  - Without making changes, press and hold the function's button and **GRANDZONE** at the same time for 3 seconds until the air fryer beeps once.
- To reset all functions:
  - Press and hold **ZONE 1** and **ZONE 2** at the same time for 3 seconds until the air fryer beeps once.

## Automatically Resume Cooking

- If you pull out the basket, the air fryer will pause cooking automatically.
- When you return the basket, the air fryer will automatically resume cooking based on your previous settings.

## Automatic Shutoff

- If the air fryer has no active functions, the air fryer will clear all settings and turn off after 20 minutes of inactivity.

# CARE & MAINTENANCE

---

## Note:

- **Always** clean the air fryer basket and crisper plates after every use.
- Lining the basket with foil (except the crisper plates) may make cleanup easier.

1. Turn off and unplug the air fryer. Allow it to cool completely before cleaning. Pull out the basket for faster cooling.
2. Wipe the outside of the air fryer with a moist cloth, if necessary.
3. The basket and crisper plates are dishwasher-safe. You can also wash them with hot, soapy water and a non-abrasive sponge. Soak if necessary.

## Note:

- The basket and crisper plates have a nonstick coating. Avoid using metal utensils and abrasive cleaning materials.

4. For stubborn grease:
  - a. In a small bowl, mix 30 g / 2 US tbsp of baking soda and 15 mL / 1 US tbsp of water to form a spreadable paste.
  - b. Use a sponge to spread the paste on the basket and crisper plates and scrub. Let the basket and crisper plates sit for 15 minutes before rinsing.
  - c. Wash basket and crisper plates with soap and water before using.

5. Clean the inside of the air fryer with a slightly moist, non-abrasive sponge or cloth. **Do not** immerse in water. If needed, clean the heating coil to remove food debris. [Figure 11]

6. Dry before using.

**Note:** Make sure the heating coil is completely dry before turning on the air fryer.

# ACCESSORIES

---

Additional and replacement accessories are available for your air fryer. For more information, contact **Customer Support** (see page 18).

# DECLARATION OF CONFORMITY

---

VESYNC (SINGAPORE) PTE. LTD. Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU, UK Radio Equipment Regulations 2017 and all other applicable EU and UK directive requirements. The complete declaration of conformity can be found at: <https://cosori.com/euro/compliance>

# TROUBLESHOOTING

Problem	Possible Solution
<b>The air fryer will not turn on.</b>	Make sure the air fryer is plugged in.
	Push the basket securely into the air fryer.
<b>How do I pause one Zone when using both Zones?</b>	To pause one <b>Zone</b> , first press the <b>Zone</b> button then press ►  . To pause both Zones simply press the ►  .
<b>How do I stop one Zone when using both Zones?</b>	To stop one <b>Zone</b> , Press and hold that zone's button for 3 seconds.
<b>Is the basket safe to put on my worktop?</b>	The basket will heat up during cooking. Use caution when handling, and place on heat resistant surfaces only.
<b>Food is not completely cooked.</b>	Place smaller batches of food items into the basket. If the basket is overstuffed, then foods will be undercooked.
	Increase cooking temperature or time.
<b>Food is cooked unevenly.</b>	Food that is stacked on top of each other or close to each other needs to be shaken or flipped during cooking.
<b>Food is not crispy after air frying.</b>	Spraying or brushing a small amount of oil on foods can increase crispiness (see <b>Cooking Guide</b> , page 11).
<b>French fries are not cooked correctly.</b>	See <b>French Fries</b> , page 12.
<b>Basket will not slide into the air fryer securely.</b>	Make sure the basket is not overfilled with food.
	Make sure the crisper plates are securely inside the basket.
<b>White smoke or steam is coming out of the air fryer.</b>	The air fryer may produce some white smoke or steam when you use it for the first time or during cooking. This is normal.
	Make sure the basket and the inside of the air fryer are cleaned properly and not greasy.
	Cooking greasy foods will cause oil to collect beneath the crisper plates. This oil will produce white smoke, and the basket may be hotter than usual. This is normal and should not affect cooking. Handle the basket with care.
<b>Dark smoke is coming out of the air fryer.</b>	Immediately unplug your air fryer. Dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact <b>Customer Support</b> (see page 18).
<b>The air fryer has a plastic smell.</b>	Any air fryer may have a plastic smell from the manufacturing process. This is normal. Follow the instructions for a <b>Test Run</b> (page 7) to get rid of the plastic smell. If a plastic smell is still present, please contact <b>Customer Support</b> (see page 18).
<b>Cooking time is longer when using Grandzone or Match cooking.</b>	This is normal. Large quantities of food may take longer to cook.

# TROUBLESHOOTING (CONT.)

Problem	Possible Solution
How do I adjust the temperature or time while using a single zone?	Select the active <b>Zone</b> , then use the <b>TEMP</b> arrows to adjust the temperature <b>TIME</b> arrows to adjust the time.
Does the unit need to pre-heat?	The unit does not need to be pre-heated.
Can I cook different foods in each Zone and not worry about cross contamination?	Yes, both <b>Zones</b> are self-contained with separate heating elements and fans.
Display shows Error Code "E1".	There is an open circuit in the upper temperature monitor of ZONE 1. Contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E2".	There is a short circuit in the upper temperature monitor of ZONE 1. Contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E21".	There is an open circuit in the lower temperature monitor of ZONE 1. Contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E22".	There is a short circuit in the lower temperature monitor of ZONE 1. Contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E3".	The air fryer's ZONE 1 overheat protection has activated. Turn off and unplug the air fryer and allow it to cool completely. If the display continues to show "E3", contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E24".	There is an open circuit in the upper temperature monitor of ZONE 2. Contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E25".	There is a short circuit in the upper temperature monitor of ZONE 2. Contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E26".	There is an open circuit in the lower temperature monitor of ZONE 2. Contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E27".	There is a short circuit in the lower temperature monitor of ZONE 2. Contact <b>Customer Support</b> (see page 18).
Display shows Error Code "E28".	The air fryer's ZONE 2 overheat protection has activated. Turn off and unplug the air fryer and allow it to cool completely. If the display continues to show "E28", contact <b>Customer Support</b> (see page 18).

If your problem is not listed, please contact **Customer Support** (see page 18).

# LIMITED WARRANTY INFORMATION

<b>Product Name</b>	Dual Blaze TwinFry™ 10-Litre Air Fryer
<b>Model</b>	CAF-TF101S-AEUR
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
<b>Date of Purchase</b>	
<b>Order ID</b>	

## Cosori Limited Product Warranty

### Two (2) Year\* Limited Consumer Product Warranty

Etekcitiy GmbH ("Etekcitiy") warrants that the product shall be free from defects in material and workmanship for a period of **2 years from the date of original purchase** ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (e.g., in the intended environment and under normal circumstances).

***\*This warranty does not limit your rights as may be mandated or granted by the applicable national or regional consumer protection laws in your region, in which cases the Limited Warranty Period is extended pursuant to the applicable requirements.***

### Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, Etekcitiy will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online Cosori store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

### Who is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

## Be Aware of Unauthorized Dealers or Sellers

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. Etekcitiy's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to Etekcitiy's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from Etekcitiy or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support Team.

### What's Not Covered?

- Normal wear and tear, including normal wearing parts, such as dust bin, filter, roller brush, battery, and power cord, or carpet or floor damage due to misuse.
- If the proof-of-purchase has been altered in any way or is made illegible.
- If the model number, serial number or production date code on the product has been altered, removed or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.
- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekcitiy.
- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher-safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

### Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.
2. Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product. **DO NOT** dispose of your product before contacting us.

4. Contact our Customer Support Team.
5. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

### **Sole and Exclusive Remedy**

THE FOREGOING LIMITED WARRANTY CONSTITUTES EtekcITY GmbH'S EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES. NO EMPLOYEE OF EtekcITY GmbH OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

### **Disclaimer of Limited Warranties**

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, EtekcITY GmbH PROVIDES THE PRODUCTS YOU PURCHASE FROM EtekcITY GmbH "AS IS" AND EtekcITY GmbH HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

### **Limitations of Liability**

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL EtekcITY GmbH, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:

(a) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM EtekcITY GmbH IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR

(b) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF EtekcITY GmbH OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.

AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, EtekcITY GmbH SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

### **Other Rights You May Have**

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/ OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

### **Changes to this policy**

We may change the terms and availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

EtekcITY GmbH  
Vossbarg 1  
25524 Itzehoe, Germany

# CUSTOMER SUPPORT

---

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

**Email:**

*support.europe@cosori.com*

*\*Please have your order invoice and order ID ready before contacting Customer Support.*

## Attributions

Google, Android, and Google Play are trademarks of Google LLC.

App Store® is a trademark of Apple Inc.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

iOS is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by VESYNC (SINGAPORE) PTE. LTD. Corporation is under license. Other trademarks and trade names are those of their respective owners.

# SHOW US WHAT YOU'RE MAKING

---

We hope this has been helpful to you. We can't wait to see your beautiful results, and we think you'll want to share glam shots! Our community awaits your uploads—just pick your platform of choice below. Snap, tag, and hashtag away, Cosori chef!

**@CosoriCooks**



**@Cosori**

