


Installation guide – Spare parts and accessories

Overhaul kit | Code number 027F0562

PML, size 125

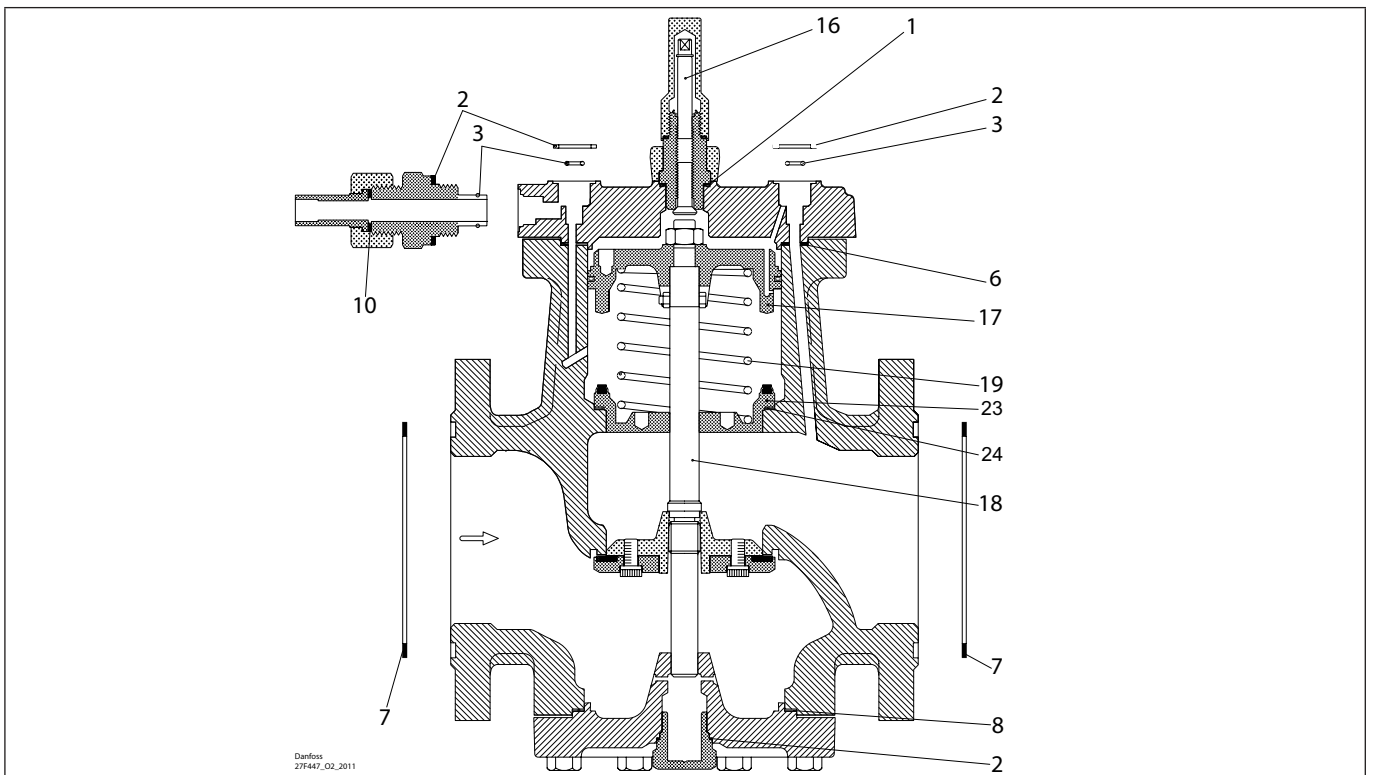

<p><b>1*</b></p> <p>Alu.</p> <p>Ø26 mm Ø1.02"</p> <p>Total no. = 1</p>	<p><b>2</b></p> <p>Fibre</p> <p>Ø33 mm Ø1.28"</p> <p>Total no. = 4</p>	<p><b>3</b></p> <p>Ø9 mm Ø0.36"</p> <p>Total no. = 3</p>	<p><b>4*</b></p> <p>Alu.</p> <p>Ø18 mm Ø0.70"</p> <p>Total no. = 1</p>	<p><b>5*</b></p> <p>Alu.</p> <p>Ø14 mm Ø0.55"</p> <p>Total no. = 1</p>	<p><b>6</b></p> <p>Fibre</p> <p>Ø221 mm Ø8.7"</p> <p>Total no. = 1</p>
<p><b>7</b></p> <p>Fibre</p> <p>Ø203 mm Ø7.99"</p> <p>Total no. = 2</p>	<p><b>8</b></p> <p>Fibre</p> <p>Ø196 mm Ø7.72"</p> <p>Total no. = 1</p>	<p><b>9*</b></p> <p>Alu.</p> <p>Ø32 mm Ø1.26"</p> <p>Total no. = 1</p>	<p><b>10</b></p> <p>Alu.</p> <p>Ø22 mm Ø0.87"</p> <p>Total no. = 1</p>	<p><b>16</b></p>	<p><b>17</b></p> <p>Ø175 mm Ø6.89"</p>
<p><b>18</b></p> <p>386 mm 15.21"</p>	<p><b>19</b></p> <p>Ø125 mm Ø4.92"</p> <p>Total no. = 1</p>	<p><b>23</b></p> <p>Ø160 mm Ø6.3"</p>	<p><b>24</b></p> <p>Fibre</p> <p>Ø159.4 mm Ø6.27"</p> <p>Total no. = 1</p>		

\* The spare part is included in the package but is not used for PML size 125.