


Installation guide – Spare parts and accessories

Overhaul kit | Code number 032F2322  
EVRAT, size 15 (previous design)

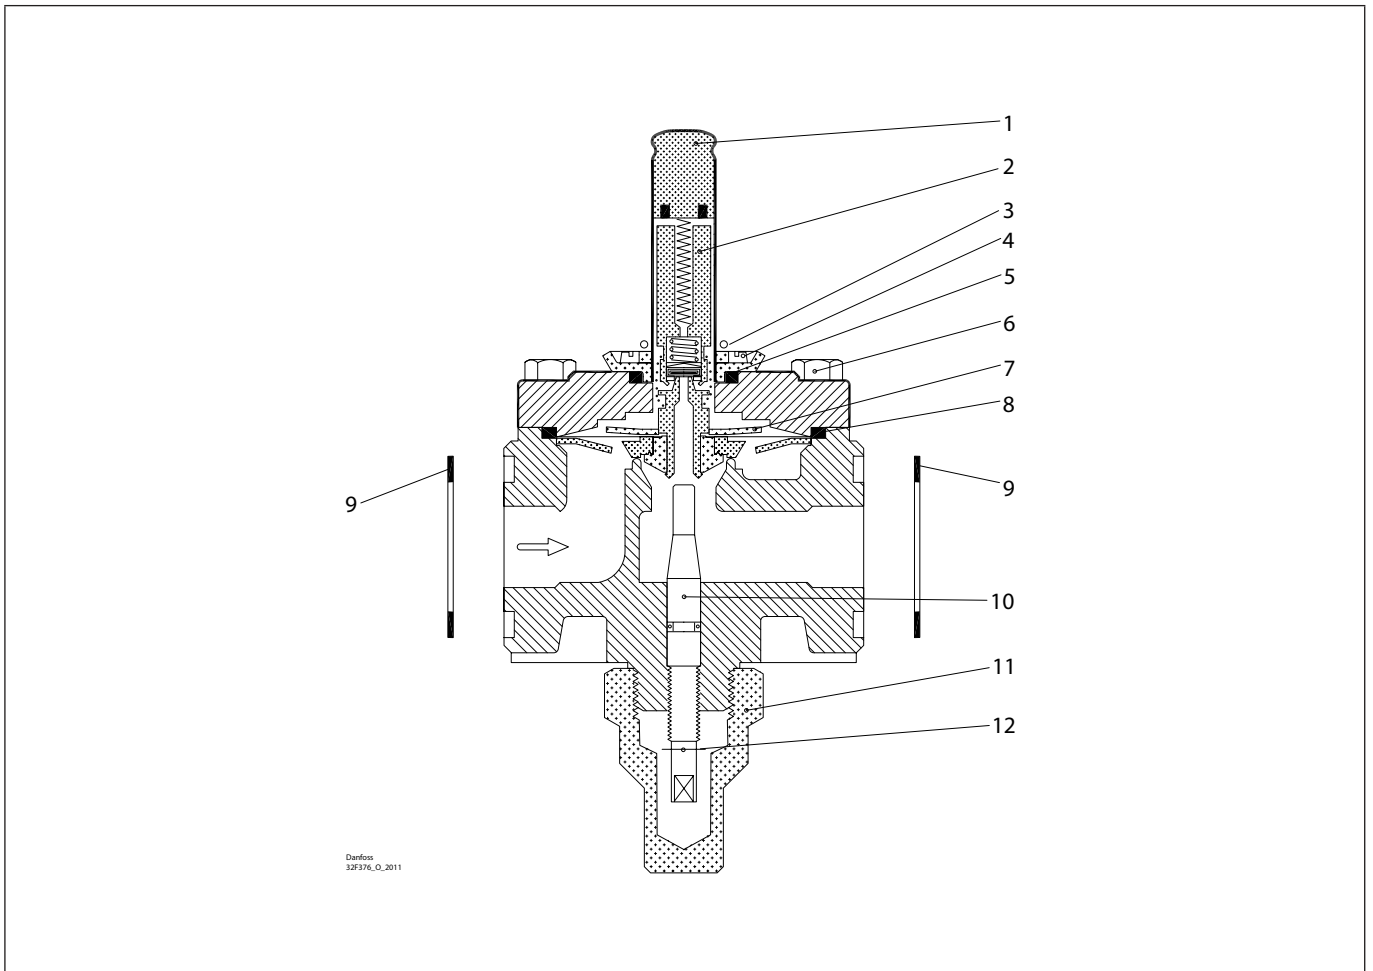

<p><b>1</b></p> <p>Total no. = 1</p>	<p><b>2</b></p> <p>Total no. = 1</p>	<p><b>3</b></p> <p>Total no. = 1</p>	<p><b>4</b></p> <p>Total no. = 4</p>	<p><b>5</b></p> <p>Total no. = 1</p> <p>▨ = Rubber</p>	<p><b>6</b></p> <p>Total no. = 4</p>
<p><b>7</b></p> <p>Total no. = 1</p>	<p><b>8</b></p> <p>Total no. = 1</p> <p>▨ = Rubber</p>	<p><b>9</b></p> <p>Total no. = 2</p> <p>— = Fibre</p>	<p><b>10</b></p> <p>Total no. = 1</p>	<p><b>11</b></p> <p>Total no. = 1</p>	<p><b>12</b></p> <p>Total no. = 1</p>