

Palladian Shelf

Install Guide


TOOLS NEEDED



Measuring Tape



Pencil

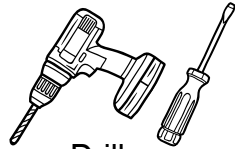


Drill or Screwdriver

PARTS INCLUDED



Safety Screws

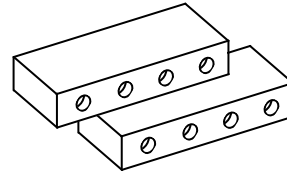

Mounting Blocks



Mounting Screws




OPTIONAL



A Level

Installation





Inside Mount

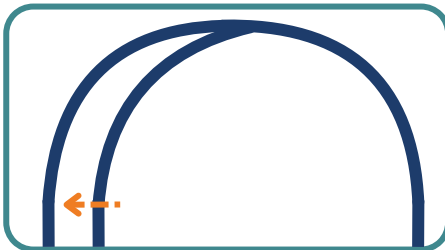

Measure the top of the flat part of each side of the window (This should be the point just below where it starts to curve).



Note: The mounting blocks need to be parallel to install the shelf properly.

Measure 3/4" below that mark and make another mark. Ensure the line is level and mark the location of the first screw 1 1/4" back from the front of the window opening. Make a second mark 1 1/2" back from that.

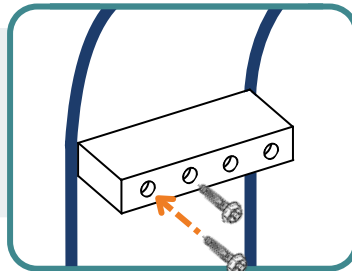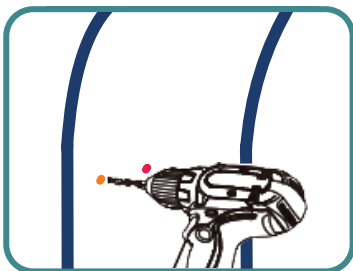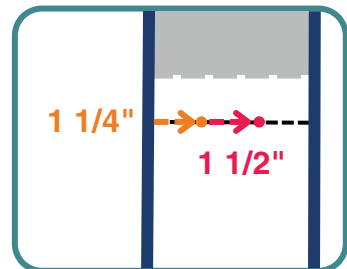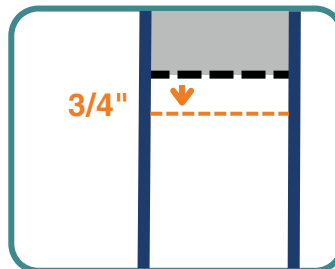

Pre-drill your holes, then mount the block to the wall.

Slide the shelf on, then mount the safety screws on the underside using the predrilled holes. This will provide a secure mount and keep the shelf from sliding off.

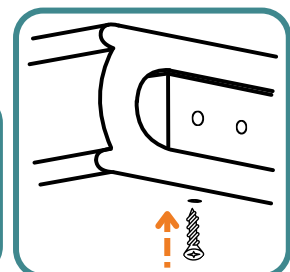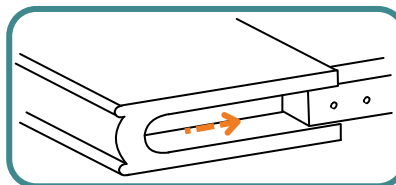

Congratulations! You've just installed your Palladian Shelf!